


Step 4 Parts list 110111-BAF-PC/ SN

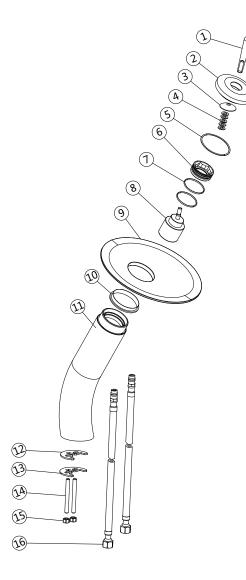

| NO. | Description |
|-----|---------------------|
| 1 | Handle |
| 2 | Cocer |
| 3 | Cocer |
| 4 | Gasket |
| 5 | O-ring |
| 6 | Pressing Nut |
| 7 | O-ring |
| 8 | Cartridge |
| 9 | Glass Spout |
| 10 | Installation Gasket |
| 11 | Body |
| 12 | Washer |
| 13 | Installation Gasket |
| 14 | Screw |
| 15 | Nut |
| 16 | Flexible Hose |




Waterfall Glass Vessel Sink Faucet

product is CUPC, AB1953, WATERSENSE and NSF certified.


ASME A112.18.1/CSA B125.1




he tools might be applied to the following places:

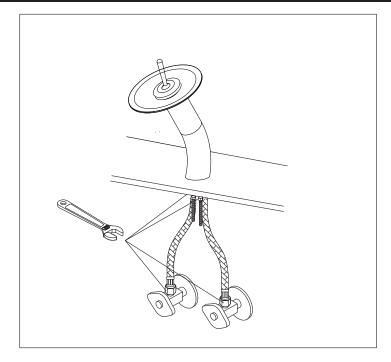

Step 1 Faucet installation

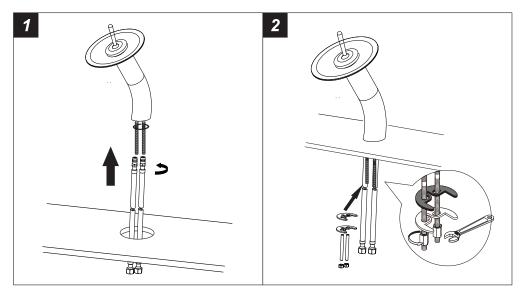

- 1.Screw the long screws on the faucet. Place O-ring below faucet and screw the flexible hoses. And then put them into the hole.
- Assemble the thread shank, plastic washer and metal washer to faucet. Adjust the position of the faucet, and secure it with the lock nut as photo.

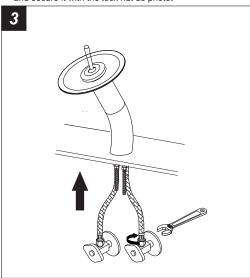


3.Connect the flexible hoses to water supply valve (not included) and copper tubes, and tighten it with adjustable wrench. **DON'T OVER TIGHTEN!**

Caution: make sure connect the hot and cold flexible hose to supply valves correctly.



Warning: The supply valves are not included, please purchase them in plumbshop.

Step 2 Checking and testing

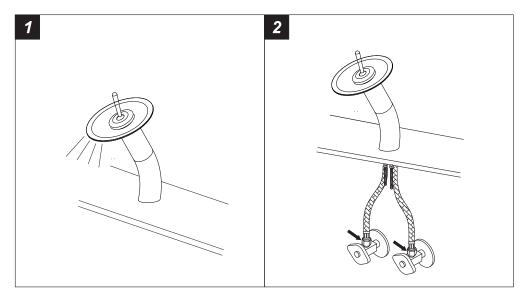

- 1.Turn the faucet handle all the way on, turn on hot and cold water supply and flush water lines for one minute.
- 2. Check all connections at arrows for leaks, re-tighten it if necessary.



BUT DON'T OVERTIGHTEN

Step 3 Cleaning and care

Daily cleaning and care are required in order to keep the product shining and properly working.

- 1 Clean it with water and dry it with soft cloth.
- 2 Clean the product with gentle liquid or glass cleaner.
- 3 Don't use acid cleaner.
- 4 Don't clean with abrasive material, abrasive paper or knife.