



Motion LED Security Light Battery Operated

EM-BL268B

Introduction.

We congratulate you on the purchase of your LED Sensor Light. You have chosen a high quality product. Before using your LED Sensor Light, please familiarize yourself with the instructions and safety information below. Only use the product as described and for the specified applications.

This product is intended to illuminate indoor or outdoor areas for private use and is not suitable for commercial use or for use in other applications.

Technical Data

LED Type: 12*2835

Battery: 3*1.5v DC AA(exclude)

Motion sensor angle: 140°

Motion detection range: approx.26.2ft - 32.8ft

Time setting: approx. 3seconds to 7min (+/-10%)

Lumen: 220LM (+/-10%)

Protection type: IP44 (splash-proof)

General safety instructions.

1. Children should not be allowed to play with the product. Cleaning and user maintenance should not be performed by children without adult supervision.
2. Never leave children unsupervised with the packaging material. The packaging material represents a danger of suffocation.
3. Keep batteries/rechargeable batteries out of reach of children. If accidentally swallowed, seek immediate medical attention.
4. Do not use this product if you notice any damage
5. The illuminants are not replaceable. If the illuminants fail, the entire product must be replaced.
6. Never recharge non-rechargeable batteries. Do not short-circuit batteries/rechargeable batteries and/or open them as overheating, fire or busting can occur.
7. Do not exert mechanical loads to batteries/rechargeable batteries.
8. Only use the same type of batteries/rechargeable batteries. Do not mix used and new batteries/rechargeable batteries.
9. Remove the batteries/rechargeable batteries if the product will not be used for a long period of time.
10. When inserting batteries, ensure the correct polarity. (This is shown inside the battery compartment)
11. Remove drained batteries/rechargeable batteries from the product immediately.
12. Leaking or damaged batteries/rechargeable batteries can cause burns on contact with the skin. Wear suitable protective gloves at all times if such an event occurs. In the event of contact with battery acid, thoroughly flush the affected area with plenty of clean water and seek immediate medical attention.

Function

The LED light will switch on during twilight or darkness when the motion detector detects infrared radiation given off by people passing by.

User can turn the control knob TIME to adjust the duration of the illumination from approx. 3 seconds to 7 minutes (+/-10%).

User can turn the control knob LUX to adjust the daylight level at which to activate the motion detector.

Note: Once the light is activated by the motion detector, any subsequent detection will restart the timed period again from the beginning.

Note: The motion detector responds to heat radiation. When outdoor temperatures are low, it is more sensitive to body heat than when outdoor temperatures are warm.

Note: If the light is not activating during nighttime, a street light, house light or other ambient light could

be affecting activation. Turn the control knob LUX towards position  to increase the daylight level. If

the light is unnecessarily activating in daytime, turn the control knob LUX towards position  to decrease the daylight level.

Note: Regularly clean the motion detector to ensure proper functionality (refer to "Cleaning and Care").

Installation

When selecting the mounting location, pay attention to the following:

Note: The included mounting material is suitable for solid concrete or masonry construction. Other wall substrates may require additional fastening materials.


Note: An electric drill is required

CAUTION! RISK OF INJURY! Please read the operating instructions for your drill.

CAUTION! Ensure that you do not damage any electrical cables in the wall or ceiling.

1. To choose the mounting location, make sure the LED light illuminates the desired area and that the product will not be directly exposed to rain.
2. Depending on the mounting height (roughly at 6.5ft) the motion detector has a detection range of max. 32.8ft with a detection angle of 140°.
3. Be sure the motion detector is not illuminated by street lighting at night. This can influence the light.
4. Loosen the screw  on the bottom of the main unit with a suitable cross-head screwdriver. Remove the mounting plate  from the back of the product
5. Use the holes on the mounting plate  intended for the screws to mark the positions for drilling.
6. Drill two holes on the mounting location, insert wall plugs and fix the mounting plate  with screws.
7. Loosen the clip on the battery cover  to remove it from the main unit.
8. Insert three AA batteries to the battery compartment inside in correct direction. The correct polarity is shown in the battery compartment.
9. Put back the battery cover and close it.
10. Press the main unit onto the plate and fix it by the screw .
11. Turn the control knob TIME to adjust the duration of the illumination. The lighting duration can be adjusted from approx. 3 seconds to 7 minutes (+/-10%).

12. Turn the control knob LUX to adjust the daylight level: At the position ☾, the motion detector will only react at night. In the position ☀, the motion detector will respond at daylight levels.

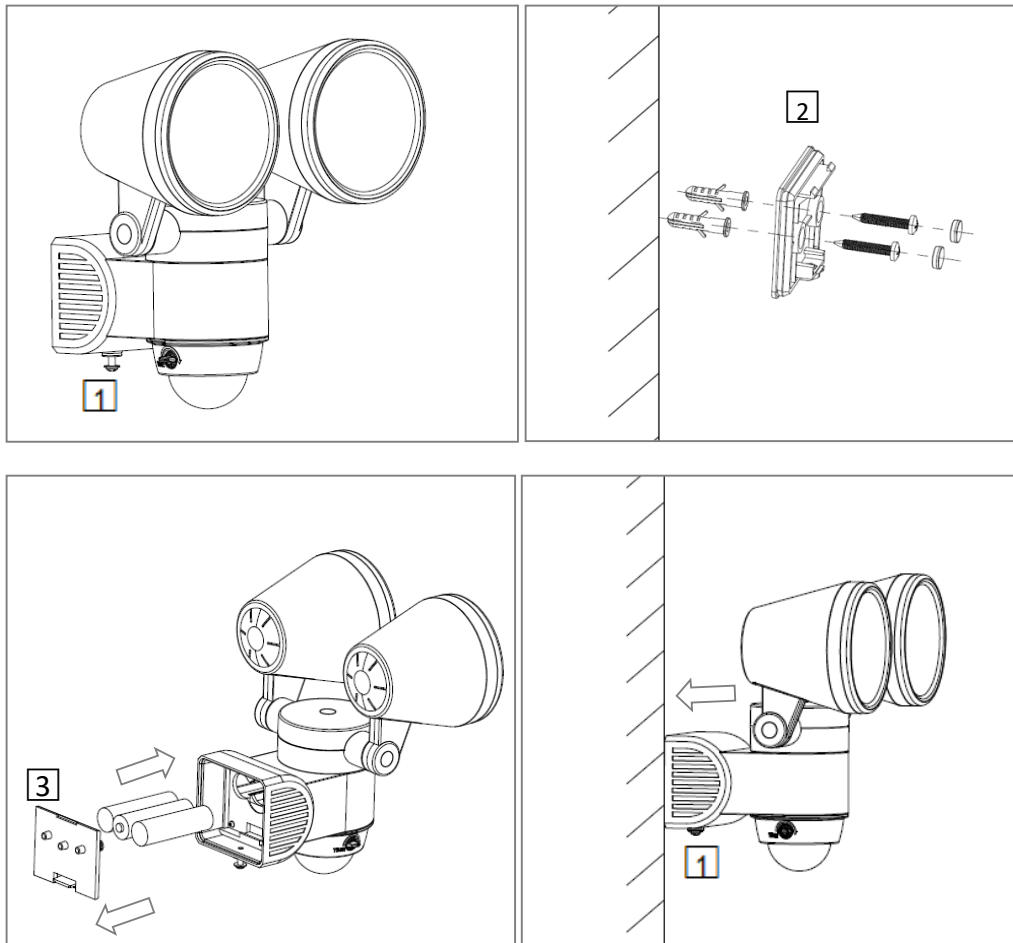

Replacing the batteries

1. Loosen the screw **1** and remove the main unit from the mounting plate **2**.
2. Remove the battery cover **3** and take out the drained batteries from the battery compartment, and replace with new batteries of the same type. Be sure to insert the batteries in correct direction. The correct polarity is shown inside the battery compartment.
3. Put back the battery cover **3** and press the main unit back to the mounting plate **2**, fix it by the screw **1**.

Cleaning and Care

Use a slightly dampened, lint-free cloth and mild cleaning agent to clean.

Regularly check the motion detector for dirt.

Regularly clean the motion detector to ensure proper functionality

Troubleshooting

Problem	Cause	Solution
The light does not switch on during nighttime	Motion detector is dirty	Clean motion detector
	LUX control is not properly set	Turn LUX control to increase LUX level.
	Batteries are drained	Replace batteries
The light switches on during daytime	LUX control is not properly set	Turn LUX control to decrease LUX level
The light is dim	Batteries are almost drained	Replace batteries
The light flickers	Batteries are almost drained	Replace batteries

Disposal

The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.

To help protect the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste. Information on collection points and their opening hours can be obtained from your local authority.

Batteries may not be disposed of with the usual domestic waste. They may contain toxic heavy metals and are subject to hazardous waste treatment rules and regulations.

Made in China

Imported by Paragon Group USA

Englewood, NJ 07631 USA

1.888.783.6082