


INSTALLATION INSTRUCTIONS Ventilating Fan

Model No. RG-R811LA

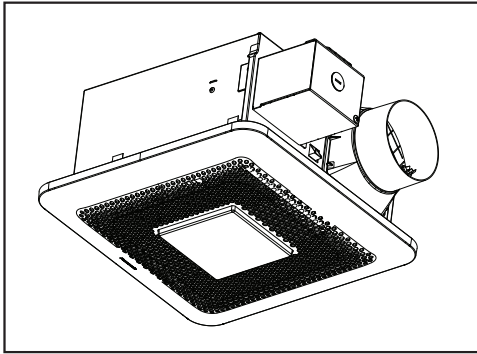

READ AND SAVE THESE INSTRUCTIONS

Thank you for purchasing this Panasonic product. Please read these instructions carefully before attempting to install, operate or service the Panasonic product. Please carefully read the "GENERAL SAFETY INFORMATION". Failure to comply with instructions could result in personal injury or property damage. Please explain to users how to operate and maintain the product after installation and this manual should be presented to users. Please retain this manual for future references.

■ See page 12 for "Panasonic Warranty Sheet".

GENERAL SAFETY INFORMATION

For Your Safety

To reduce the risk of injury, loss of life, electric shock, fire, malfunction, and damage to equipment or property, always observe the following safety precautions.

Explanation of symbol word panels

The following symbol word panels are used to classify and describe the level of hazard, injury, and property damage caused when the denotation is disregarded and improper use is performed.

! WARNING Denotes a potential hazard that could result in serious injury or death.

! CAUTION Denotes a hazard that could result in minor injury.

NOTICE Denotes a hazard that could result in property damage.
















The following symbols are used to classify and describe the type of instructions to be observed.

	This symbol is used to alert users to a specific operating procedure that must be followed in order to operate this unit safely.
	This symbol is used to alert users to a specific operating procedure that must not be performed.
	This symbol is used to alert users not to disassemble the equipment.
	This symbol is used to alert users to make sure of grounding when using the equipment with the grounding terminal.




GENERAL SAFETY INFORMATION (CONTINUED)

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:


-  Use this unit only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer.
-  Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.
-  Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society of Heating, Refrigerating and Air-Conditioning Engineers (ASHRAE) and the local code authorities.
-  When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
-  Ducted exhaust fans must always be vented to the outdoors.
-  If this unit is to be installed over a tub or shower, it must be marked as appropriate for the application and connected to a GFCI (Ground Fault Circuit Interrupter) - protected branch circuit.
-  These models are UL listed for tub and shower enclosures.
-  This product is not to be installed in a ceiling thermally insulated to a value greater than R60.
-  Do not disassemble the unit for reconstruction. It may cause fire or electric shock.
-  If this product is no longer to be used, it must be removed from the ceiling to prevent it from falling.
-  The ceiling joist must be able to withstand a static load of at least five times the weight of the product.
-  Do not install with a method which is not approved in the instructions.
-  Do not use this fan with any solid-state speed control device. Solid state controls may cause harmonic distortion which can cause a humming noise in the motor.
-  To reduce the risk of fire, electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer (eg. parts made at home using a 3D printer).
-  This product must be properly grounded.

CAUTION

-  Do not install this ventilating fan in a location where the interior room temperature may exceed 104 °F (40 °C).
-  Make sure that the electric service supply voltage is AC 120 V 60 Hz.
-  Follow all local electrical and safety codes, as well as the National Electrical Code (NEC) and the Occupational Safety and Health Administration (OSHA).

GENERAL SAFETY INFORMATION (CONTINUED)

- Always disconnect the power source before working on or near the fan, motor or junction box.
- Protect the supply wiring from sharp edges, oil, grease, hot surfaces, chemicals or other objects.
- Do not kink the supply wiring.
- For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.
- Do not install fan above or inside a 45-degree angle projected outwards from the cooking equipment element closest to the fan. (Fig. A)
- The special-purpose or dedicated parts, such as mounting fixtures, must be used if such parts are provided.

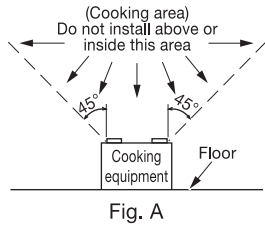

NOTICE

- Provide make up air for proper ventilation.
- Do not connect multiple units in parallel. If two or more units are connected to one switch in parallel, the units may not function.
- Do not install the unit where ducts are configured as shown in below:



 
Excessive bending



Successive bending



Squeezed duct



Bend close to duct adaptor

DESCRIPTION

These products are listed by UL under UL file No. E78414.

These products use a sirocco fan driven by a DC motor powered by an integral transformer. The motor is designed to have long operating life, high dynamic response, higher speed ranges and energy savings. The grille covering the fan body is a spring-attached, quick removal type. A damper for preventing air counter flow is provided. The blower uses a high-capacity sirocco fan developed to reduce the noise level. The lighting unit is an energy-saving LED lighting device that uses one 10 W LED lamp and produces almost the same illumination as a standard 40 W incandescent lamp. Night light feature consumes around 0.1 to 0.4 W.

FCC Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning this product on and off, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect equipment into outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: This equipment must be installed by a qualified person in accordance with the provided installation instructions and all applicable codes and standards. Also, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

SDoC Responsible Party: Panasonic Corporation of North America
Two Riverfront Plaza, Newark, NJ 07102

Customer Call Center: 1-866-292-7299


 

DESCRIPTION (CONTINUED)




This device complies with Part 15B of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Type IC-Inherently Protected.

UNPACKING

Unpack and carefully remove the unit from carton. Refer to the Supplied Accessories list to verify that all parts are present.



SUPPLIED ACCESSORIES

Part name	Appearance	Quantity
Grille		1
Flex-Z Fast™ bracket (with 4 tapping screws -ST4.2X20)		1
Self-drilling screw		4

Part name	Appearance	Quantity
Installation instructions / Warranty sheet		1
3 inch duct reducer (optional part)		1
Machine screw (M4X8)		1


DIMENSIONS

Unit: inches (mm)

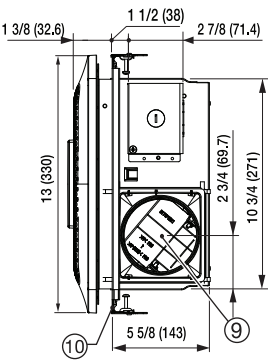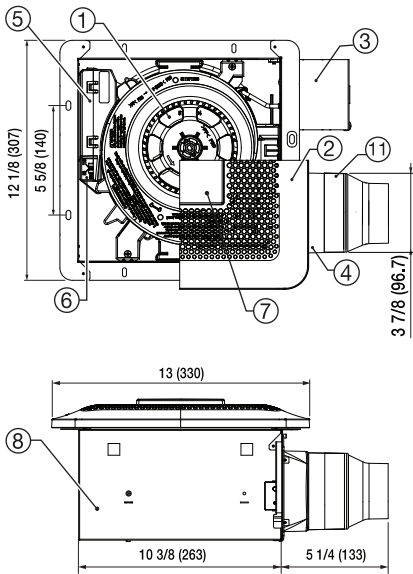

No.	Part name	No.	Part name
①	Blade	⑦	Lighting unit
②	Grille	⑧	Fan body
③	Junction box	⑨	Damper
④	Adaptor	⑩	Flex-Z Fast™ bracket
⑤	PCB box	⑪	Duct reducer (optional part)
⑥	Pick-A-Flow™ switch		

WIRING DIAGRAM

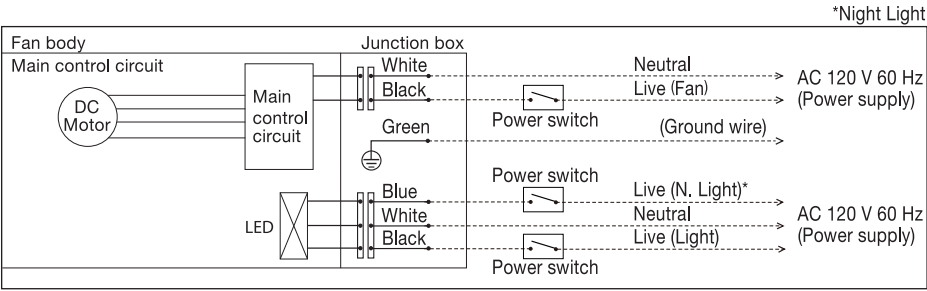

FEATURES


Outstanding Energy Savings:

These products are built using DC motor technology. The DC motor is 30% ~ 70% more energy efficient than the minimum ENERGY STAR requirements.

Pick-A-Flow™ Feature:

This product comes with Pick-A-Flow™ speed options. The Pick-A-Flow™ switch on the face of the product allows the option to choose 80 or 110 CFM. This product can run continuously or intermittently, depending upon the needs of the owner.

Air volume option (CFM)		Factory setting
80	110	80 CFM

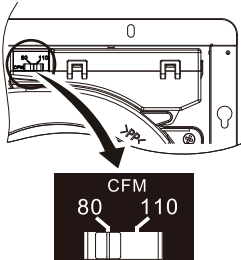


Pick-A-Flow™ switch


INSTALLATION (RETROFIT)

IMPORTANT:

Remove the tape placed on the damper and adaptor before installation. Failure to do so will cause the product to work inefficiently and create a loud noise.

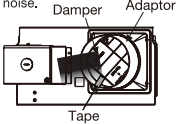

If you require use of the 3 inch duct reducer (optional accessory), use the following method:

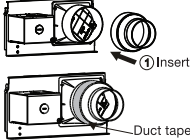

WARNING


- Disconnect power supply before installing the unit.
- Please wear gloves to protect hands during the installation.

INSTALLATION (RETROFIT) (CONTINUED)

1 Install Flex-Z Fast™ bracket



Flex-Z Fast™ bracket position can be adjusted from 16" to 24" (406mm to 610mm) between joists.

Unit: inches (mm)

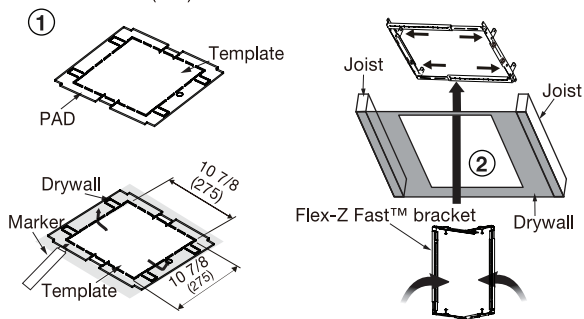


Draw the contour with a marker through marked line

- 1 Remove the existing fan and use housing masking template to mark the ceiling opening and cut the ceiling along the marked line.
- 2 Insert Flex-Z Fast™ bracket into the opening and extend.
- 3 Align and install bracket to joist by using 2-preinstalled tapping screws.
- 4 Extend bracket to the other joist.
- 5 Install bracket to joist by using 2-preinstalled tapping screws.

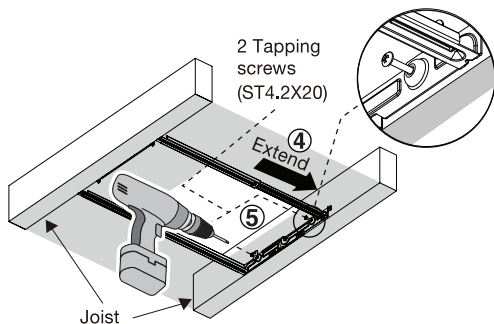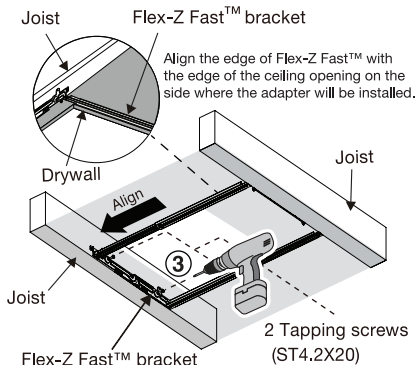


2 Install circular exhaust duct

- 1 Remove screw from junction box cover to remove the knock-out hole and secure conduit or stress relief to junction box knock-out hole.
- 2 Install the circular exhaust duct and secure it with clamps or ties and seal it with mastic or approved foil tape. A 3 or 4 inch circular duct is needed to connect to the relevant part of the adaptor.

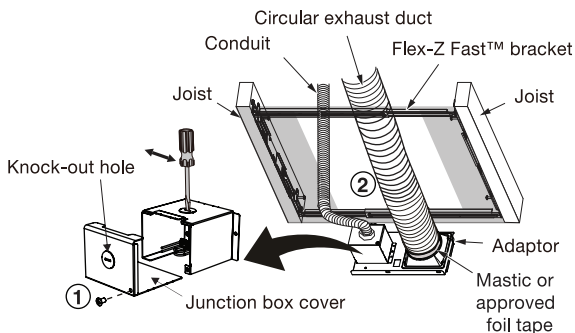


INSTALLATION (RETROFIT) (CONTINUED)

3 Connect wires

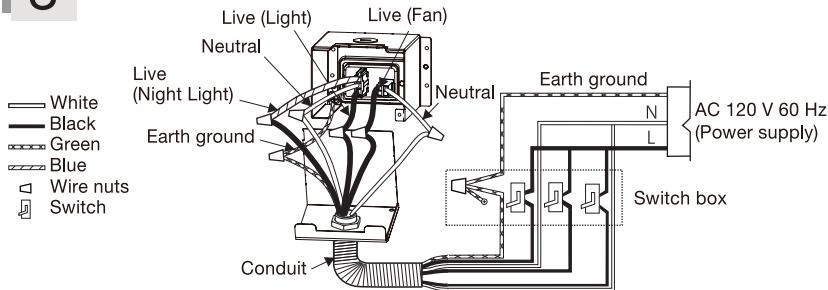


- 1 Refer to **WIRING DIAGRAM** (Page 5). Follow all the local electrical safety codes as well as the National Electrical Code (NEC). Use UL approved wire nuts to connect fan wires. After connecting wires, replace junction box cover.

4 Install adaptor

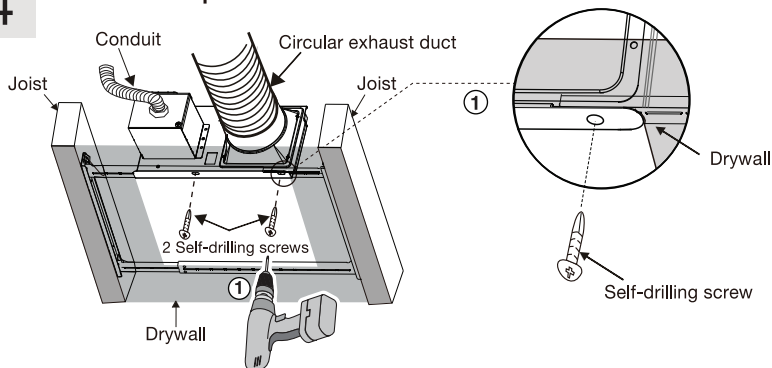


- 1 Install the adaptor to Flex-Z Fast™ bracket by using 2 self-drilling screws.

5 Insert fan body

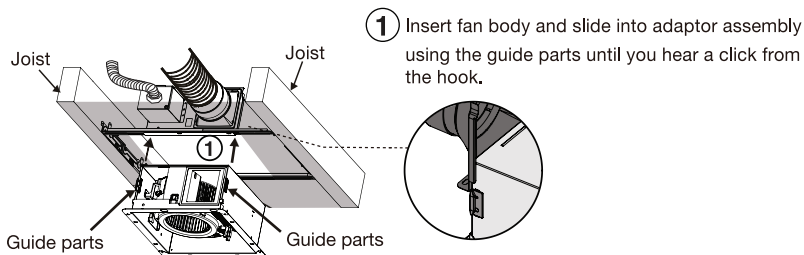


INSTALLATION (RETROFIT) (CONTINUED)

6 Secure fan body

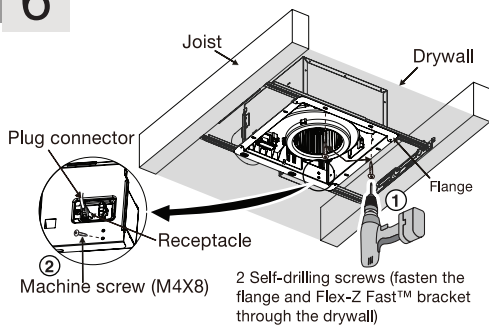


- 1 Secure the fan body to Flex-Z Fast™ bracket by using 2 self-drilling screws.
- 2 Plug connector into receptacle and secure fan body to adaptor by using machine screw (M4X8).

8 Install grille

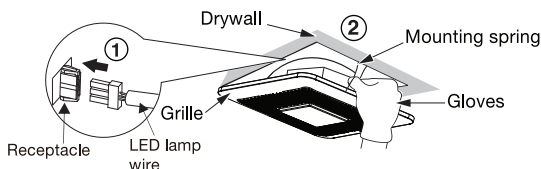

7 Sealing

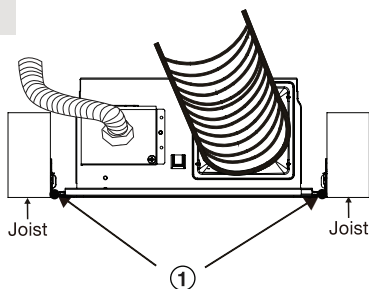

- 1 Once fan body is mounted and secure, fill gap between flange and ceiling with caulk or other sealant to prevent air leakage.
- 2 Adjust Pick-A-Flow™ switch. (Refer to explanation under FEATURES). (Page 5)

CAUTION

- ! Please take care when installing the machine screw (Step 6) to avoid cross threading and to ensure that the screw does not strip or come in contact with the Flex-Z Fast™ bracket.


INSTALLATION (NEW CONSTRUCTION)

WARNING


- ! Disconnect power supply before installing the unit.
- ! Please wear gloves to protect hands during the installation.
- ! Ensure the junction box cover encloses all the wires and is completely flush before locking in place with the attached screw.

IMPORTANT:

Remove the tape placed on the damper and adaptor before installation. Failure to do so will cause the product to work inefficiently and create a loud noise.

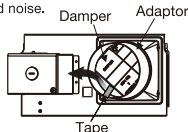

If you require use of the 3 inch duct reducer (optional accessory), use the following method:

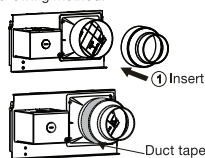



INSTALLATION (NEW CONSTRUCTION) (CONTINUED)

1 Install Flex-Z Fast™ bracket

Flex-Z Fast™ bracket position can be adjusted from 16" to 24" (406mm to 610mm) between joists.


Unit: inches (mm)

Bend down 4 tabs

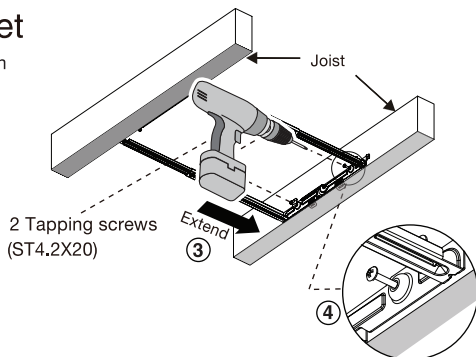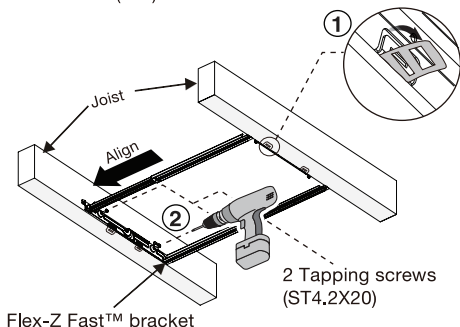


- ① Bend down 4 tabs and align bracket to the joist.
- ② Align and install bracket to joist by using 2-preinstalled tapping screws.
- ③ Extend bracket to the other joist.
- ④ Install bracket to joist by using 2-preinstalled tapping screws.

2 Install circular exhaust duct

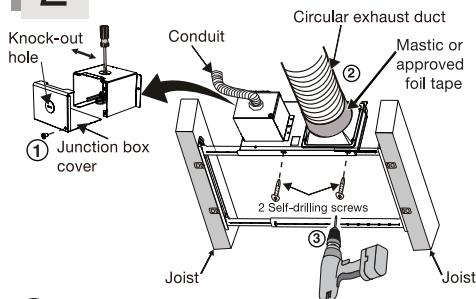



- ① Remove screw from junction box cover to remove the knock-out hole and secure conduit or stress relief to junction box knock-out hole.
- ② Install the circular exhaust duct and secure it with clamps or ties and seal it with mastic or approved foil tape. A 3 or 4 inch circular duct is needed to connect to the relevant part of the adaptor.
- ③ Install the adaptor to Flex-Z Fast™ bracket by using 2 self-drilling screws.

3 Connect wires

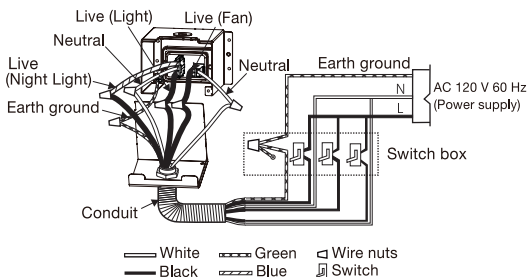

- ① Refer to WIRING DIAGRAM (Page 5). Follow all the local electrical safety codes as well as the National Electrical Code (NEC). Use UL approved wire nuts to connect fan wires. After connecting wires, replace junction box cover.


4 Insert fan body

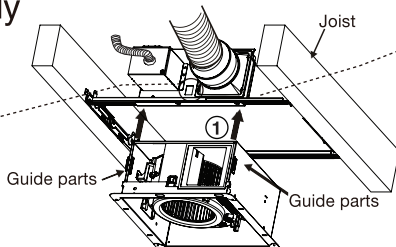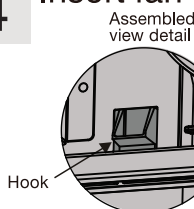

- ① Insert fan body and slide into adaptor assembly using the guide parts until you hear a click from the hook.

INSTALLATION (NEW CONSTRUCTION) (CONTINUED)

5 Secure fan body

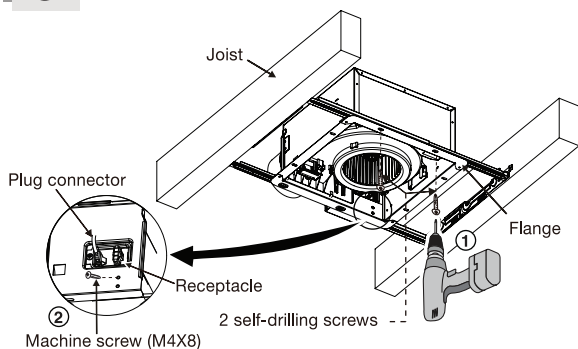

- 1 When the flange overlaps Flex-Z Fast™ bracket, secure it by using 2 self-drilling screws.
- 2 Plug connector into receptacle and secure fan body to adaptor by using the machine screw (M4X8).
- 3 Follow the steps 7 to 8 in INSTALLATION (RETROFIT)

MAINTENANCE (CLEANING)

! WARNING



- ! Disconnect power supply before working on unit.

! CAUTION

- ! Routine maintenance must be done every year. Please wear gloves during the cleaning work.
- ⊘ Never use gasoline, benzene, thinner or any other such chemicals for cleaning the ventilating fan.

- ⊘ Do not immerse motor in water when cleaning. Do not soak resin parts in water over 140° C (60° F).


1 Remove grille

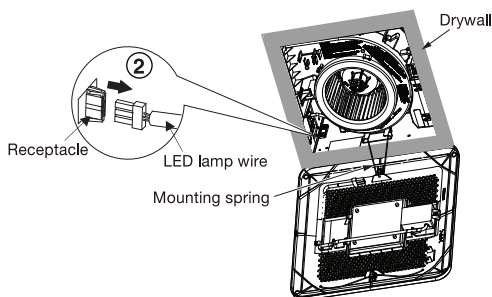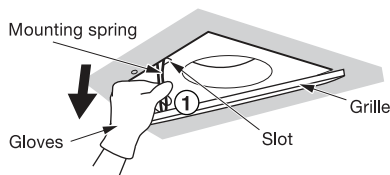

- 1 Remove grille by pulling down one mounting spring.
- 2 Disconnect the wire from the receptacle, then pull down the other mountain spring.

MAINTENANCE (CLEANING) (CONTINUED)

2 Maintenance of unit

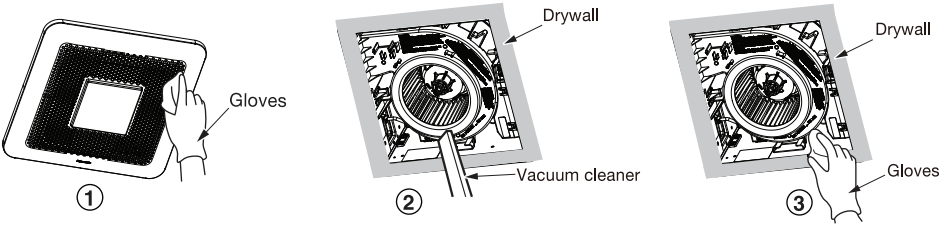


NOTE: The grille should be dry after cleaning.

- 1 Clean grille. (Don't put into water. Use non-abrasive kitchen detergent, wipe dry with clean cloth).
- 2 Remove dust and dirt from fan body using a vacuum cleaner.
- 3 Using a cloth dampened with kitchen detergent, remove any dirt from fan body. Wipe dry with a clean cloth. Reinstall grille after finishing.

PRACTICAL GUIDE TO INSTALLATION

Properly insulate the area around the fan to minimize building heat loss and gain. Loose fill or batt insulation can be placed directly over the fan housing in the attic. Panasonic fans do not create excessive heat which is a common problem with recessed light fixtures and some competitor's fan/light combination. Our efficient, cool-running motors do not create enough ambient heat to be subjected to these limitations. The ducting from this fan to the outside of the building has a strong effect on the air flow, noise and energy use of the fan. Use the shortest, straightest duct routing possible for best performance, and avoid installing the fan with smaller ducts than recommended. Insulation around the ducts can reduce energy loss and inhibit mold growth. Fans installed with existing ducts may not achieve their rated air flow.

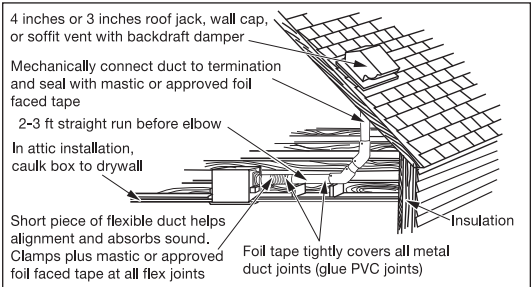

SPECIFICATIONS

Model No.	Air direction	Voltage (V)	Frequency (Hz)	Duct diameter (inches)	Air volume at 0.1" WG (CFM)	Noise (sones)	Speed (rpm)	Power (W)	Weight lb. (kg)
RG-R811LA	Exhaust	120	60	4	80	0.4	905	7.1	9.9 (4.5)
					110	1.1	1043	11.6	

HVI Certified performance based on HVI Procedures 915, 916, and 920.

PRODUCT SERVICE

Warning Concerning Removal of Covers. The unit should be serviced by qualified technicians only. Your product is designed and manufactured to ensure a minimum of maintenance. Should your unit require service or parts, call Panasonic Call Center at 1-866-292-7299 (USA).

Panasonic Ventilating Fan Limited Warranty

Panasonic Corporation of North America ("the Warrantor") will, at its sole discretion, replace this product with new parts or exchange this product, free of charge, in the USA, in the event of defects in material or workmanship in accordance to the following:

ALL Parts: For period of 3 years (36 months)
DC Motor: For period of 6 years (72 months)
LED Light Unit: For a period of 5 years (60 months)


Service in the USA, can be obtained during the warranty period by contacting the selling Distributor or Panasonic Customer Call Center at 1-866-292-7299, toll free.

This warranty does not cover labor charges for removal and installation of parts. This warranty is extended only to the original purchaser of a new product, which was not sold "as is", who purchased the product either directly from the Warrantor or from the Warrantor's authorized resellers (including authorized retail and Internet-based sellers), unless otherwise prohibited by law.

This warranty only applies to products purchased in the United States.

To claim warranty proof of purchase date will be required, in addition to fan model and serial number as shown in the photos below.

Example of display

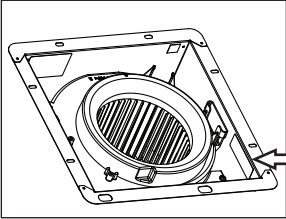

Example of Name Plate

Indicates: Model No. Indicates: Serial No.

Panasonic

Ventilating Fan

Model No. RG-R***** FC Log No. *****
AC 120 V 60 Hz 0.28 A (Fan) 0.1 A (Light)

	SP	CFM	Sones	CFM	Sones
4" Duct	0.1"	**	**	**	**
3" Duct	0.1"	**	**	**	**

Panasonic Corporation of North America
Assembled in Mexico

This warranty only covers failures due to defects in materials or workmanship that occur during normal use and does not cover shipping damages, whether visible or concealed, normal wear or cosmetic damage. The warranty does not cover failures that are caused by products and peripherals not supplied by the Warrantor, or failures which result from accident, misuse, abuse, negligence, mishandling, misapplication, alteration, modification, faulty installation, improper setups or adjustments, improper or lack of maintenance, alterations or modifications, power line surge, improper line voltage, lightning damage, or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS

There are no express warranties except as listed above. THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL CONSEQUENTIAL, OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, LOSS OF GOODWILL PROFITS OR REVENUE, LOSS OF USE OF THIS PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF SUBSTITUTE PRODUCT, DOWNTIME COST, OR CLAIMS OF ANY PARTY DEALING WITH BUYER FOR SUCH DAMAGES, RESULTING FROM THE USE OF THIS PRODUCT OR ARISING FROM BREACH OF WARRANTY OR CONTRACT, NEGLIGENCE OR ANY OTHER LEGAL THEORY, EXCEPT AS EXPRESSLY PROVIDED ABOVE. THERE IS NO WARRANTY OR ANY OTHER KIND, EXPRESS OR IMPLIED, THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitation may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your Distributor or Panasonic Customer Call Center. If the problem is not handled to your satisfaction, then write to Panasonic Corporation of North America at the address indicated above.

Customer Services Directory

Obtain Product Information and Operating Assistance, locate your nearest distributor, or make Customer Service and Literature requests by visiting our Web Site at:
us.panasonic.com/ventfans

or send your request by E-mail to:
ventfans@us.panasonic.com

You may also contact us directly at:
1-866-292-7299 Monday-Friday 9 am - 6 pm, EST.

For hearing or speech impaired TTY users, TTY:
1-877-833-8855

Accessory Purchases

Purchase Parts and Accessories for Panasonic Ventilation Products by visiting our Website:

Consumers:
www.buypanasonicparts.com
or send your request by Email to: nppcparts@us.panasonic.com
You may also contact us directly at 1-800-332-5368 (Monday-Friday 8am to 6pm, EST.)

Distributors:
Send your request by Email to: nppcparts@us.panasonic.com
You may also contact us directly at 1-866-292-7299 (Monday-Friday 9 am- 6 pm, EST.)

Panasonic Consumer Electronics Company
Customer Service Group
2 Riverfront Plaza, Newark, NJ 07102
For hearing or speech impaired TTY users, TTY: 1-877-833-8855