# allen + roth ALLEN + ROTH and logo design are trademark

or registered trademarks of LF, LLC. All rights

reserved.

## ITEM#894699 DAYBED GLIDER COUCH MODEL #GSM00281A

Thank you for purchasing this allen + roth product. We've created these easy-to-follow instructions to ensure you spend your time enjoying the product instead of putting it together. But, if you need more information than what is provided here, please visit Lowes.com, search the item number and refer to the Guides & Documents tab on the product's page.


If you have any questions or problems, please call our customer service department at 1-866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Sunday. You could also contact us at partsplus@lowes.com or visit www.lowespartsplus.com.

# WARRANTY

maintained with care and used only for personal, residential purposes.

### FEELING CONFIDENT? START YOUR NEXT PROJECT

Visit allenandroth.com for more information.

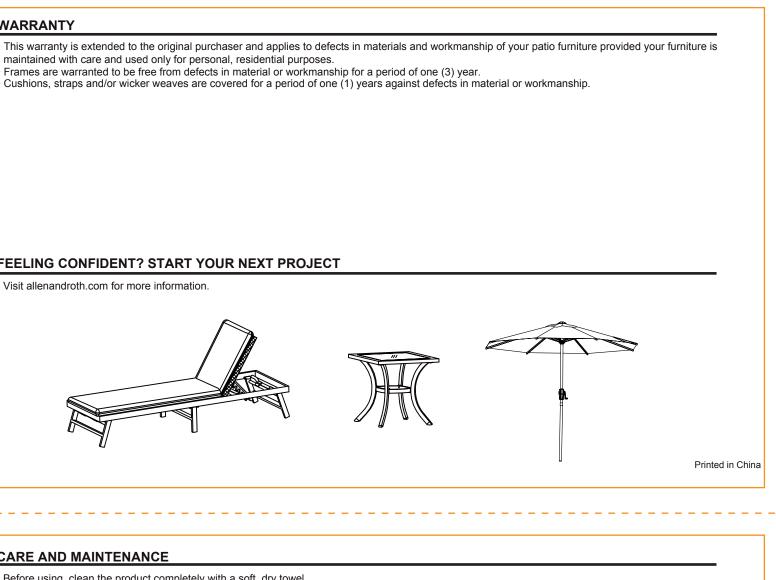

SM20553

# 

Please read and understand this entire manual before attempting to assemble, operate or install the product.

### WARNING

- Tighten each bolt firmly and properly. Do not completely tighten screws until all screws are started.
- Some parts may contain sharp edges. Wear protective gloves as necessary.
- Children under the age of 16 should not be engaged in the assembly, removal or disassembly of the product.
- Children under the age of 10 should be supervised by a competent adult while using this furniture.

#### CAUTION

- Do NOT overtighten any of the bolts as this may damage the threads.
- Repeated assembly can weaken the locking ability of the washers.
- Periodically check all bolted connections on the furniture to make sure they are tight and secure.
- Retain these instructions for future reference.
- Paint on this product might peel off if it is hit or used improperly.
- Use and carry this item with care and apply touch-up paint (not included) when necessary.
- This outdoor furniture is designed and made for personal non-commercial use.

• This item should not be used as a toy or a tool.

# CARE AND MAINTENANCE


Before using, clean the product completely with a soft, dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water, rinse and dry completely. Do not use strong detergents or abrasive cleaners. Store the product in a cool, dry location away from sunlight.

### PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 45 minutes

NO ADDITIONAL TOOLS REQUIRED

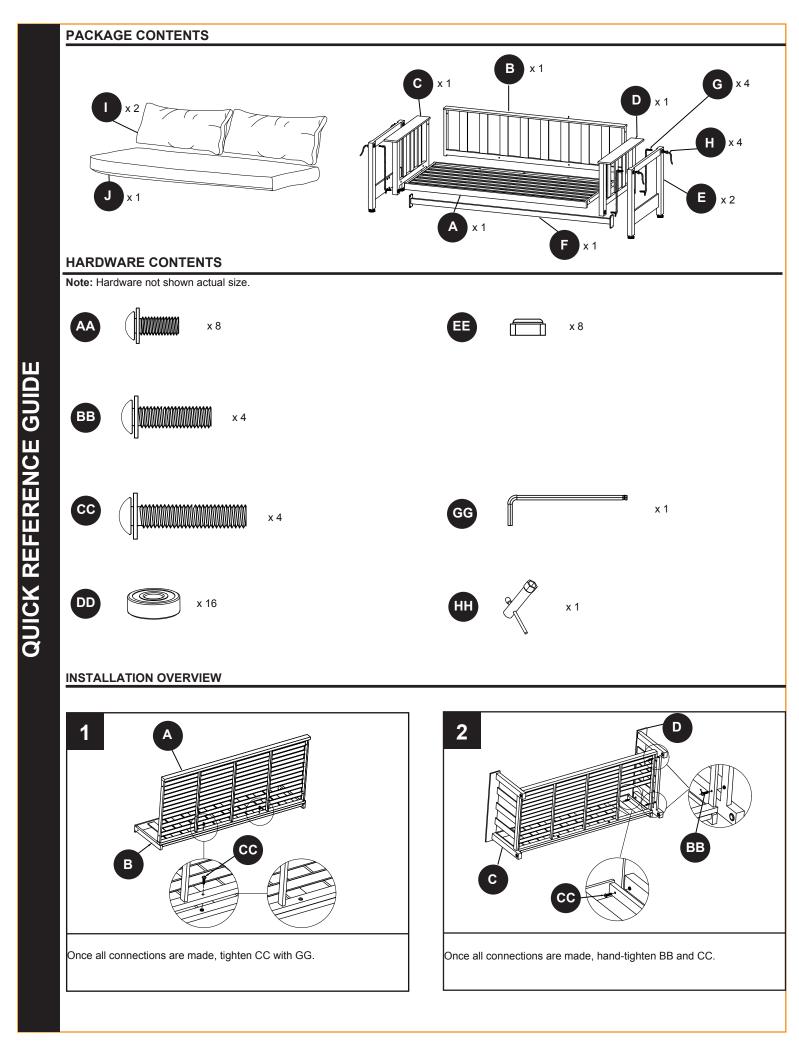

# INSTALLATION OVERVIEW

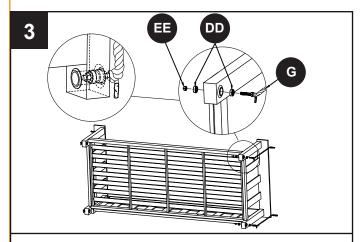

Once all connections are made, hand-tighten DD and EE.

