
Item Number:A05316

WARNING (To reduce the risk of fire, electric shock, or personal injury):

- 1. We suggest installation by a **licensed electrician**.
- 2. Please read the instruction carefully and save it as you may need it at a later time.
- 3. Before you start, **NEVER** attempt any work without shutting off the electricity until the work is done.
 - **»** Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "**OFF**" position.
 - » Place the wall switch in the "OFF" position.
- 4. Mounting surface should be clean, dry, flat, strong enough and 1/4" larger than the canopy on all sides. Any gaps between the mounting surface and canopy exceeding 3/16" should be corrected as required.
- 5. Make sure that the ceiling or wall can stand the weight of the lamp before installation.
- 6. Make sure the voltage you are using is **120V**. The maximum wattage is **LED**, **38W**.
- 7. Keep the lamp away from acidic and alkaline substances in case of damaging the surface of the lamp.
- 8. When replacing bulbs, you should turn off or unplug the lamp and you must wait until it is cool as bulbs get hot quickly.
- 9. The safety instructions appearing in this manual are not meant to cover all possible conditions that may occur. It must be understood that common sense, caution and care must be used with any electrical products.


IMAGE FOR FINISHED PRODUCT:

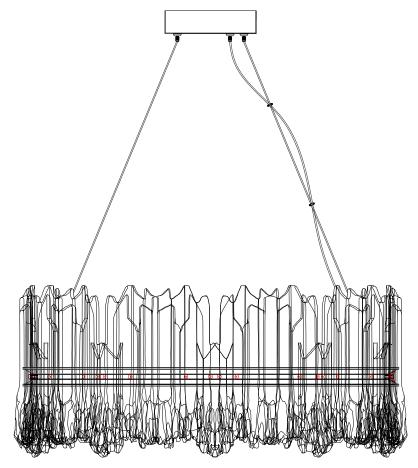

TOOLS REQUIRED (NOT INCLUDED):

Before starting assembly and installation please prepare the needed tools as below picture

				A standard and a standard and a standard a standar
Ladder	Philips Head or Flat Blade Screwdriver	Electrical Tape	Pliers	Wire Cutter/Stripper

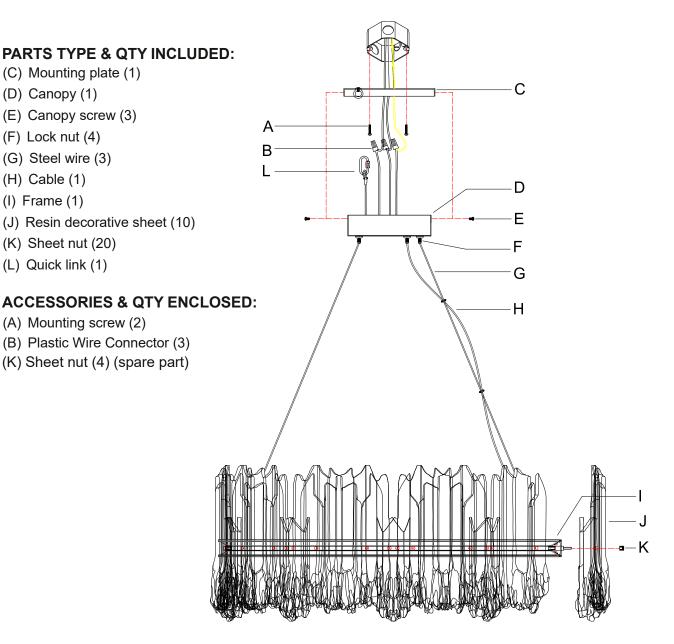


ASSEMBLY & INSTALLATION INSTRUCTIONS:

1. Carefully remove the fixture from the carton and check that all parts and accessories are included as shown in the above illustration.


2. Turn off power

Before you start the installation, NEVER attempt any work without shutting off the electricity until the work is done.

- So to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "OFF" position.
- » Place the wall switch in the "OFF" position.
- 3 » Unscrew canopy screws (E) from canopy (D) then gently remove mounting plate (C).

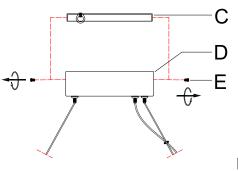


- 4 » To adjust the hanging height of the fixture:
 - 1) Screw lock sleeves from lock nuts (F).
 - 2) Press down and hold lock nut (F) by hand.
 - Pull or push steel wires (G) and cable (H) in and out of canopy (D) to increase or decrease the hanging height.
 - Please adjust steel wires (G) first.
 - 3) Screw lock sleeves back to lock nuts (F) as shown in the illustration.

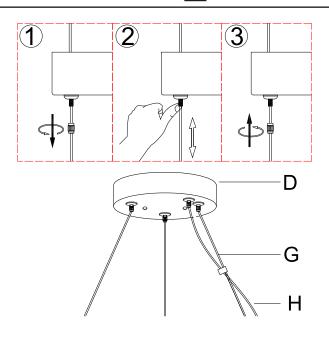

5 » Carefully pass supply wires through mounting plate (C).


Secure mounting plate (C) to the outlet box with mounting screws (A).

NOTE: the side of mounting plate (C) marked "GND" must face out.

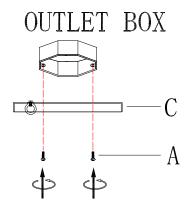


6 » Make wire connections

Connect wires as shown in the charts below. *PLEASE NOTE THAT GROUND WIRE IS BARE COPPER WIRE, NEVER CONNECT OTHER WIRES TO GROUND WIRES.*

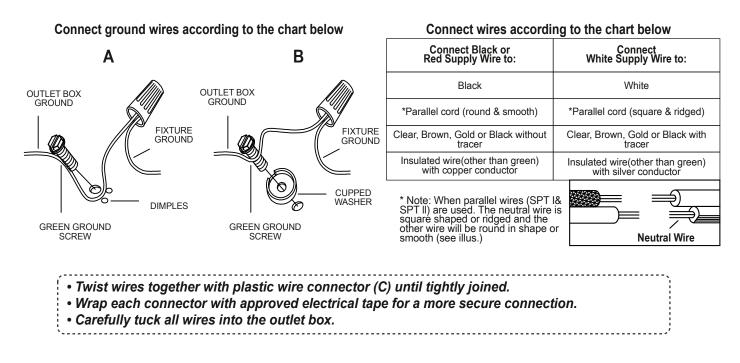

- 7 » 1) Open quick link (L), and then hang it onto the mounting plate (C) as shown in the illustration.
 - 2) Fix canopy (D) to mounting plate (C) and secure with the previously removed canopy screws (E).

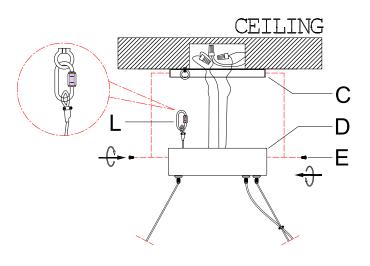

8 » Align holes of resin decorative sheets (J) and holes of frame (I), and then screw sheet nuts (K) into nipple of frame (I) to secure them as shown in the illustration.

9.Check that everything is installed properly, then you can turn on the light. We hope you enjoy your new lighting!

ORDERING PARTS

Keep this sheet for future reference in case you need to order replacement parts. All parts for this fixture can be ordered from the place of purchase. Be sure to use exact wording from illustration when ordering parts.

CLEANING

To clean, wipe the fixture with a soft cloth. Do not use abrasive materials such as scouring pads or powders, steel wool or abrasive paper.