88 5600 81 Newport Chair (Walnut Brown Woven Vinyl)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Unit Part List

Small **Hex Wrench**

1 pc.





Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

Head Cap Bolt 6 pcs.(+1 extra) Plastic Cap 6 pcs.(+1 extra)

Hex Wrench

1 pc.

Assembly Instructions

IMPORTANT

* Do not tighten up all the screws until each part is properly assembled.

* You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.

* After assembly, item must be level to work properly. Use the included adjustable levelers to level.



Turn the Chair to its' upright position.

STEP 3

Cover all holes with Plastic Caps. (See figure 1)





88 5601 30 Stone Harbor 40" Dining Table (Slate Tile/Black Finish)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Styles



Hardware List Part List Β. С Flat A. Top Leg 1 pc. Leg 1 pc. Wing Nut 4 pcs.(+1 extra) Washer 4 pcs.(+1 extra) 1 pc. **Table Assembly** Place Top (A) upside down on a soft cloth. Attach Leg (B) to Top (A) with Flat Washers and Wing Nuts, tighten Nuts half way. Attach Leg (C) to Top (A) and Leg (B) with Flat Washers and Wing Nuts, tighten up all Nuts. Wing Nut Turn the table to its' upright position. Flat Washer To level the table, adjust the adjustable levelers on the bottom of legs. В (See figure 1) E D Figure 1 For use with an umbrella, the umbrella hole cover is removable. **Note:** Frozen precipitation may damage the top. Store inside in freezing weather.

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com