



Office table


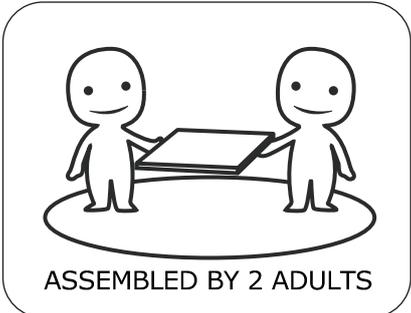


ASSEMBLED BY 2 ADULTS

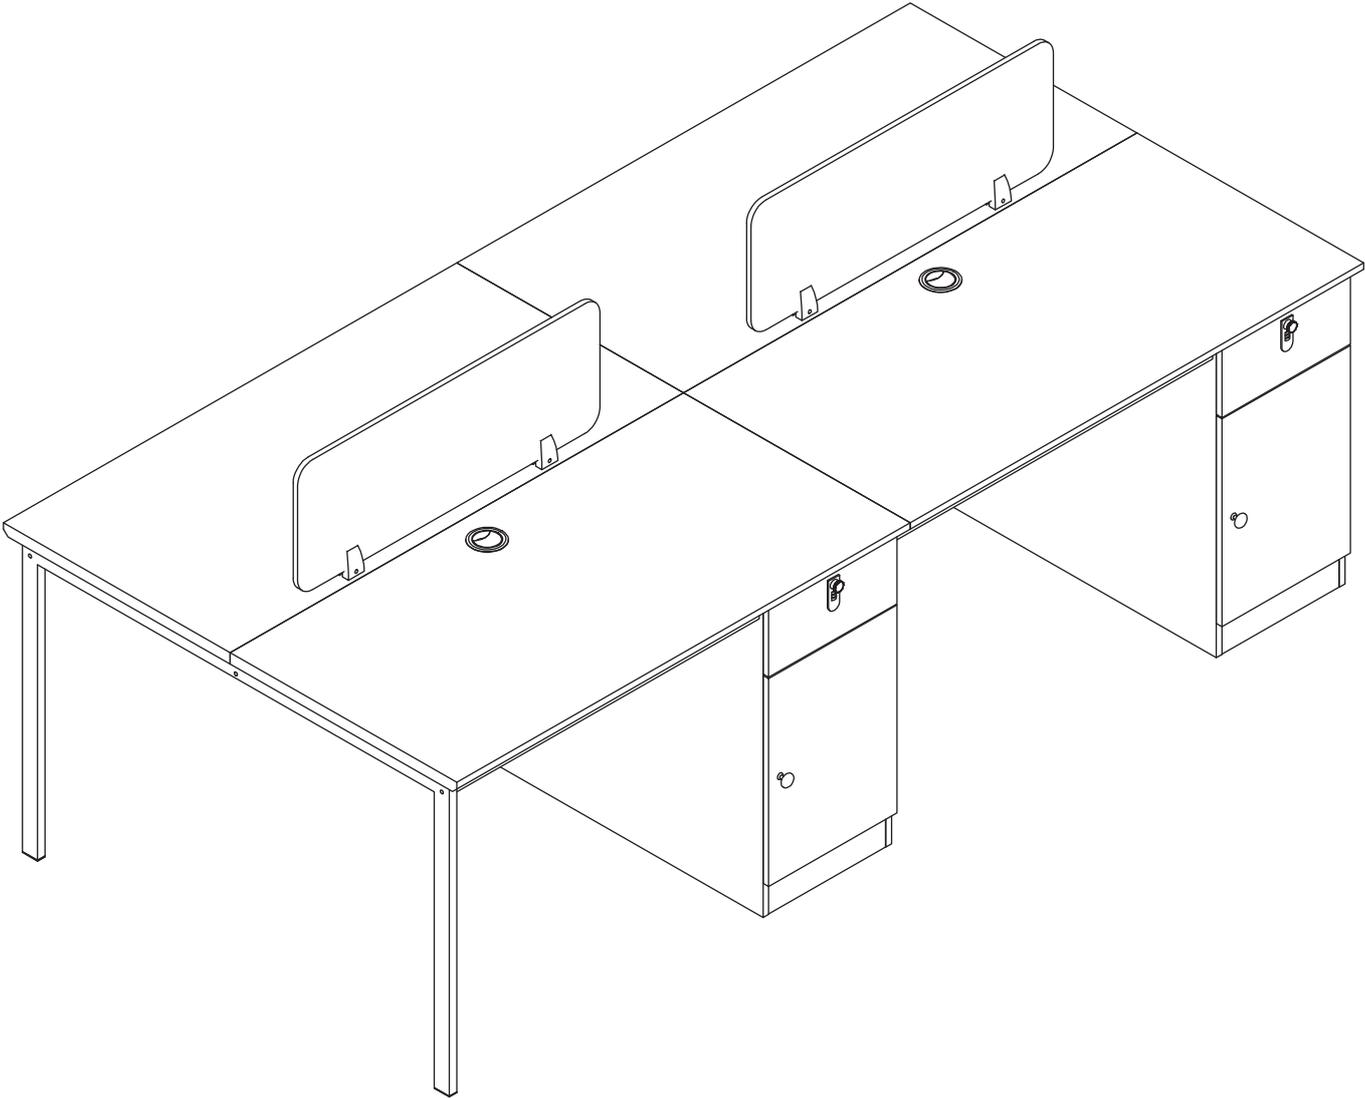


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

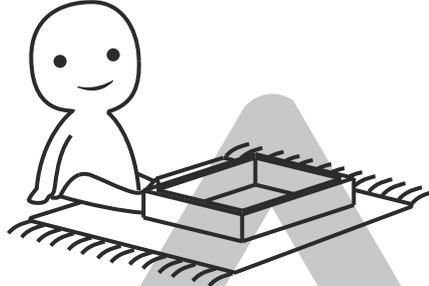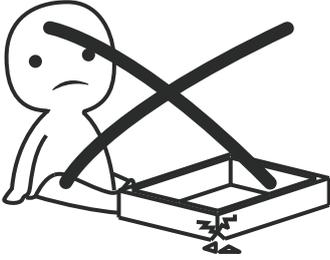



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

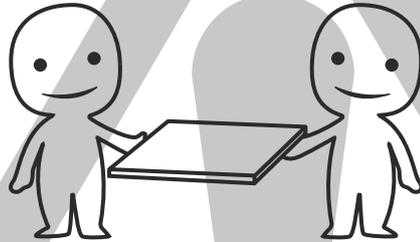

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

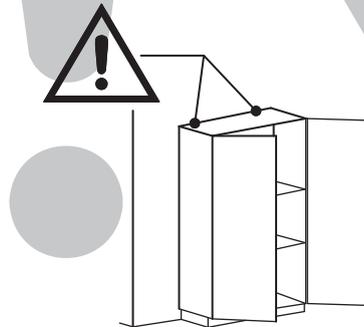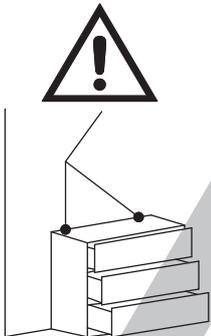

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.







Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

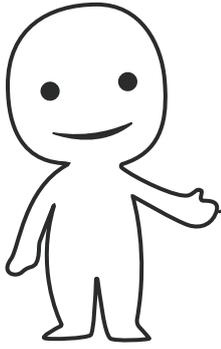


Please prepare the following tools

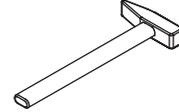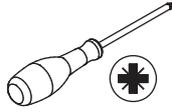

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size
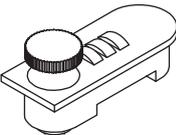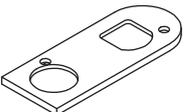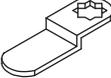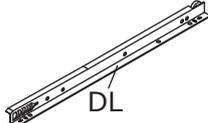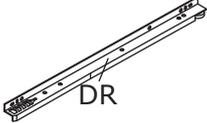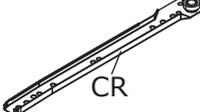
<p>A x 72</p>  <p>M6 x 40 mm</p>	<p>B x 72</p>  <p>Ø 15 x 10 mm</p>	<p>C x 16</p>  <p>Ø 8 x 40 mm</p>	<p>D x 88</p>  <p>M3.5 x 14 mm</p>	<p>E x 24</p>  <p>M6 x 35 mm</p>
<p>F x 8</p>  <p>M6 x 50 mm</p>	<p>G x 4</p>  <p>M4 x 20 mm</p>	<p>H x 4</p> 	<p>I x 8</p> 	<p>J x 16</p>  <p>M3.5 x 40 mm</p>
K x 4				
<p>K1</p> 	<p>K2</p> 	<p>K3</p> 	<p>K4</p> 	<p>K5</p>  <p>x2</p>
<p>L x 4</p>  <p>CL</p> <p>14"</p>	<p>M x 4</p>  <p>DL</p> <p>14"</p>	<p>N x 4</p>  <p>DR</p> <p>14"</p>	<p>O x 4</p>  <p>CR</p> <p>14"</p>	<p>P x 1</p> 
<p>Q x 4</p> 	<p>R x 4</p>  <p>Ø 60 mm</p>	<p>S x 16</p> 		

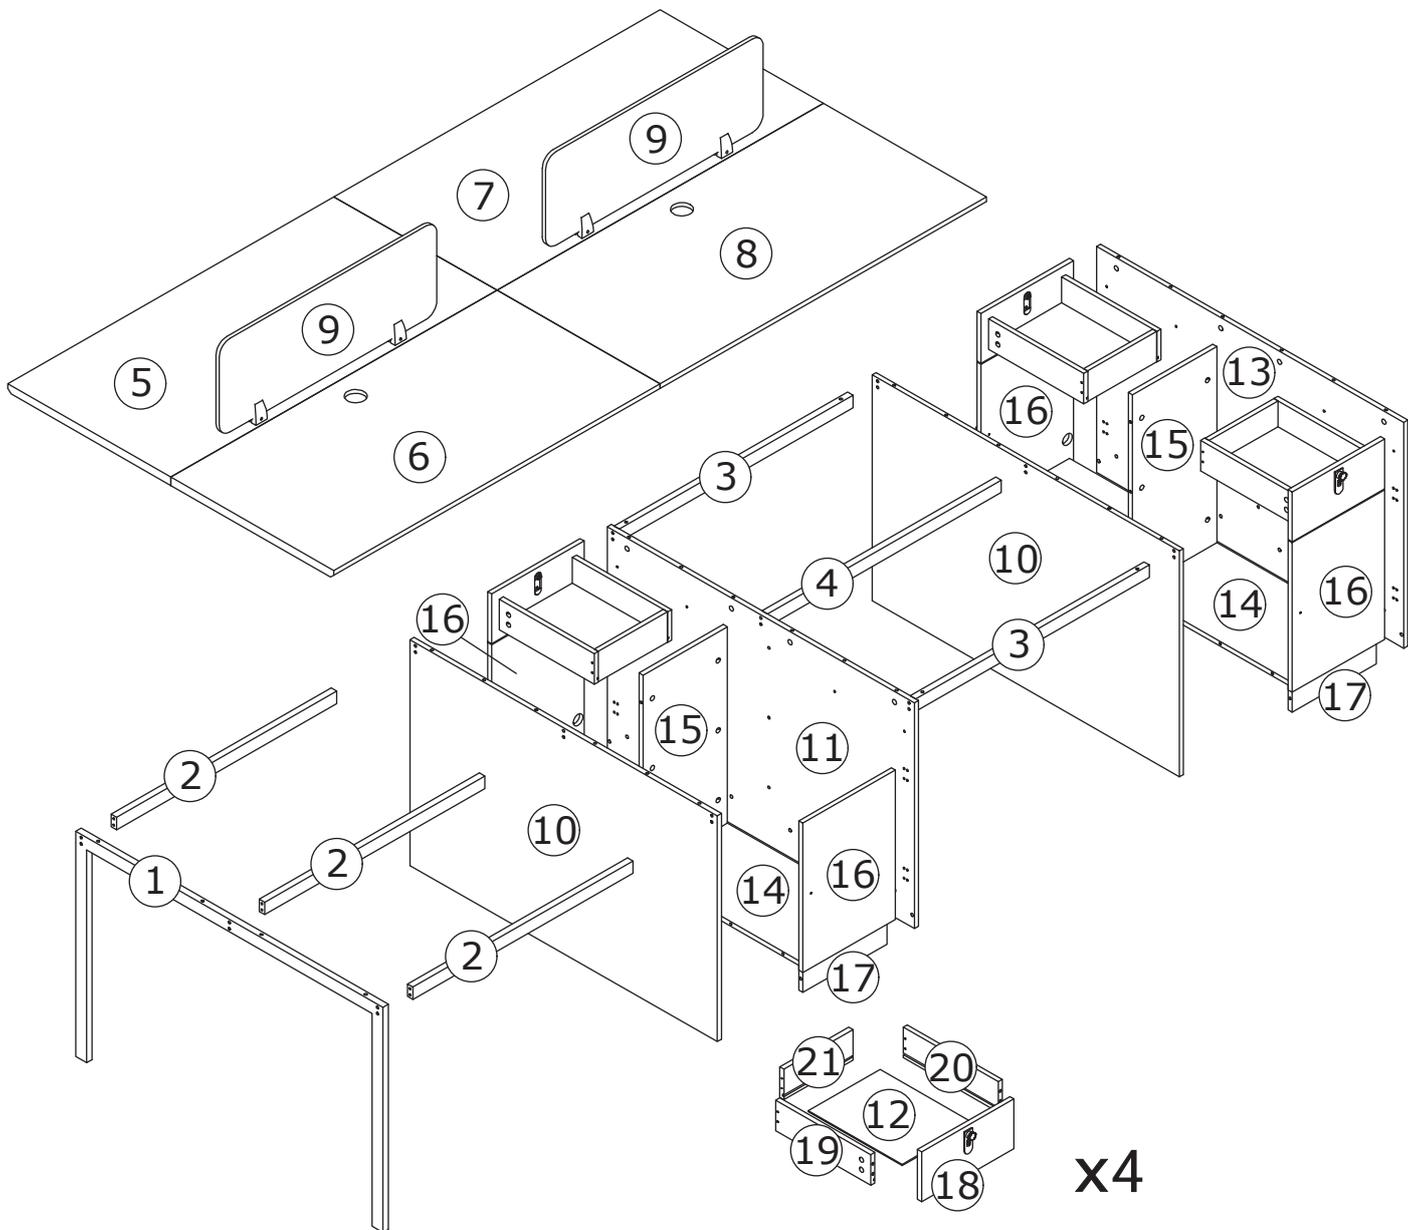

x4

⚠ WARNING












Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*


1

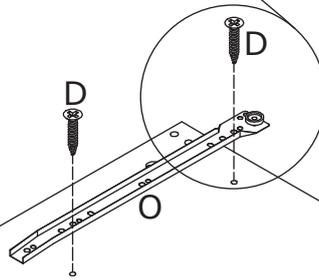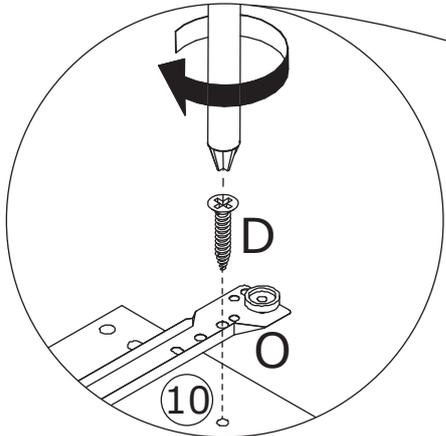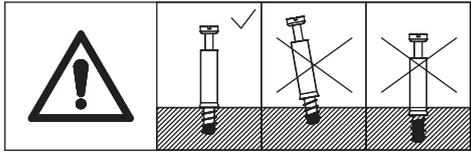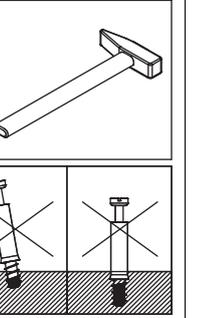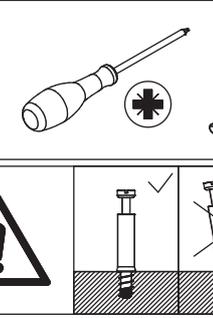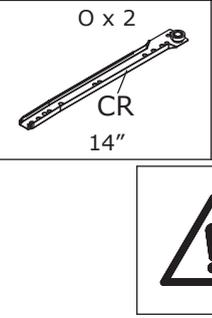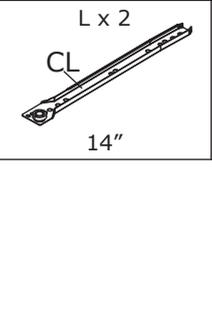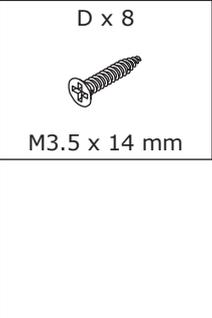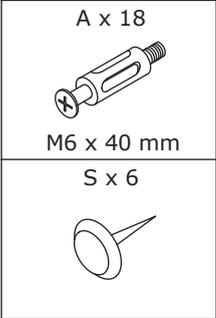


Fix rail(L) and (O) to board 10 with screw(D) as shown.

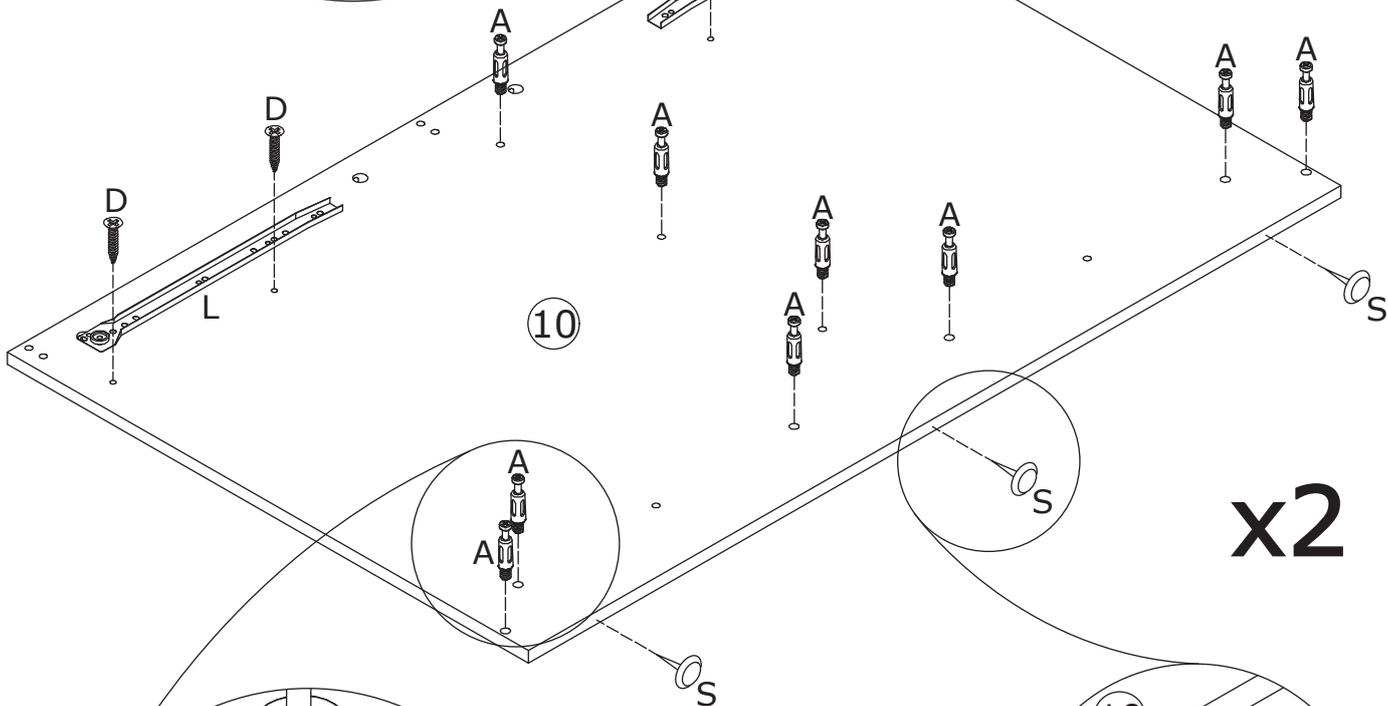

x2

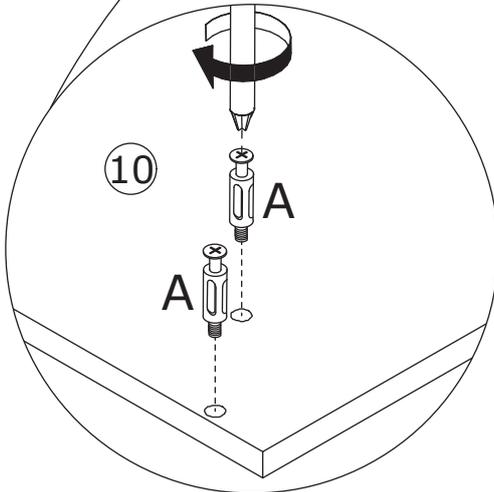

Screw eccentric rod(A) into board 10 with a screwdriver as shown.

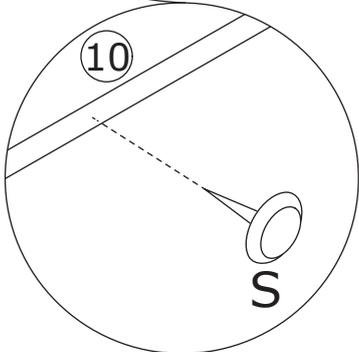

Knock foot pad(S) into board 10 as shown.



2

A x 9
M6 x 40 mm
S x 3







D x 4
M3.5 x 14 mm

L x 1
CL
14"


O x 1
CR
14"

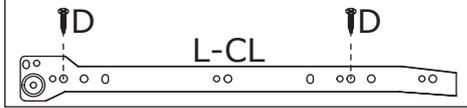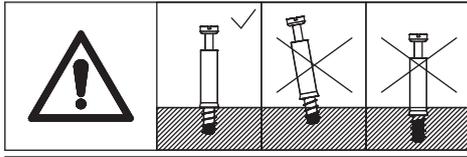

Fix rail(L) and (O) to board 11 with screw(D) as shown.

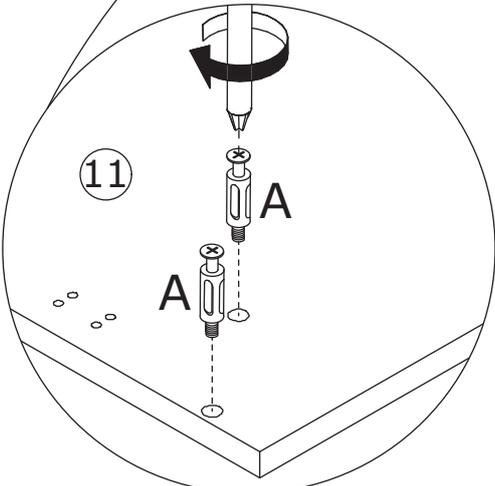
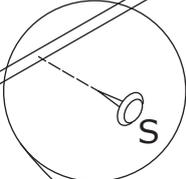
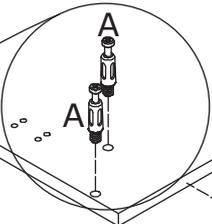
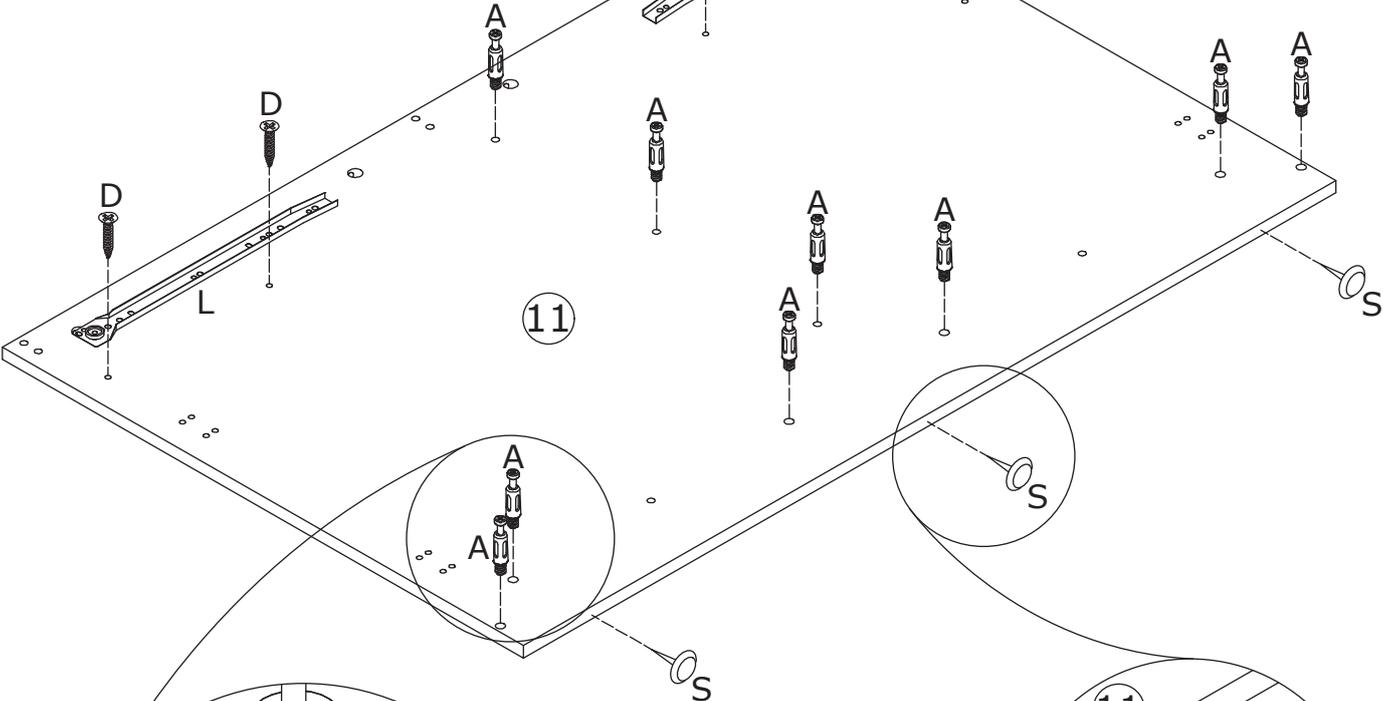
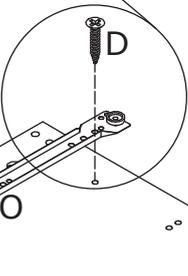
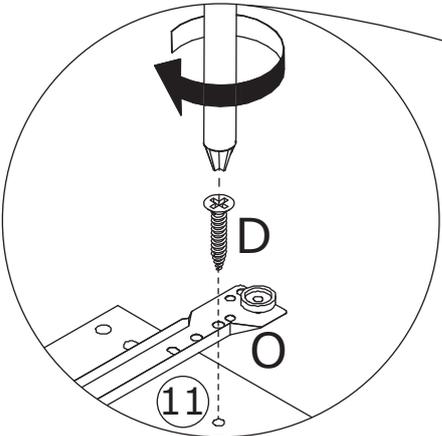


Screw eccentric rod(A) into board 11 with a screwdriver as shown.


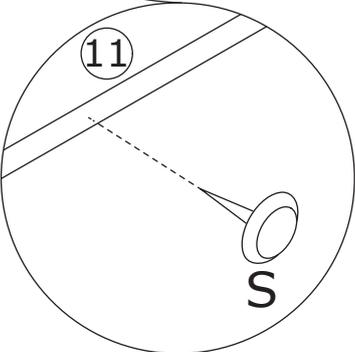


Knock foot pad(S) into board 11 as shown.


3

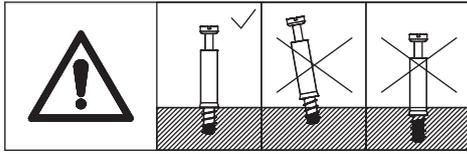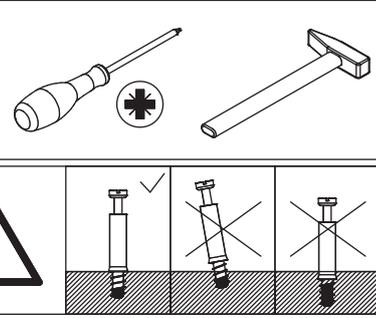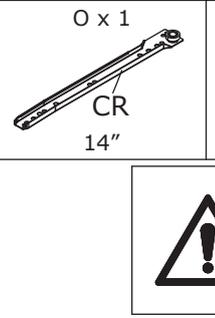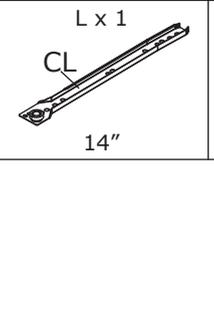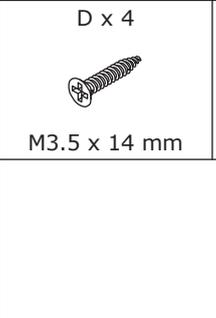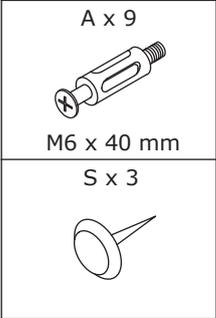

Fix rail(L) and (O) to board 13 with screw(D) as shown.



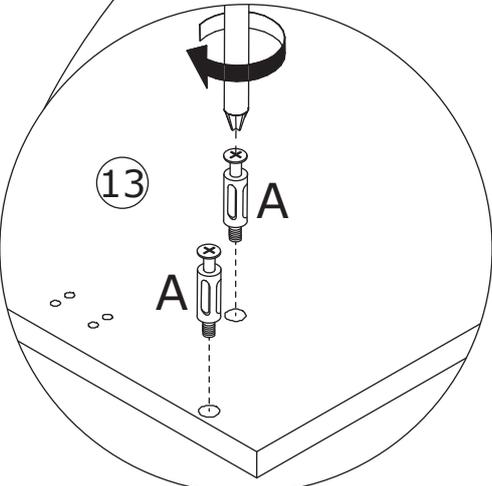
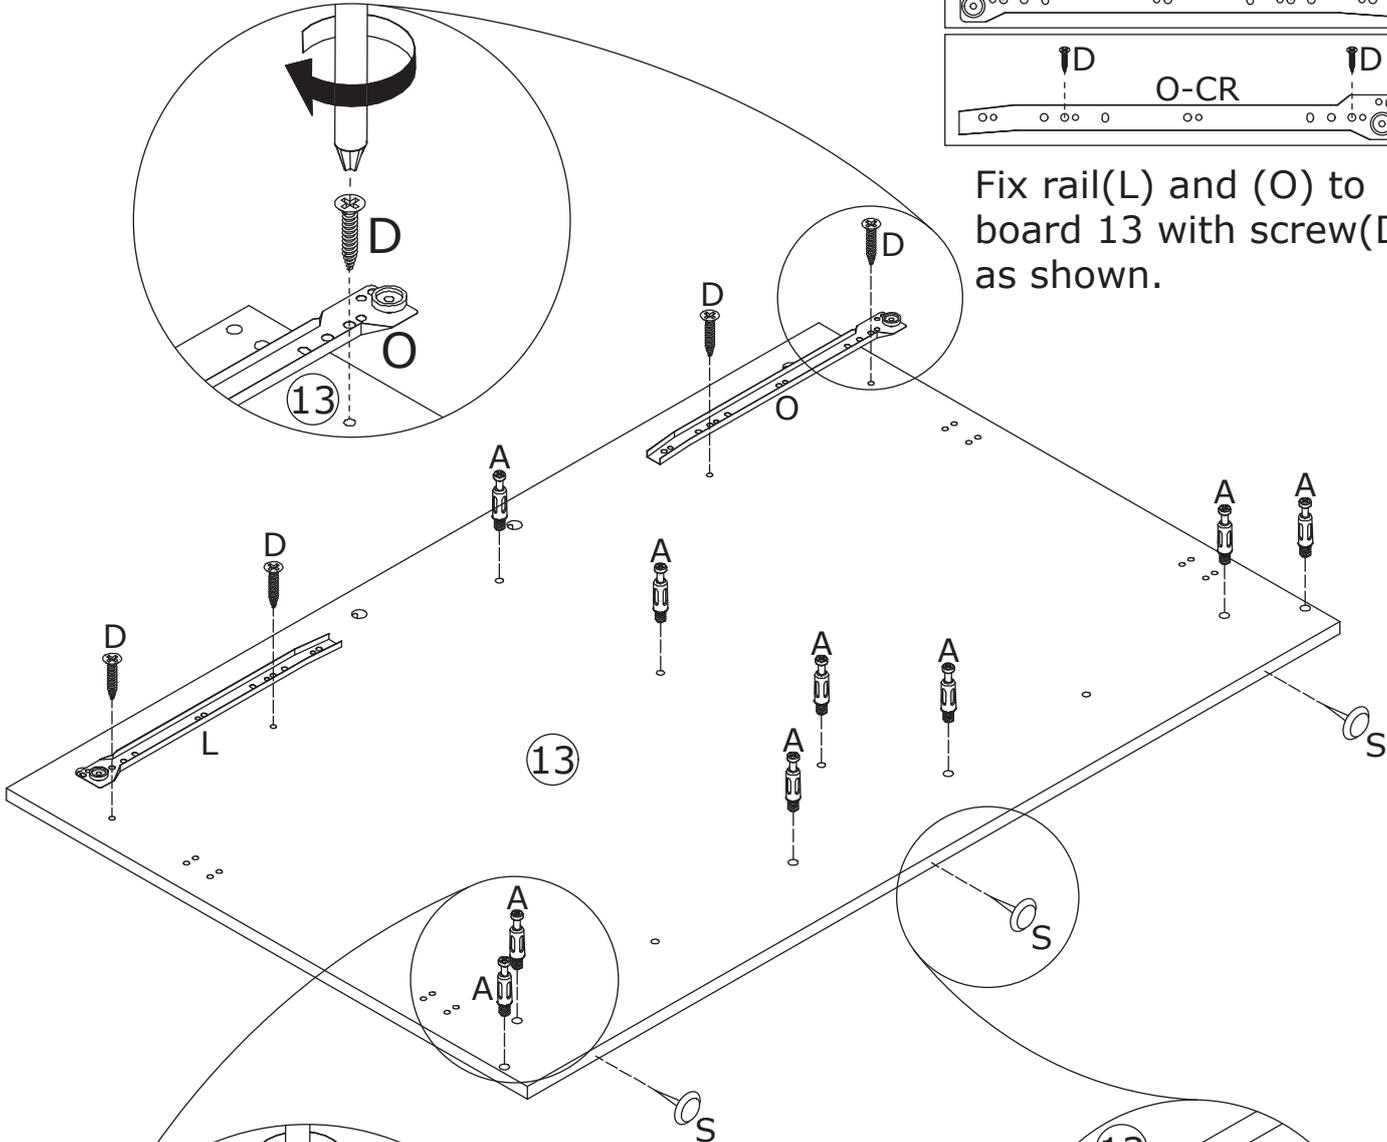


Screw eccentric rod(A) into board 13 with a screwdriver as shown.

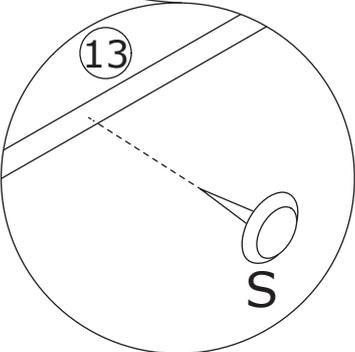




Knock foot pad(S) into board 13 as shown.

4

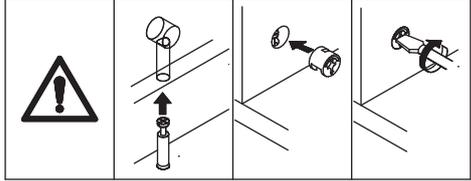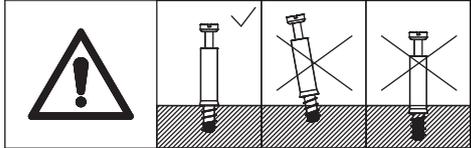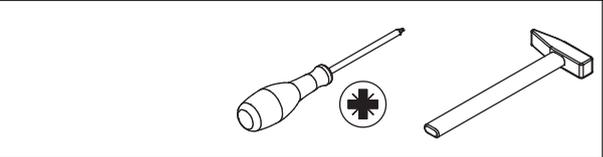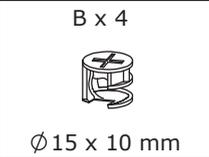

Knock foot pad(S)
into board 17 as
shown.




Screw eccentric rod(A)
into board 14 as shown.

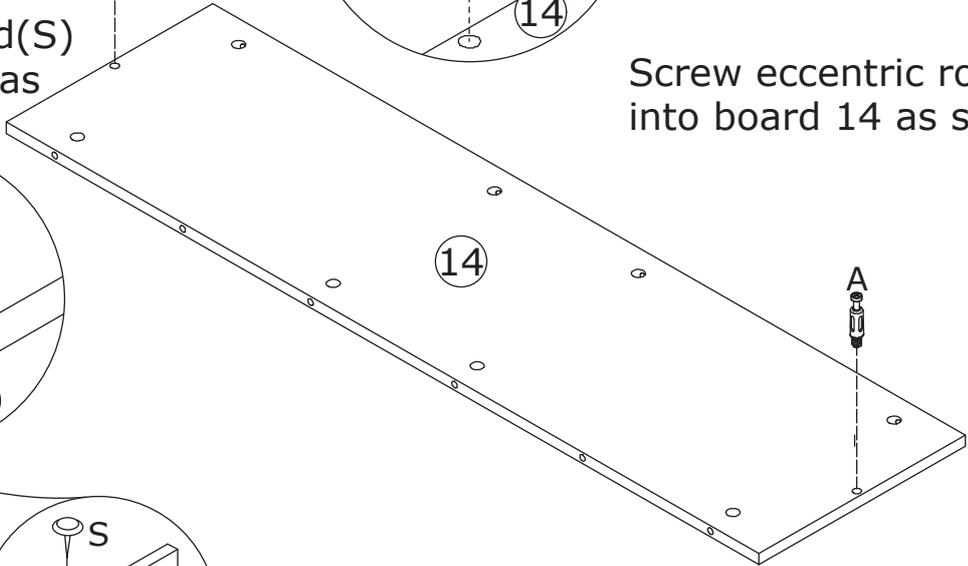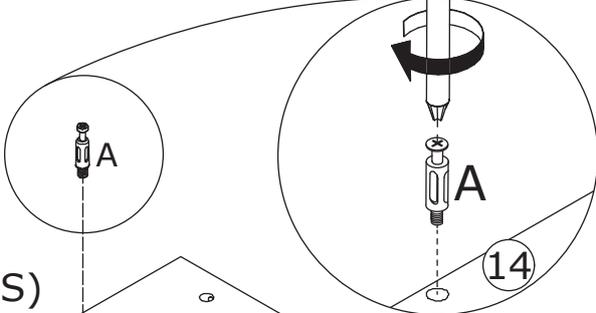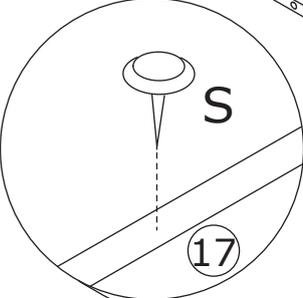

x2






Attach board 17 to board 14,
add cam lock(B) into board 17
and turn clockwise to tighten
as shown.

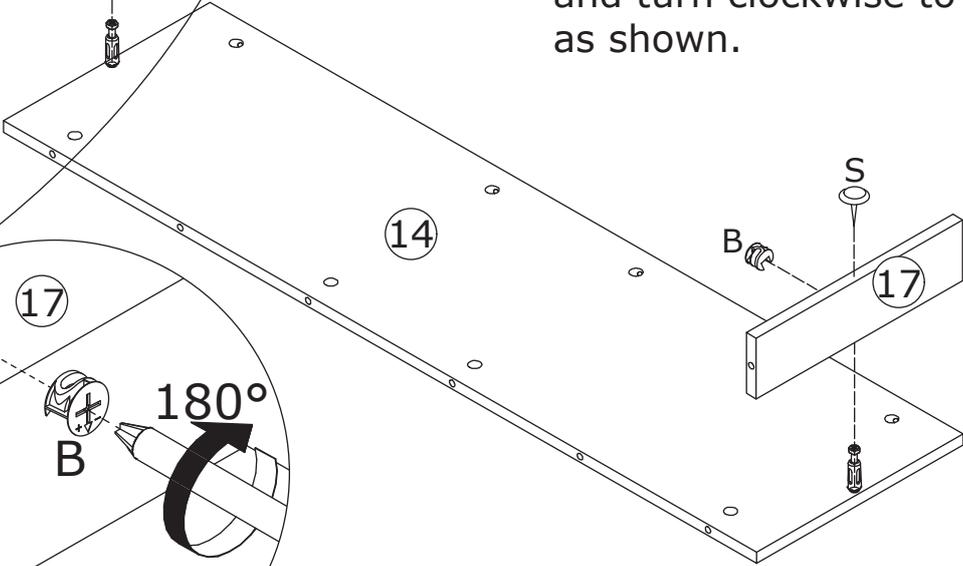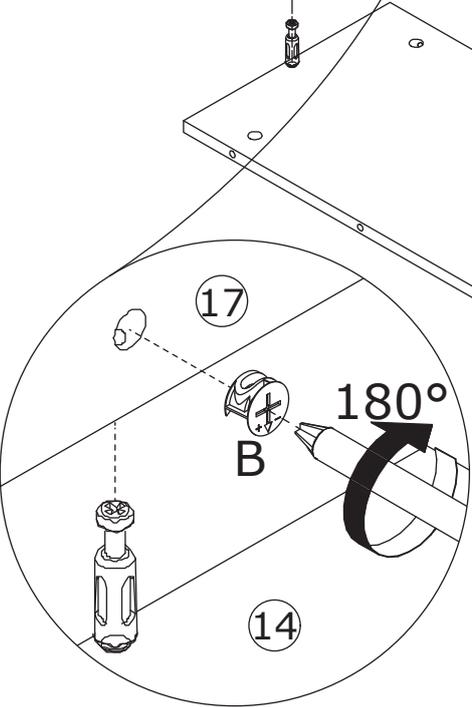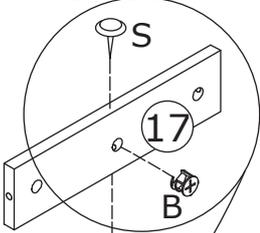


x2



5

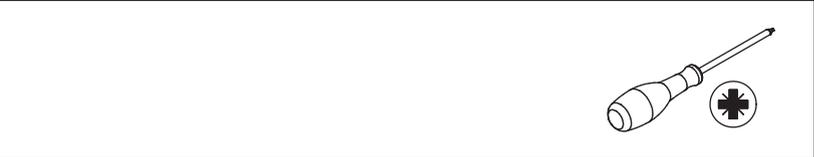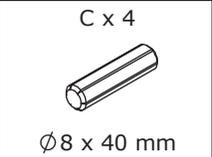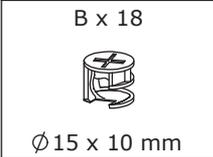


Insert wooden dowel(C) into board 14 at first. Attach board 17, 14 and 15 to board 10, add cam lock(B) into board 17,14,15 and turn clockwise to tighten as shown.

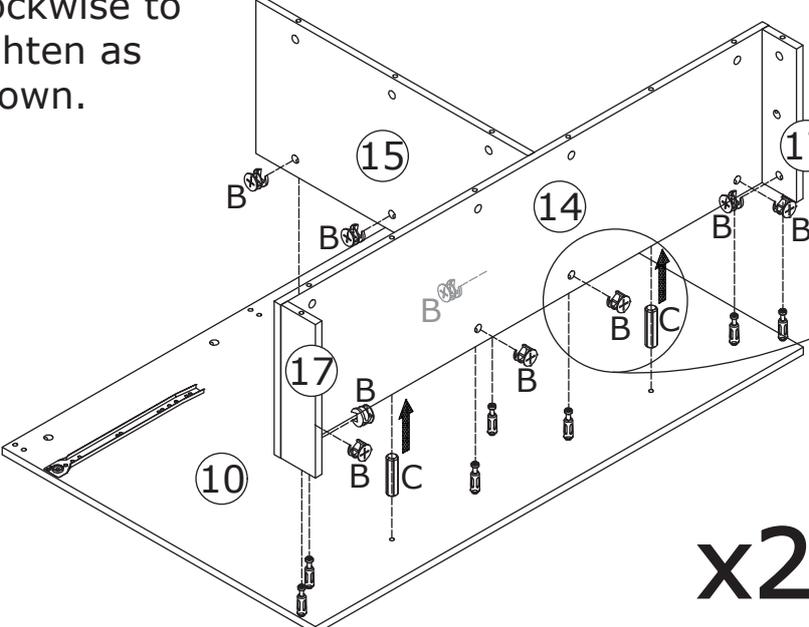




x2

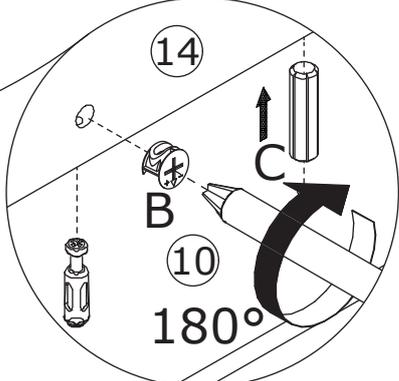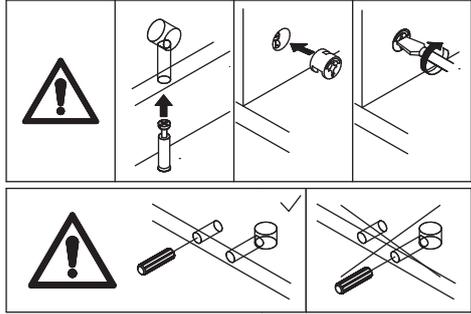




6

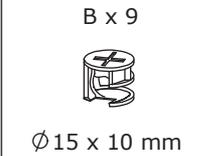




Insert wooden dowel(C) into board 14 at first. Attach board 11 to board 17, 14 and 15, add cam lock(B) into board 17,14,15 and turn clockwise to tighten as shown.

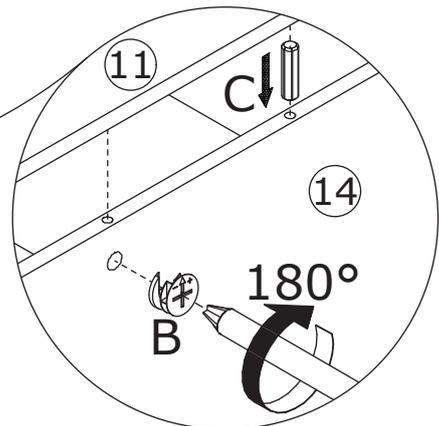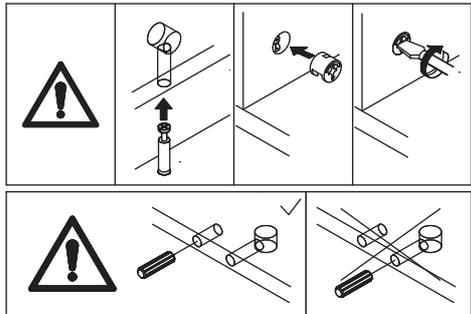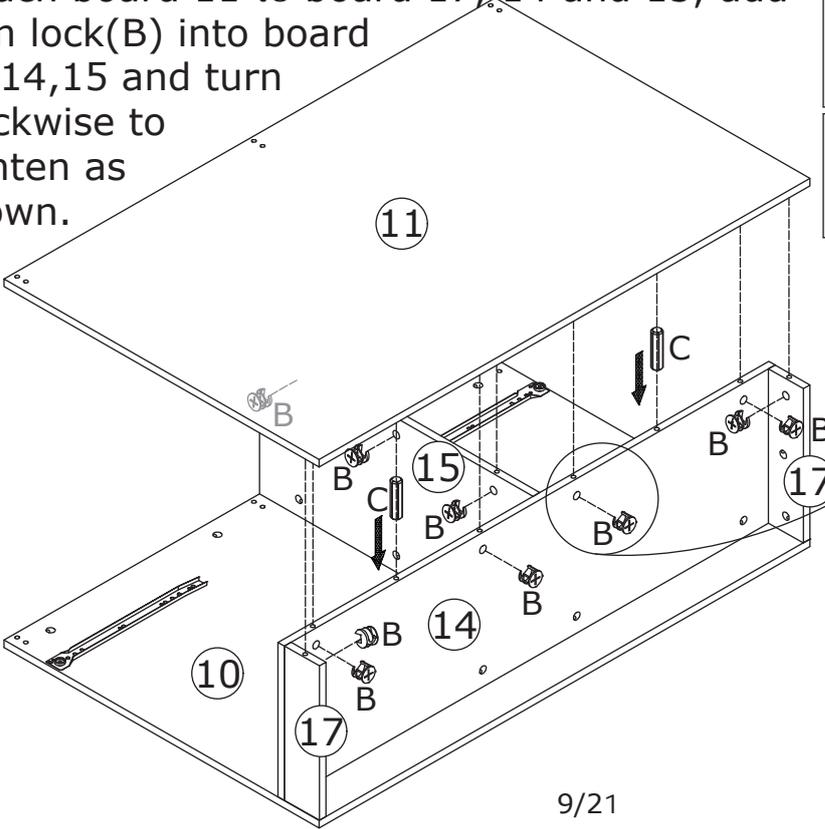

7

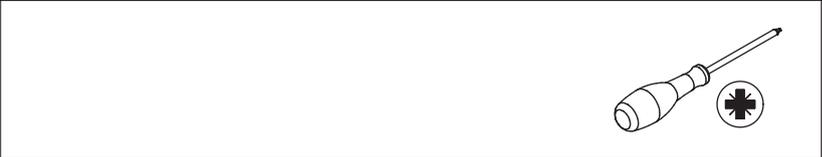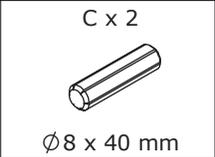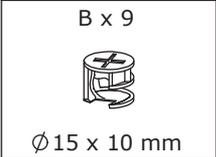



Insert wooden dowel(C) into board 14 at first. Attach board 13 to board 17, 14 and 15, add cam lock(B) into board 17,14,15 and turn clockwise to tighten as shown.

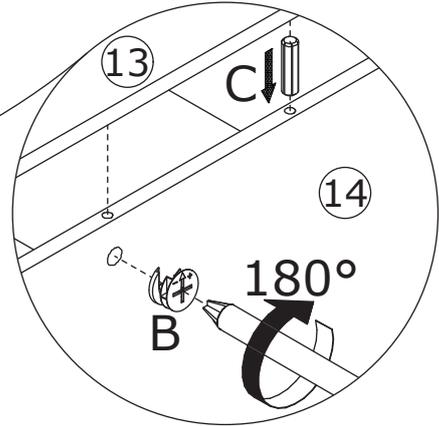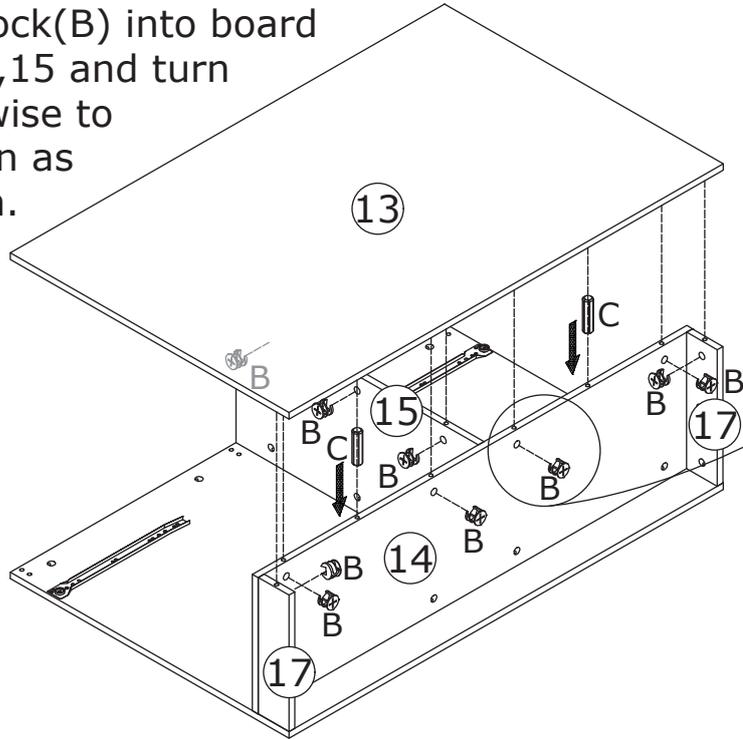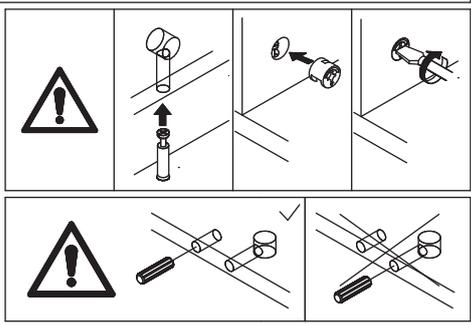



8






Fix part 1 to part 2 using screw(E) at first. Fix part 2, 3 and 4 to the two components with screw(E) as shown.

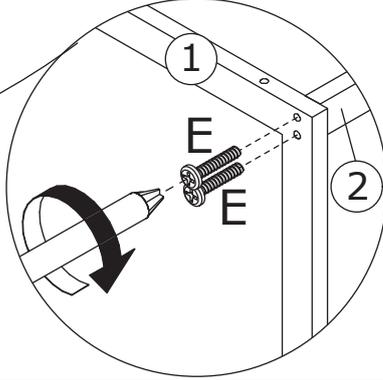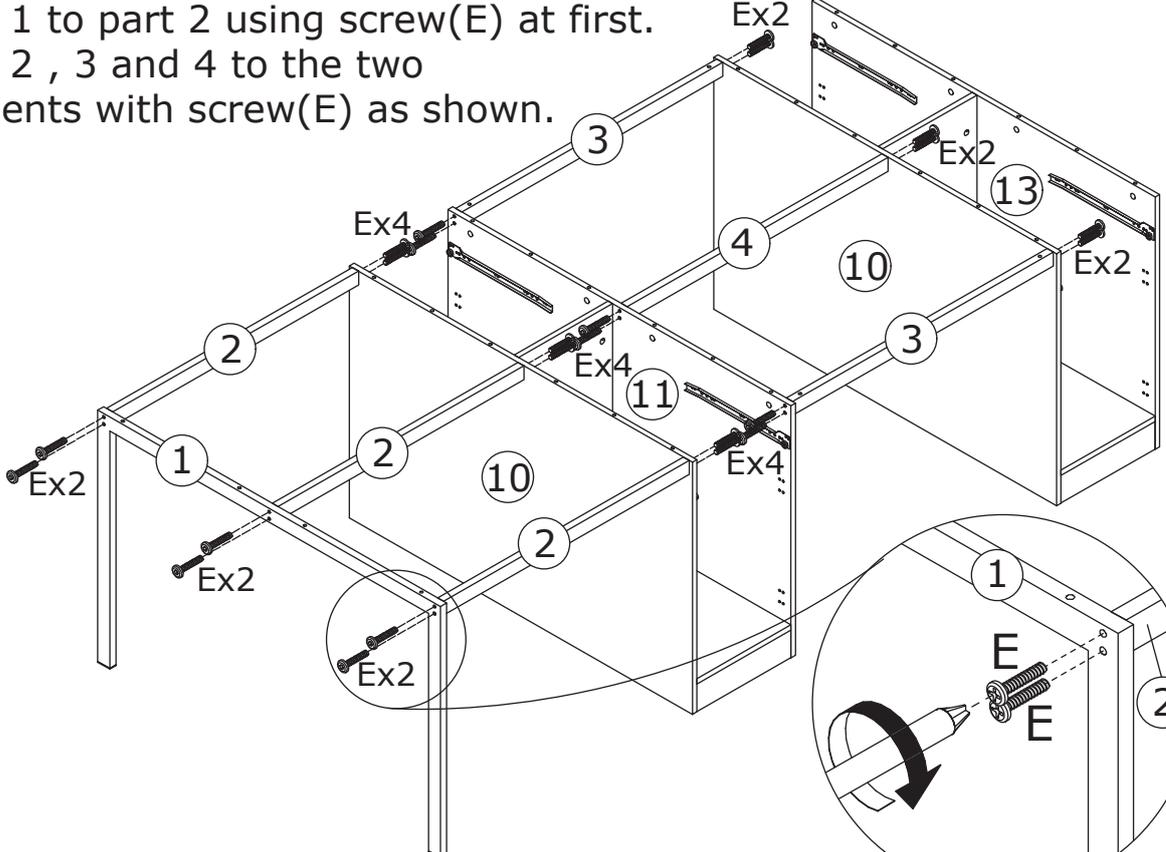




9

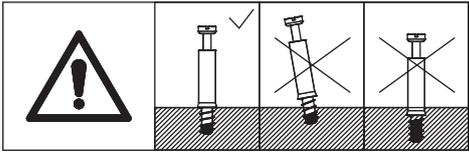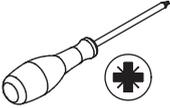




Screw eccentric rod(A) into board 7 and 8 as shown.

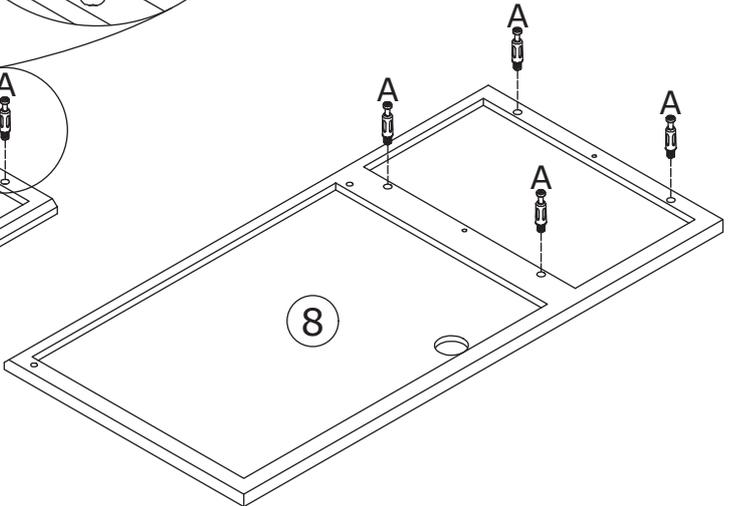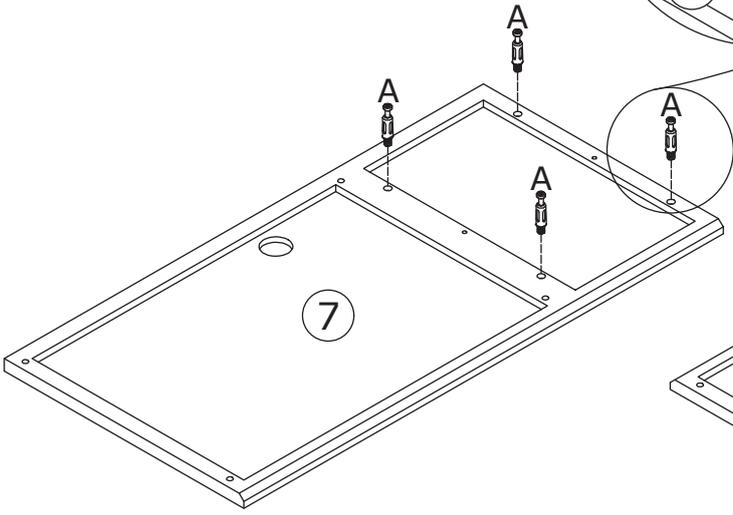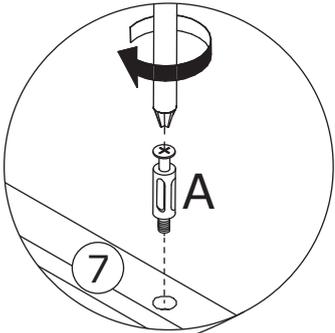


10

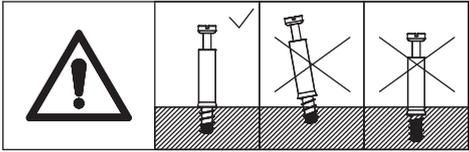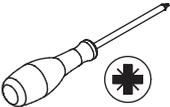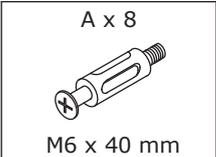



Screw eccentric rod(A) into board 5 and 6 as shown.

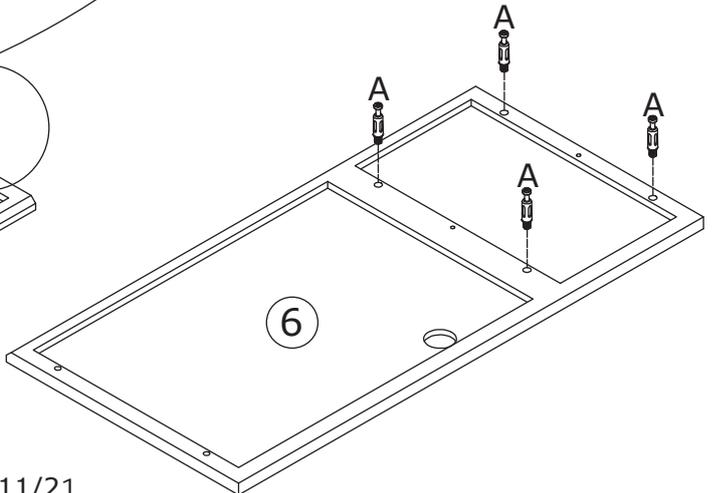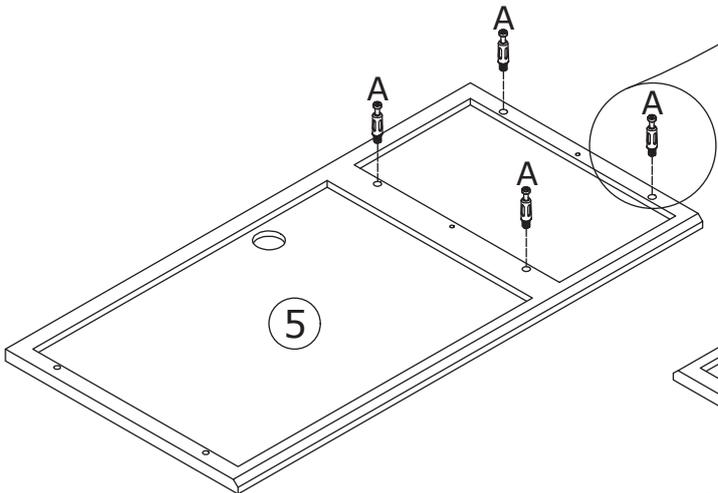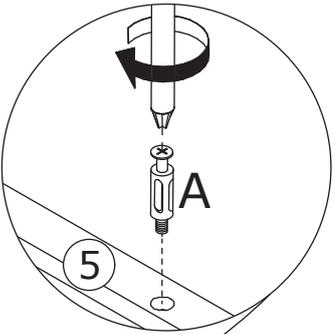


11
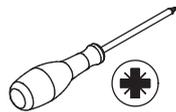
<p>B x 8</p>  <p>Ø 15 x 10 mm</p>	<p>C x 4</p>  <p>Ø 8 x 40 mm</p>	<p>F x 4</p>  <p>M6 x 50 mm</p>	
--	---	--	---





Insert wooden dowel(C) into board 10 and 13 at first.
Cover board 7 and 8 to right top, add cam lock(B) into and turn clockwise to tighten as shown.
Fix board 7 and 8 to part 3 with screw(F) as shown.

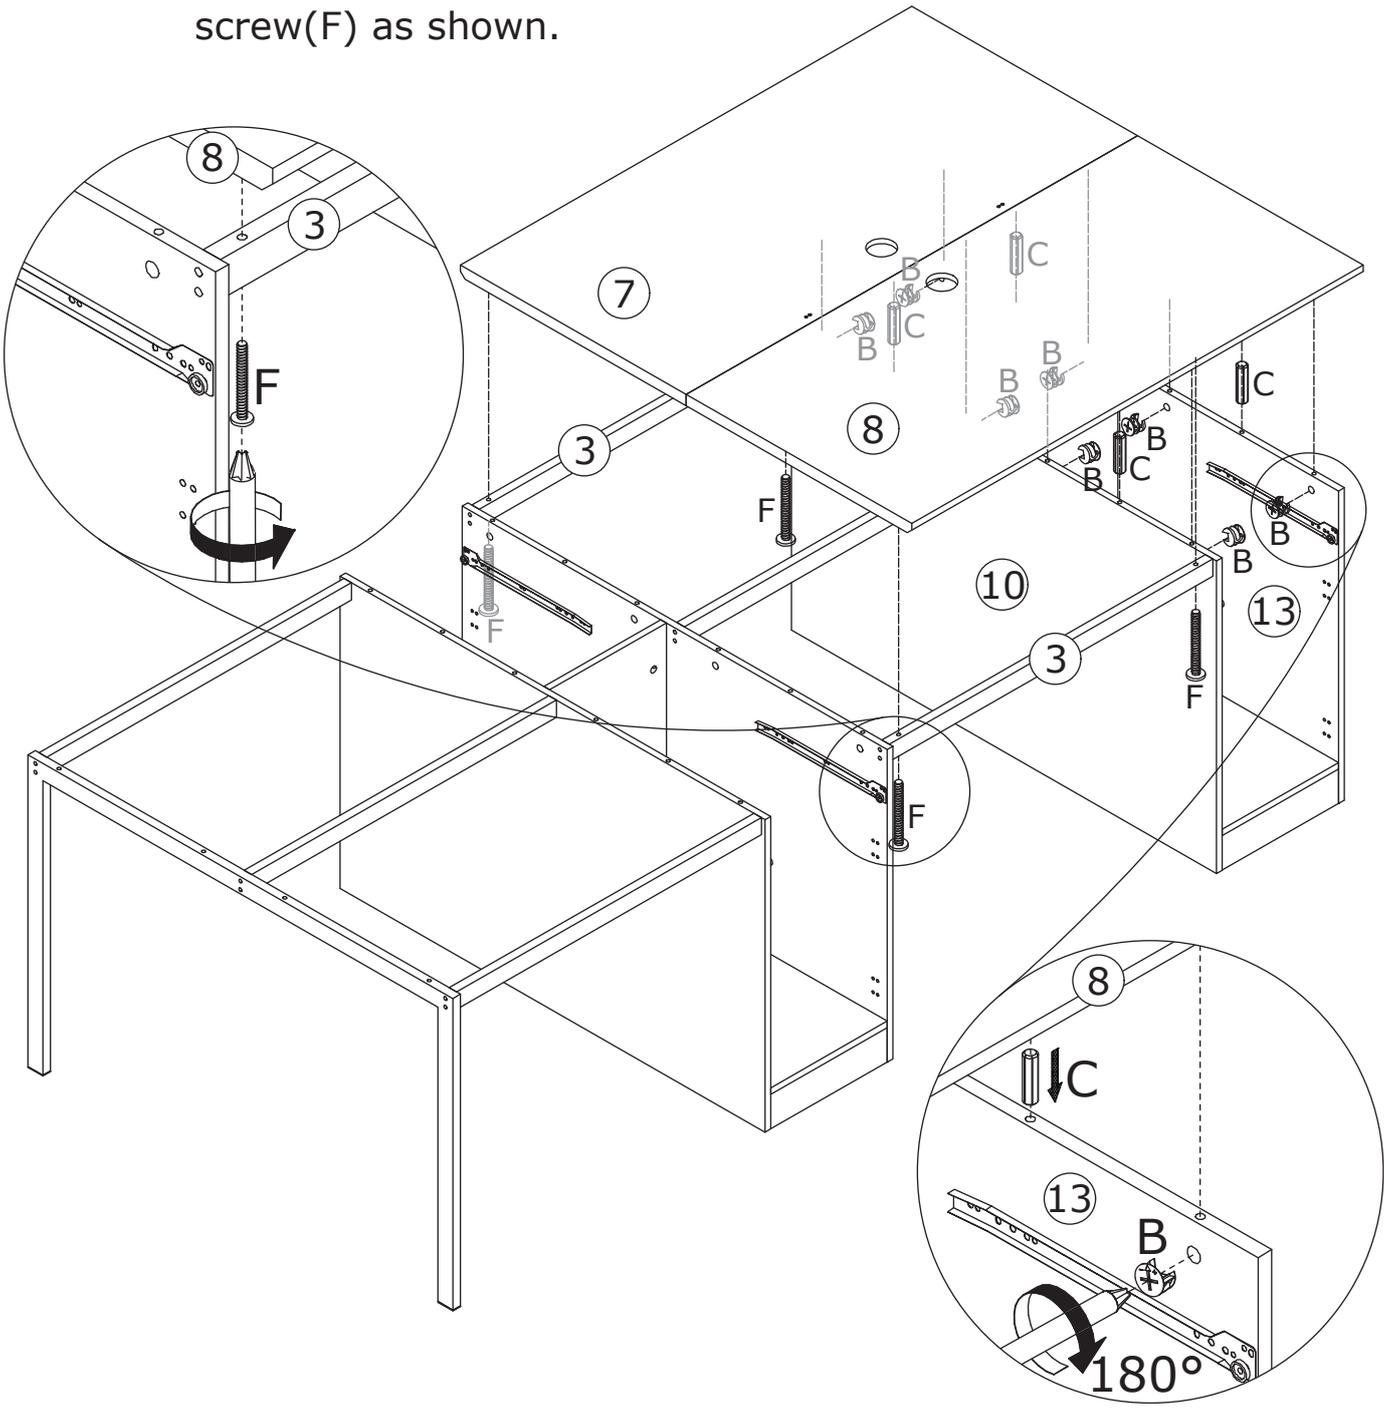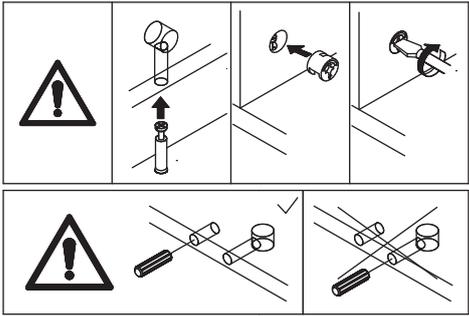






12
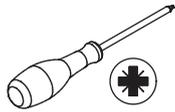
<p>B x 8</p>  <p>Ø 15 x 10 mm</p>	<p>C x 4</p>  <p>Ø 8 x 40 mm</p>	<p>F x 4</p>  <p>M6 x 50 mm</p>	 
--	---	--	---

Insert wooden dowel(C) into board 10 and 11 at first.
Cover board 5 and 6 to left top,
add cam lock(B) into and turn clockwise to tighten as shown.
Fix board 5 and 6 to part 1 with screw(F) as shown.

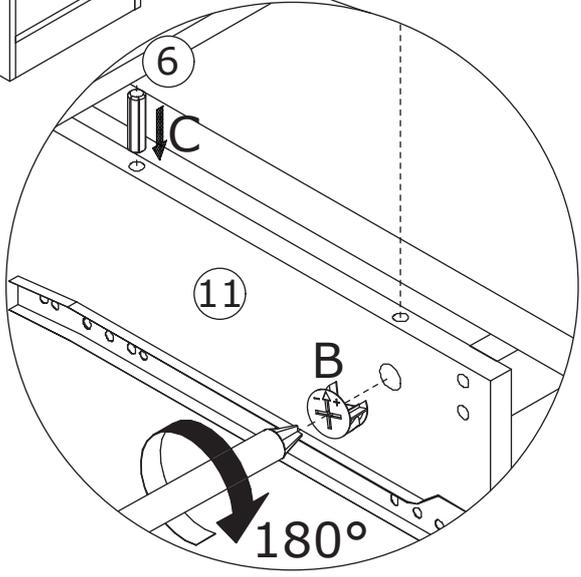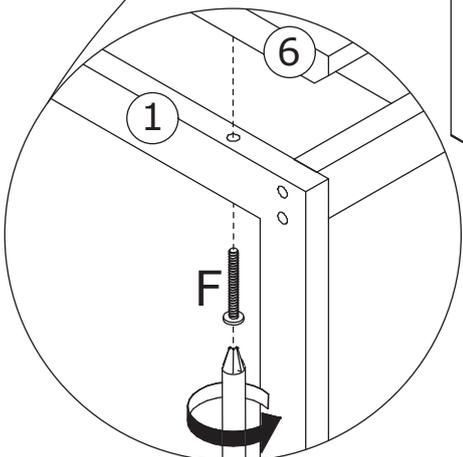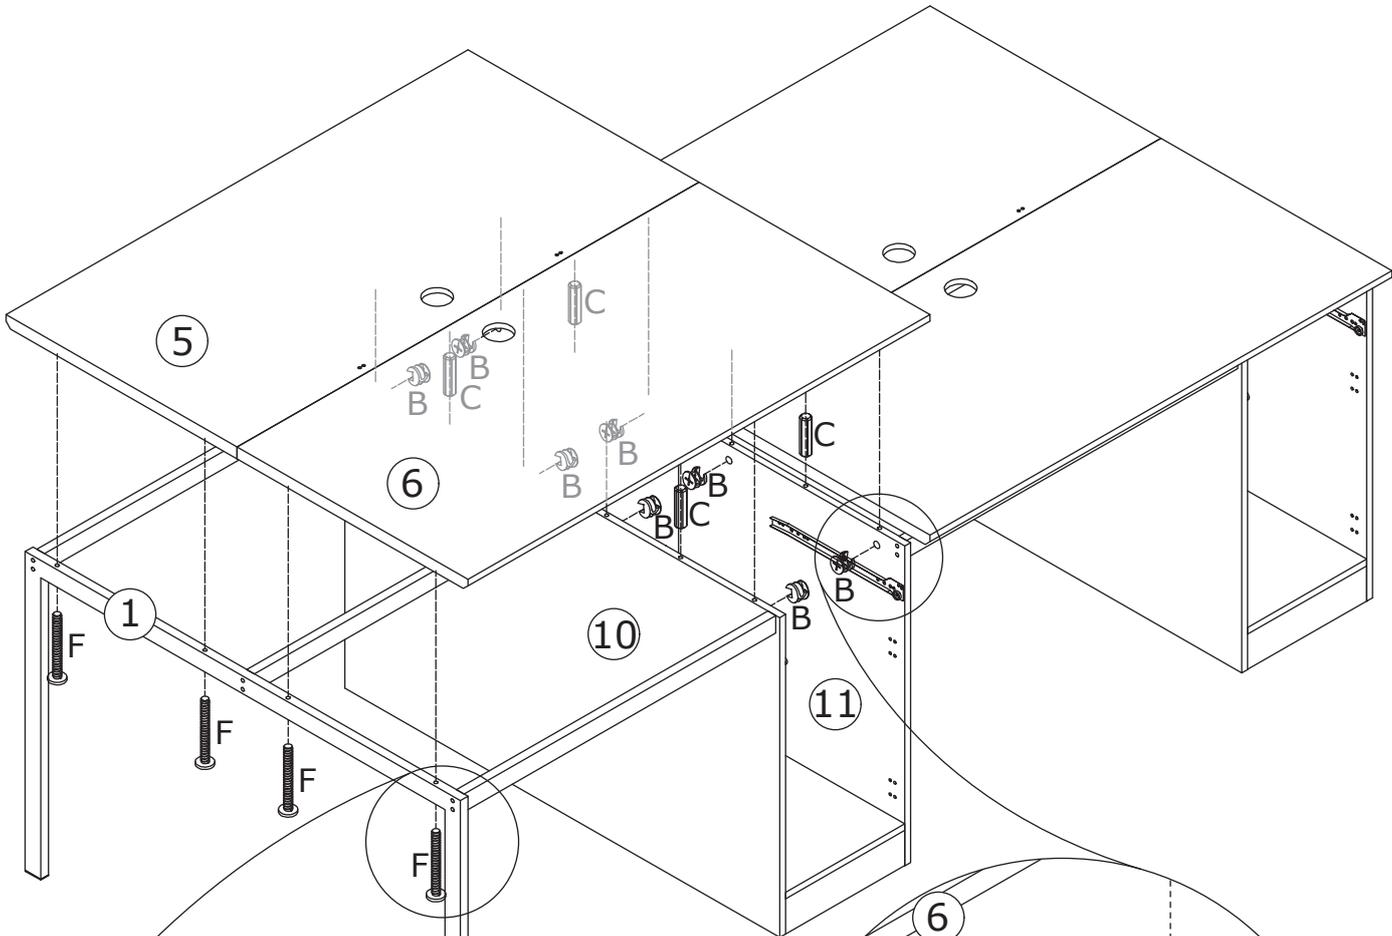
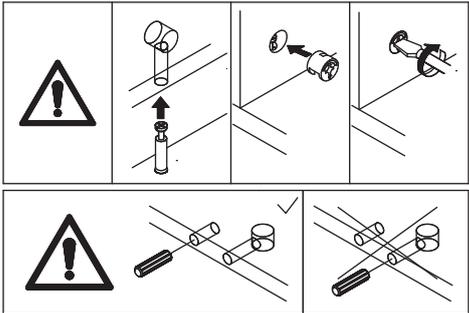


13

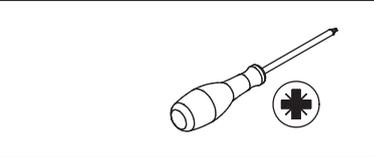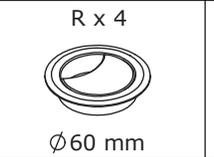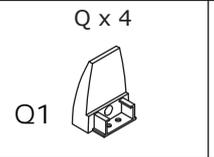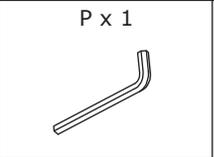
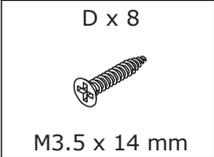


Separate part(Q) into two parts.



Fix part(Q1) to board 5 and 7
with screw(D) as shown.
Place wire box(R) into holes.

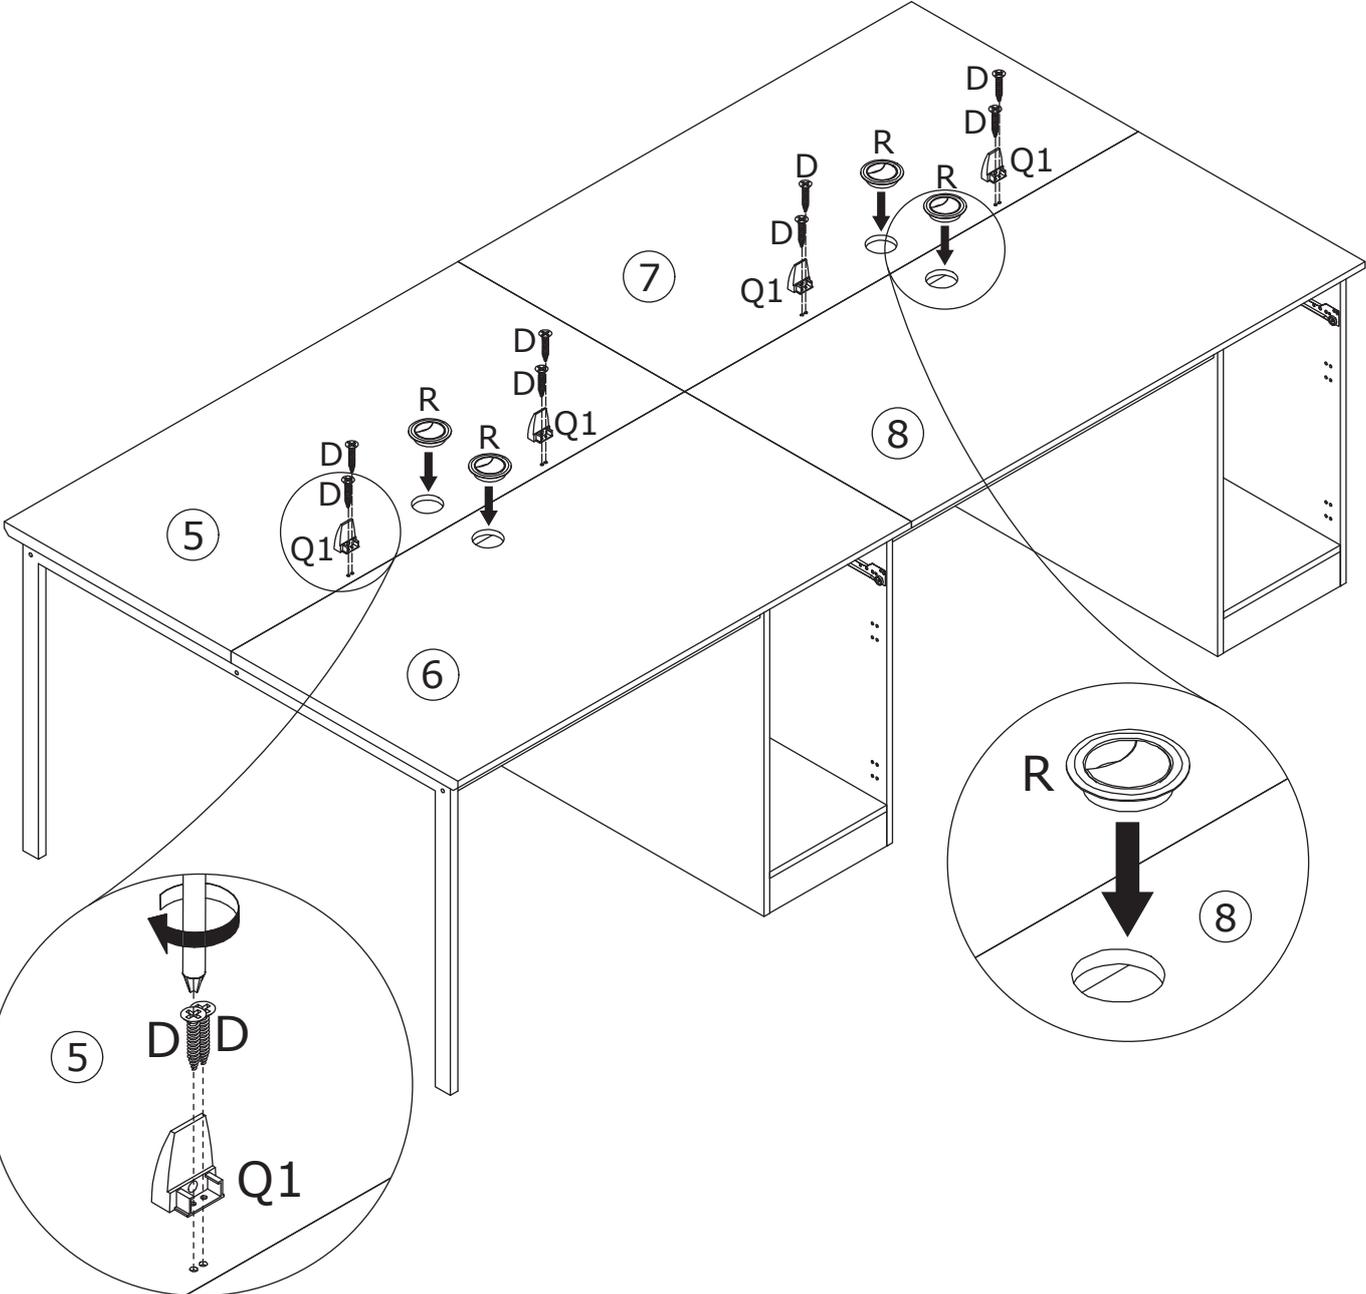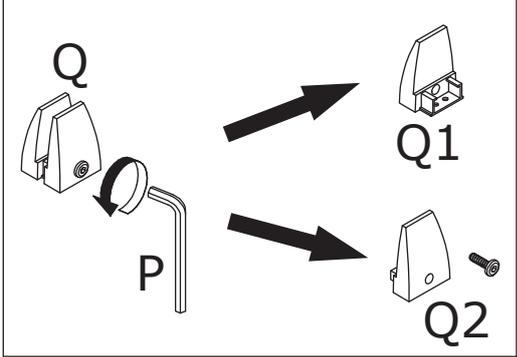


14

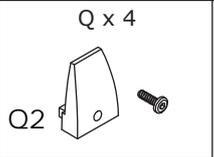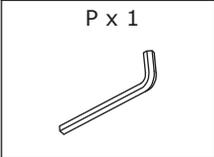





Place board 9 to the middle position,
and tighten (Q1) and (Q2) as shown.

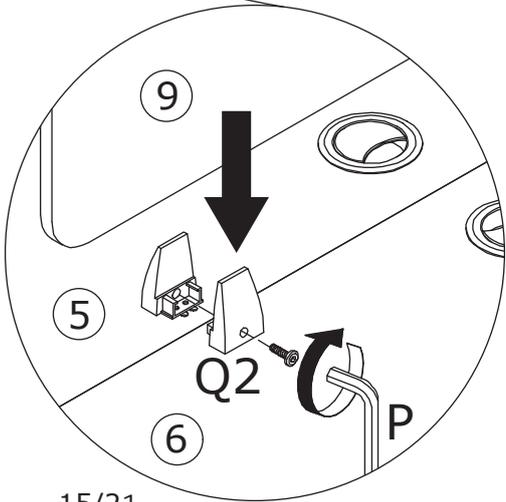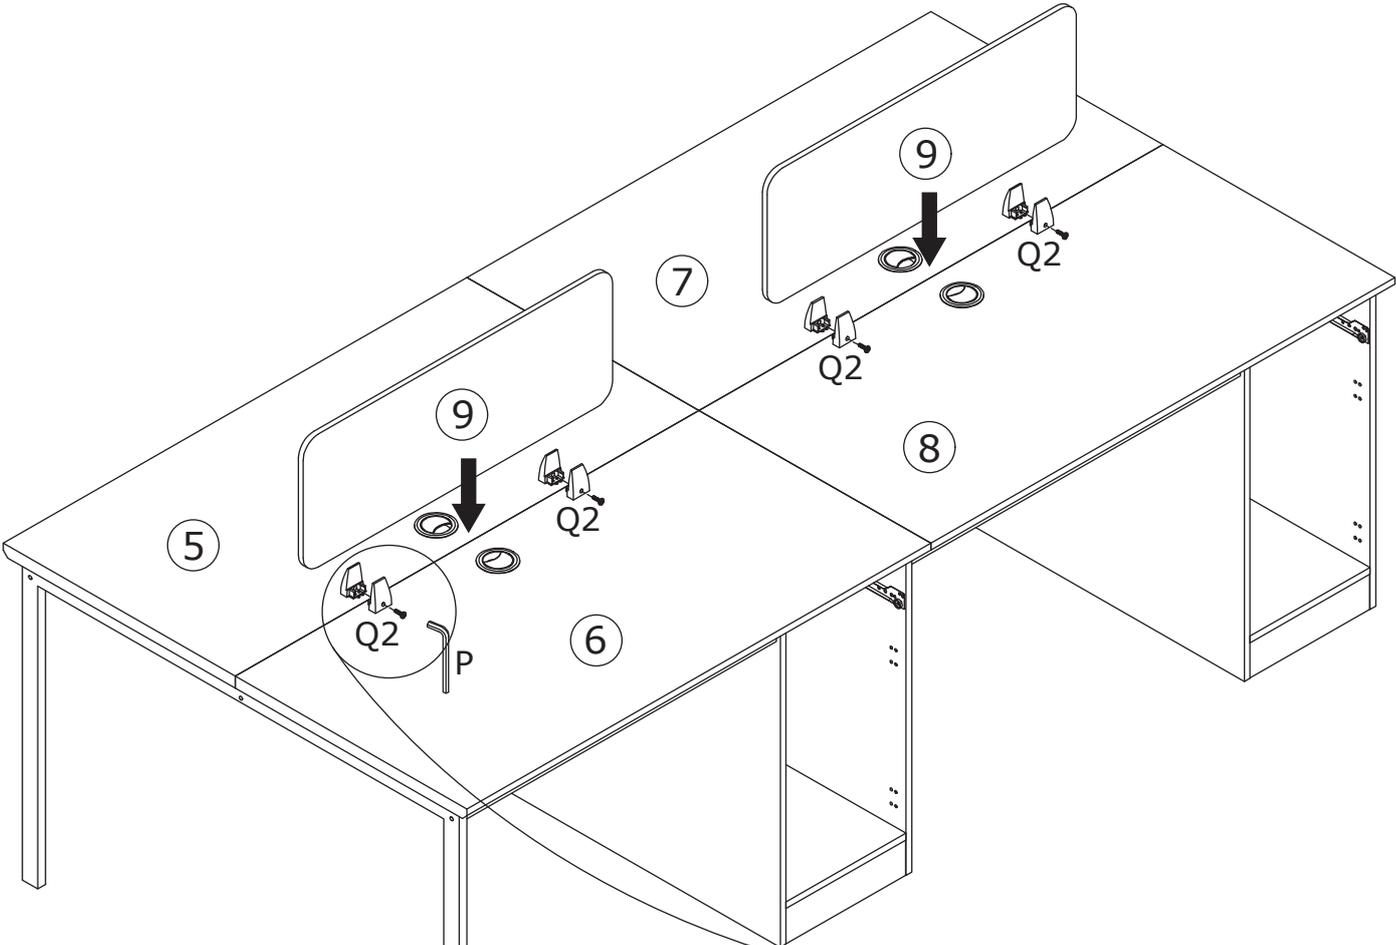


15
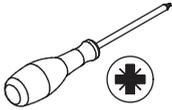
<p>A x 16</p>  <p>M6 x 40 mm</p>	<p>B x 16</p>  <p>∅15 x 10 mm</p>	<p>J x 16</p>  <p>M3.5 x 40 mm</p>	
---	--	---	---



Screw eccentric rod(A)
into board 18 as shown.

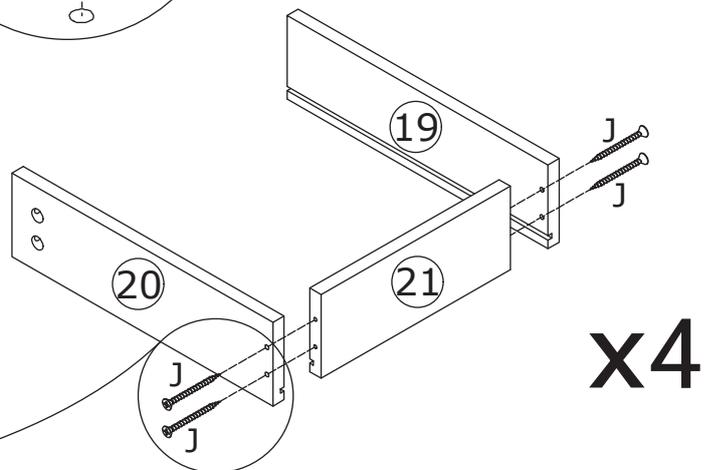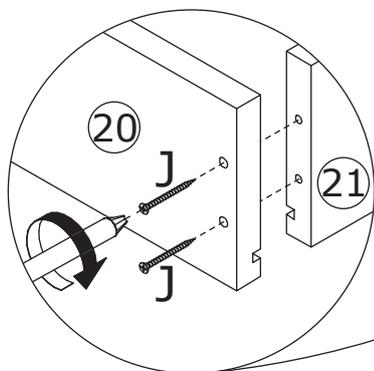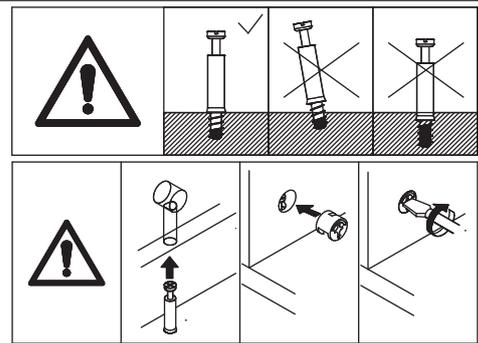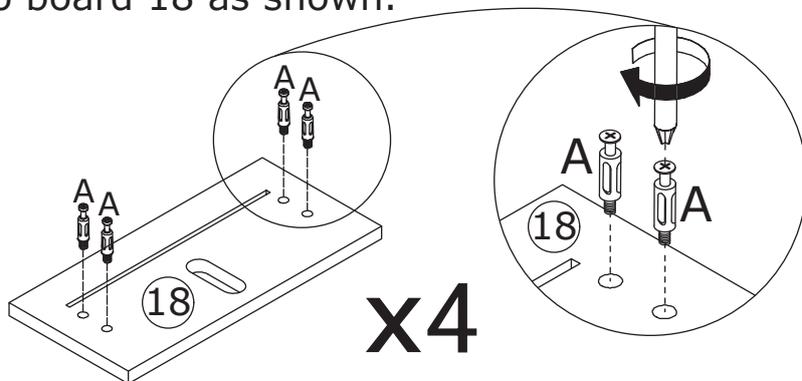

Fix board 19 and 20 to
board 21 with screw(J)
as shown.

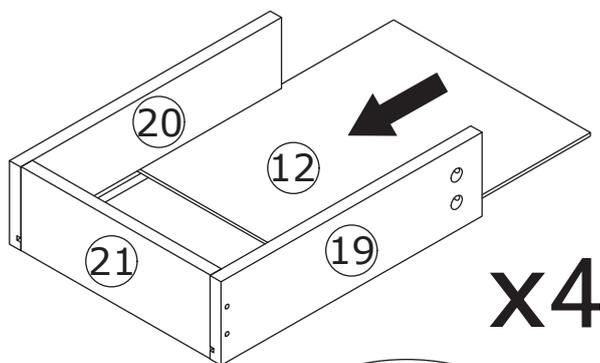



Insert bottom board 12
along available grooves
as shown.

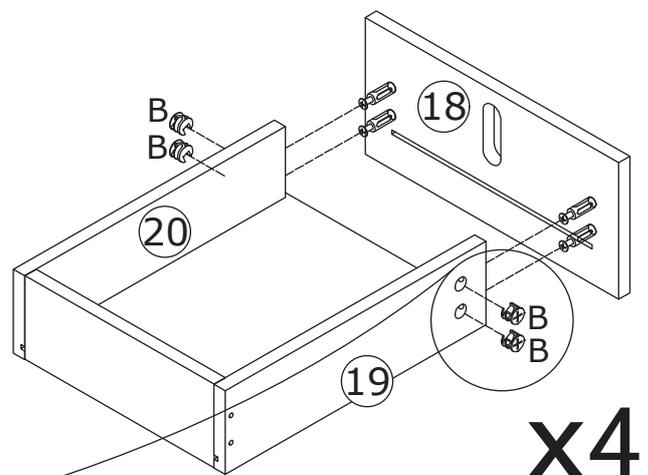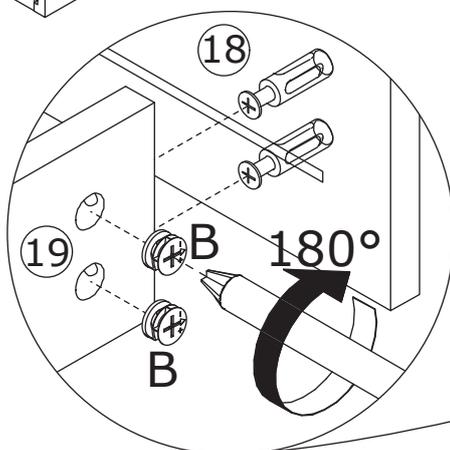



Attach board 18 to the component,
add cam lock(B) into and turn
clockwise to tighten as shown.

16

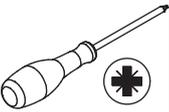
K1 x 4 	K2 x 4 	K3 x 4 	K4 x 4 	K5 x 4 x2 	
---	---	---	--	---	---

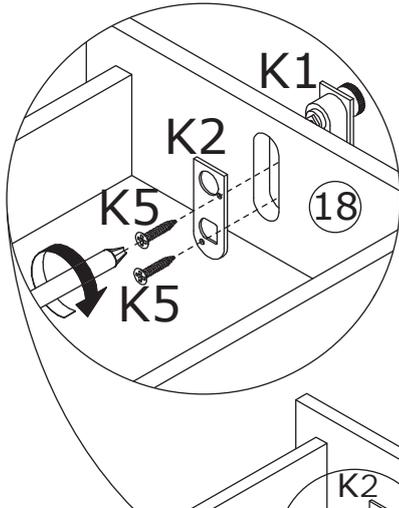



Fix lock(K1,K2) to drawer front using screw(K5) at first. Fix (K3) to (K1) using screw(K4) as shown.

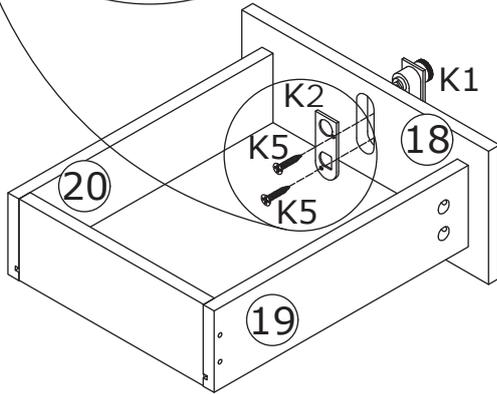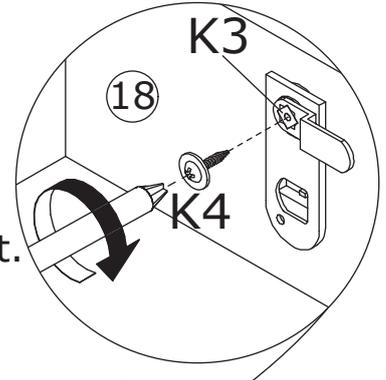



x4

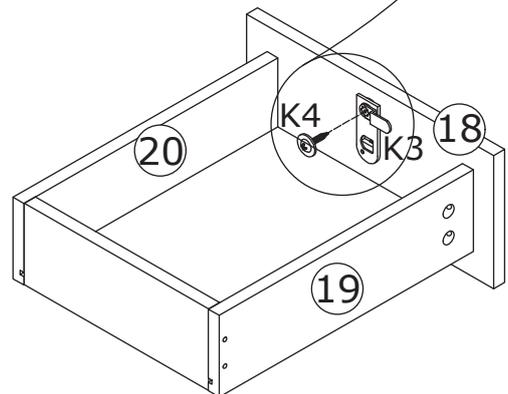


17

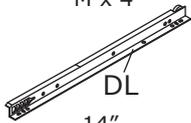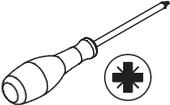D x 16  M3.5 x 14 mm	M x 4  DL 14"	N x 4  DR 14"	
---	---	---	---


Fix rail(M) and (N) to board 19 and 20 with screw(D) as shown.

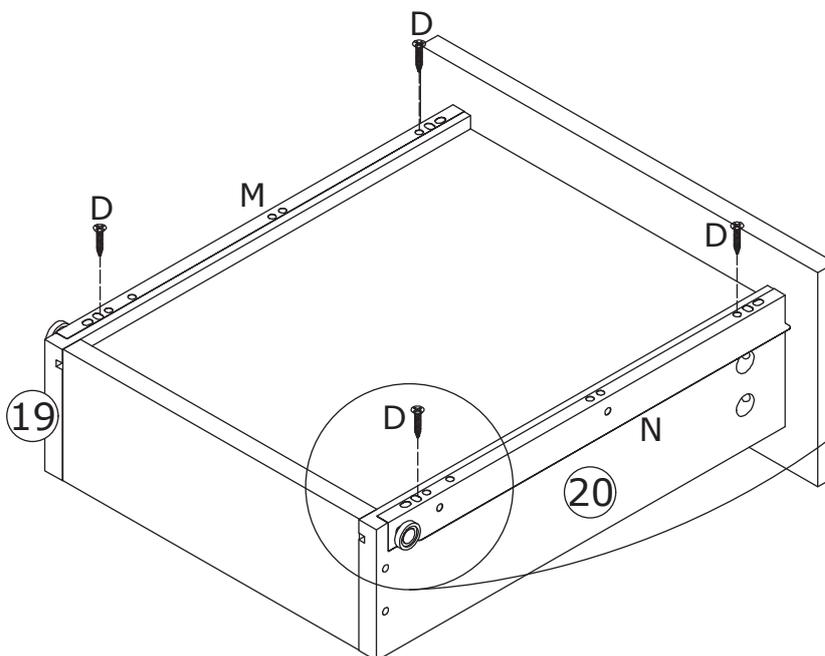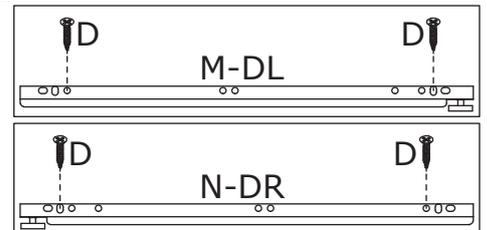

x4

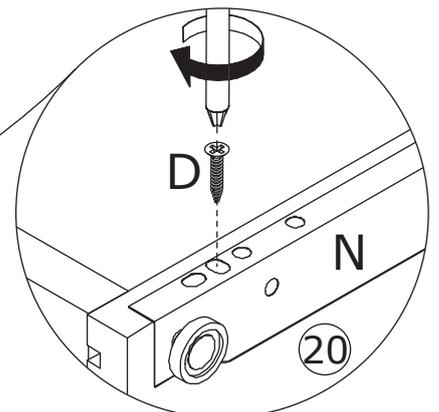


18

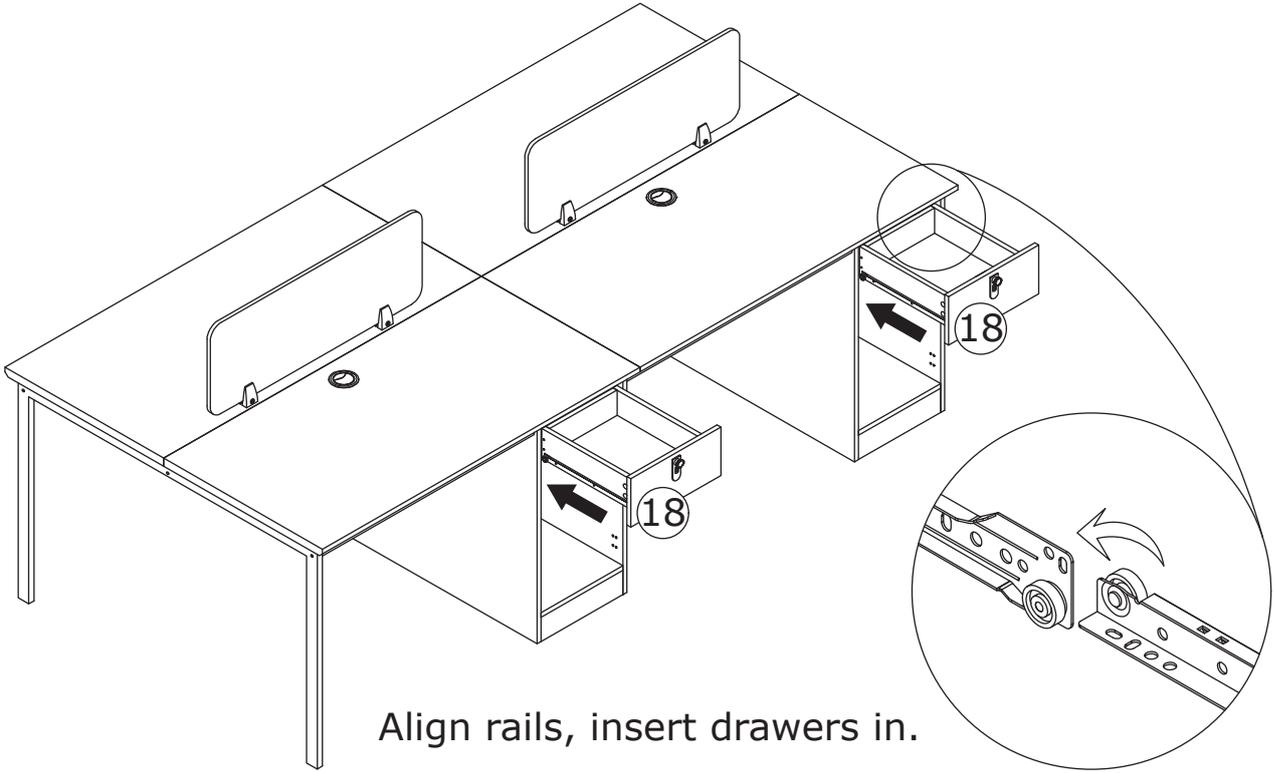






Align rails, insert drawers in.

19

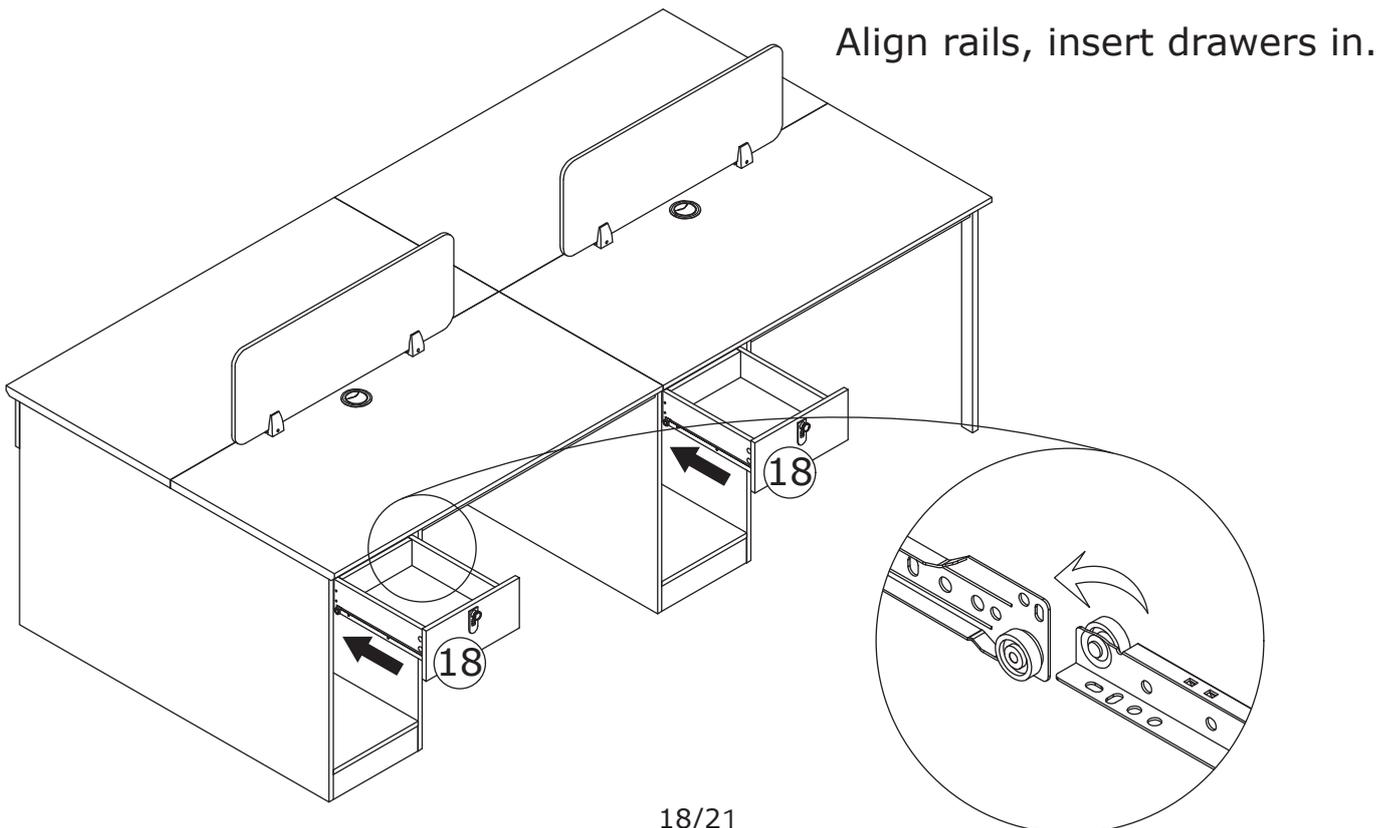


Align rails, insert drawers in.

20

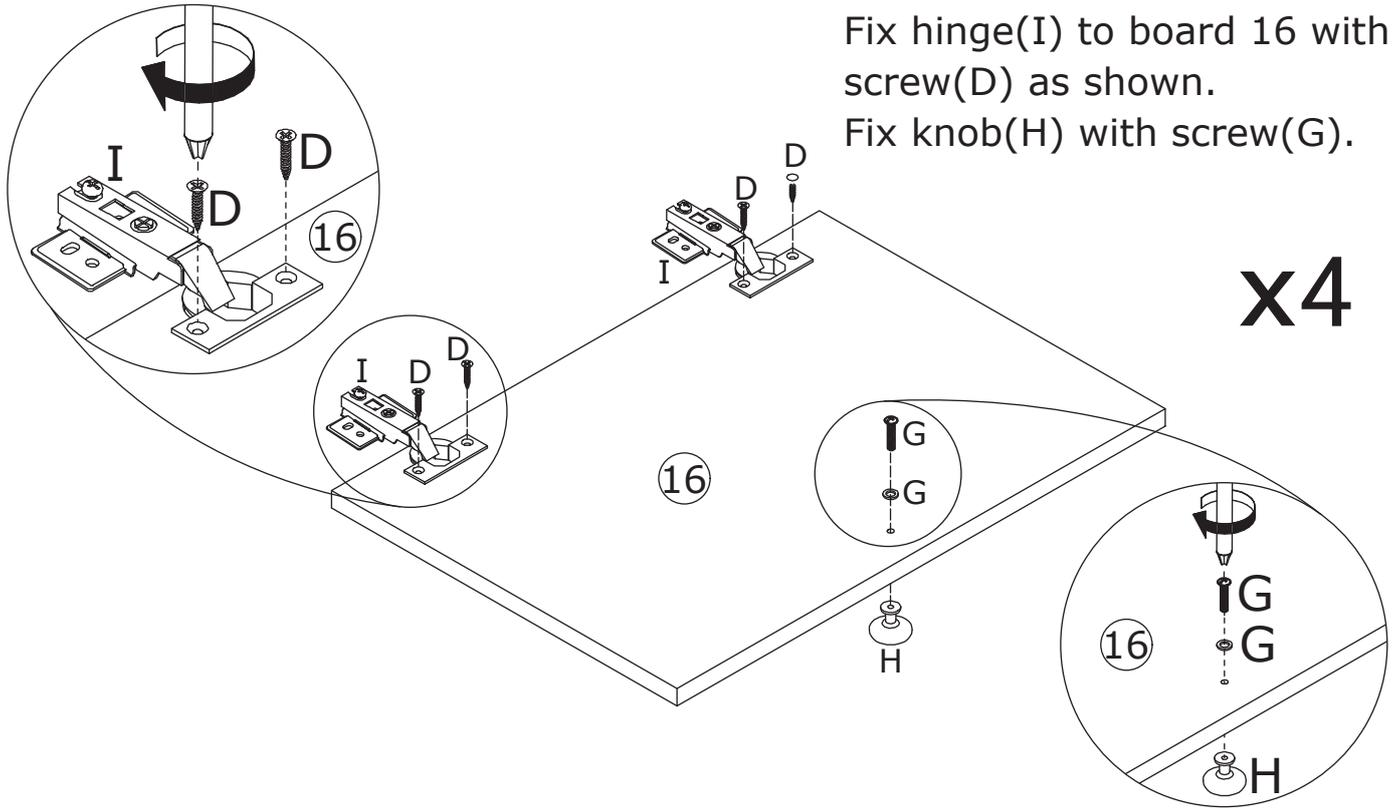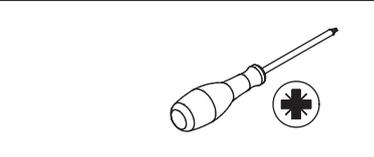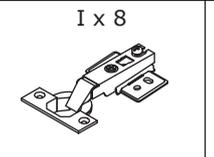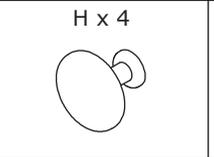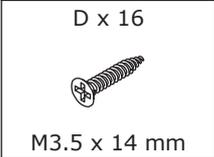


21

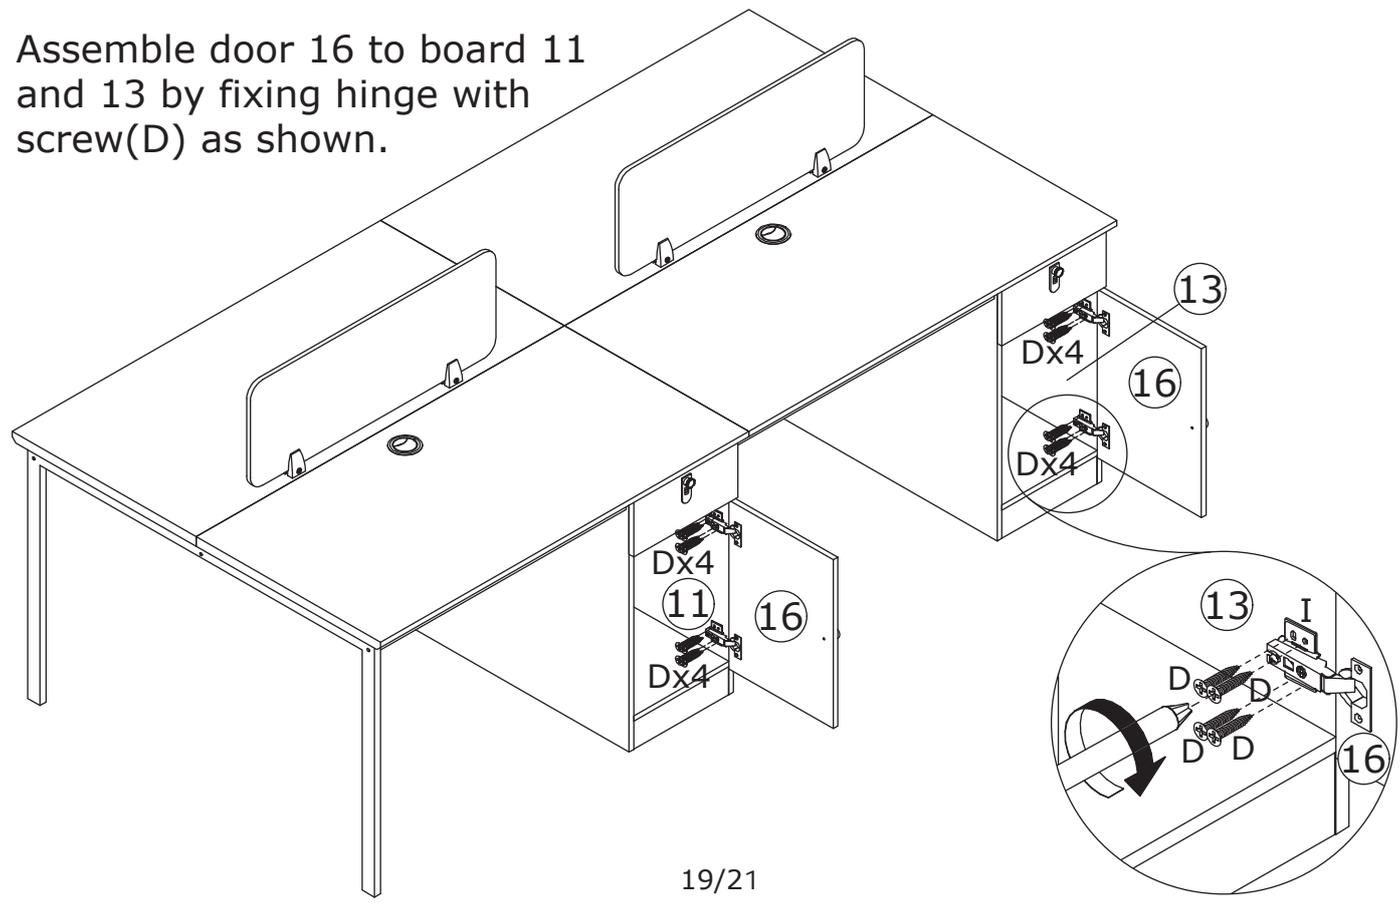


22


D x 16
M3.5 x 14 mm


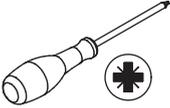


Assemble door 16 to board 11 and 13 by fixing hinge with screw(D) as shown.

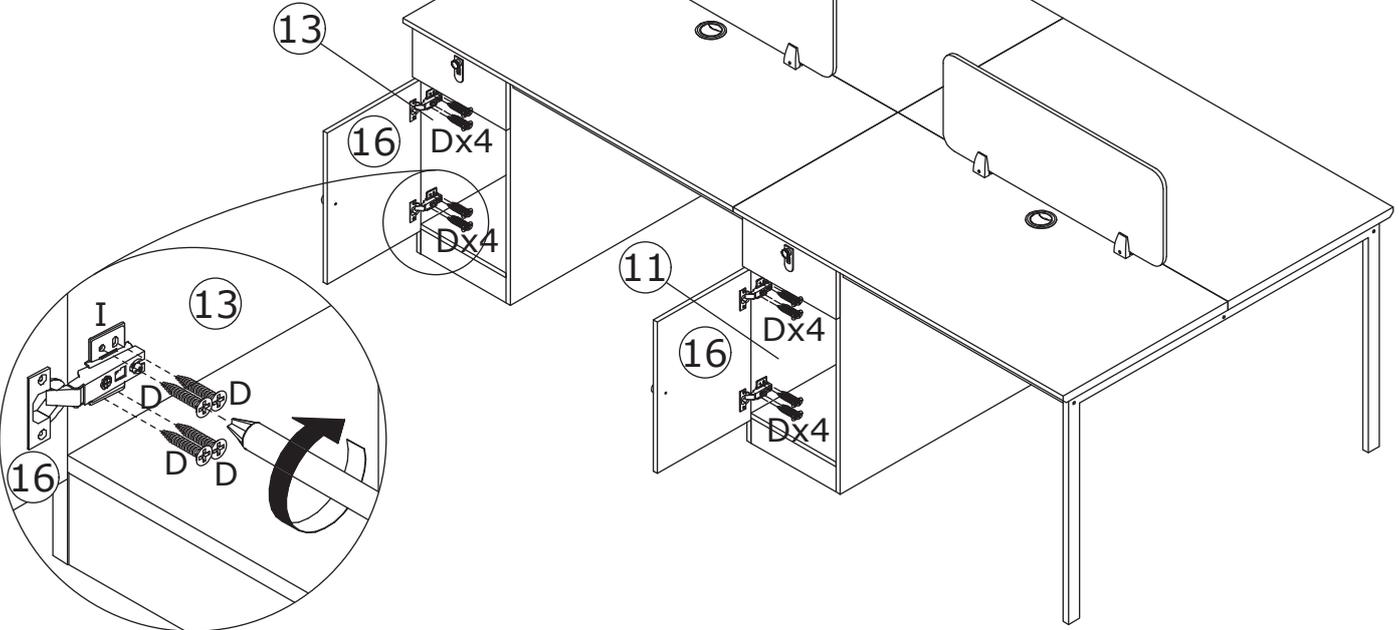

23

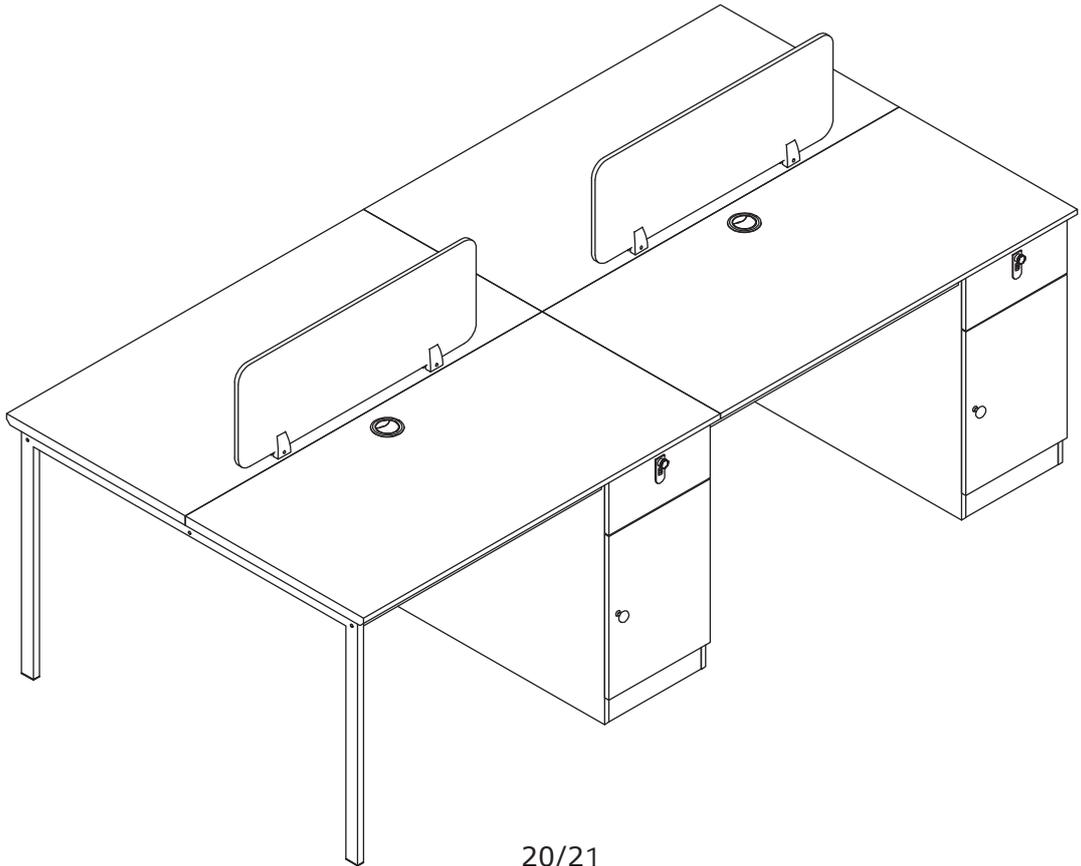

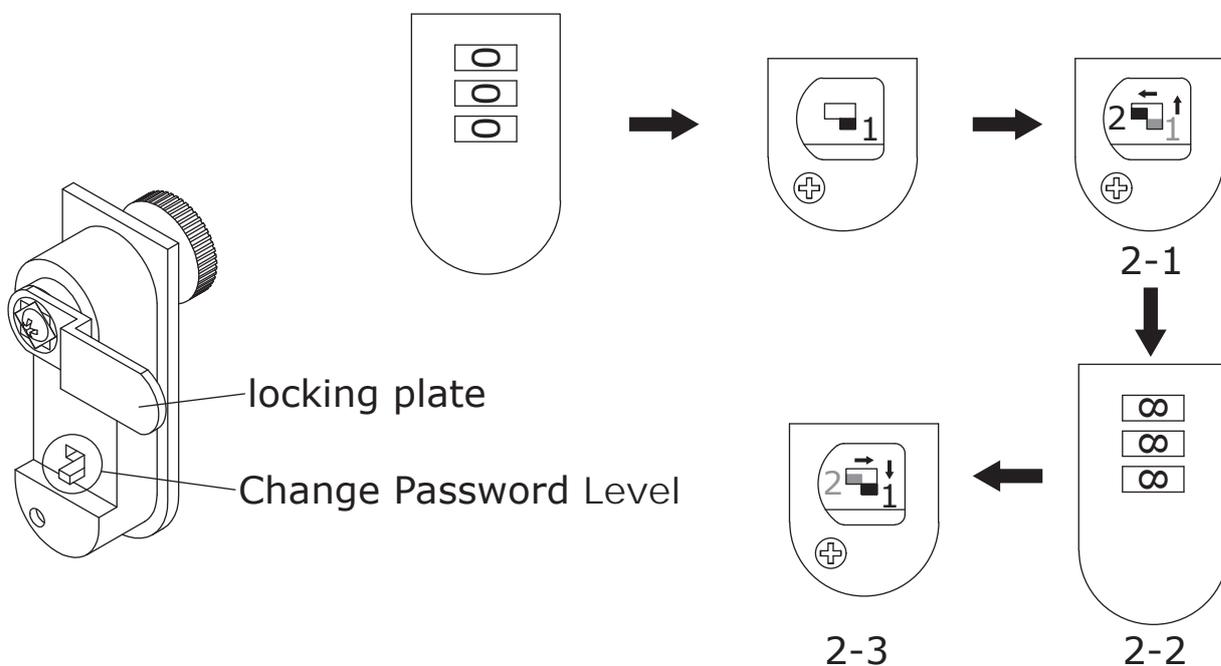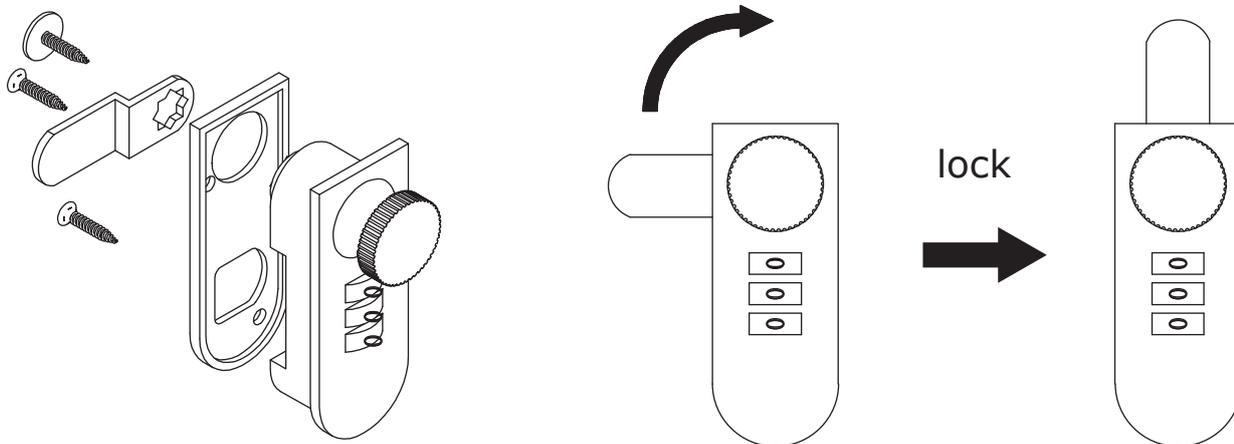

1. The factory-set password is 0-0-0
2. When require to reset a new password,
 - 2-1. Look behind the key and set the lever from position 1 to position 2
 - 2-2. Reset your new password, for example, 8-8-8
 - 2-3. After the password is set, turn the lever back to position 1

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer. In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387