

Maxxima®

Outdoor Wall Light Installation Guide

MEL-7140BW
www.maxximastyle.com

⚠ WARNINGS ⚠

- Risk of electric shock - Disconnect power at the source before installation.
- If you are unsure about the installation or the maintenance of the wall light, please consult an electrician.
- Do not make or alter any holes in the wiring enclosure or modify any electrical componentry.

CAUTIONS


- To insure personal safety, proper grounding of the electrical fixture is required.
- The fixture must be wired in accordance with the National Electric Code and applicable local codes or ordinances.

WIRING INSTRUCTIONS

If you are replacing an existing fixture, remove and disconnect the old fixture first.


1. Expose the supply wires from the outlet box.
2. Position the supply wires with the white supply wire on one side of the outlet box and the black supply wire on the other side.
3. Thread the fixture mounting screws through the mounting bracket as shown in the illustration.
4. Attach the mounting bracket to the outlet box by allowing the outlet box screws to pass through the large slots in the mounting bracket.
5. Connect the outlet box ground wire to the mounting bracket with the green hex-head ground screw by screwing it into the tapped hole in the mounting bracket marked "GND".
6. Connect the fixture ground wire to the outlet box ground wire by using a wire connector.
7. Connect the white wire from the fixture assembly to the white supply wire from the post using a wire connector.
8. Connect the black wire from the fixture assembly to the black supply wire from the post using a wire connector.

Note: Strip 1-1/2" of insulation from the outlet box ground wire (if insulated). Allow the stripped end to extend an extra 1" from the ground screw to enable a connection to the fixture ground wire using a wire connector.

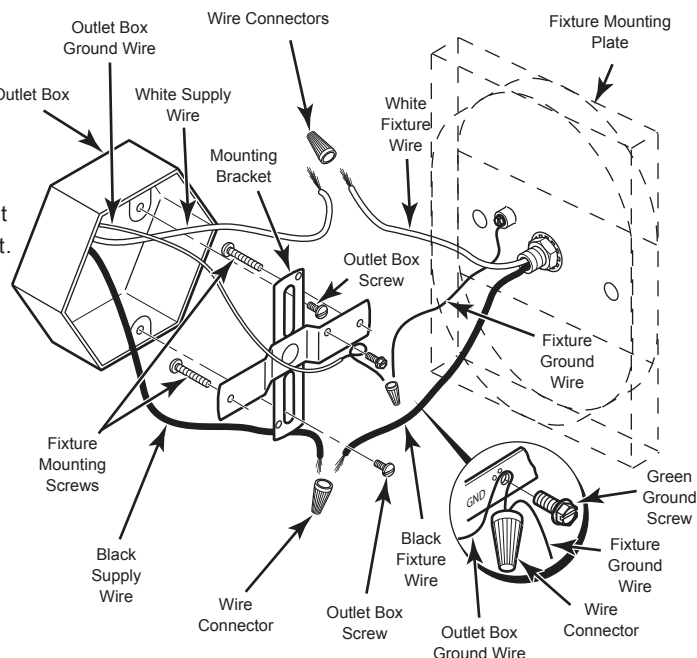

FIXTURE MOUNTING INSTRUCTIONS

1. After all connections are secure, carefully tuck the wires into the electrical outlet box. No loose strands or loose connections should be present.
- 2A. Attach the fixture mounting plate to the fixture mounting screws on the mounting bracket. Make sure no wires are pinched or exposed. Tighten the cap screws or ball nuts to hold the fixture securely in place.
- 2B. The (Qty. 2) machine screws on the upper crossbar can be adjusted by loosening their nuts (not seen in the figures above) and then screwing them in or out to alter the length of machine screws sticking out from the upper crossbar. Once the adjustment appears correct, lock the machine screws in place with their nuts and then secure the fixture tightly against the wall by using the (Qty. 2) cap nuts.
3. To prevent moisture from entering the outlet box and the fixtures mounting plate causing a short, apply a bead of clear caulk to outline the outside of the fixtures mounting plate where it meets the wall. Leave a small space at the bottom to allow any condensation or moisture to escape.
4. The installation is now complete. Install the bulb and restore the electricity, check the operation of your lighting fixture.

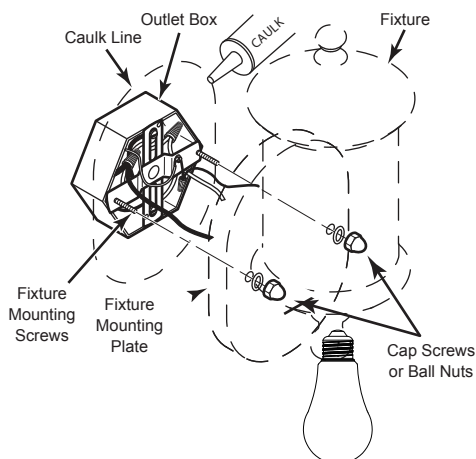

WARRANTY: 3 YEAR FIXTURE / 1 YEAR BULB

Maxxima extends a 3 year limited fixture warranty and a 1 year limited bulb warranty to the original purchase that the products listed are free from defects in material and/or workmanship only. Maxxima will replace any warranted product to the original consumer/purchaser if the product fails because of defects due to workmanship and/or materials within the limited warranty period. Limited warranty is not transferable and applies to the original installation of the Maxxima product. This offer does not constitute in any way a product guarantee and Maxxima does not hereby assume any obligation whatsoever beyond sending a free replacement product.