

EMERGENCY STARTING POWER SUPPLY  
INSTRUCTIONS FOR USE

This product is suitable for :12V system vehicles  
How to start the car:  
Before using this product to start the car, it is necessary to charge the car, generally as long as more than 75% can start the car. Insert the battery clamp plug into the starting outlet of this product, and then connect the positive and negative terminals of the matching battery clamp to the positive and negative terminals of the car battery. The red clip holds the positive end of the battery, and the black clip holds the negative end of the battery. Then turn the car key into the starting gear or press the car start button. After successful startup, unplug the product first, and then remove the battery clip from the car battery. If no, wait one minute and repeat the preceding steps. The operation process is as follows  
1, the battery clamp plug into the corresponding hole of this product;  
2, first use the matching clip to connect the car battery;  
3. Start the car;  
4, unplug the battery clamp plug from the product;  
5. Remove the clamp from the positive and negative terminals of the car battery.

NOTES  
1, before each start, please fully charge to ensure sufficient power (more than 75%);  
2. Fully insert the battery wire connector into the EC5 interface of the product;  
3, the red clip fully clamp the positive (+) pole of the battery, the black clip fully clamp the negative (-) pole of the battery (very important);  
4, after the car starts, please unplug within 30 seconds, and then remove the battery clamp;  
5, do not start continuously, start time should not exceed 5 seconds. Start unsuccessful interval of more than 1 minute to start the second time (do not start continuously, very important);  
6, before starting the car, please turn off all electronic equipment in the car, such as: air conditioning, lights, entertainment system, etc.

AIR PUMP INSTRUCTIONS FOR USE  
● Connect one end of the gas pipe to the air pump, and screw the other end into the tire valve core. For a French valve core, a transfer connector is added.  
● Liquid crystal display intelligent control type air pump, you need to press the " ⏻ " key to activate the power and liquid crystal screen set pressure, 20 seconds automatic shutdown.  
● Press the " ⌚ " key to switch PSI,BAR,KPA,KG/CM; Long press to switch modes, car, motorcycle, bicycle, Soccer.  
● "+" and "-" are pressure preset keys, tap for slow setting, long press for fast setting, set to the appropriate pressure value, blink for 5 seconds to complete the automatic setting, then press the air pump power switch " ⏻ " to start charging.  
● When the inflation reaches the set value, the intelligent control air pump will automatically stop the inflation.  
● SOS Emergency rescue and LED press "💡" switch.  
● After aeration, pay attention to the temperature of the gas pipe. After cooling, one end of the gas pipe is quickly rotated out from the valve core, and the other end is rotated out from the main engine.  
The charging time of the device is 3-5 hours.  
● Charging bank function: The USB output mobile phone charging function can only be used after turning on the state of the machine's bright screen.  
● Ball aeration instructions: Please note when using the gas needle to inflate the ball: do not completely plug the gas needle into the inflation hose, otherwise it will block the inflation port, resulting in no inflation. The correct way should be: gas needle mouth and inflation hose mouth flush.

PORTABLE INTELLIGENT AIR  
PUMP & EMERGENCY STARTING  
POWER SUPPLY



PRODUCT SPECIFICATION

PRODUCT ICON



The picture is for reference only, the specific object is mainly

PRODUCT ATTACHMENT



NOTES

- Do not allow children to use this product! Keep out of reach of children! Do not inflate the air tube into the mouth, ears or eyes of a person or animal. Do not use this product pump as a toy!
- Do not use this product near flammable and explosive liquids and gases (such as: gas stations)!
- High pressure gas will generate heat when inflation, in order to ensure the good work of this product, after each use of 10 minutes, must let the machine stop running for 10 minutes, cool down and then use, in order to extend the life.
- If there is abnormal noise in the inflation or the temperature is too high, please shut down immediately and allow it to cool for at least 15 minutes, and be careful when disassembling the gas pipe.
- If you do not use this product for a long time, it must be stored in a dry place. If it is stored for a long time, charge it once every six months.
- Please check whether the product is fully charged before use. Charging must use the special charging cable attached to the product.
- If there are 3 888 flashes on the product screen, which is a high temperature warning, the device will forcibly stop and rest for 2 minutes, and it will be steady on within 2 minutes, and the device function will stop and cannot be used;

ALERT THE USER

For your safety and the safety of others, please follow the instructions provided by the manufacturer to use the air pump and its accessories. Use methods not mentioned in the instructions may pose a danger.

Warning

1. Disconnect the external charger during thunderstorms to avoid damage from lightning strikes.
2. Keep away from heat and keep well ventilated.
3. Do not place the device at high temperature or throw it into the fire to avoid explosion.
4. In the storage, transportation and operation environment, please pay attention to waterproof.