




PROJECT SOURCE and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

ITEM #6412333
MODEL #CX0LA1800C-1

1800 PSI PRESSURE WASHER

Español p. XX

ATTACH YOUR RECEIPT HERE

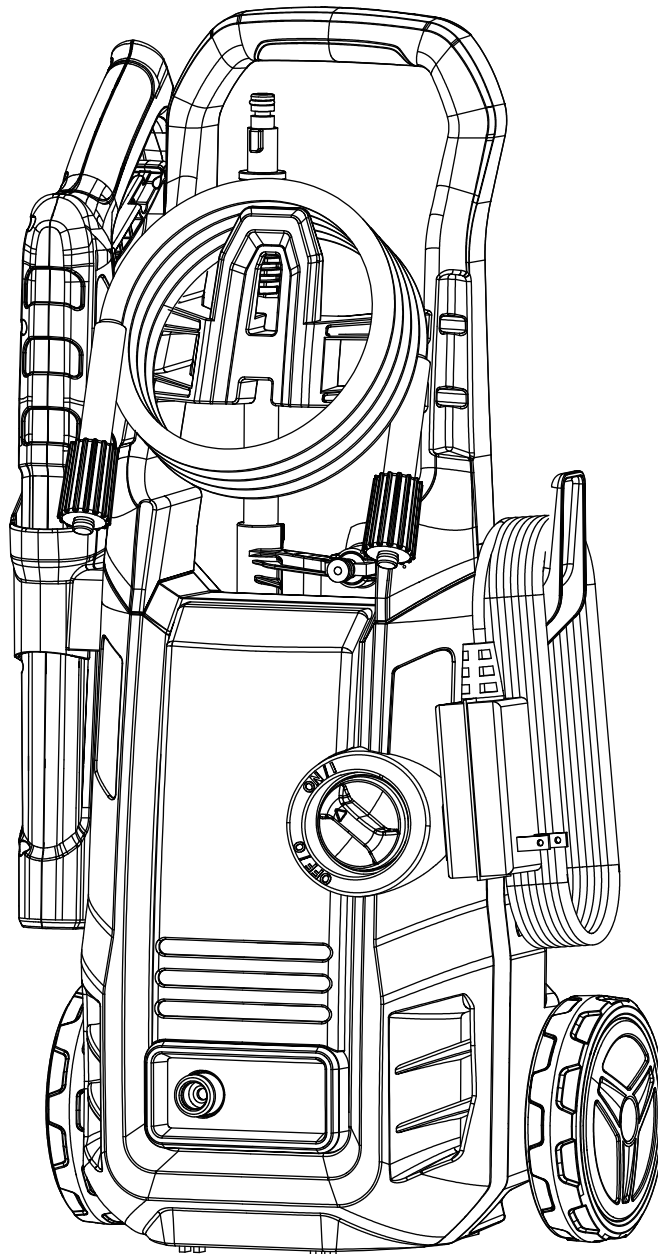

Serial Number _____

Purchase Date _____

Thank you for purchasing this **PROJECT SOURCE** product.
Questions, problems or missing parts?
Before returning, contact us on:
866-389-8827, 8 a.m.-8 pm., EST, Monday-Sunday.

TABLE OF CONTENTS

Introduction.....	3
Safety Information	4
Electrical	8
Package Contents	9
Assembly Instructions	11
Operation.....	12
Operating Instructions	14
Care and Maintenance	15
Troubleshooting.....	16
Project Source Limited Warranty.....	17

INTRODUCTION

WARNING

This product and other substances that may become airborne from its use contain chemicals, including lead, known to the State of California to cause cancer, birth defects, or other reproductive harm. **Wash hands after handling.** For more information go to www.P65warnings.ca.gov.

DISCLAIMERS

All information, illustrations, and specifications in this manual were in effect at the time of publishing. The illustrations used in this manual are intended as representative reference views only. We reserve the right to make any specification or design change without notice.

ALL RIGHTS RESERVED

All rights reserved. No reproduction allowed in any form without written permission.

DANGER

Read this manual before using or performing maintenance on this product. Failure to follow the instructions and safety precautions in this manual can result in serious injury or death.

For Your Records

Date of Purchase: _____

Model Number: _____

Serial Number: _____

Place of Purchase: _____

IMPORTANT: Keep the purchase receipt for trouble-free warranty coverage.

INTRODUCTION

SPECIFICATIONS

Water Temperature	Cold Water Only
Rated Pressure	1800 PSI
Rated Water Flow Rate	1.2 US GPM (4.54 LPM)
Phase	Single
Input	120 V, AC only, 60 Hz, 13 Amps

 WARNING

NEVER spray directly at a person, animal, electrical device, or the unit itself. Failure to comply with this warning could result in serious injury, electric shock, or death.

 NOTICE

NEVER allow the pressure washer pump to run for more than one minute after the water supply has been turned off. This can cause the motor and pump to overheat and fail. Always unwind the garden hose completely and remove any objects that may restrict or prevent the flow of water to the machine.

DISCLAIMERS

The words DANGER, WARNING, CAUTION, and NOTICE are used throughout this manual to highlight important information. Be sure that the meanings of this safety information are known to all who operate, perform maintenance on, or are near the pressure washer.



This safety alert symbol appears with most safety statements. It means attention, become alert, your safety is involved! Please read and abide by the message that follows the safety alert symbol.

 DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

 WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

 CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

 NOTICE

Indicates a situation which can cause damage to the pressure washer, personal property, and/or the environment, or cause the equipment to operate improperly.

NOTE:

Indicates a procedure, practice or condition that should be followed for the pressure washer to function in the manner intended.

SAFETY SYMBOLS

Follow all safety information contained in this user manual as well as the information on the product labeling.

Symbol	Description
	Safety alert symbol
	Risk of injection
	Electric shock
	Risk of explosion. Never spray flammable liquids. Flammable liquids and their vapors can be explosive.
	Do not operate in wet conditions
	Read manufacturer's instructions
	Kickback
	Double-insulated construction
	Wear eye and ear protection

WARNING

To reduce the risk of injury, read and understand the instructions before using this product.

WARNING

Risk of liquid injection. Never spray humans or animals, as injury could result. Engage the trigger lock when the pressure washer is not in use.

- Always read all the instructions before using the product.
- Understand all operating aspects of the pressure washer outlined in this manual to avoid personal injury and/or damage to property.
- Understand and know how to safely stop the product and bleed pressures quickly. Be familiar with all controls.
- Follow the maintenance instructions as specified in the manual.
- Do not use the pressure washer under the influence of alcohol or drugs.
- Keep the operating area clear of all people, animals and hazardous objects.
- Do not overreach or stand on unstable support. Keep good footing and balance at all times.
- The pressure washer is equipped with a Class A Ground Fault Circuit Interrupter (GFCI) which greatly reduces the chance of electric shock while the unit is in use. If replacement of the plug or cord is needed, use only identical replacement parts.
- Failure to read and follow the instructions in the user manual could result in death, bodily injury, and/or property damage.
- When using the pressure washer near children, be sure they are supervised by an adult to avoid injury. Never let a child use the pressure washer.
- This pressure washer conforms to CSA and other safety and consumer standards. Do not modify or rebuild any part of the pressure washer.
- Maintain stable balance and footing while using the pressure washer. Surfaces become slippery when wet and are more slippery when using a detergent or cleaner.
- Never operate the pressure washer in bare feet, sandals, or open-toed shoes.
- Do not touch the high pressure spray with fingers, hands, or feet, and be careful to avoid any contact with eyes as the powerful spray can cause blindness or blast holes in the skin.
- Always wear eye protection to prevent injury to eyes when operating the pressure washer.
- To avoid accidents causing injury, always use the trigger safety lock when the pressure washer is not in use even if the spraying stops for a moment.
- Point the spray gun in a safe direction when beginning to use the pressure washer.
- Never spray directly at a person, animal, electrical device, or the unit. The pressure washer can break glass if hit with direct contact.
- Hold the spray gun and lance with two hands (one hand to pull the trigger and the other to stabilize the gun).
- After operating the pressure washer, water pressure may remain in the system. To release the pressure, point the spray gun in a safe direction and pull the trigger.
- Never spray flammable liquids.
- Never use the pressure washer in areas that contain combustible dust, liquids or vapors.
- Examine the hose regularly. Replace if damaged. Due to the high pressure involved, the hose cannot be repaired if cut or damaged.
- Only use detergent specifically formulated for pressure washers and follow the instructions on the detergent's label.
- Detergent can be harmful to skin, eyes and lungs. Be cautious when handling any chemicals. Dish and laundry soaps are too thick and will clog the nozzle of the detergent bottle.

NOTICE

Store the pressure washer indoors in a heated environment to prevent the water in the unit from freezing and expanding. When the water freezes and expands, the high-pressure pump will crack and render the washer inoperable. It is recommended to use a pump saver (not included) to protect pumps from freezing and cracking.

- Never use hot water with the pressure washer. It will overheat and damage the seals and components in the high-pressure pump that cannot be repaired.
- Never leave the pressure washer on while it is unattended.
- Always turn on the water supply before turning on the pressure washer power. Operating the pump dry of water will cause damage to the internal components and render the pressure washer inoperable.

SAFETY INFORMATION

- Never use a water supply to the pressure washer that exceeds 150 PSI maximum.
- Never disconnect the high pressure hose from the pressure washer while the system is pressurized.
- Never permanently engage the trigger mechanisms on the spray gun.
- Never operate the pressure washer unless all components are connected.
- Never allow the pressure washer pump to operate more than one minute after the water supply has been turned off. This can cause the motor and pump to overheat and fail.
- This pressure washer is not recommended for use with an extension cord. If an extension cord must be used, be sure that the extension cord is in good working condition. When using an extension cord, be sure to use a wire gauge heavy enough to carry the current drawn by this unit. A wire gauge size (A.W.G) of at least 16 is recommended for an extension cord of 50 ft or less in length. If in doubt, use the next heaviest gauge. An undersized cord will cause a drop in the line voltage and result in a loss of power to the unit and overheating.
- Never use lances or other parts that are not compatible for this pressure washer.
- Never spray any electrical outlet with the pressure washer.
- Inspect the power cord before using. Do not use it if it is damaged.
- Keep all connections dry and off the ground. Do not touch the plug with wet hands.
- Retain these instructions. Refer to them frequently and use them to instruct anyone who may use this product.

SAFETY LABELS AND DECALS

See Figure 1.

The following information is on the labels and decals.

Specifications (A)

(See page 3)

EZ Start Instructions (B)

See the "EZ Start Instructions" label and the instructions in the Operations section when starting and stopping the pressure washer.

California Proposition 65 (C)

Cancer and reproductive harm -
www.P65Warnings.ca.gov/product

Safety Symbols (D)

(See page 4)



WARNING (E)

- Failure to read and follow the instructions in user manual(s) could result in death, bodily injury, and/or property damage.
- ALWAYS point gun in safe direction and squeeze spray gun trigger to release pressure and avoid kickback each time.
- The spray gun kicks back- Hold firmly with two hands.
- Risk of liquid injection. Never spray humans or animals, as injury could result. Engage trigger lock when the pressure washer is not in use.
- Risk of eye injury. Always use caution. Wear safety goggles with side shields.
- Risk of electrocution. Never spray water on any electric power sources.
- Do not store the machine or accessories in a place where the temperature could drop below 40°F (4.5°C).

Caution Statement (F)

Before servicing, cleaning or removing parts, shut off the power and relieve the pressure.

1

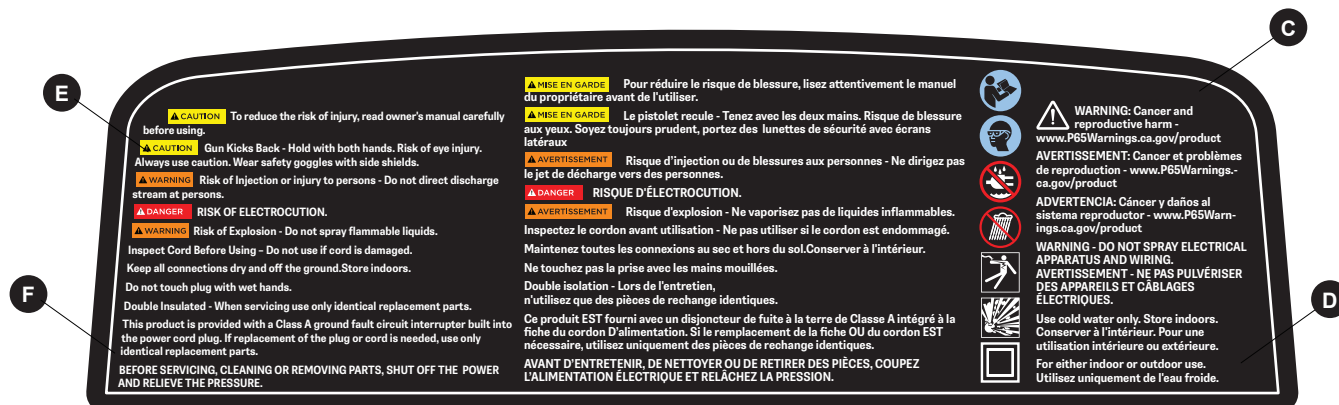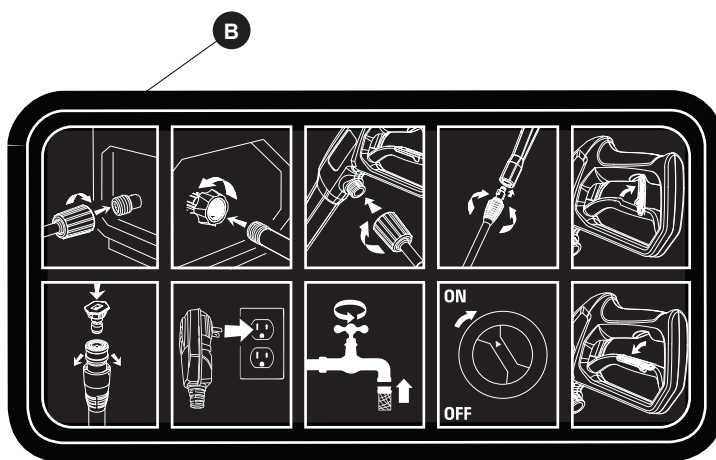

DOUBLE INSULATION

Double insulation eliminates the need for a three-wire grounded power cord. Double insulated products do not need to be grounded because exposed metal parts are covered in protective insulation that isolates them from internal metal motor components.

WARNING

A double insulated system is designed to protect against shock caused by a break in the product's internal insulation. To avoid electric shock, follow all ordinary safety procedures.

NOTE:

Double insulated products should only be serviced by qualified service technicians.

SERVICING OF A DOUBLE-INSULATED APPLIANCE

In a double-insulated product, two systems of insulation are provided instead of grounding. Grounding means are not provided for a double insulated product, nor should grounding means be added to the product.

A double-insulated product is marked with the words "**DOUBLE INSULATION**" or "**DOUBLE INSULATED**". This symbol  may also be marked on the product.

AC MOTOR

The electric motor in this product was designed to work with a **nominal 120V/60Hz AC power supply (average U.S. household circuit)**. It is not intended to operate on direct current (DC). A significant voltage drop will result in a loss of power and could damage the motor.

GROUND FAULT CIRCUIT INTERRUPTER PROTECTION

See Figure 2.


This pressure washer is provided with a Class A ground-fault circuit-interrupter (GFCI) built into the plug of the power-supply cord. This device provides additional protection from the risk of electrical shock. A GFCI protects against ground fault currents such as a current that would flow through a person standing on a wet surface while holding a product with faulty insulation. GFCI plugs do not protect against shocks, short circuits, and overloads. If replacement of the plug or cord is necessary, only use identical replacement parts that include Class A GFCI protection. Contact customer support for troubleshooting assistance.

To test the GFCI:

- Plug the power supply cord into a receptacle.
- Press the TEST button and listen for a sound to indicate that the connection to the power supply was broken.
- Press the RESET button to restore power to the device. The LED light will turn on when power is restored.

Test the GFCI monthly to ensure proper operation.


EXTENSION CORDS

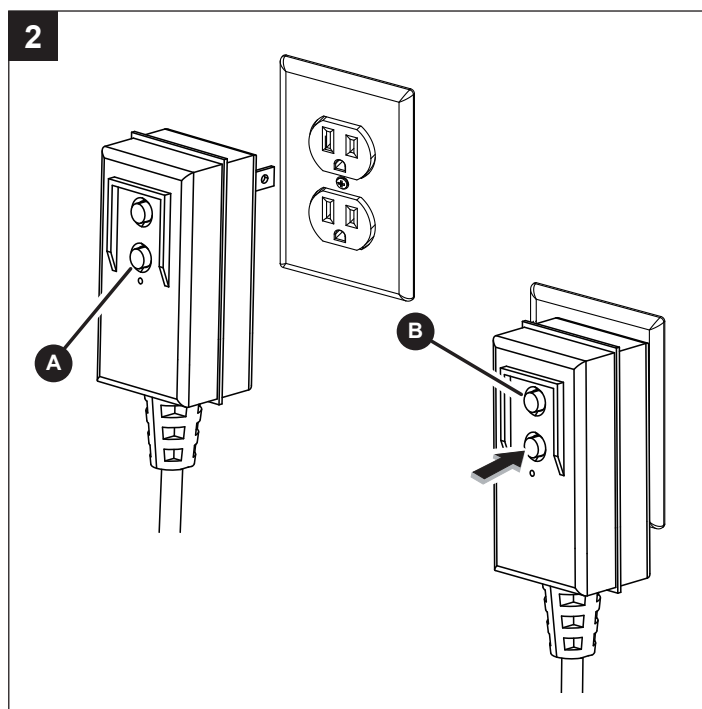

A - TEST Button

B - RESET Button

This pressure washer is not recommended for use with an extension cord. If an extension cord must be used, be sure that the extension cord is in good working condition. When using an extension cord, be sure to use a wire gauge heavy enough to carry the current drawn by this unit. A wire gauge size (A.W.G) of at least 16 is recommended for an extension cord of 50 ft or less in length. If in doubt, use the next heaviest gauge. An undersized cord will cause a drop in the line voltage and result in a loss of power to the unit and overheating.

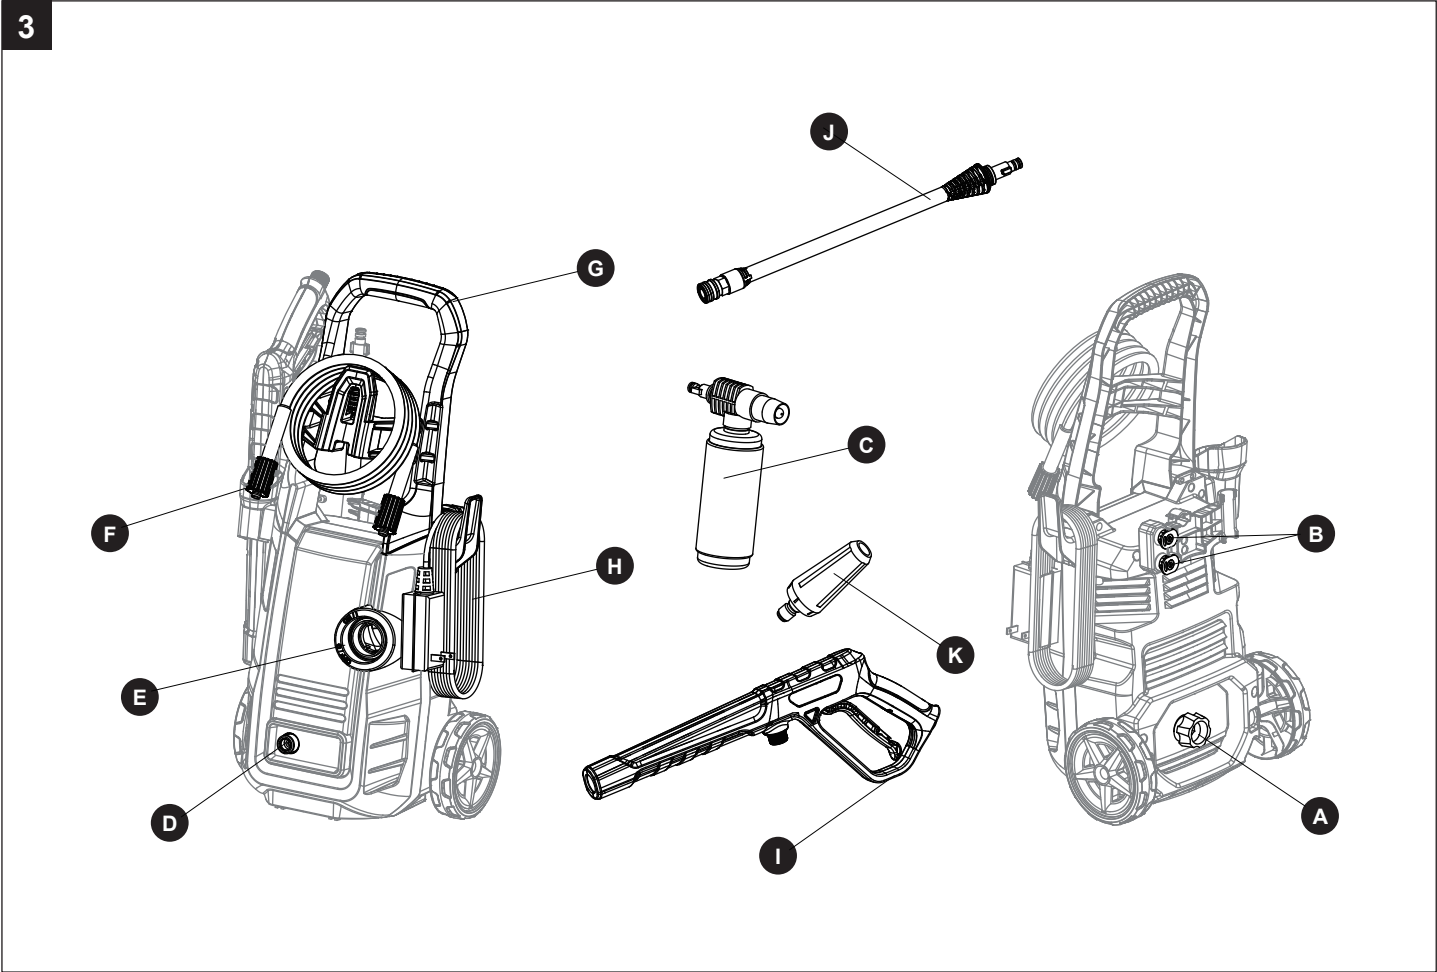

UNDERSTANDING THE PRESSURE WASHER
See Figure 3.

To reduce the risk of injury and product failure, read and understand the information in this user manual as well as the information on the product labeling.

COMPONENT TABLE		
INDEX NUMBER	ITEM	DESCRIPTION
A	Water inlet	Use the water inlet to connect the water supply to the pressure washer.
B	Nozzles	Nozzles of varying sizes are included with this unit and can be used for different cleaning applications.
C	Low-pressure soap applicator	Use the low-pressure soap applicator to generate thick clinging foam to break up grease, grime, and stains.
D	Threaded outlet	Use the threaded outlet to connect the high pressure hose to the pressure washer.
E	On / Off button	Turn once to start the pressure washer. Turn again to stop the pressure washer.
F	High pressure hose	The high pressure hose included with this unit is light weight, flexible, and durable. When not in use, the hose can be stored on the hose retainer.
G	Handle	Use the handle when transporting the unit.
H	Power cord	Use the power cord to connect the pressure washer to a power supply.
I	Spray gun	Use the spray gun and lance to control and direct the stream of water.
J	Lance	Attach the lance to the high pressure hose.
K	Turbo	Moderate cleaning for stubborn stains and dirt. Use only on hard surfaces-can damage concrete, wood, paint, etc.

PACKAGE CONTENTS

⚠ WARNING

Do not connect the pressure washer to a power supply until it is fully assembled. To avoid accidental starting and possible serious injury, only connect a power supply when the pressure washer is ready for use.

REMOVING CARTON CONTENTS

⚠ WARNING

This product requires assembly. Do not attempt to operate this product if any items in the **INCLUDED LIST** are already assembled when you remove the carton contents. These items are not assembled by the manufacturer and should require customer assembly. Using an improperly assembled product can be hazardous and could result in serious personal injury.

- Carefully remove the carton contents.
- Inspect the carton contents. Confirm that all the items in the **INCLUDED LIST** are present and undamaged.
- Recycle or dispose of the packaging materials properly.

INCLUDED LIST	
ITEM	QUANTITY
Pressure washer	1
Spray gun	1
Lance	1
Nozzle	2
High pressure hose	1
Low pressure soap applicator	1
Handle	1
Mount	3
Screw	4
Wheel	2
Turbo	1

INSTALLATION INSTRUCTIONS

INSTALLING THE HANDLE AND MOUNTS

See Figure 4.

- Slide the latch on the mount (B) to the frame of the pressure washer.
- Repeat for the other mount (C).
- Slide the handle (A) to the frame of the pressure washer.

See Figure 5.

- Attach the mount (B) to the frame of the pressure washer and secure with screws (A).
- Secure the handle to the frame with the screws (A).




INSTALLING THE WHEELS

See Figure 6.

- Attach the wheel (A) to the frame of the pressure washer.

NOTE:

Be sure that the wheel is secure. The wheel will click into place when secured to the frame.

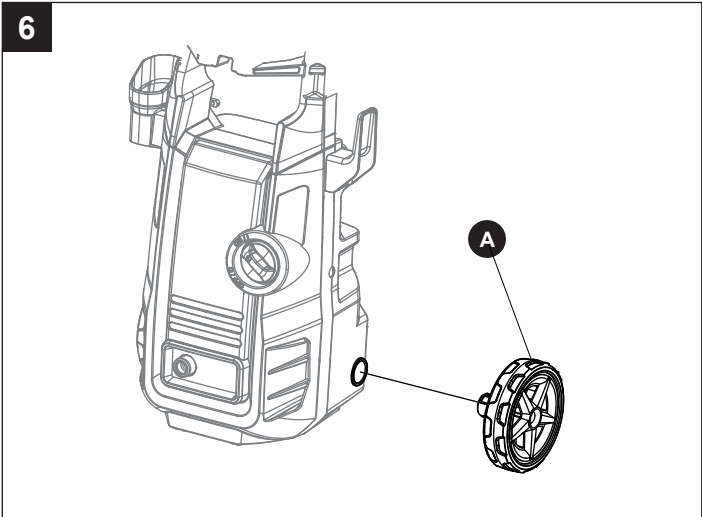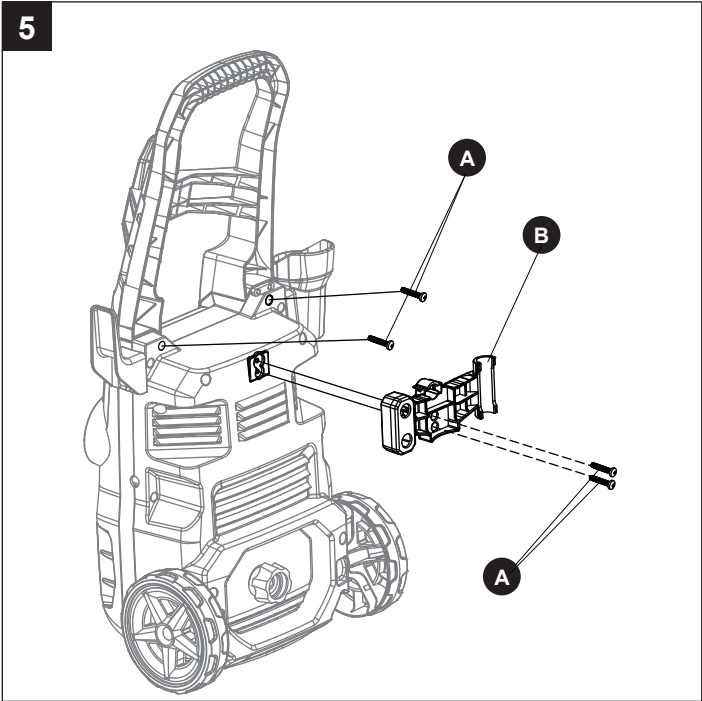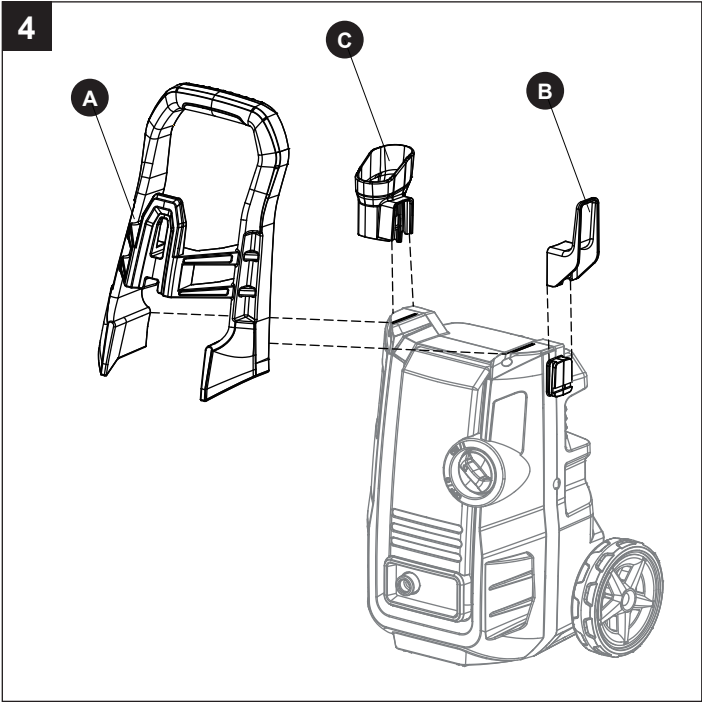

CONNECTING THE LANCE TO THE SPRAY GUN

See Figure 7.

- Push the lance (A) into the spray gun (B) and turn clockwise to tighten. **Do not overtighten.**
- Gently pull on the lance to be sure it is secured.

CONNECTING THE HIGH PRESSURE HOSE TO THE SPRAY GUN

See Figure 8.

- Pull the collar on the high pressure hose back and push the hose fitting firmly into the spray gun.
- Screw the collar onto the spray gun and tighten securely. **NOTE:** Be careful not to damage the threads on the spray gun; doing so could cause the gun to leak during use.
- Gently pull on the hose to be certain it is secured.

CONNECTING THE HIGH PRESSURE HOSE TO THE PRESSURE WASHER

- Uncoil and straighten the high pressure hose to remove any bends or kinks.
- Pull the collar on the high pressure hose back and push the hose fitting firmly into the threaded outlet on the pressure washer.
- Screw the collar onto the outlet and tighten securely. **NOTE:** Be careful not to damage the threads on the outlet; doing so could cause the unit to leak during use.
- Gently pull on the hose to be certain it is secured.

CONNECTING A GARDEN HOSE TO THE PRESSURE WASHER



NOTICE

Follow local regulations and ordinances when connecting the pressure washer to a water supply. Some jurisdictions may prohibit connecting directly to public drinking water in order to prevent the possibility of chemicals feeding back into the system. Connections made through a backflow preventer or receiver tank are generally permitted.

NOTICE

The water used in this device must come from a water main. Do not use this device with water from a lake, pool, or pond. Never use hot water with this product.

- Turn off the water faucet completely.
- Uncoil and straighten the garden hose to remove any bends or kinks.
- Flush water through the hose for several seconds to remove debris and turn off the faucet again.
- Inspect the screen inside the water inlet for damage or clogs. Clean or replace as needed. Never connect a garden hose without the screen in place.
- Insert the garden hose into the water inlet.
- Thread the collar on the inlet onto the garden hose. Tighten securely.

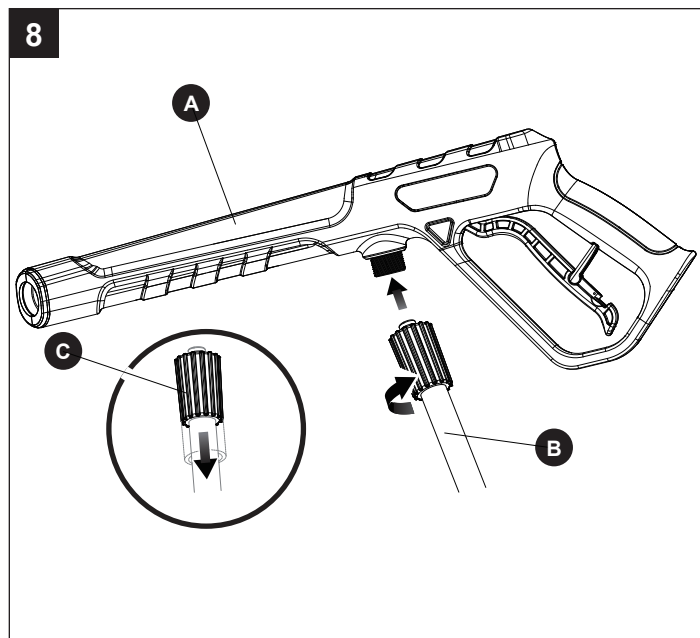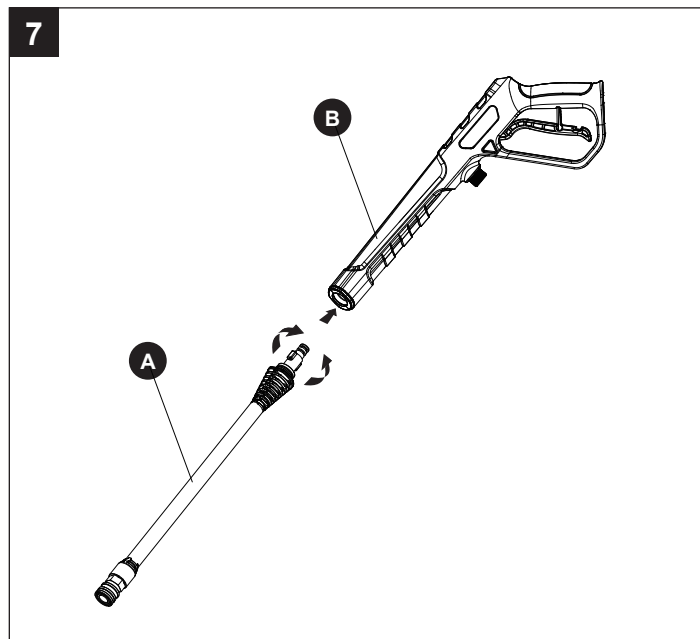

A - Spray Gun
B - High Pressure Hose
C - Collar

NOTICE

ALWAYS turn on the water supply before turning on the pressure washer power. Running the pump dry of water will cause damage to the internal components and render the pressure washer inoperable.

OVERVIEW

This pressure washer can produce very high levels of water pressure and can be used for a variety of cleaning applications.

⚠ WARNING

Do not alter or modify this product unless instructed to do so in this manual or by the manufacturer. Do not use attachments or accessories that are not recommended for use with this product. Making unauthorized modifications and using incompatible accessories can damage the unit and may void your warranty.

⚠ WARNING

ALWAYS wear eye protection to prevent injury to eyes when operating the pressure washer.

⚠ WARNING

NEVER spray directly at a person, animal, electrical device, or the unit. Failure to comply with this warning could result in serious injury, electric shock, or death.

STARTING AND STOPPING THE PRESSURE WASHER

- Connect a garden hose and turn on the water.

⚠ NOTICE

ALWAYS turn on the water supply before turning on the pressure washer power. Running the pump dry of water will cause damage to the internal components and render the pressure washer inoperable.

- Put the on/off switch in the OFF position (0).
- Completely unwind the power cord and connect it to a grounded 120 volt outlet.


⚠ WARNING

Keep all connections dry and off the ground. Do not touch the plug with wet hands.

- Hold the spray gun with both hands and point the lance in a safe direction.
- Release the safety lock and squeeze the trigger to release water and air out of the hose. Continue squeezing the trigger until there is a steady stream of water, then release and lock the trigger.
- Put the on/off switch in the ON position (I) to start the pressure washer. The unit will run for several seconds and shut off. This is a normal function of the auto-start feature.
NOTE: The unit could be pressurized even if the motor and pump cannot be heard. Always be cautious around a pressure washer.
- Put the on/off switch in the OFF position (0) to stop the pressure washer.
- After operating the pressure washer, water pressure may remain in the system. Point the spray gun in a safe direction and pull the trigger to release the water pressure.

USING THE SPRAY GUN

See Figure 9.

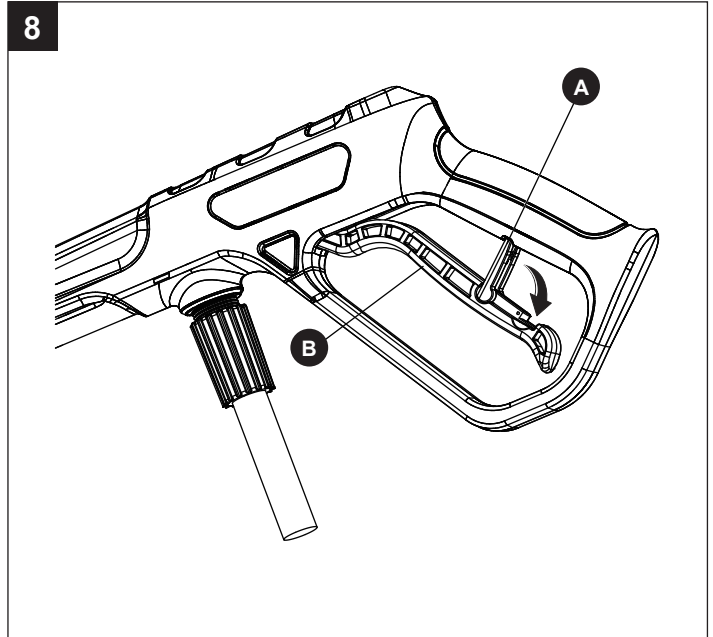

A - Safety Lock
B - Trigger

⚠ WARNING

Hold the spray gun and lance with two hands (one hand to pull the trigger and the other to stabilize the gun). Do not lose control of the spray gun. This could result in personal injury and endanger others.

- Start the pressure washer.
- Release the safety lock by pushing it down into the slot in the trigger.
- Squeeze and hold the trigger to start the flow of water.
- Release the trigger to stop the flow of water.
- Lock the trigger by pushing it up to its original position.
NOTE: Squeeze the trigger to be sure it is locked and will not move. Always keep the spray gun locked when not in use.

 
INSTALLING NOZZLES

See Figure 10.

⚠ WARNING

ALWAYS turn off the pressure washer, release the pressure in the spray gun, and lock the trigger before removing or installing a nozzle. **NEVER** point the lance at your face. Failure to comply with this warning could result in serious injury.

- Stop the pressure washer and turn off the water faucet.
- Point the spray gun in a safe direction and pull the trigger to release the water pressure.
- Lock the trigger.
- Push the nozzle into the lance until it clicks into place and is secure.
- To remove the nozzle, pull the collar back and move the nozzle away from the lance.

NOZZLE	GENERAL USE
 15 °  25 °	Moderate pressure. Safe to use on brick and paved patios.
LOW-PRESSURE SOAP APPLICATOR	GENERAL USE
	Low Pressure. Safe for cars, windows and decks.

CLEANING WITH THE PRESSURE WASHER

See Figure 11.

To clean with detergent:

- Stop the pressure washer and turn off the water faucet.
- Point the spray gun in a safe direction and pull the trigger to release the water pressure.
- Separate the soap bottle (A) from the low-pressure soap applicator by twisting it counterclockwise.
- Fill the soap bottle with a properly formulated detergent-to-water ratio, following the detergent manufacturer's instructions.

NOTE: Use detergents designed for pressure washers. The detergent should be the consistency of water. Do not use thick, gel-like detergents.

- To reinstall the soap bottle, place it on the low-pressure soap applicator and turn it clockwise.
- Install the low-pressure soap applicator onto the spray gun.
- Turn the water on and start the pressure washer.
- Squeeze the trigger and wait several seconds for detergent to appear in the water stream.
- Start cleaning at the bottom of the surface and work your way up in a side-to-side motion. Do not allow soap to dry on the surface being cleaned.
- Release the trigger to stop the pressure washer.
- Allow the motor to come to a complete stop before squeezing the trigger again.


NOTE: Squeezing the trigger rapidly will cause the auto-start feature to miss an on/off cycle and may prevent the washer from turning on. Use slow, deliberate trigger pulls to avoid this.

- When you are finished, remove excess detergent from the soap bottle and fill it with clean water. Spray the water through the low-pressure soap applicator to flush the system.

To clean without detergent:


See Figure 12.

10

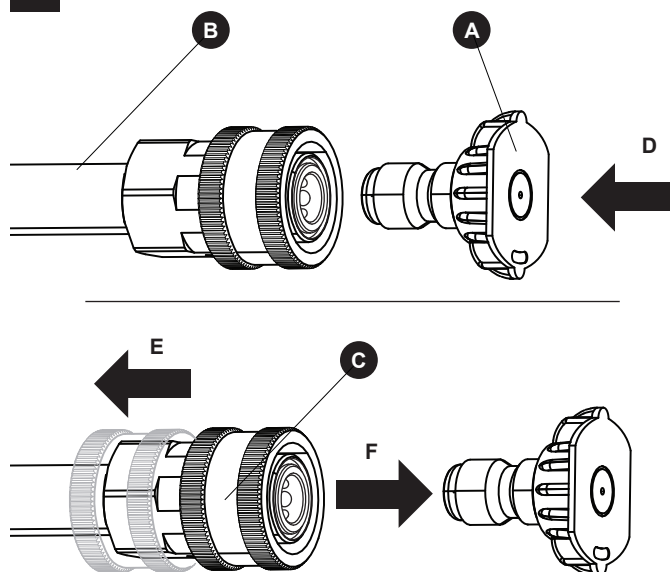

- A - Nozzle
- B - Lance
- C - Collar
- D - Push Nozzle In
- E - Pull Collar Back
- F - Remove Nozzle


11

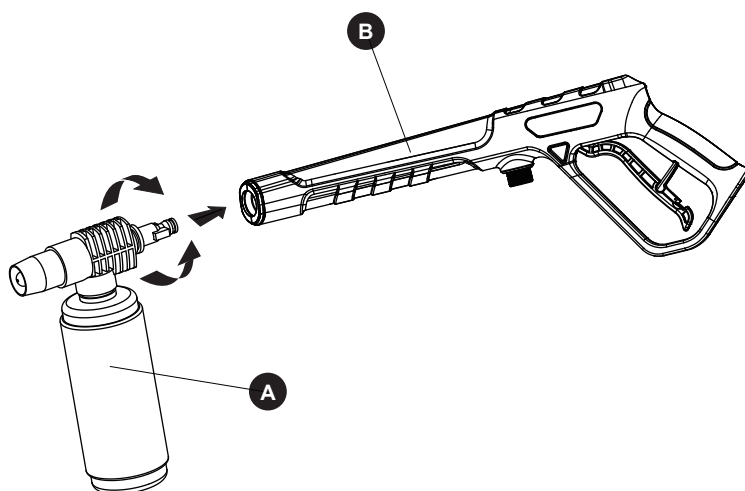

OPERATING INSTRUCTIONS

- Stop the pressure washer and turn off the water faucet.
- Point the spray gun in a safe direction and pull the trigger to release the water pressure.
- If installed, remove the low-pressure soap applicator.
- Install an appropriate nozzle for the task being performed.
- Turn on the water and start the pressure washer.
- Release the safety lock and begin pressure washing by squeezing the trigger all the way into the handle.
NOTE: Always test in a small inconspicuous area to avoid or reduce damage.
- Start cleaning at the bottom of the surface and work in a side-to-side motion.

12

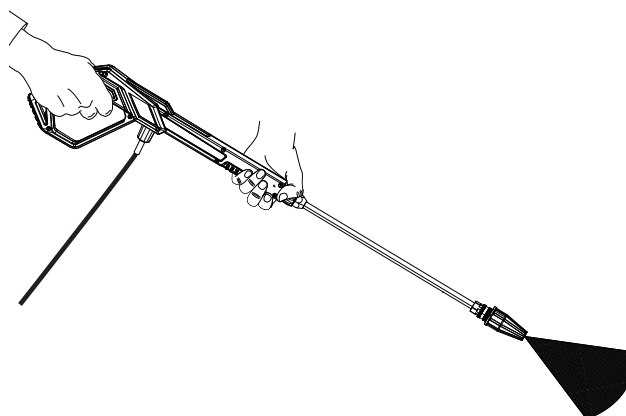

OPERATING TIPS

- It is normal to hear the motor run intermittently when the trigger is not being squeezed. The pump is priming itself to operate when the trigger is squeezed again.
- To avoid damaging surfaces:
 - Always use an appropriate nozzle
 - Reduce water pressure by adjusting the angle of the stream or by increasing the distance from the nozzle to the surface.
- Always spray detergent on a dry surface. Do not pre-soak surface. Wetting the surface first dilutes the detergent and reduces the cleaning ability.
- For tough stains, it may be necessary to reapply the detergent and use a bristled brush to scrub the stain.
- Keep a nozzle cleaning tool nearby for unclogging the nozzles.
- The o-rings in the high pressure hose should be cleaned regularly and lubricated with non-water soluble grease such as petroleum jelly.
- Turn off the pressure washer after five minutes of inactivity.

⚠ WARNING

ALWAYS turn off the pressure washer, release the pressure in the spray gun, and unplug the pressure washer before performing maintenance.

⚠ WARNING

Replace damaged or worn items with recommended or equivalent replacement parts. Using an incorrect or incompatible part might create a hazard that could result in serious personal injury.

⚠ NOTICE

Inspect the physical condition of the product prior to each use. Look for loose bolts, fluid leaks, and other signs of wear. Replace all damaged items. For replacement parts or assistance, contact our customer service.

To prolong the life of this product, follow the care and maintenance instructions in this section. Contact customer service before servicing any recall or warranty parts.

CLEANING THE PRESSURE WASHER

Do not store or operate the pressure washer in dirty, dusty, or corrosive environments. Do not allow foreign materials and debris to clog the vents on the unit.

Never clean the pressure washer with a garden hose. Water can damage electrical components. If the unit needs to be cleaned, use a soft brush and damp cloth to clean the exterior and use low-pressure (no greater than 25 PSI) to clean the vents.

Never use gasoline as a cleaning agent.


CLEANING THE NOZZLES

See Figure 13.

- Stop the pressure washer and turn off the water faucet.
- Release the pressure in the spray gun and unplug the pressure washer.
- Remove the nozzle from the spray gun.
- Use a nozzle cleaning tool or fine needle to clean debris from the inside of the nozzle.
- Using a garden hose, back flush water through the nozzle.
- When the nozzle is clean, place it back on the lance or in the nozzle storage area.

CLEANING THE WATER INLET SCREENS

The screens inside the water inlet should be cleaned periodically. Remove the screens, rinse them with clean water, and place them back in the inlet.

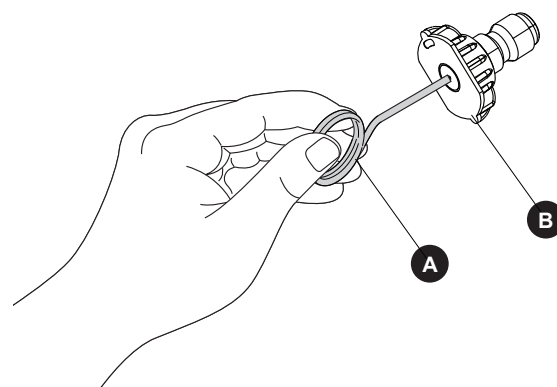13

A - Nozzle Cleaning Tool
B - Nozzle

STORAGE

NOTE: Use commercially available pump protectors to extend the life of the pump. Follow the manufacturer's instructions for use.

- Release the pressure in the spray gun and unplug the pressure washer. Wrap the cord around the cord retainer.
- Disconnect the garden hose and the high pressure hose.
- Tilt the pressure washer to allow excess water to drain from the threaded outlet.
- Remove all nozzles and place them in the nozzle storage area.
- Disassemble the spray gun and lance.
- Store the pressure washer and accessories in a dry, covered location away from extreme heat which could dry out the pump seals and extreme cold which could cause freeze damage.

⚠ WARNING

Do not use attachments or accessories that are not recommended for use with this product. Making unauthorized modifications and using incompatible accessories can damage the unit and void the warranty.

PROBLEM	POSSIBLE CAUSE	CORRECTION ACTION
Unit will not turn on.	Pressure washer is not connected to a power source or the power source isn't grounded.	Connect the power cord to a grounded 120V outlet.
	Water pressure is in the hose.	Pull the trigger to release the water pressure.
	GFCI is tripped.	Press the RESET button on the power cord.
	Defective motor or power cord.	Lowe's Home Centers LLC.
The unit is running but there is no water flow.	Improper water source.	Connect the pressure washer to a water main. Do not use this device with water from a lake, pool, or pond.
	Clogged nozzle.	Clean the nozzle.
	Defective spray lance.	Replace the lance. Contact customer service for part replacement.
Water is leaking where the hose connects to the spray gun.	Defective or missing O-ring between the high pressure hose and the spray gun.	Replace the o-ring.
The pressure washer turns on for 2 seconds, shuts off, and will not turn back on.	The auto-start feature is turning the unit off.	When the pressure washer is turned on, the motor may run for 1-2 seconds to prime the pump. Then it will automatically shut off until the spray gun trigger is squeezed. This is normal and does not indicate a problem.

PROJECT SOURCE LIMITED WARRANTY

The detailed warranty period for each **PROJECT SOURCE** product can be found online at www.lowes.com or ascs@lowes.com.

Please contact **PROJECT SOURCE** Customer Service Toll-Free at **866-389-8827** any time you have questions or warranty claims.

LIMITED SERVICE WARRANTY

PROJECT SOURCE products are warranted against defects in material or workmanship from the date of original retail purchase for the applicable warranty period. For any properly and timely submitted warranty claim, if Lowe's determines a product to be defective during the warranty period, the product will receive free repair or replacement as determined by Lowe's.

HOW TO OBTAIN SERVICE

For warranty service, within the applicable warranty period, please contact **PROJECT SOURCE** customer service toll-free at 866-389-8827. When requesting warranty service, you must present the original dated sales receipt. An authorized service center will be selected to evaluate and repair the product if defective according to the stated warranty terms. When bringing your product to the authorized service center, there may be a small deposit that will be required when dropping off your tool. This deposit is refundable when the repair service is deemed to be covered under warranty. The purchaser is responsible for transportation of any outdoor power equipment or attachments at their expense.

ADDITIONAL LIMITATIONS & EXCLUSIONS

This limited warranty applies only to the original purchaser from an authorized **PROJECT SOURCE** retailer and is not transferable. **PROJECT SOURCE** products shall not be considered defective, and this warranty will not apply, where the claimed defect is attributable to any cause other than the above-defined defects. This warranty shall be void if the product has been used for rental purposes. This warranty shall not apply to damage caused by accident, abuse, misuse, alteration, modification, unauthorized repair, liquid contact, fire, earthquake or other external cause; operating the product outside Lowe's instructions, specifications or guidelines; or failure to properly service or maintain the product. This warranty also does not apply to cosmetic damage, including but not limited to scratches or dents; defects caused by normal wear and tear or otherwise due to the normal aging of the product.

THIS EXPRESS WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE OR USE, WHICH ARE DISCLAIMED. Any implied warranties, including warranties of merchantability or fitness for a particular purpose, that cannot be disclaimed under state law are limited to the applicable warranty period defined at the beginning of this article. The sole and exclusive remedy in connection with the purchase, installation, use, and/or performance of the **PROJECT SOURCE** products is repair or replacement of the product as determined by Lowe's. Lowe's maximum liability shall not in any case exceed the purchase price paid for the product. LOWES SHALL NOT BE LIABLE TO THE USER OR TO ANYONE ELSE FOR CONSEQUENTIAL, INCIDENTAL, SPECIAL, EXEMPLARY, INDIRECT, OR PUNITIVE DAMAGES ARISING FROM USE OF THE PRODUCTS, INCLUDING BUT NOT LIMITED TO PERSONAL INJURY, DEATH, PROPERTY DAMAGE, LOST PROFITS, OR OTHER ECONOMIC INJURY. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, the exclusion or limitation of incidental or consequential damages, or the limitations on time to bring certain actions, so such limitations contained herein do not apply to individual consumers in those states.

This warranty is subject to and shall be interpreted according to Michigan law without regard to principles of conflicts of laws. No legal action shall be brought against Lowe's unless filed within one (1) year after the basis for such legal action becomes known, or with the exercise of reasonable diligence should have become known. Any action not timely filed shall be deemed waived.

For customer service contact us toll-free at: **866-389-8827**.

Lowe's Home Centers LLC

1000 Lowe's Blvd.

Mooresville, NC 28117