 
 




Bookcase

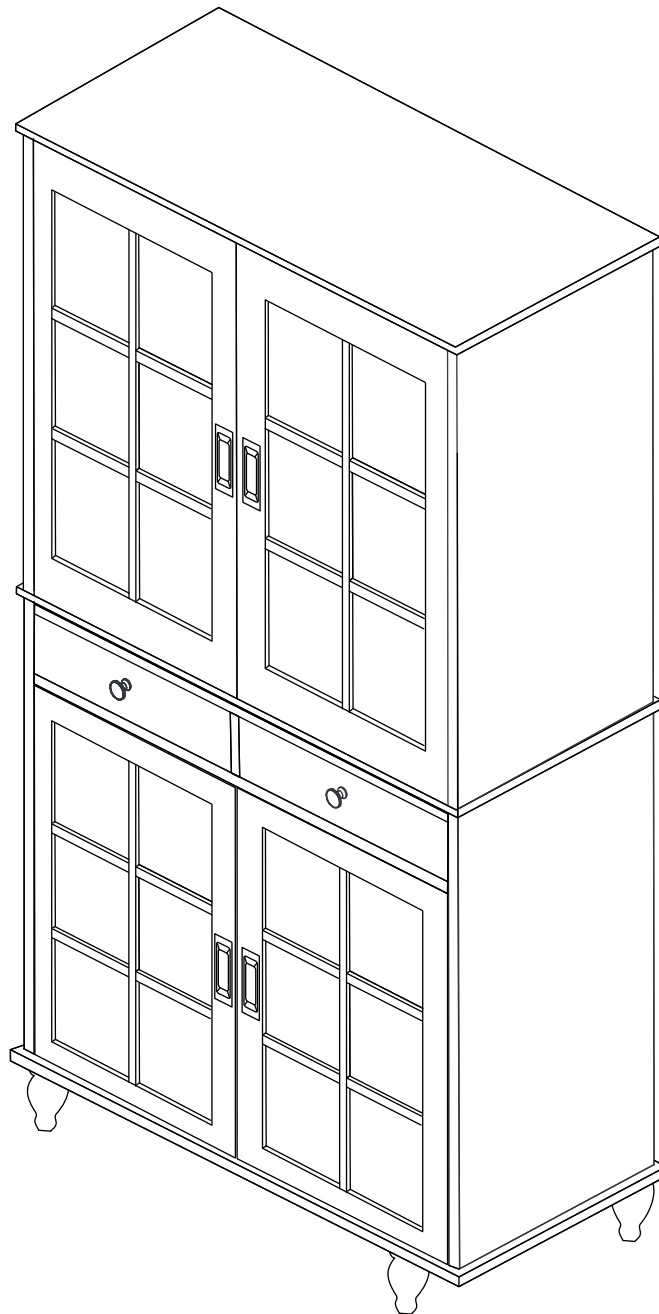

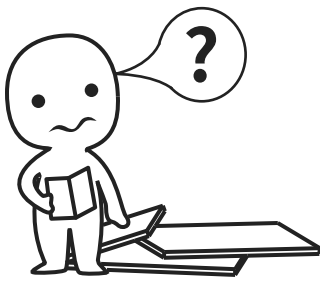


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

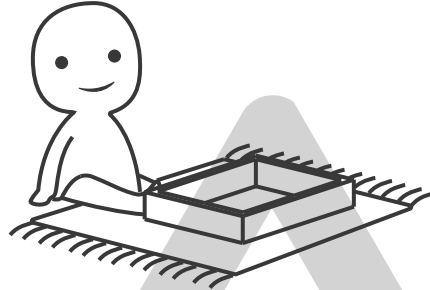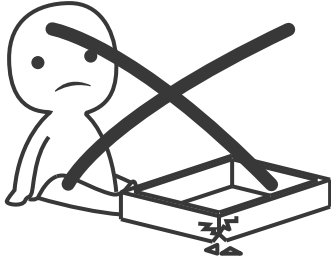



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

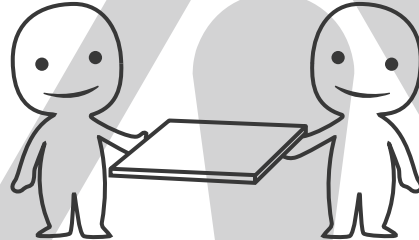

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

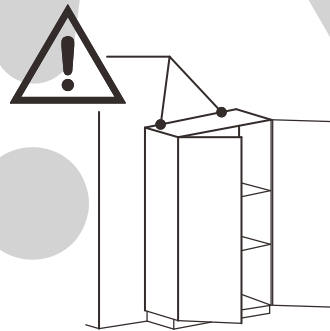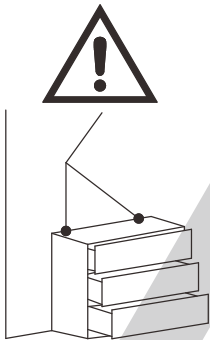

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

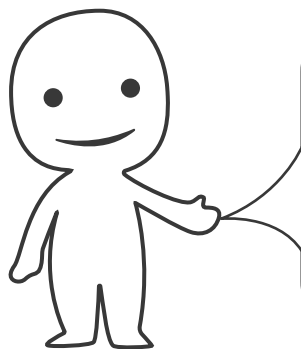






















Please prepare the following tools



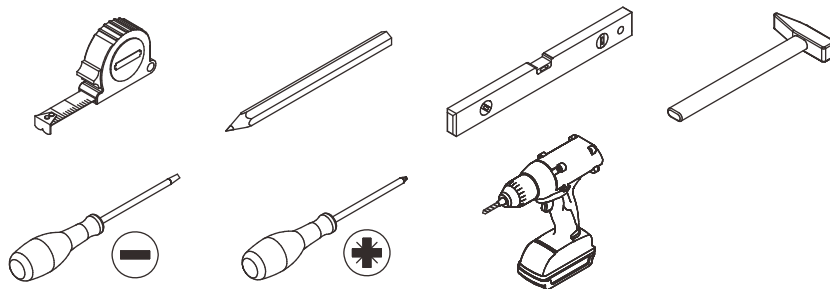 




When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 22+1 $\phi 6 \times 35 \text{ mm}$	Bx 22+1 $\phi 15 \times 10 \text{ mm}$	Cx 60+1 $\phi 3 \times 12 \text{ mm}$	Dx22 	Ex 11 $\phi 4 \times 35 \text{ mm}$
F x 8 	G x 8 	H x 8 	J x 1 	K x 4
L x 1 	M x 2 	N x 10 $\phi 4 \times 16 \text{ mm}$	P x 2 	Q x 4 $\phi 3 \times 14 \text{ mm}$
R x 8 $\phi 5 \times 40 \text{ mm}$	S x 4 	T x 1 	Ux 1 $\phi 3.5 \times 12 \text{ mm}$	CLx 2
CRx 2 	DLx 2 	DRX 2 		


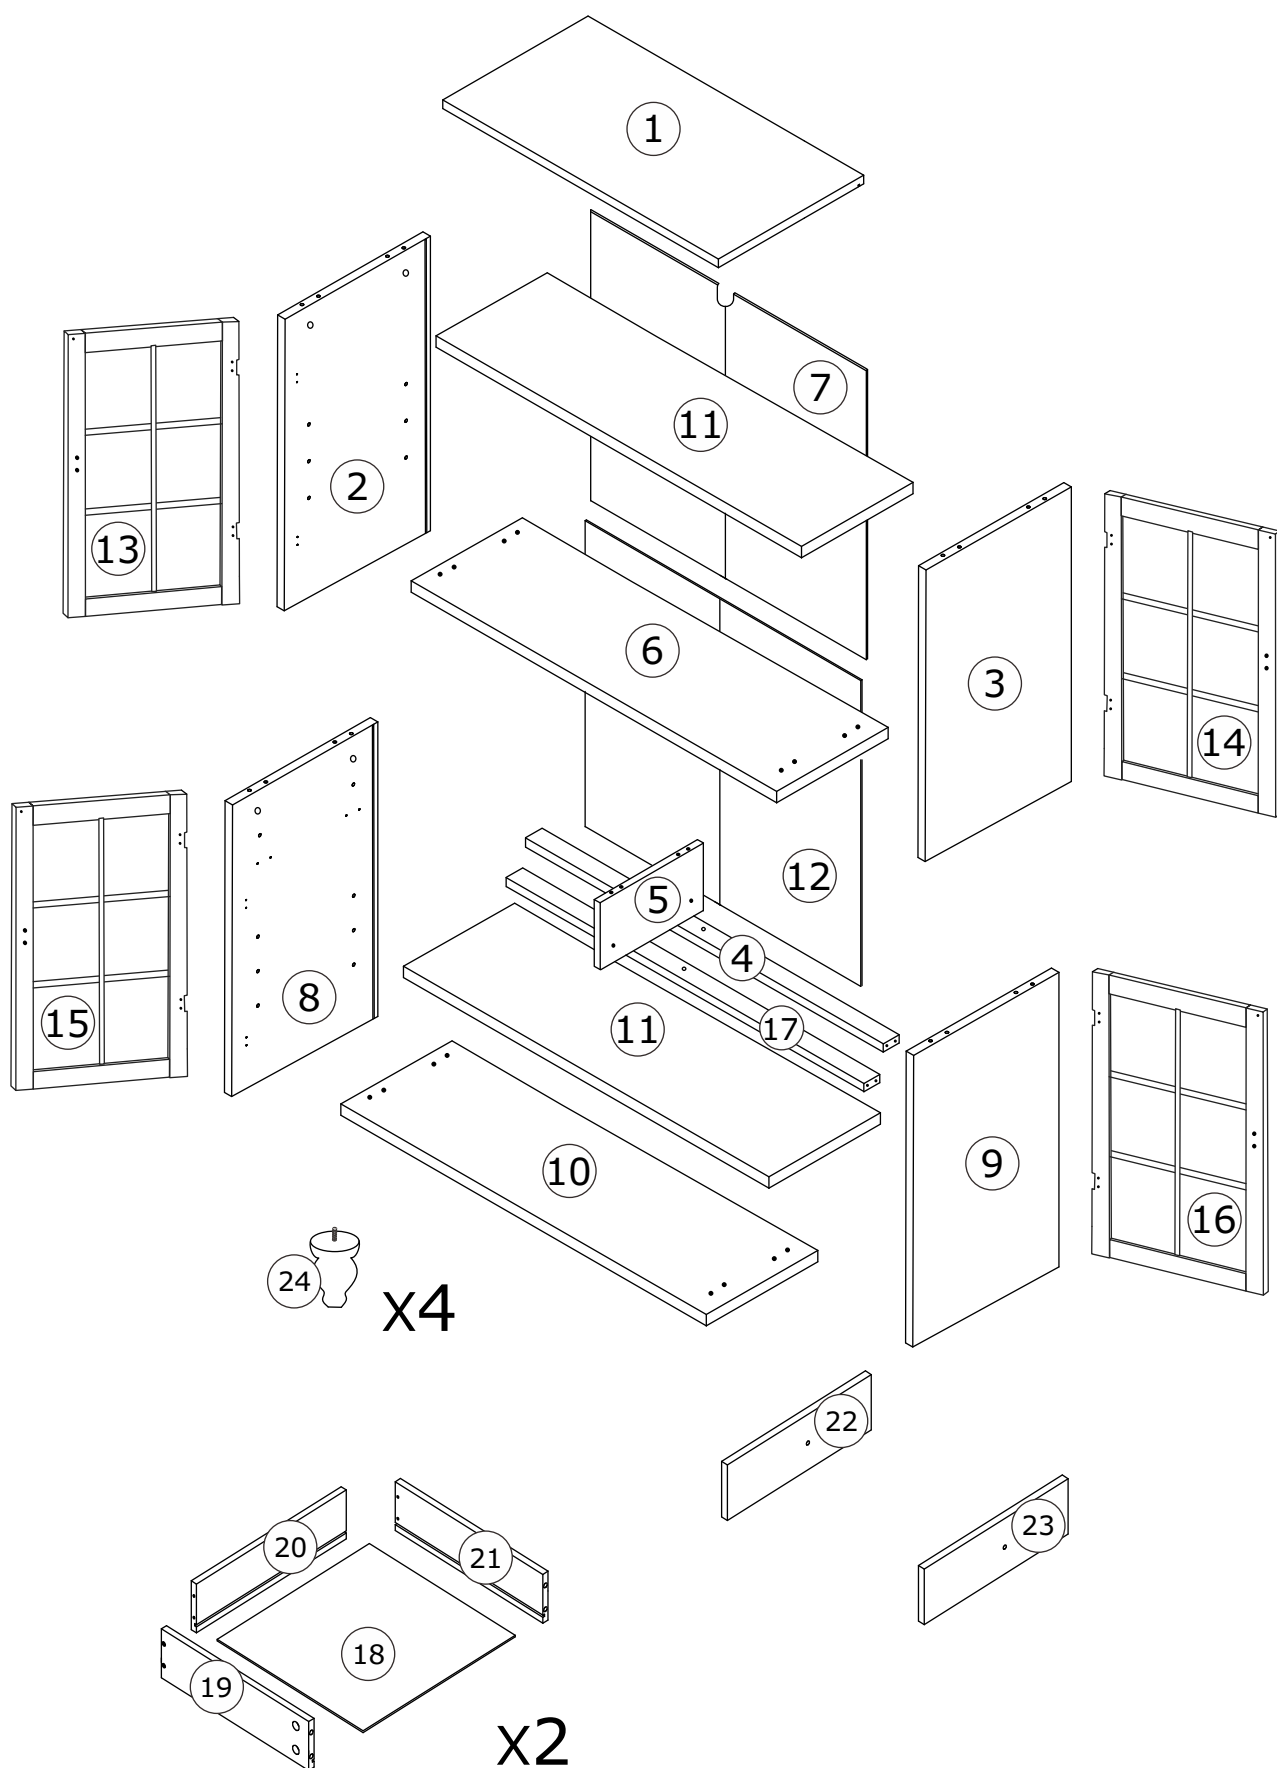 


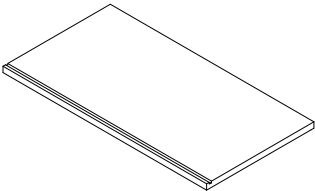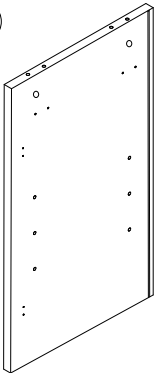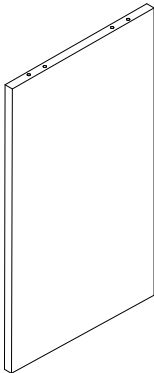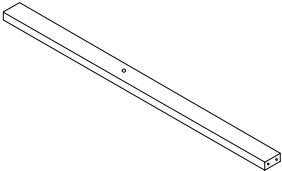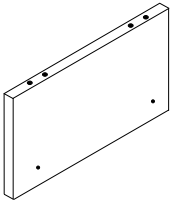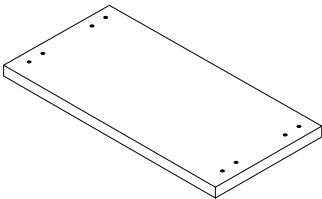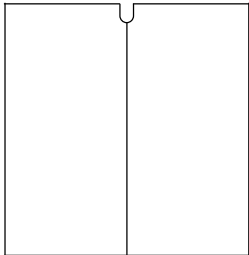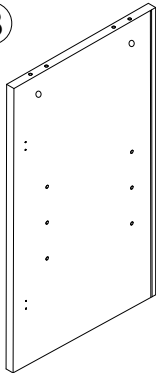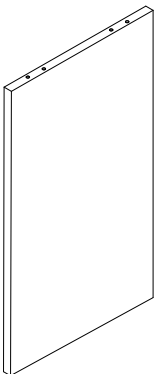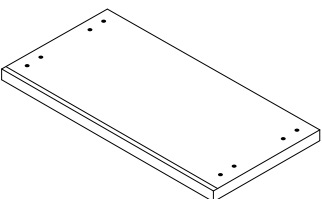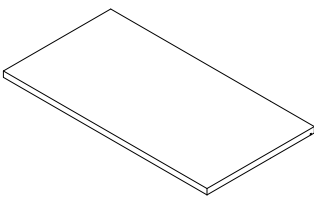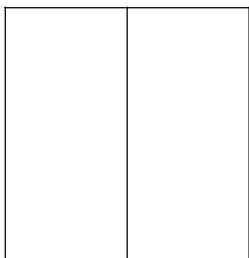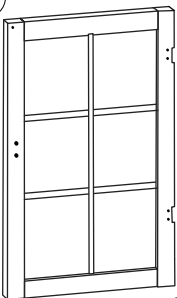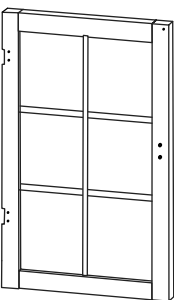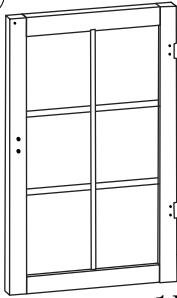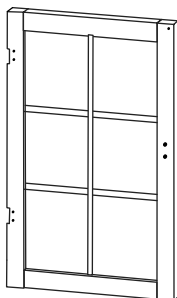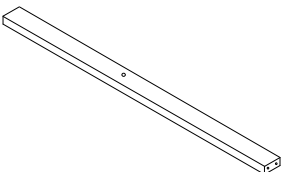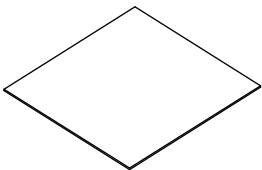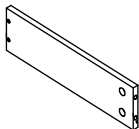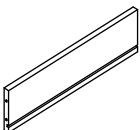                    ①  1PC	②  1PC	③  1PC	④  1PC
⑤  1PC	⑥  1PC	⑦  1PC	⑧  1PC
⑨  1PC	⑩  1PC	⑪  2PC	⑫  1PC
⑬  1PC	⑭  1PC	⑮  1PC	⑯  1PC
⑰  1PC	⑱  2PC	⑲  2PC	⑳  2PC

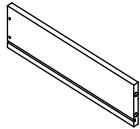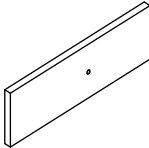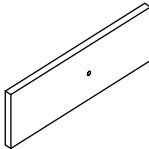   21  2PC	22  1PC	23  1PC	24  4PC

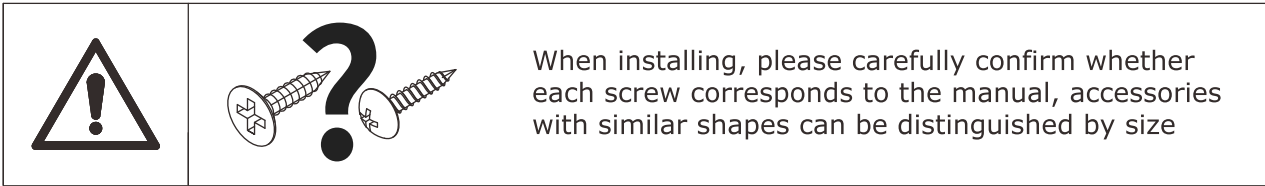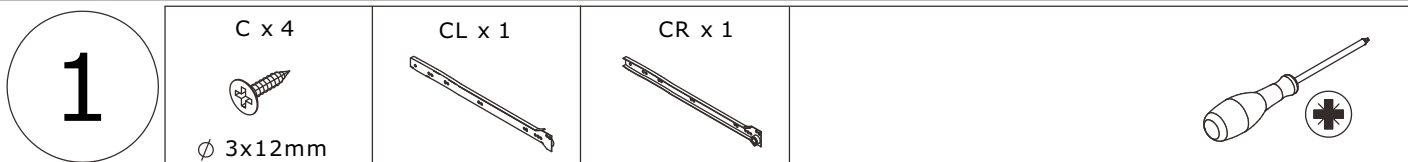  

  Fix left outer drawer runner(CL)
andright outer drawer runner(CR)
to parts5 using screws C,
as shown.
Note: No. 5 is double sided

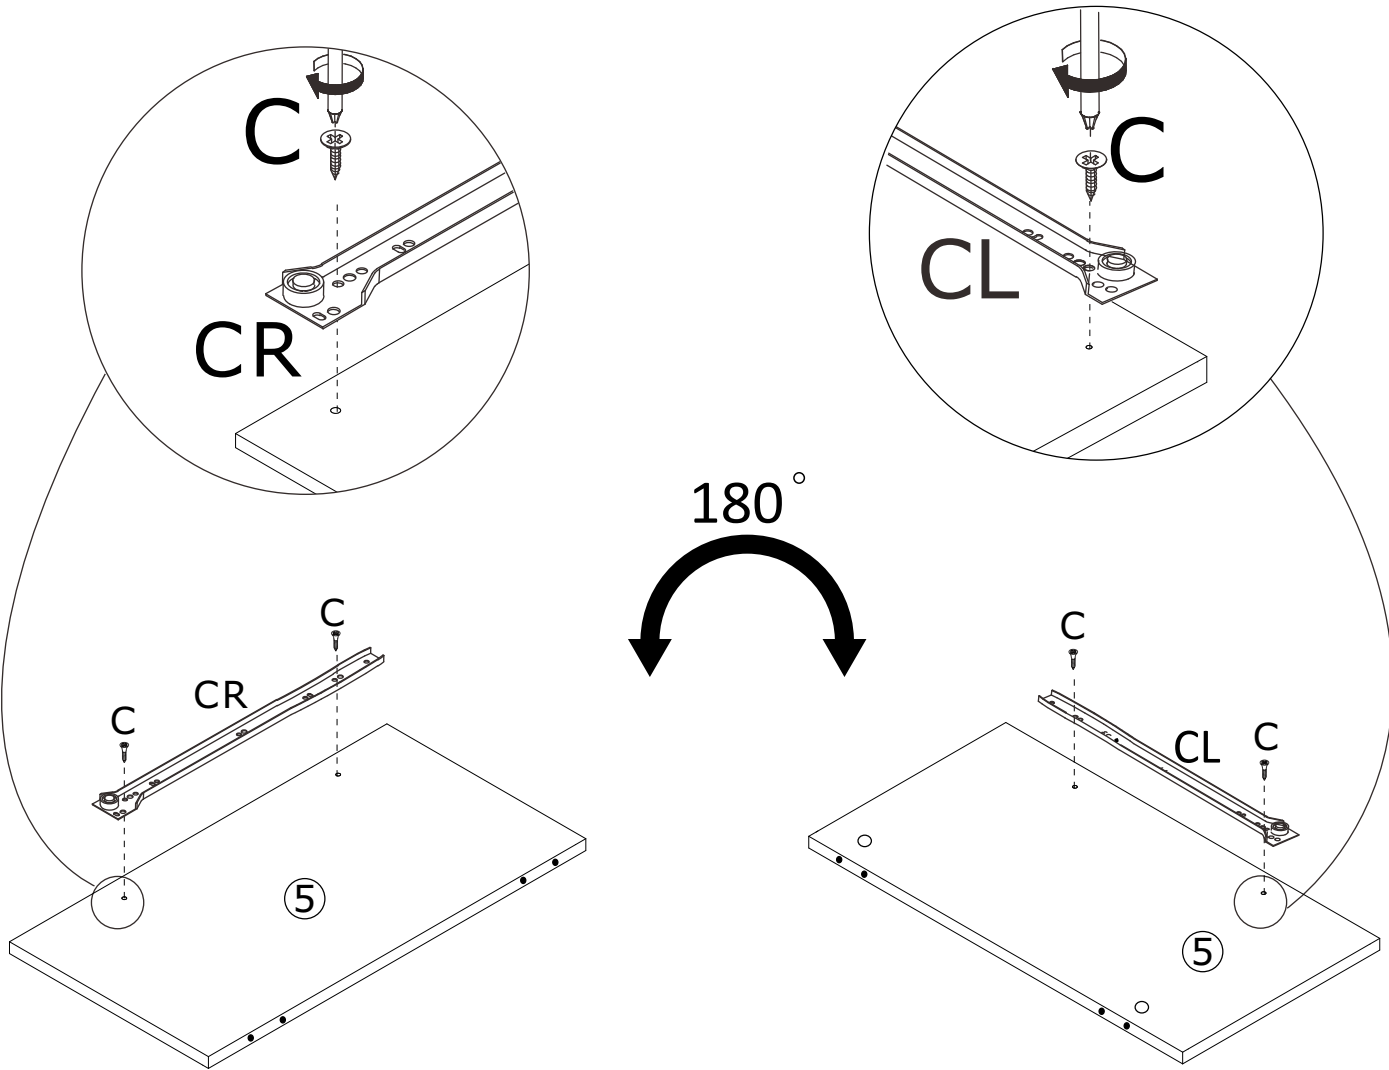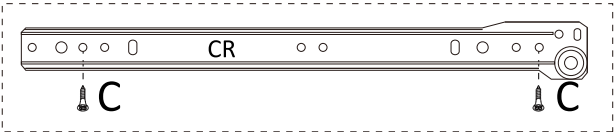

2

E x 2



Ø 4x35mm

 
M x 1



Q x 2





Ø 3x14mm



Fasten the magnetic snap (m) to part 17 with a screw (Q) as shown.

  Use screws (E) to connect to parts 4,5 and 17, as shown.

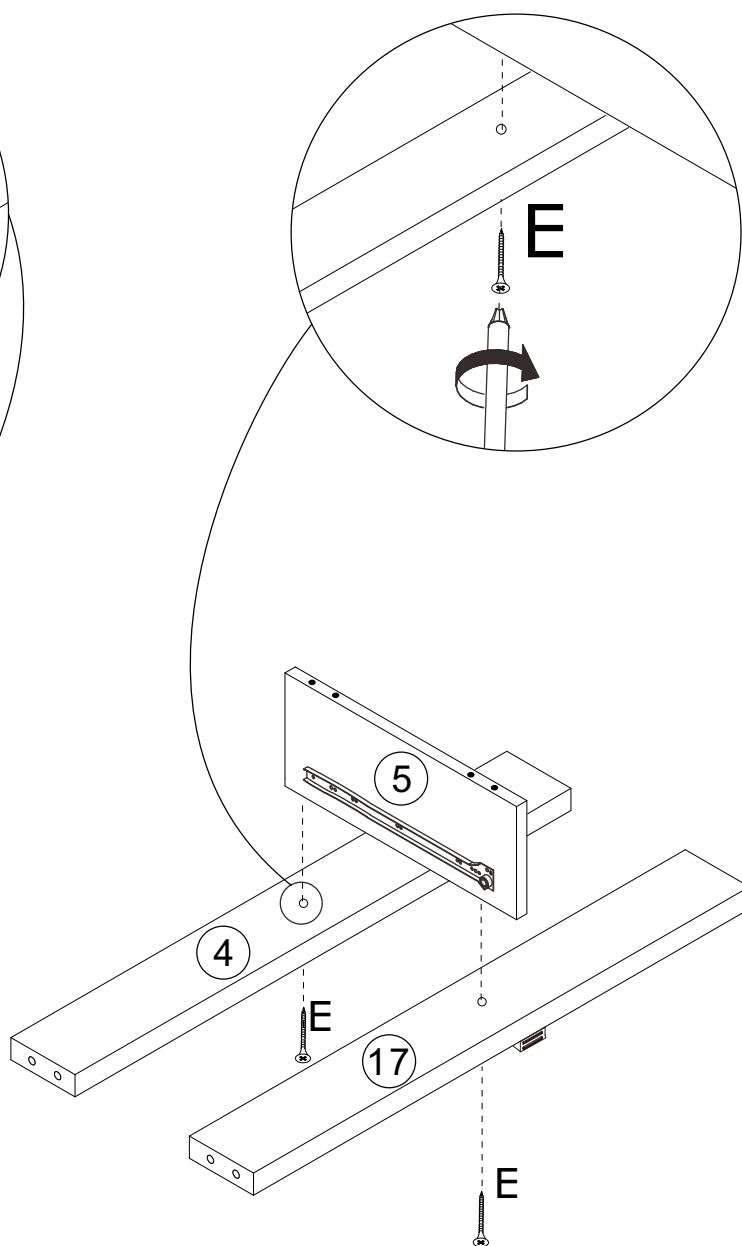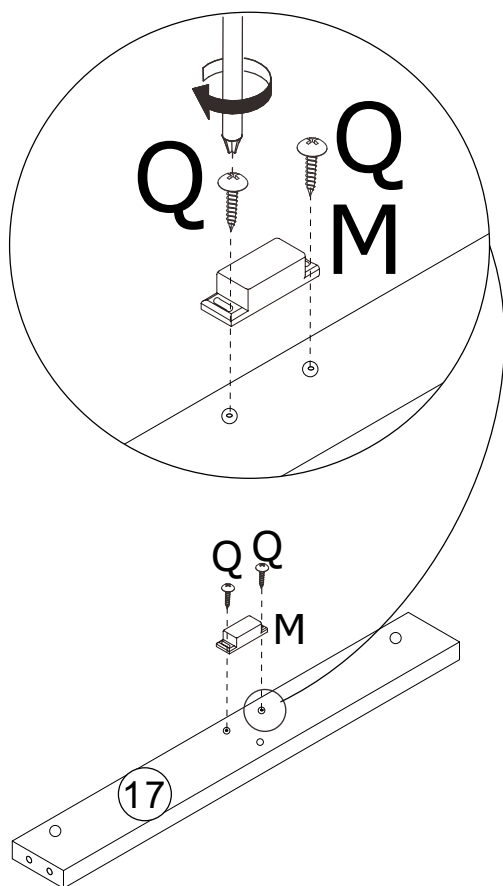

3

A x 4



 
Ø 6x35mm

C x 4





Ø 3x12mm

CL x 1










CR x 1

  

Fix left outer drawer Orbit(CL)
and right outer drawer Orbit(CR)
to parts 8 and 9 using screws(C),
as shown.

Insert quickfit screws(A)to part 8and9,as shown.

       Do not use an electric screwdriver,do not use
force during the rotation of the accessories,
otherwise it may cause the board to crack

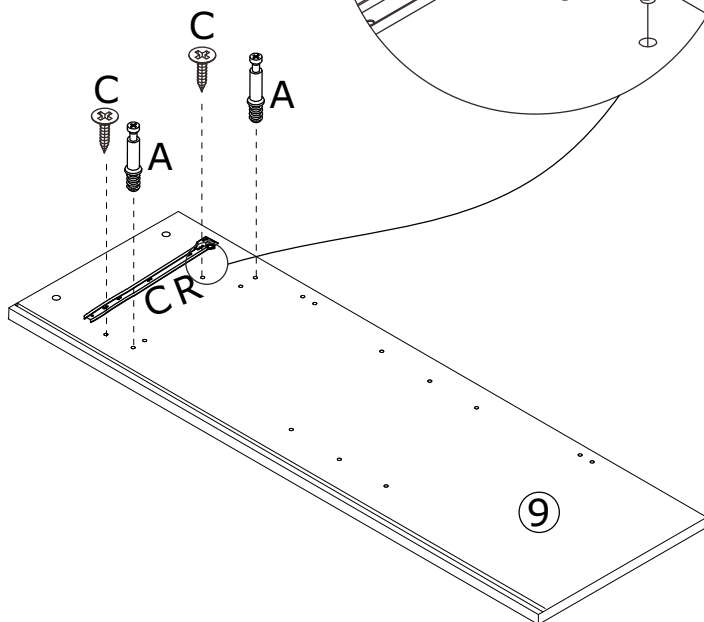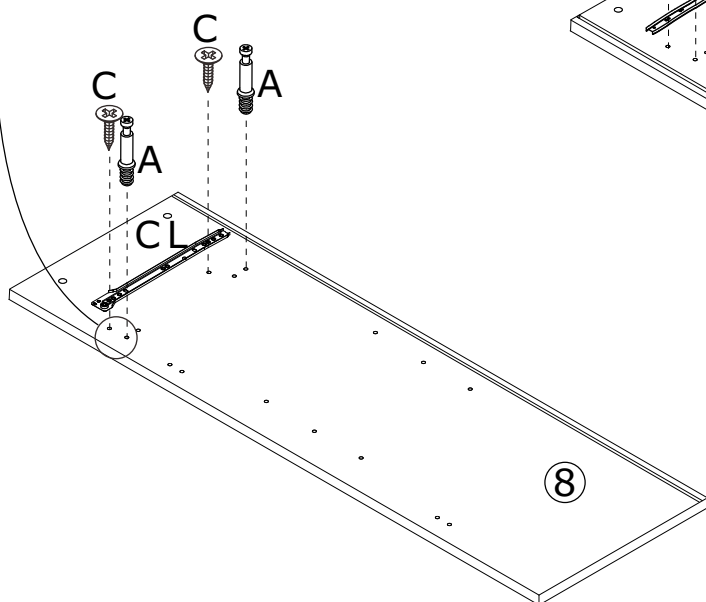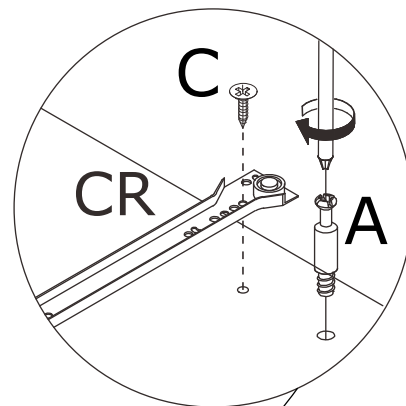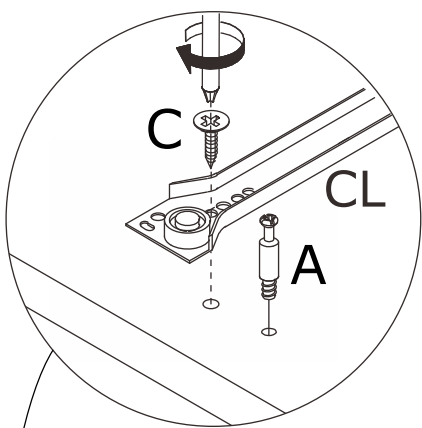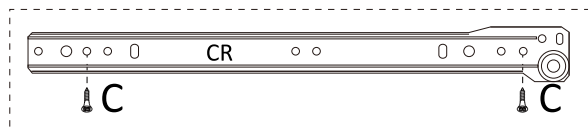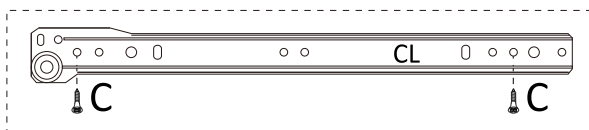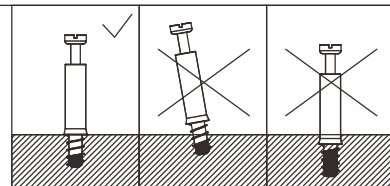

4

B x 2



Ø 15 x 10 mm

 
 
 
D x 2





Insert quickfit screws(A)and wooddowels(D)to parts 4 and 17,as shown.

Insert cam locks into parts 4 and 17attach parts 8,as shown.

Tutn cam locks clockwise to tighten.

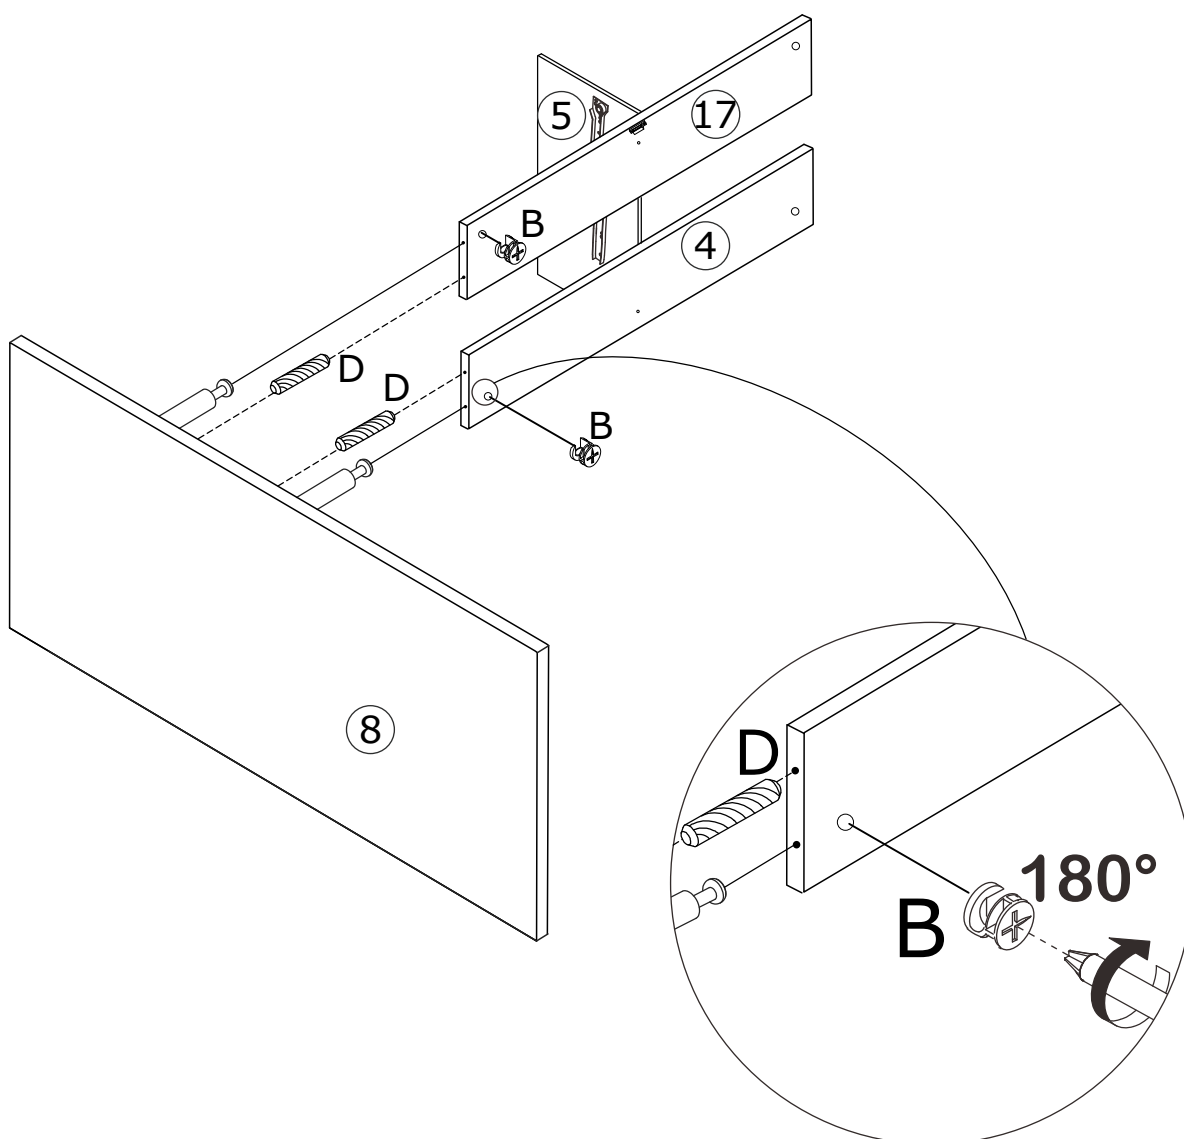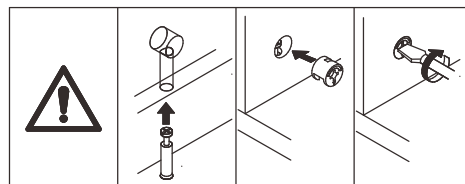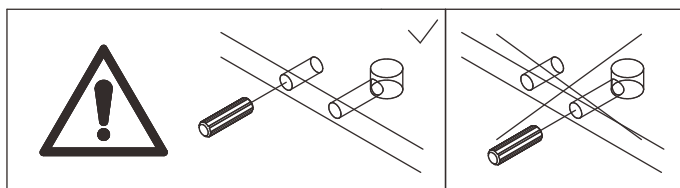





5

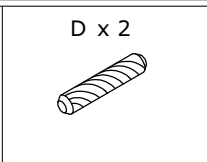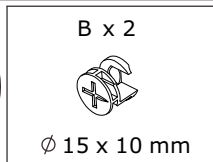  

Insert quickfit screws(A)and woodendowels(D)to parts 4 and 17,as shown.


Insert cam locks into parts 4 and 17attach parts 9,as shown.

    Tutn cam locks clockwise to tighten.

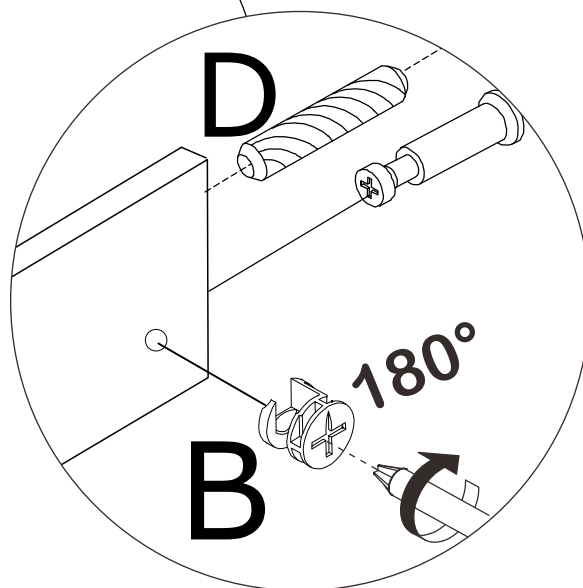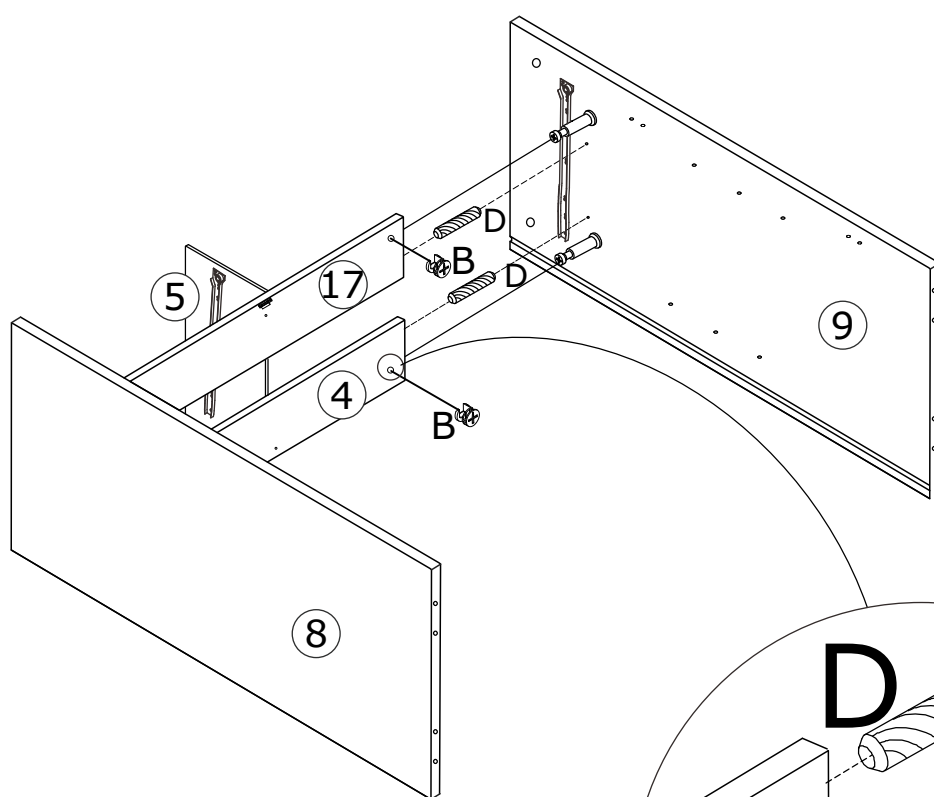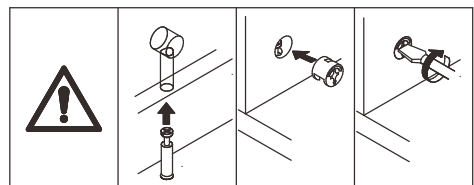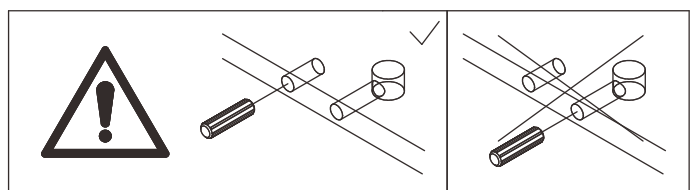

6

 D x 4



L x 1



 
 
R x 4



Ø 5 x 40 mm




Insert wooden dowels(D)into
assembled unit,as shown.
Attach part 10 into assembled
Fix The screw (R) to part 8 with the tool (L) ,
as shown in figure.

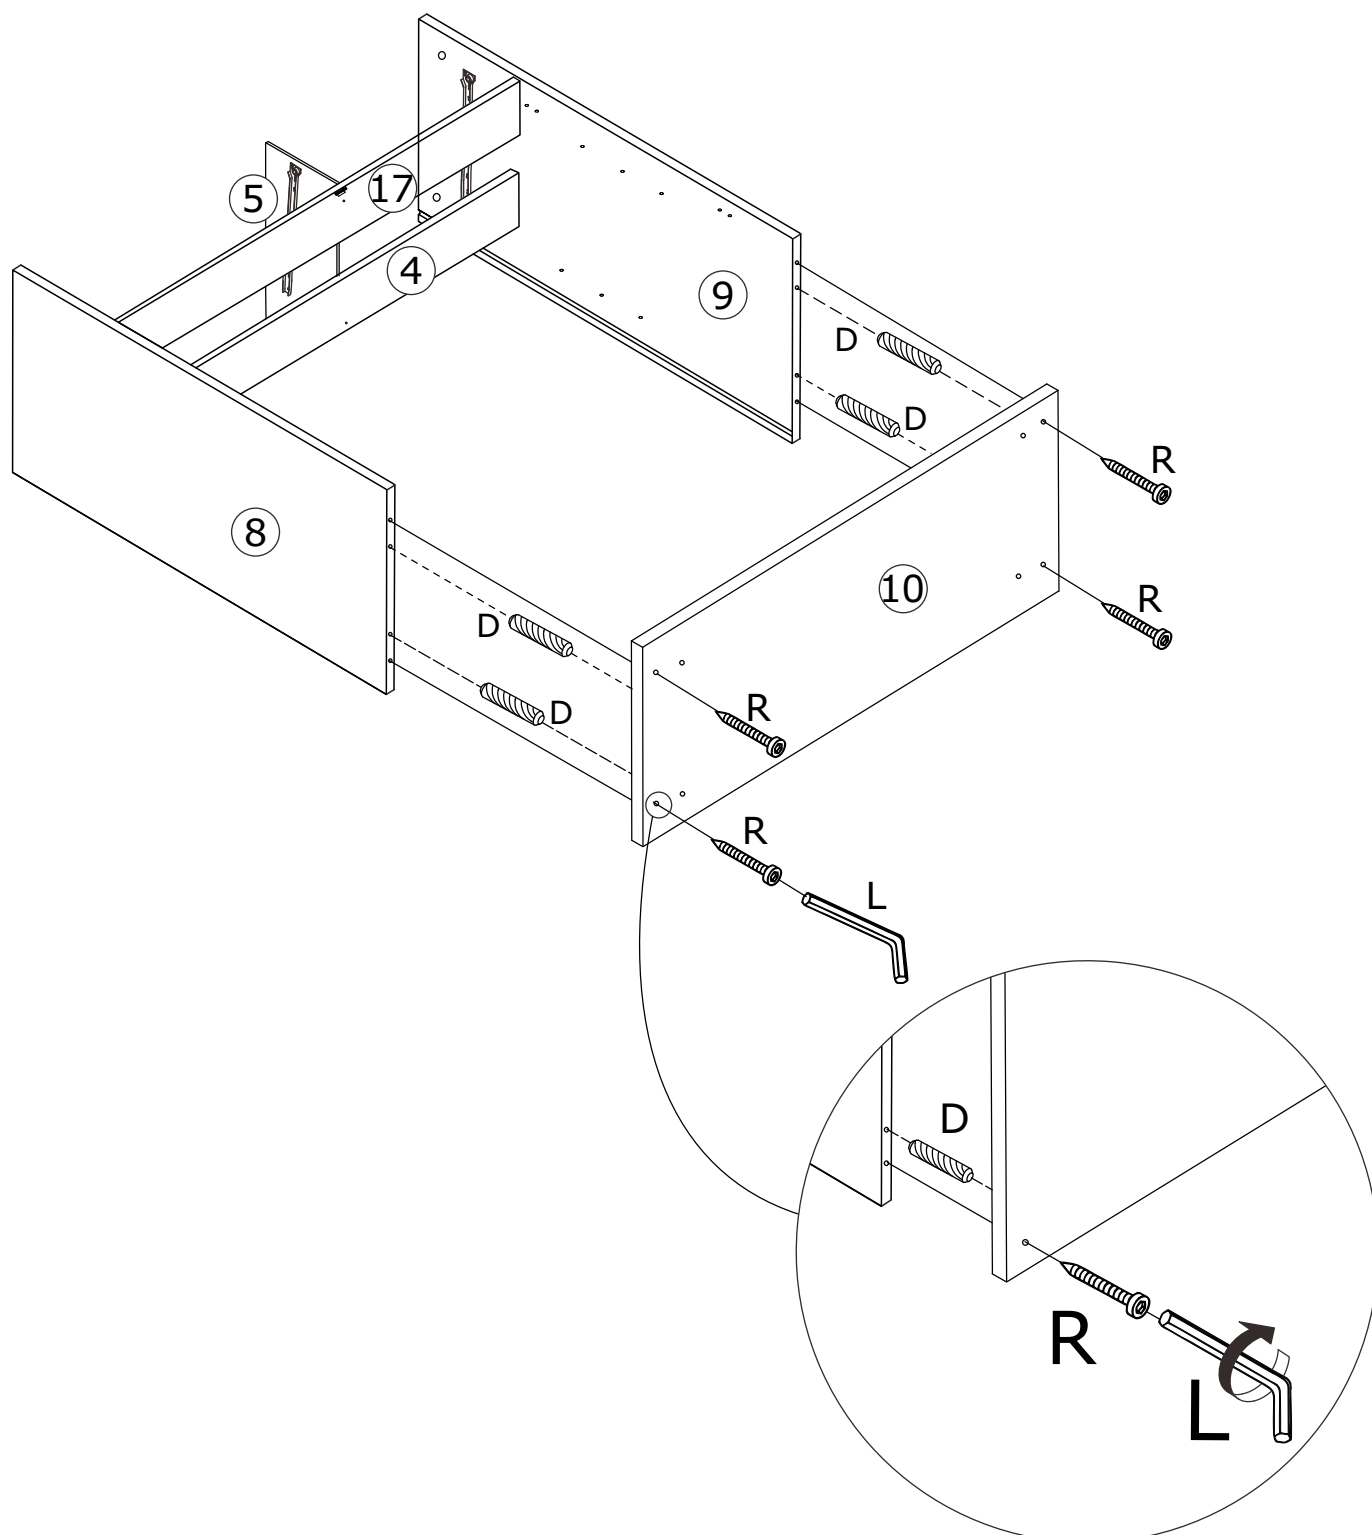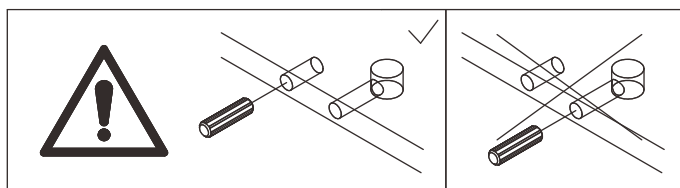


7

 Secure to part 10 by rotating the pin 24 clockwise, as shown.

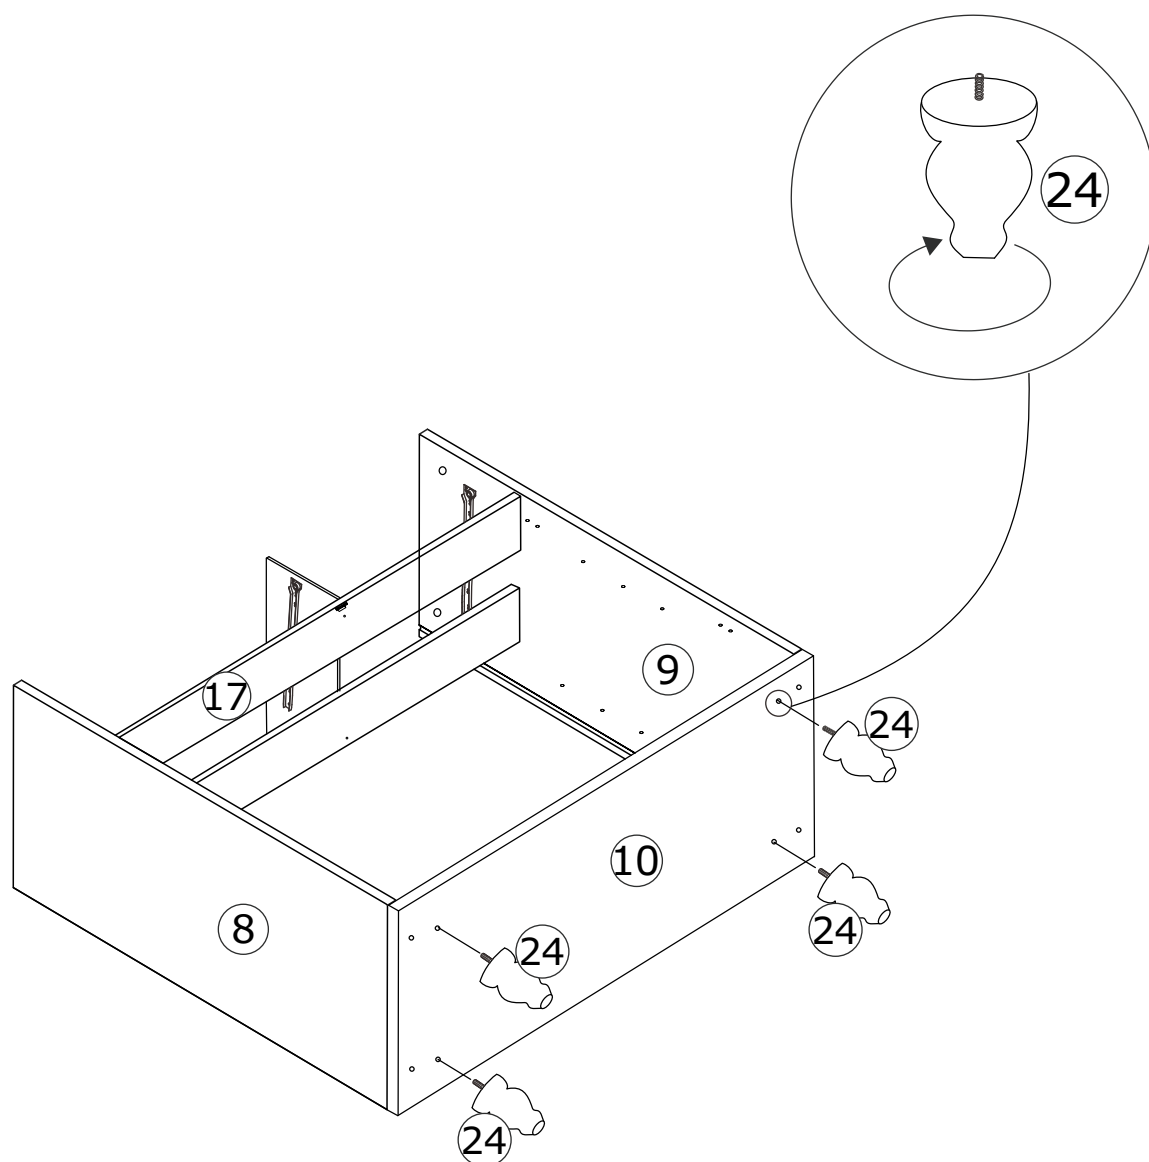


8

 Slide part 12 into the available slot,
fitting 8,9,AND10,
as shown in figure.

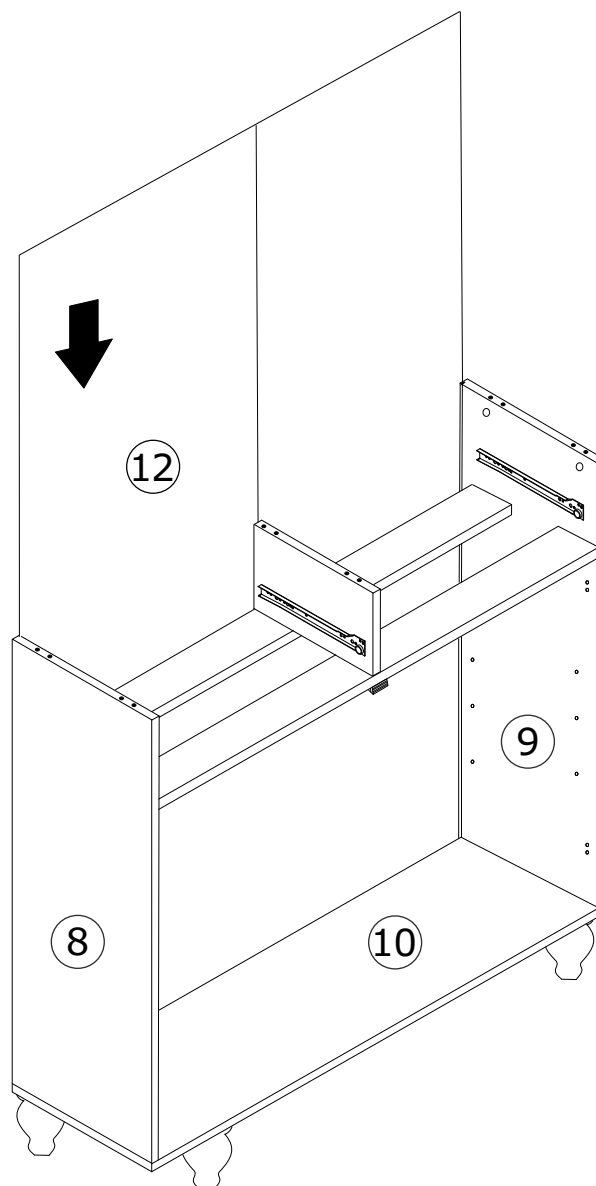

9

 A x 10  Ø 6x35mm	M x 1  Ø 3x12mm	Q x 2  Ø 3x14mm	T x 1 	U x 1  Ø 3.5x12mm	
---	--	--	---	--	---



		When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size
---	---	---

Insert quickfit screws(A)to part 1and6, as shown.

Fasten the magnetic snap (m) to part 1 with a screw (Q),as shown.

Fasten the sheet metal (T) into thepart 1 assembly unit using a nail (U),as shown.

  Do not use an electric screwdriver,do not use force during the rotation of the accessories, otherwise it may cause the board to crack.

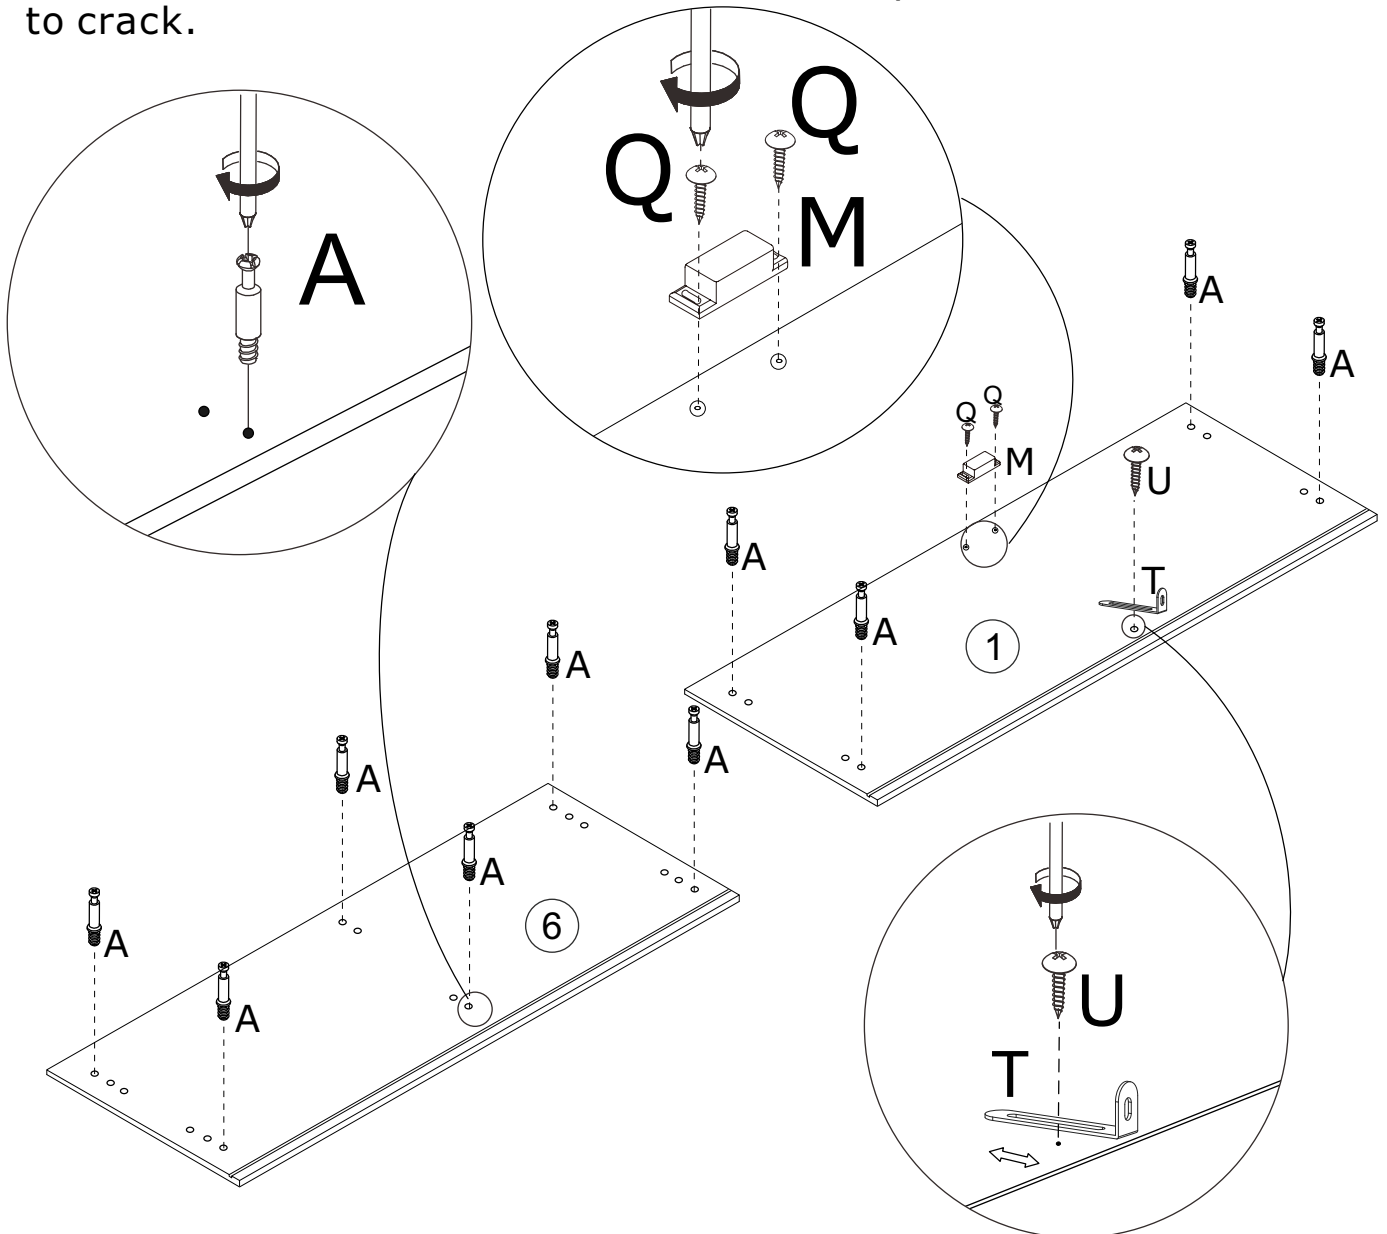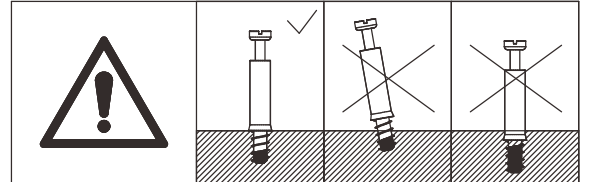

10

D x 4



R x 4



 
 
Ø 5 x 40 mm



Insert wooden dowels(D)into assembled unit,as shown.


Attach part 6 into assembled

Fix The screw (R) to part 6 with the tool (L) , as shown in figure.

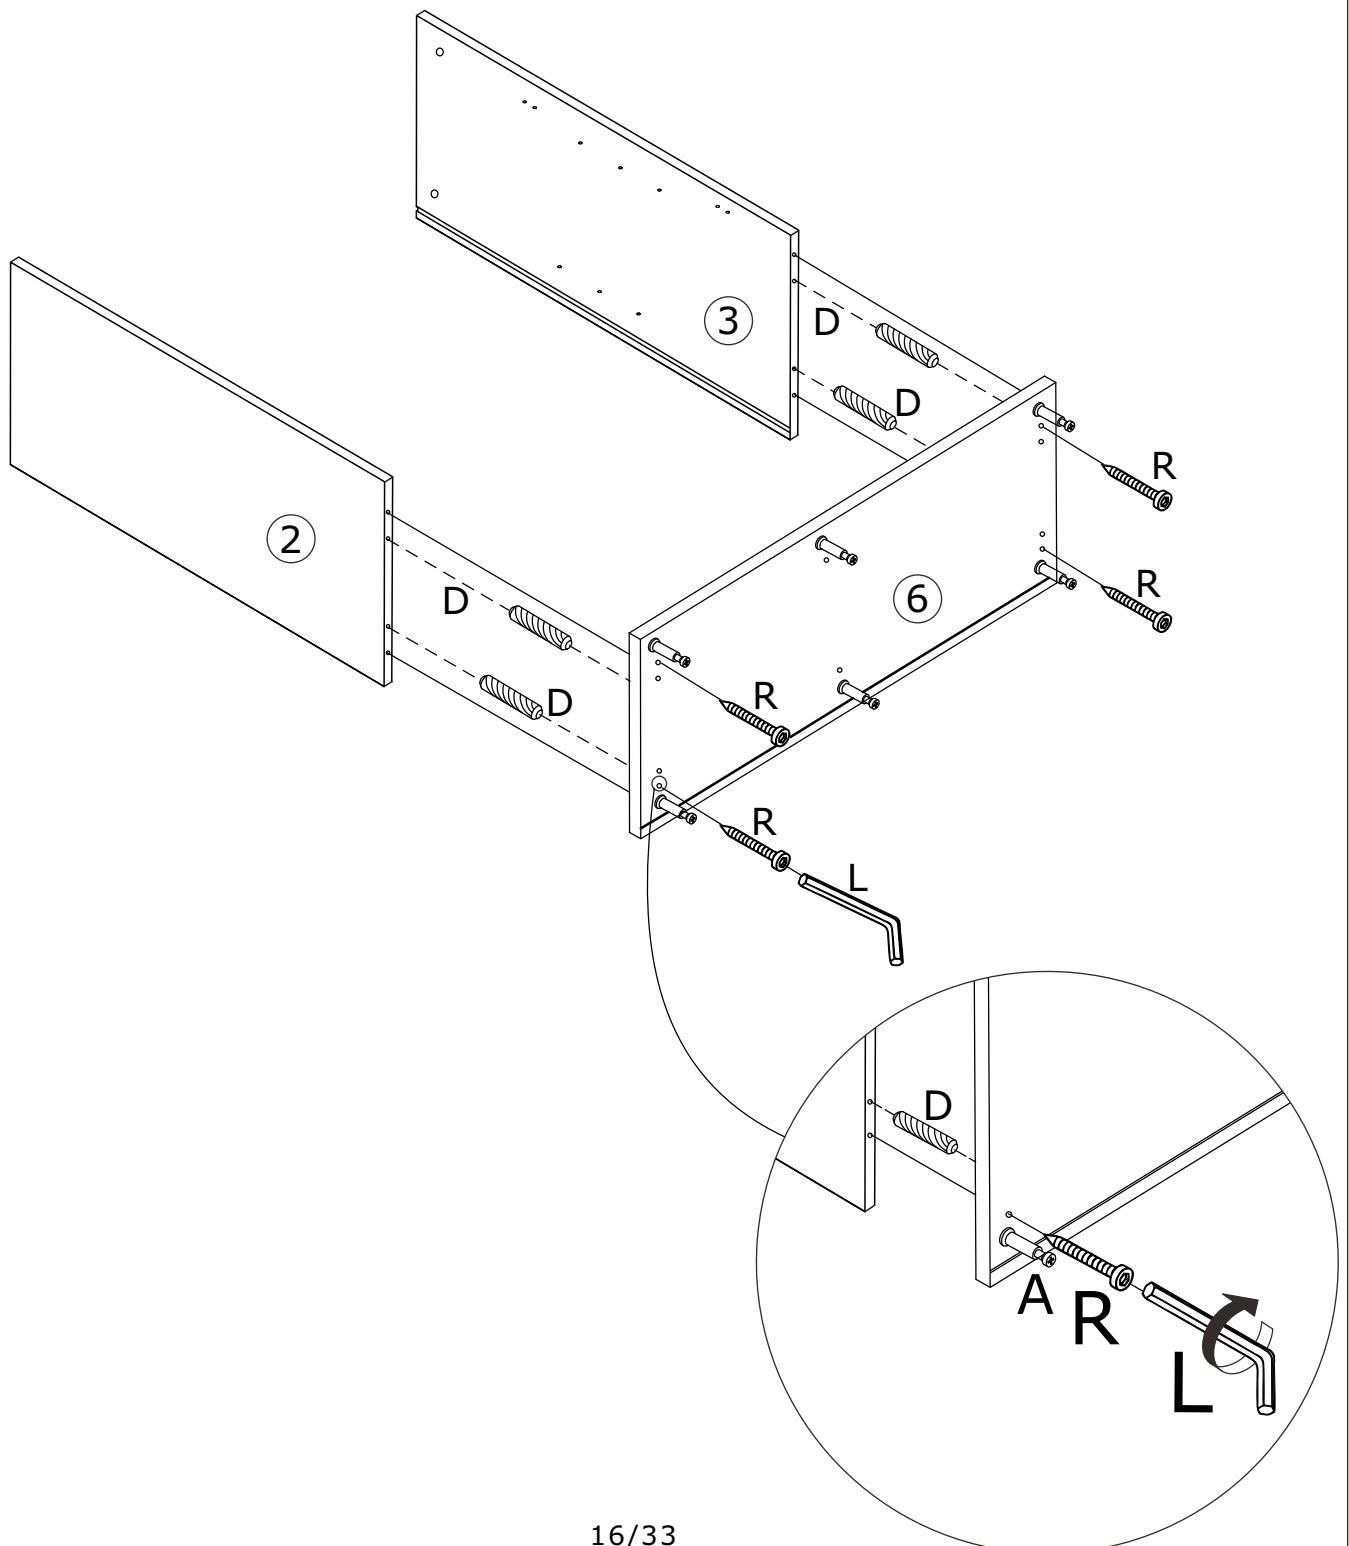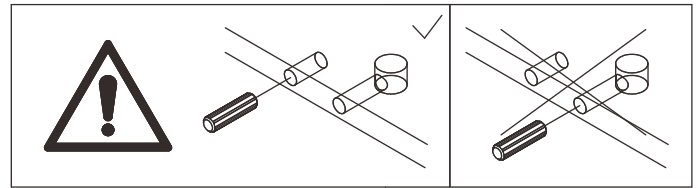

11

 Slide part 7 into the available slot, fitting 2,3,AND6,
as shown in figure.

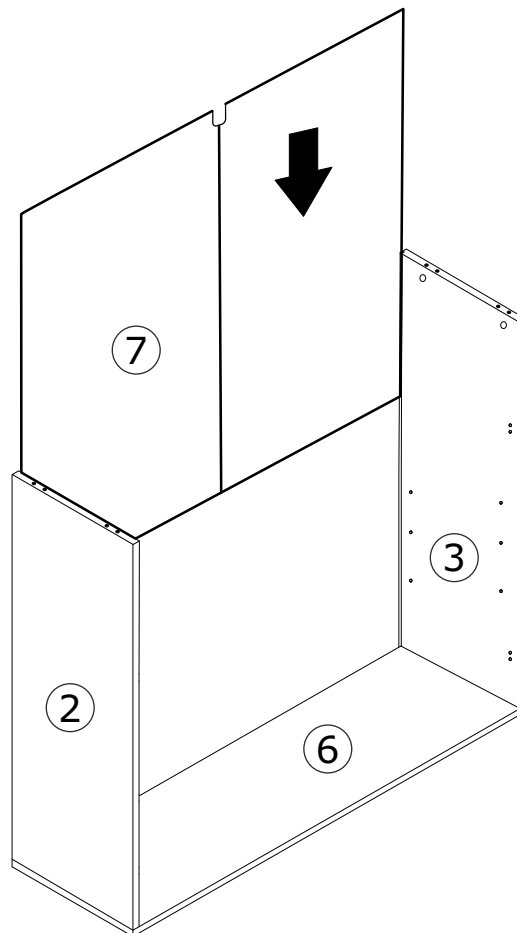


12

B x 6





Ø 15 x 10 mm


 
D x 6



 
 
Insert quickfit screws(A)and woodendowels(D)to parts 5,8 and 9,as shown.

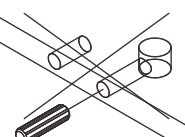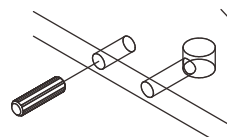

  Insert cam locks (B)into parts 5,8and 9, as shown.



Tutn cam locks clockwise to tighten.

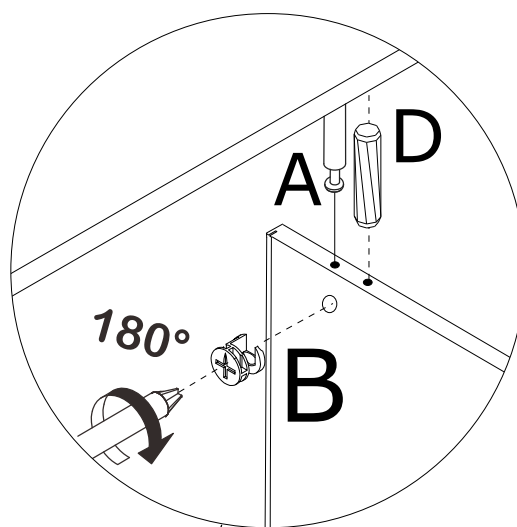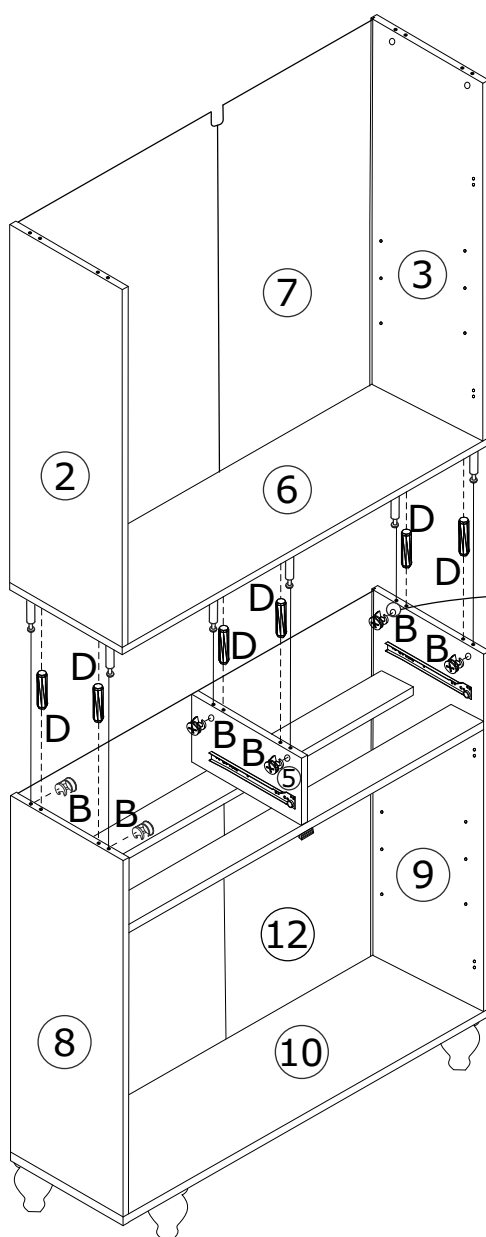  


13

B x 4





Ø 15 x 10 mm

 
D x 4



 
 
Insert quickfit screws(A) and wood dowels(D) to parts 2 and 3, as shown.

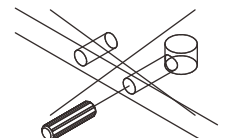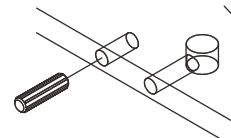

 Insert cam locks (B) into parts 2 and 3, as shown.

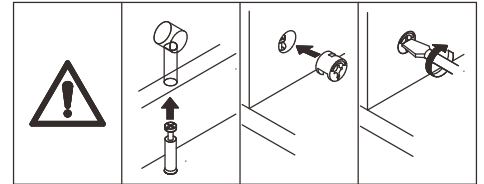

Turn cam locks clockwise to tighten.

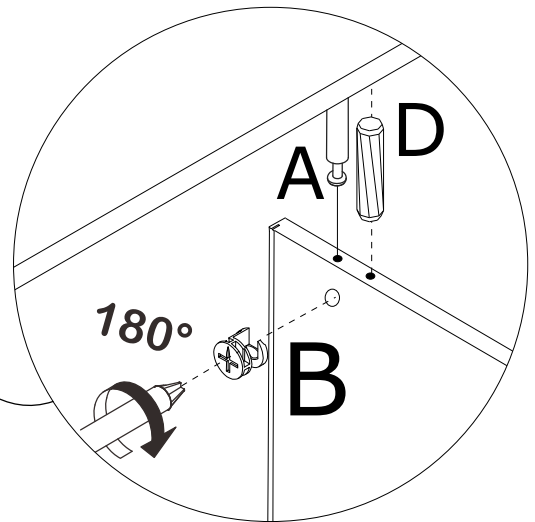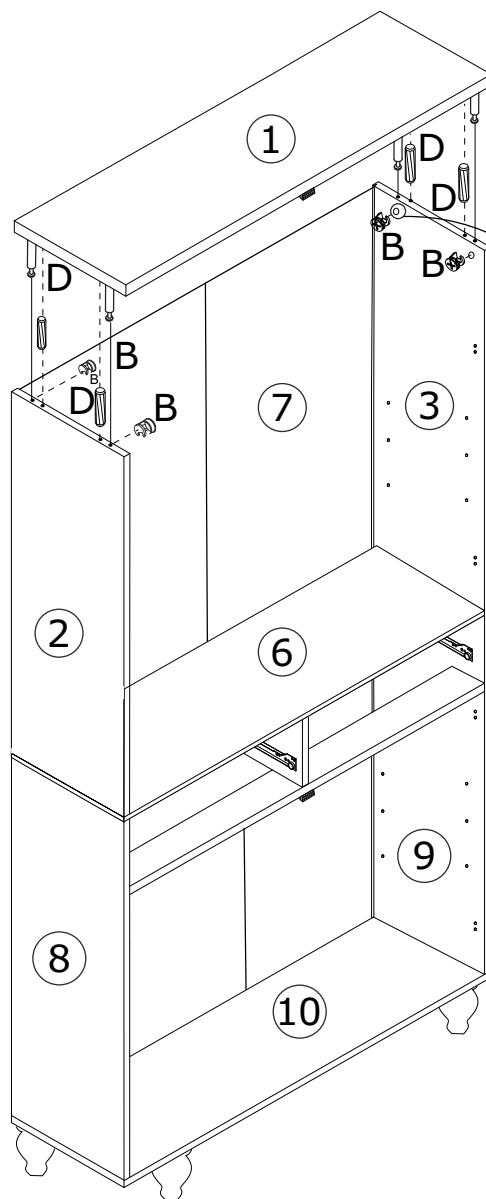  


14

G x 8




 A plastic plug (G) is placed on the corresponding hole as shown in figure.

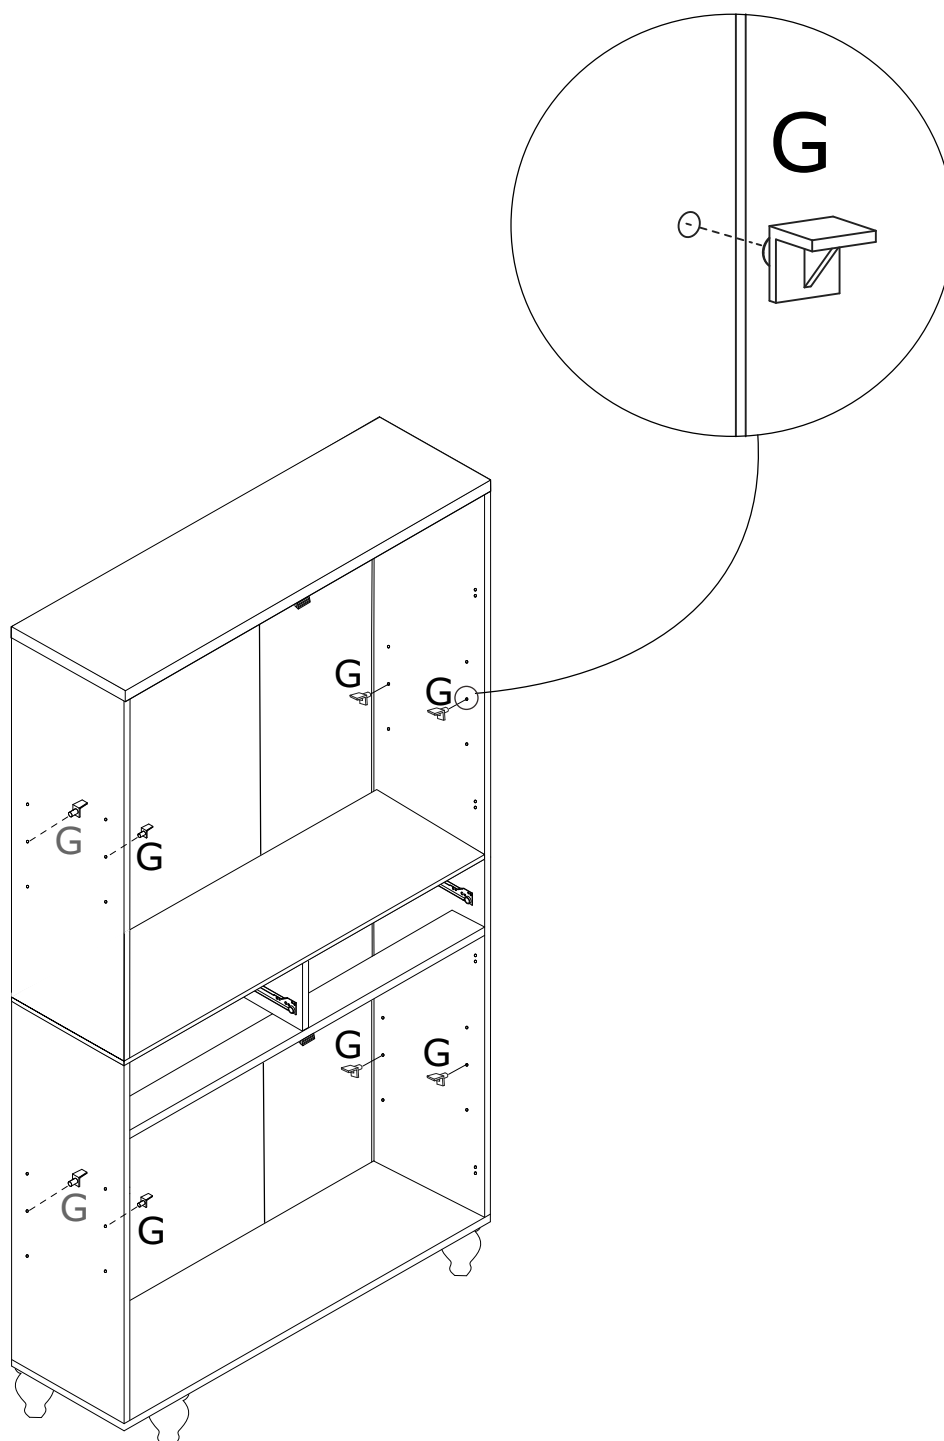


15

 Place part 11 in its proper place, as shown

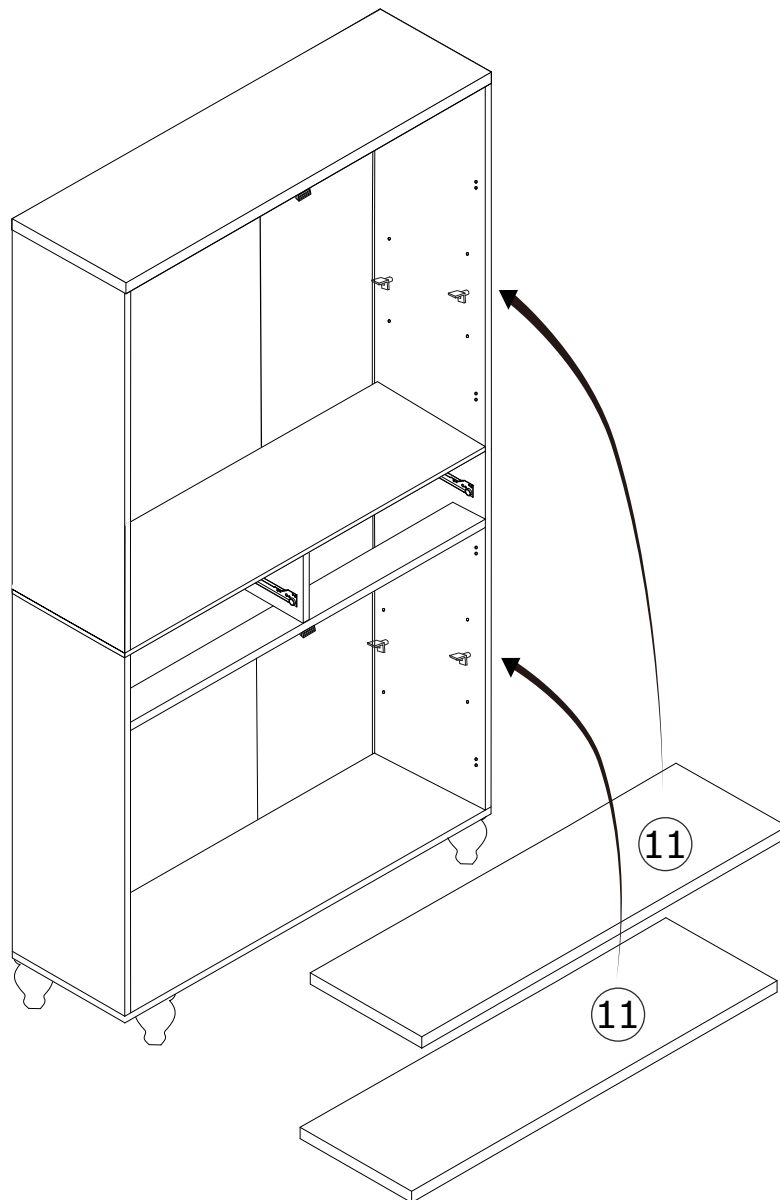

16

 C x 20




F x 8




K x 4



 N x 8




S x 4

 

fix handle(S)to 13,14and15,16part using bolts(N),as shown.

Secure the hinge (F) with screw C to sections 13,14 and 15,16, as shown.

 Secure the Metal Shim (K) with screw C to sections 13,14 and 15,16, as shown.

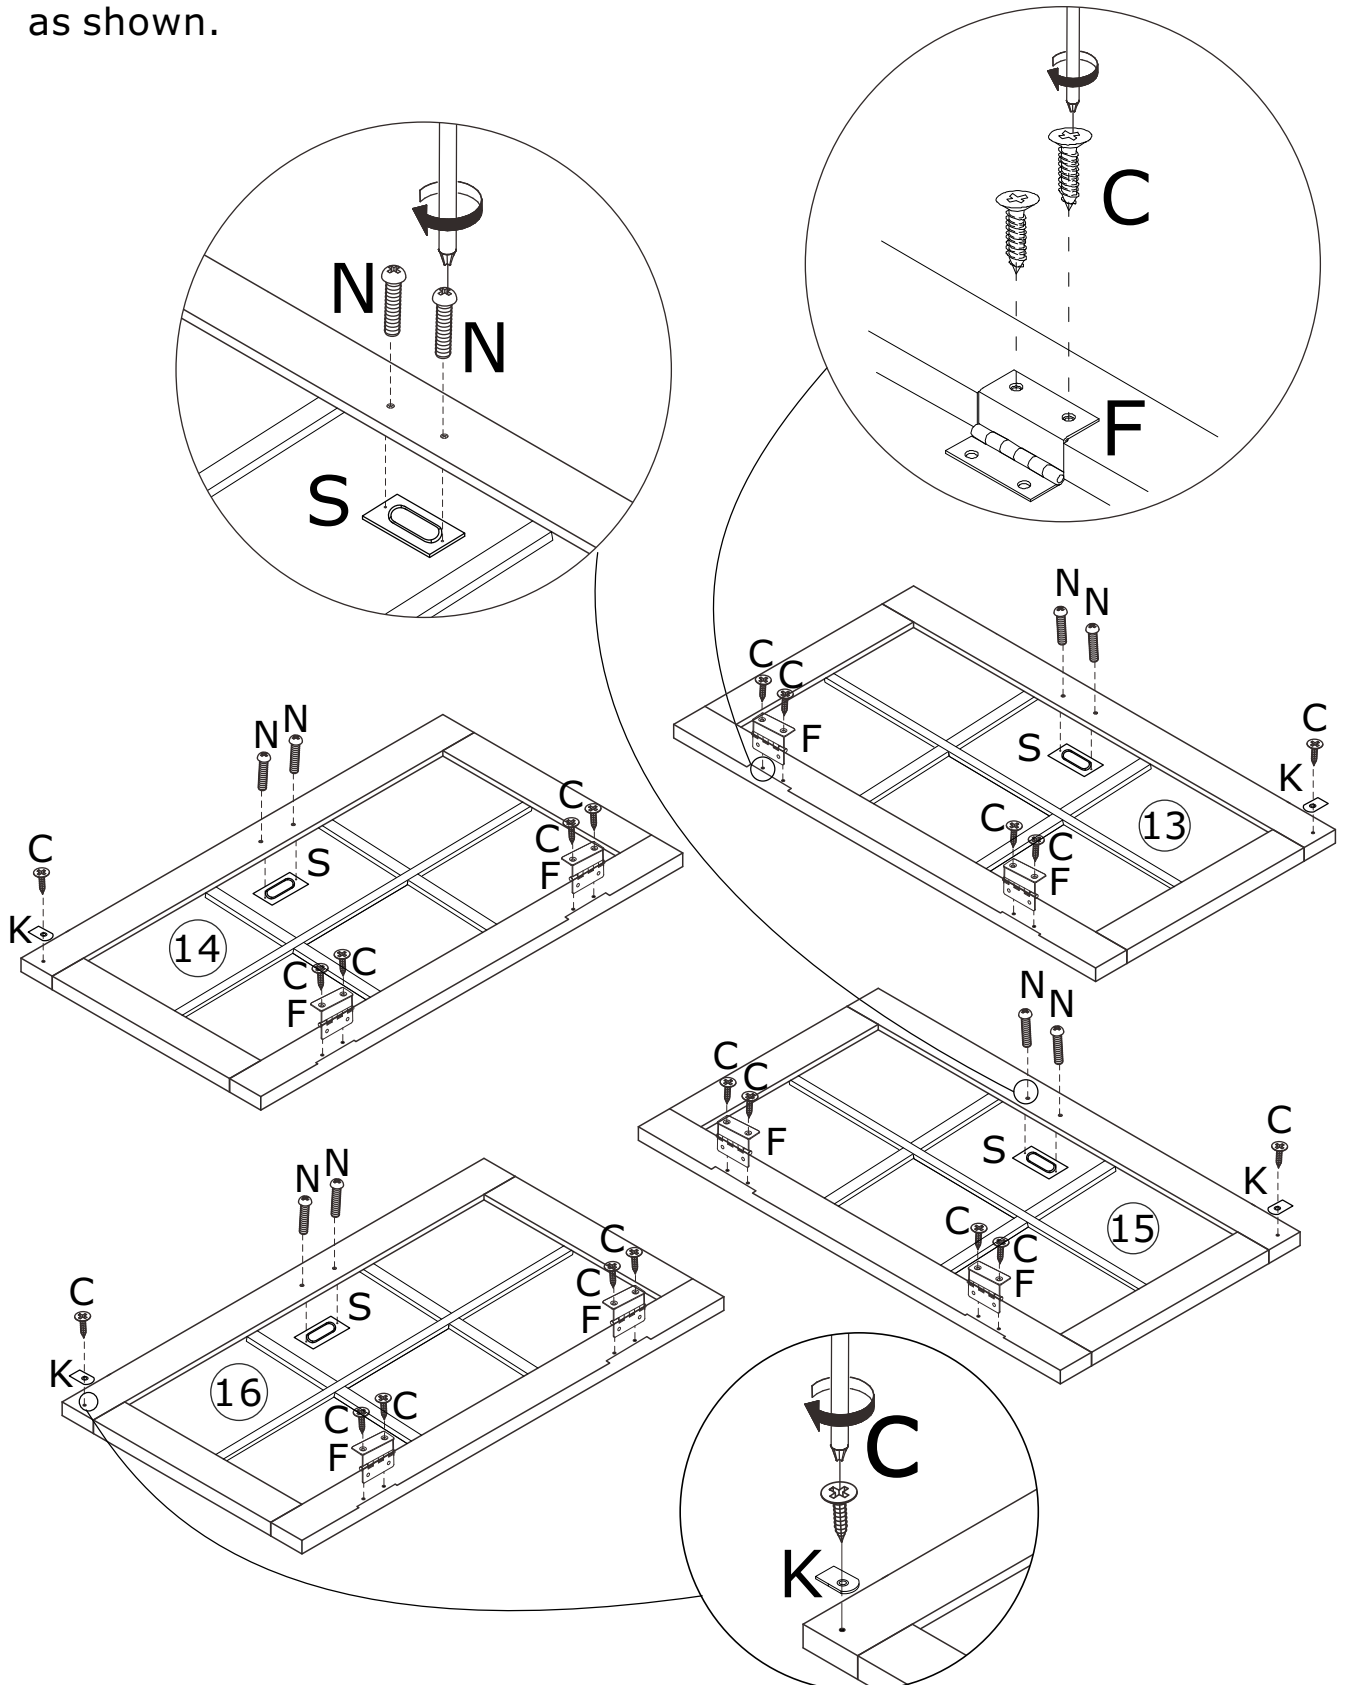


17


C x 16



 Ø 3 x 12 mm



 Secure the hinge (F) with screw(C) to sections 2,3 and 8,9, as shown.

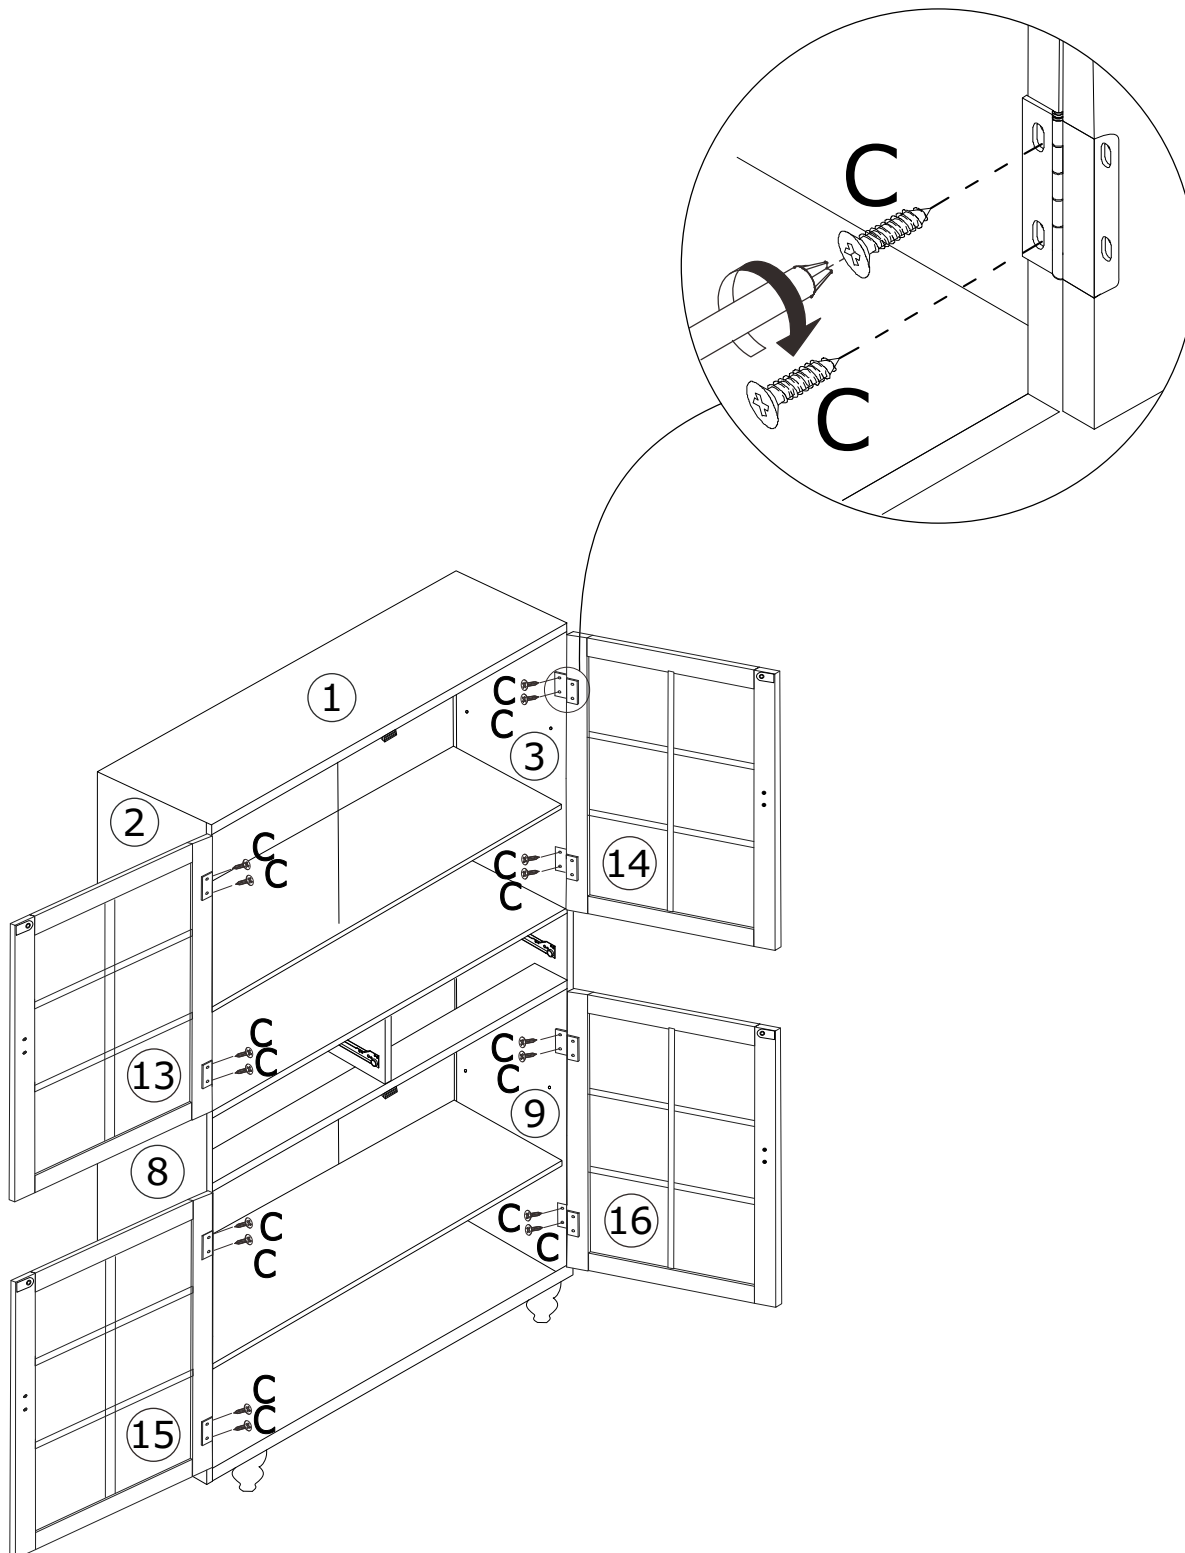

18

A x 8



 
Ø 6 x 35 mm

N x 2



Ø 4 x 16 mm






P x 2



Insert quickfit screws (A) to part 22, 23 as shown.

fix handle (P) to part 1 using bolts (N), as shown.

     Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack

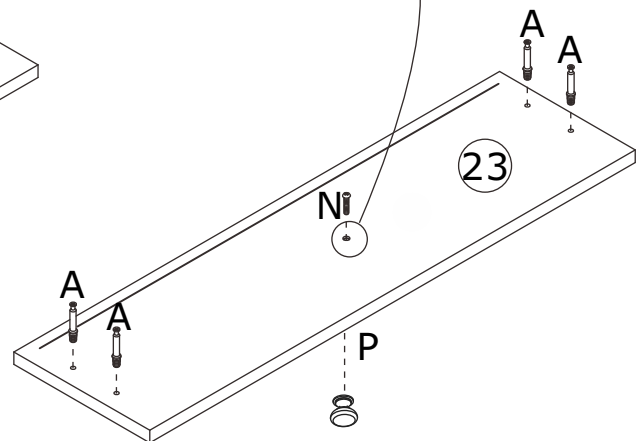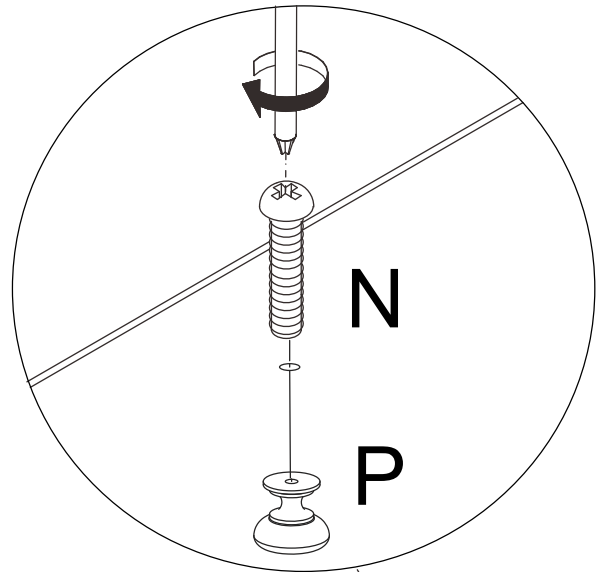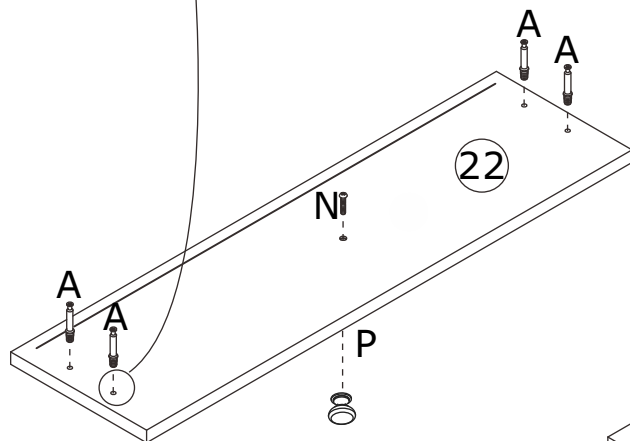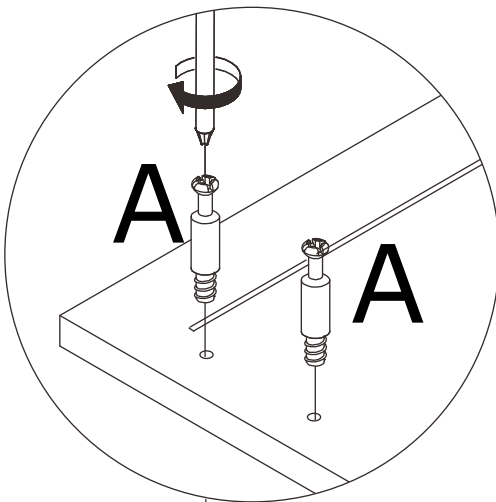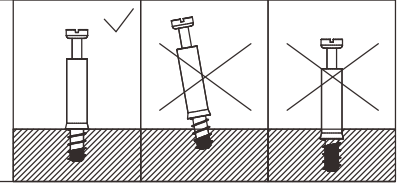

19

 
E x 8



Ø 4 x 35 mm



Attach parts 19 and 21 to part 20 using screws ©,
as shown.
slide part 18 into available slot parts 19, 20 and 21,
as shown.

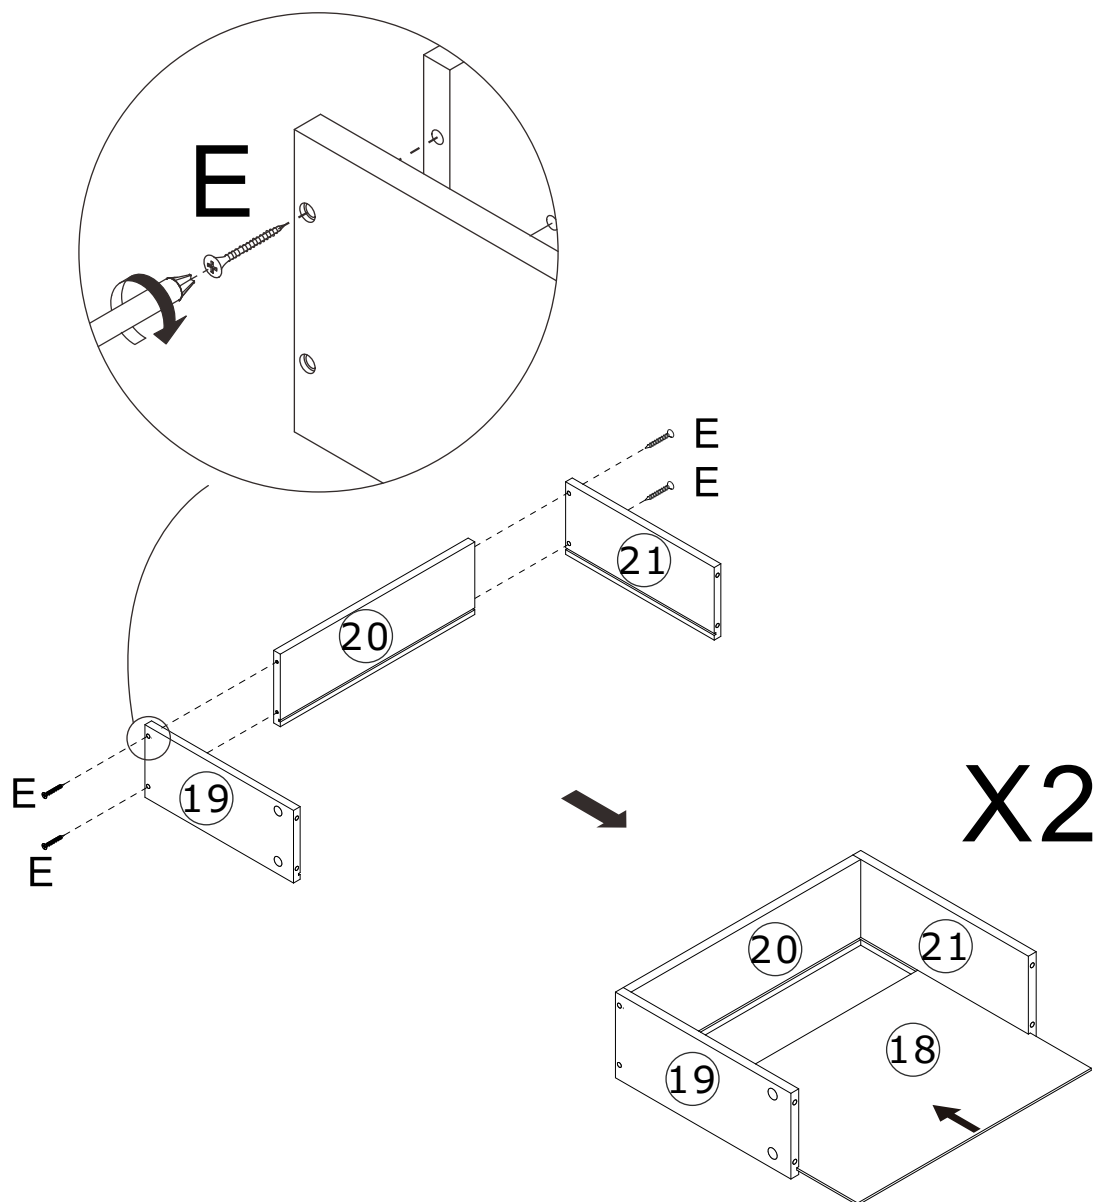


20





B x 8



 Ø 15 x 10 mm



    Insert cam locks (B) to parts 19 and 21 attach part 22 and 23 as shown.
Turn cam locks clockwise to tighten.
as shown.

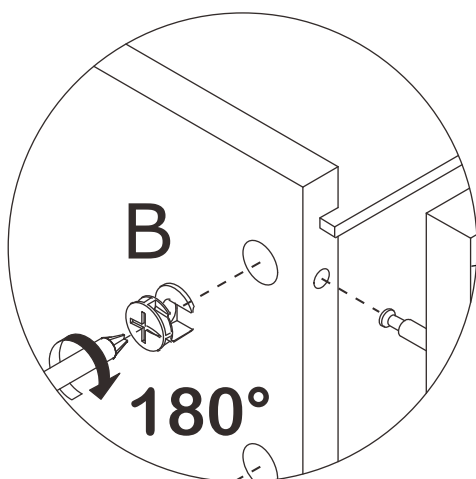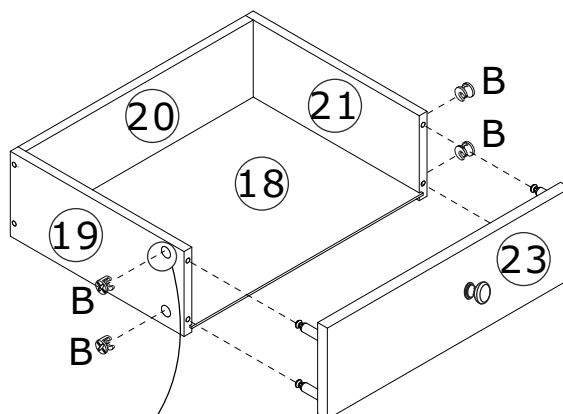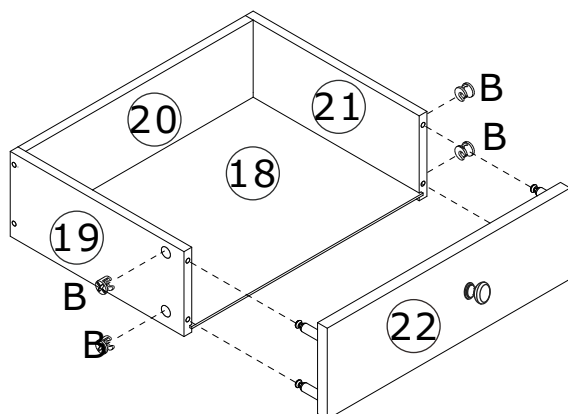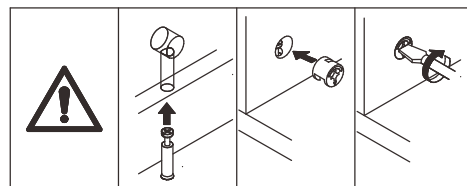


21



C x 8



 DL x 2







DR x 2

 
 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

    Fix right inner drawer runner(DR) and left inner drawer runner(DL) to assembled unit using screws(C), as shown.

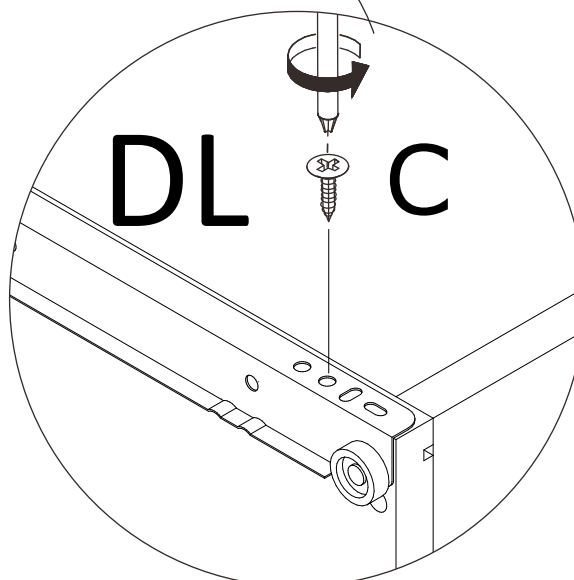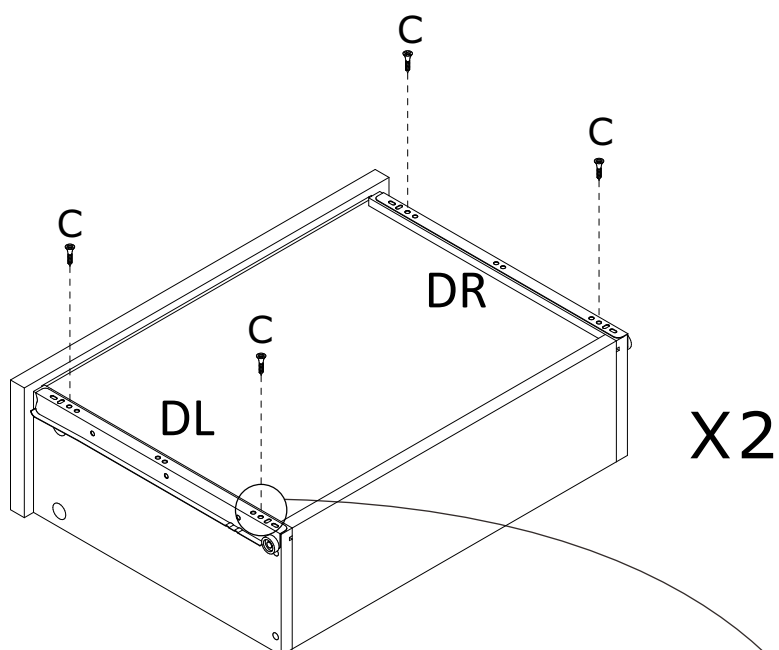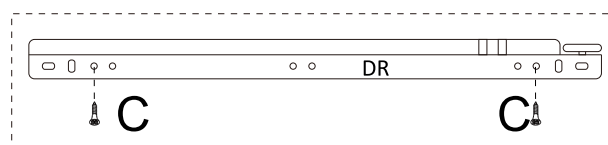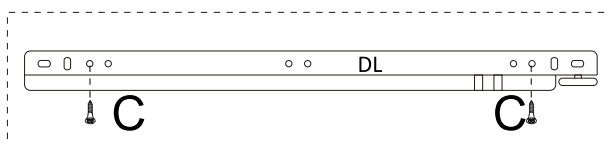

  The drawer slides must be aligned with the internal rails, otherwise the drawer will tilt.

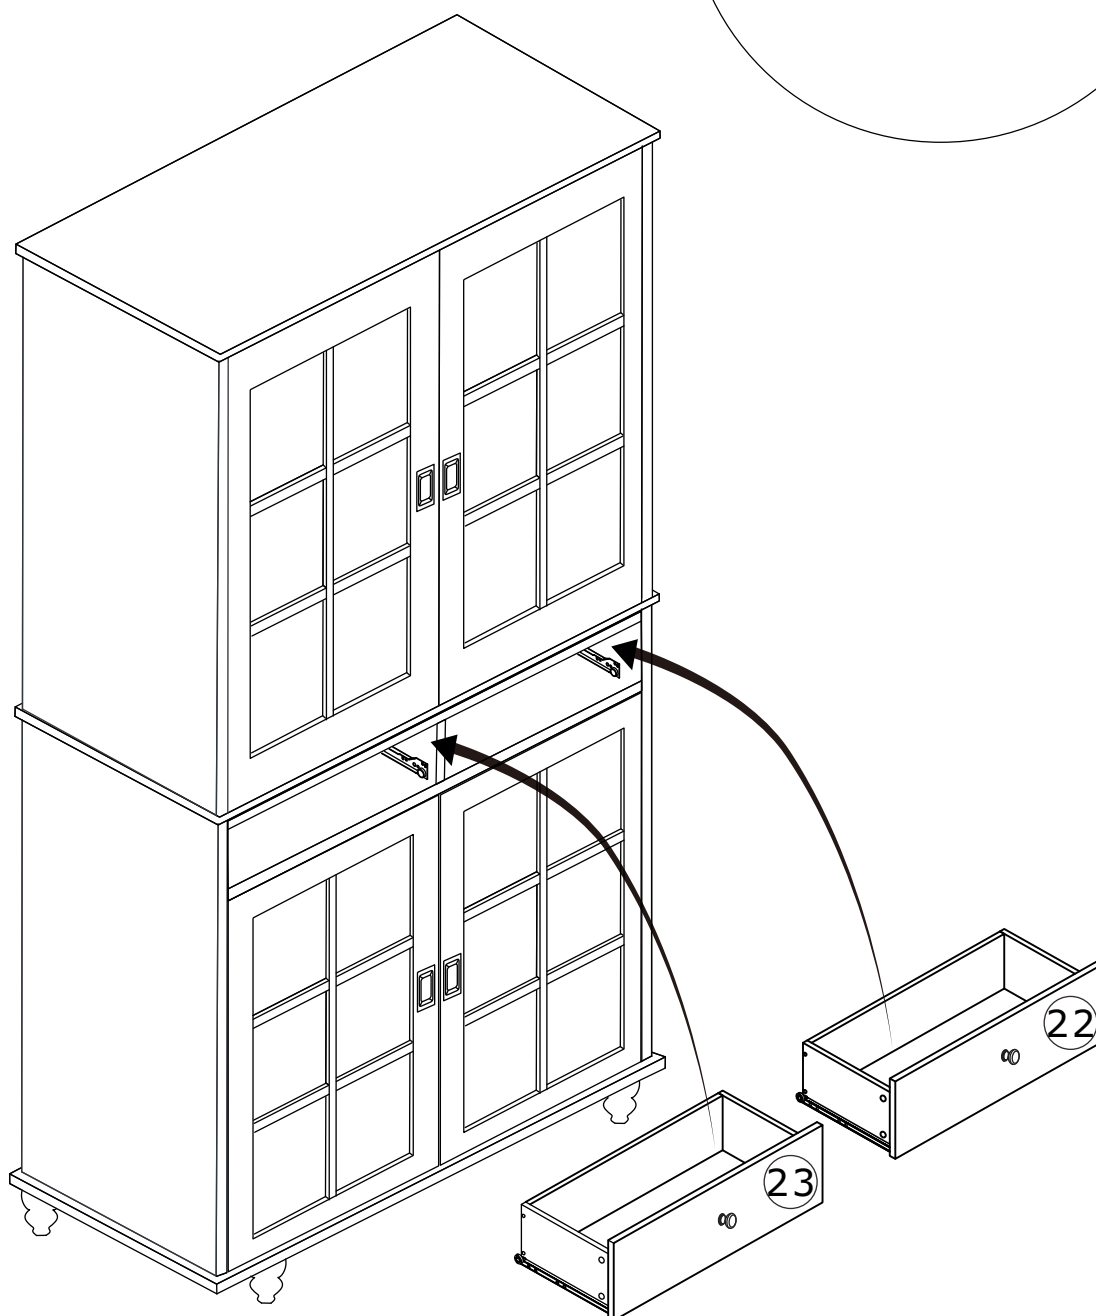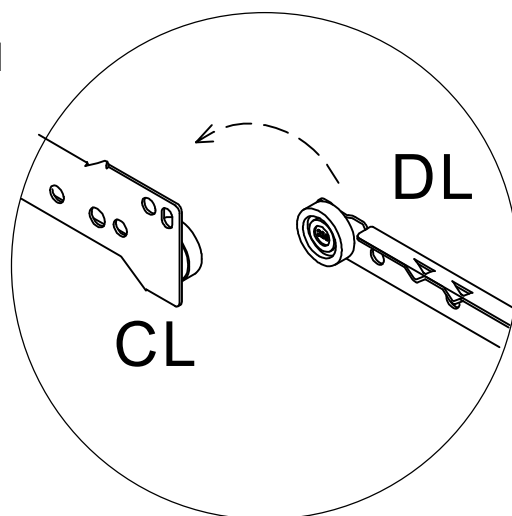

23

C x 8

 
 


Ø 3 x 12 mm

H x 8



Fix parts (7) and (12) using nails (C),
and assembled with clamp (H),
as shown in figure.








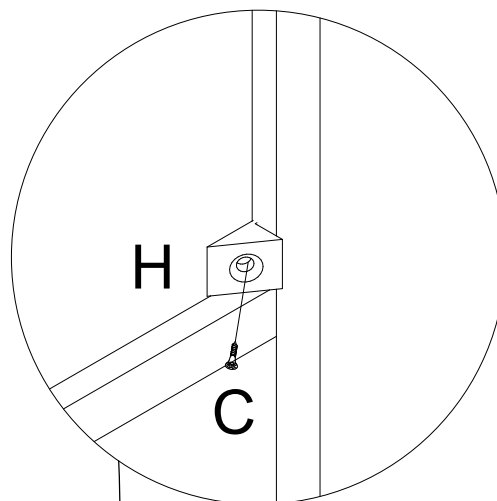
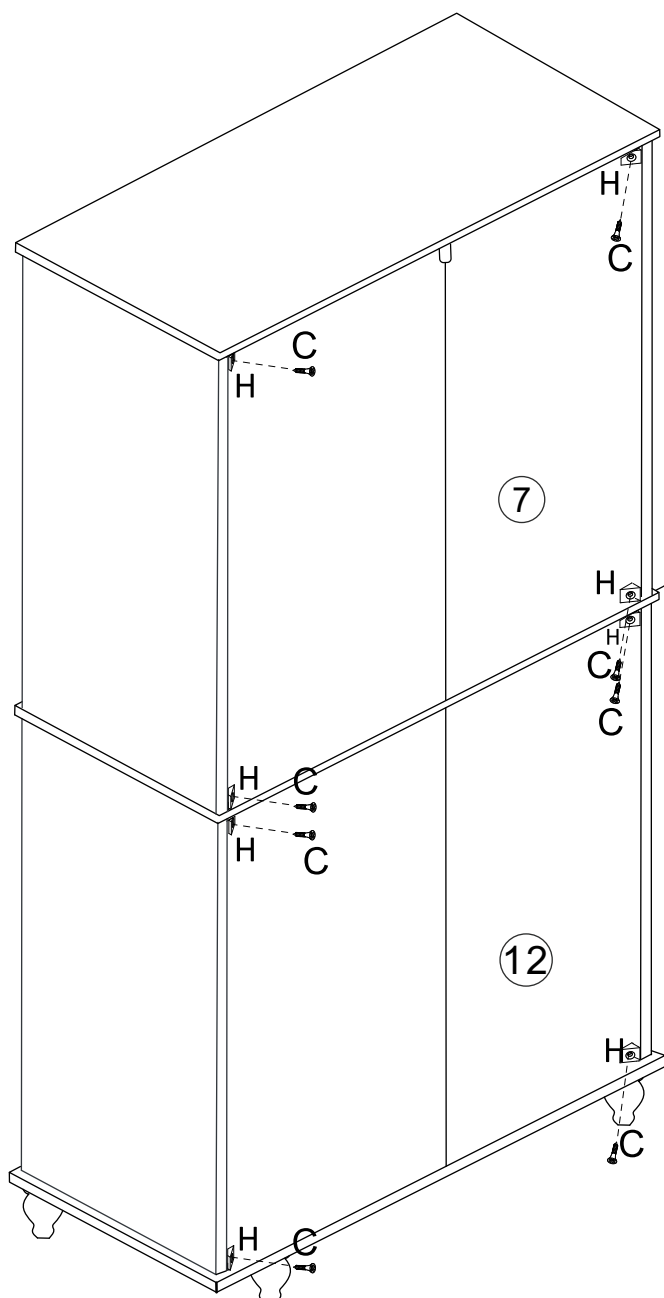




24

E x 1

Ø 4 x 35 mm

           J x 1

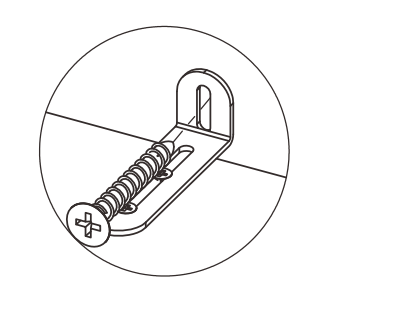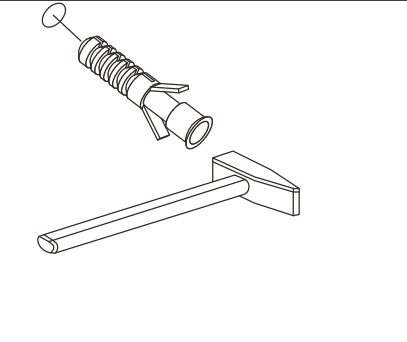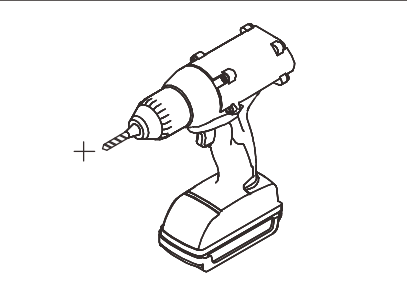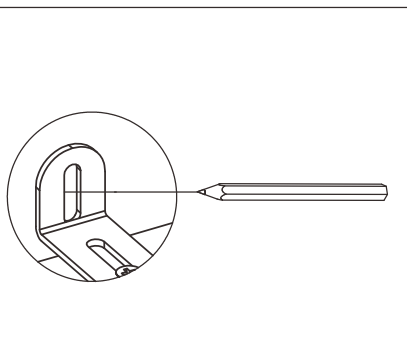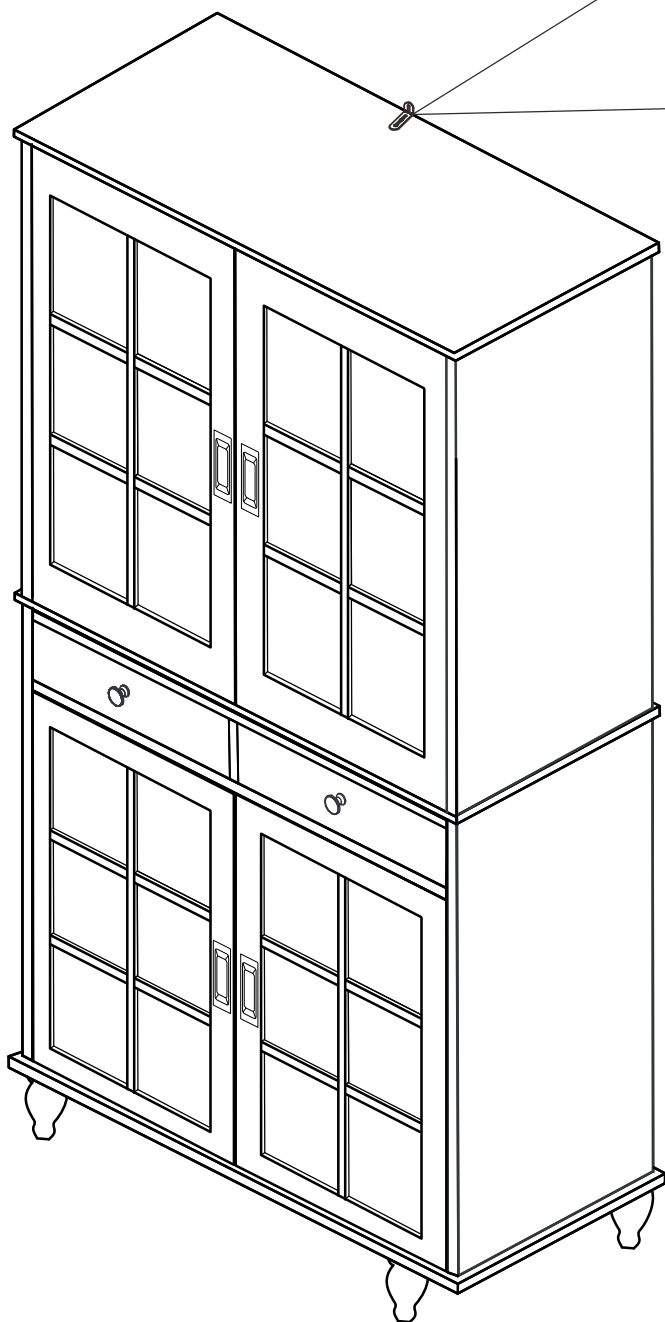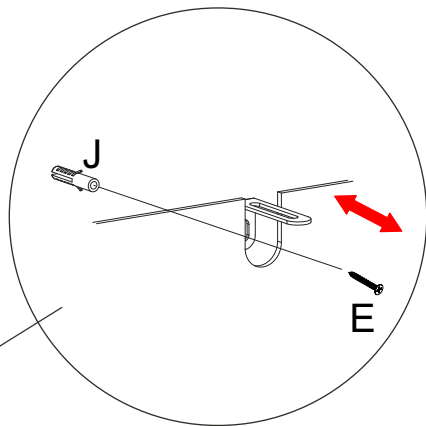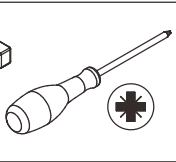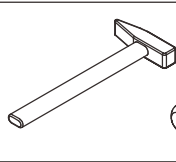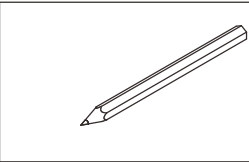

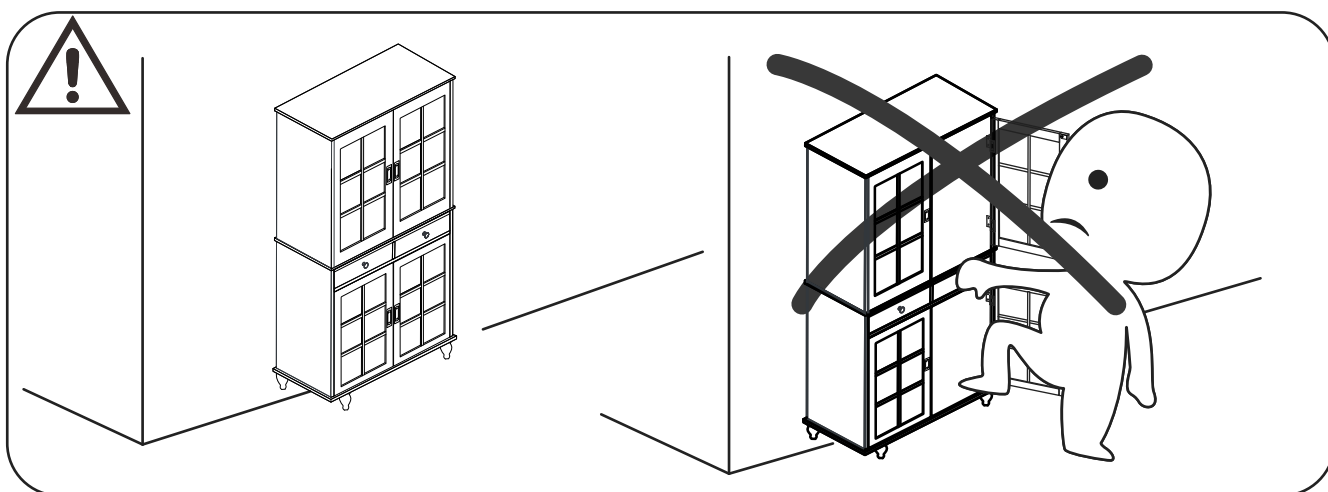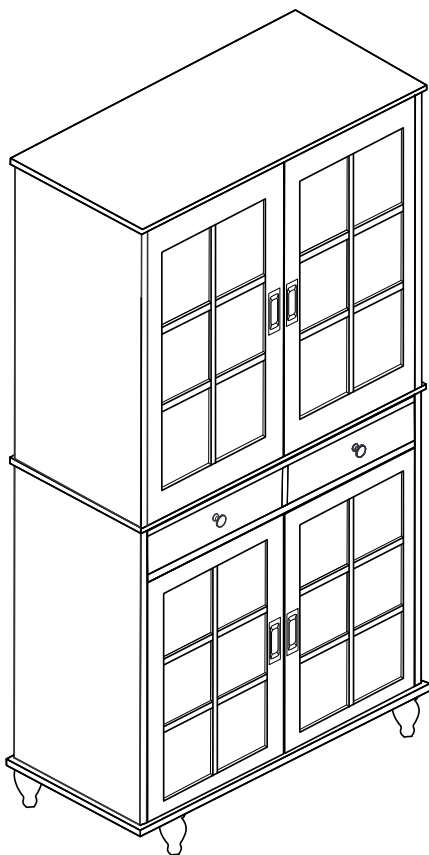WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please consult our FAQ section at feedbackstation@163.com as there may be a simple solution to the issue.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.