



**ROOM
RATV.**



**CEILING
FAN
WITH
LIGHT**



Technical specifications

Ceiling Fan Light

Model: RV-52-BK-3D-R3

RV-52-BW-3D-R3

RV-52-BG-3D-R3


RV-52-WE-3D-R3

RV-52-WG-3D-R3

Input: AC100-240V 50/60Hz

Size: ϕ 52inch+H12inch

Power: 50W (Fan: 35W, Light: 15W)

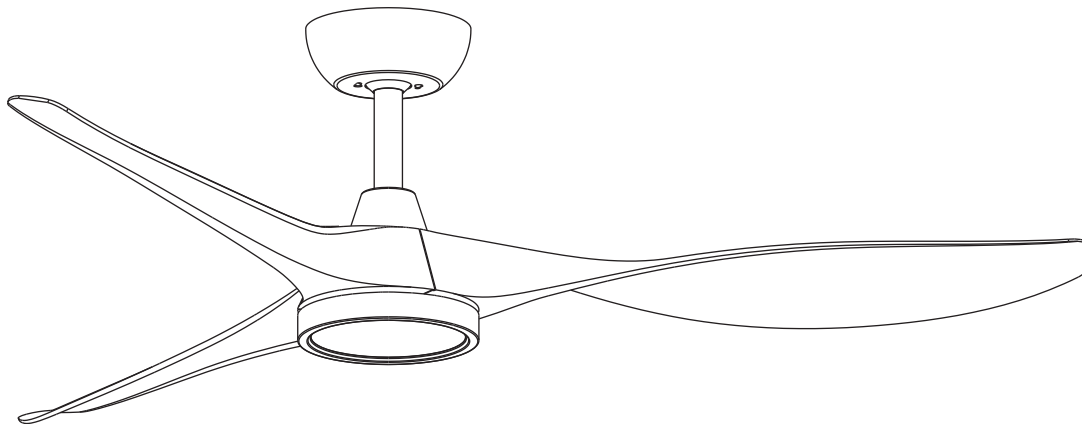

WARNING



✓ ON/OFF switch



✗ Dimmable switch

Disconnect power prior to installation, inspection, or removal
Do not touch when light is on or when it is hot
If there is any problem with the fixture, turn power off and do not attempt to repair unless you are a qualified technician
Do not expose to water or rain

Packing List



Hanger Bracket



Fan Motor Assembly



Canopy



Light fixture




Downrod



Remote Control



Coupling Cover

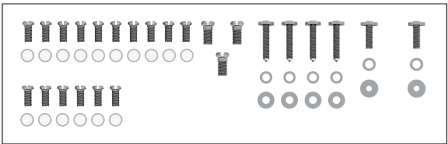

Screw Pack



Blade


Installation Guide

1




1 Fix the fan blades to the fan motor

2

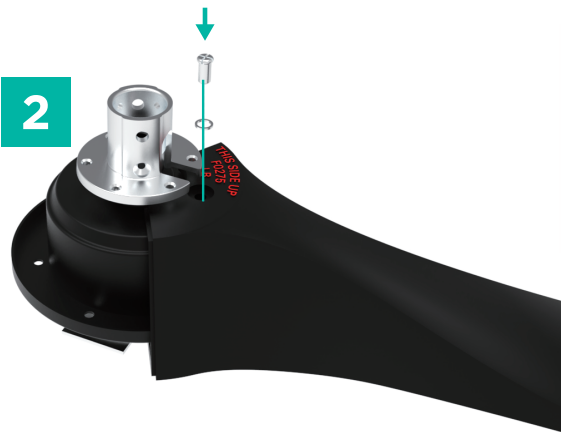


2 Fix the fan blades to the fan motor

3

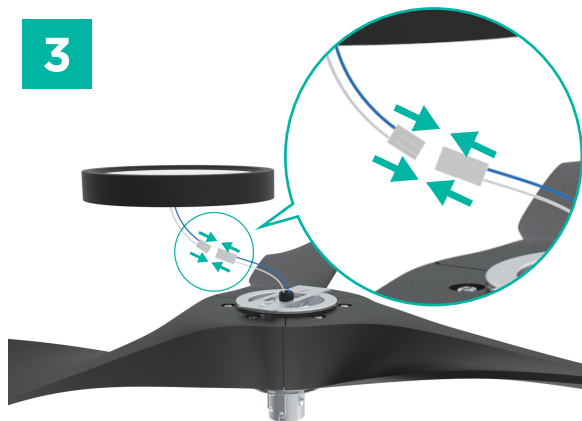


3 Connect the wires of the light fixture

4

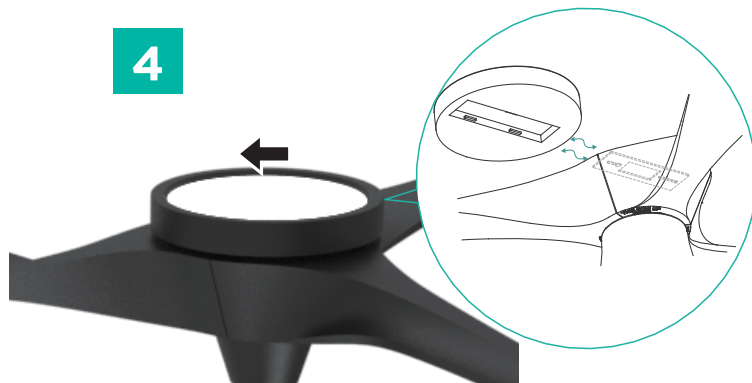


4 Slide the light fixture onto the light mounting bracket until it locks securely in place.

5

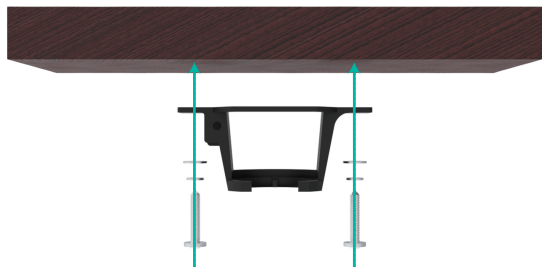

5 Fix the hanger bracket to the ceiling.

6

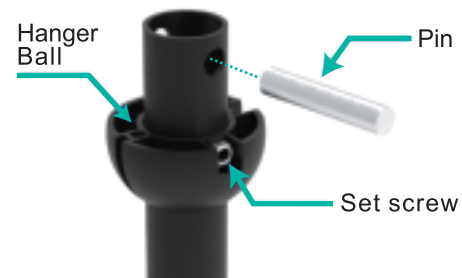

6 Unscrew and remove the set screw to disassemble the downrod.

7



7 Assemble the downrod and fan motor assembly, then secure them together.

8




8 Hang the assembled fan onto the hanger bracket on the ceiling.

9




- 9 Insert the controller into the gap of the mounting bracket.

10

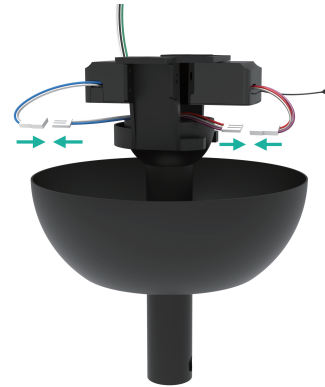


- 10 Interconnect the wires, including the power cord and fan controller cord.


11

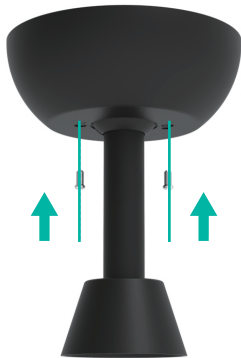

- 11 Secure the canopy with screws.

12

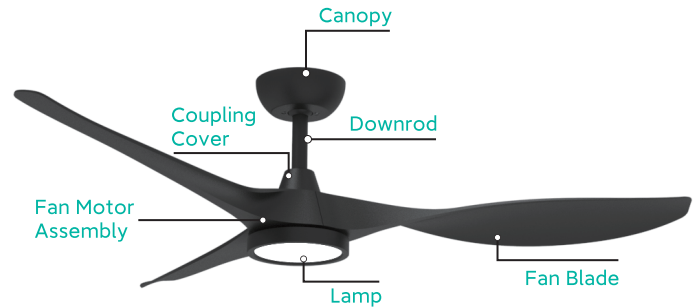

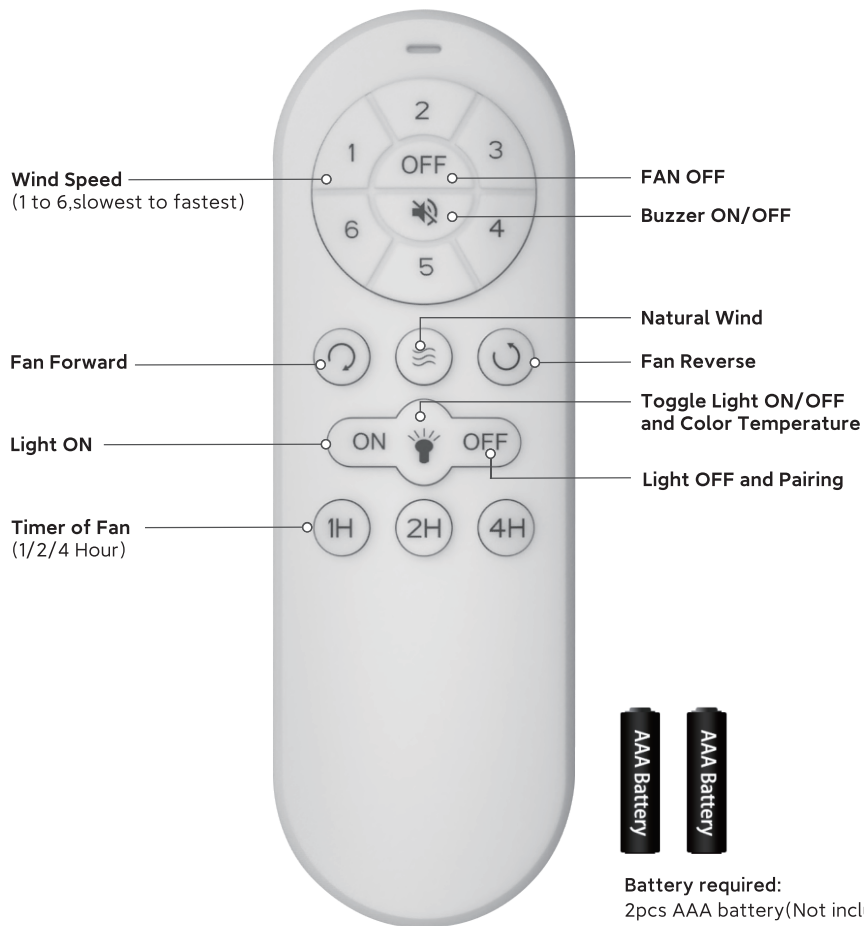

PAIRING METHOD:

Within the first 30 seconds of powering on the fan, press and hold the 'Light OFF' button. A successful pairing is indicated by a beep sound.

TROUBLESHOOTING GUIDE:

If you find the remote control unable to operate the fan, please follow these steps to resolve the issue:

- 1, Check the remote control's battery for proper contact, correct placement, and sufficient charge.
- 2, Re-pair the remote control with the ceiling fan .

Battery required:
2pcs AAA battery (Not included)



**ROOM
RATV.**