

GENERAL INFORMATION

- Check the inside of the larger pieces in your box for other materials packed inside.
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approximately 5'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.

VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged, or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

parts.nychbrands.com

☑ hmmm@wambamfence.com

704-892-5222 / 877-778-5733

Customer service agents are available to take calls weekdays from 9am-5pm EST. If you call outside of business hours, please leave a voicemail.

To help you quickly and accurately, please have reference item number **BL19104** and the specific part name which can be found on page 5. It is helpful if you can provide the batch lot which is a stamped number on the inside of the box.

If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, **so please give us a call at 704-892-5222 / 877-778-5733.**

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, you will need to initiate the return from the company you originally purchased from.

MISSING OR DAMAGED PARTS?

NEED ASSEMBLY HELP?

> NEED TO RETURN?

GENERAL INFORMATION

1. Read over fence instructions first.

Your gate and fence will work better together if you first take the time to read and understand your fence.

2. Pre-assemble the gate frame.

Please do not screw the gate frame together until you have temporarily assembled the gate frame. In other words, do a dry run first. This will ensure:

- 1. That you have everything necessary to complete the gate.
- 2. That you will have assembled the gate frame in the correct order.
- 3. All of the pieces fit and function properly.
- 4. The gate height and width are similar to the measurements shown on page four.


It's easier to troubleshoot when things are not screwed together. After you assemble your gate correctly, please disassemble as necessary, and use the 1¹/₄" self-drilling stainless steel screws to permanently assemble the gate.


3. Install your gate posts before your fence posts.

Your fence panels will be more forgiving for a custom fit than your gate. Position and install your gate posts before you do anything else.


4. Do not hang your gate system off a single non-supported post.

Your gate will perform better and last longer if your hinge post is connected to a panel of fence that is connected to another post. This way, the weight strain will be transferred onto two posts versus just one. Installing fence panels on both sides of your gate is ideal in all situations. If this is not possible because of space restrictions, please contact us for alternative solutions.

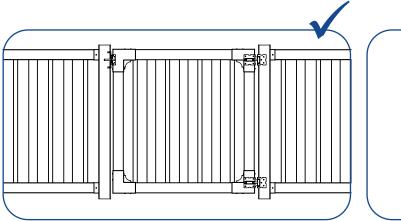

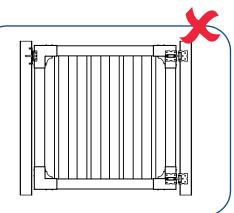


DETAILED PRODUCT DIMENSIONS AND SPECIFICATIONS

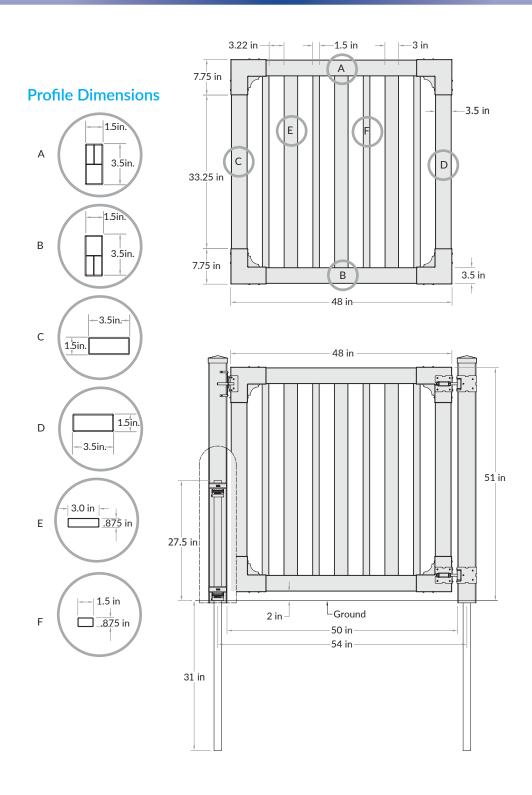

WWW.WAMBAMFENCE.COM


-

STEP 1: LAY OUT MATERIALS

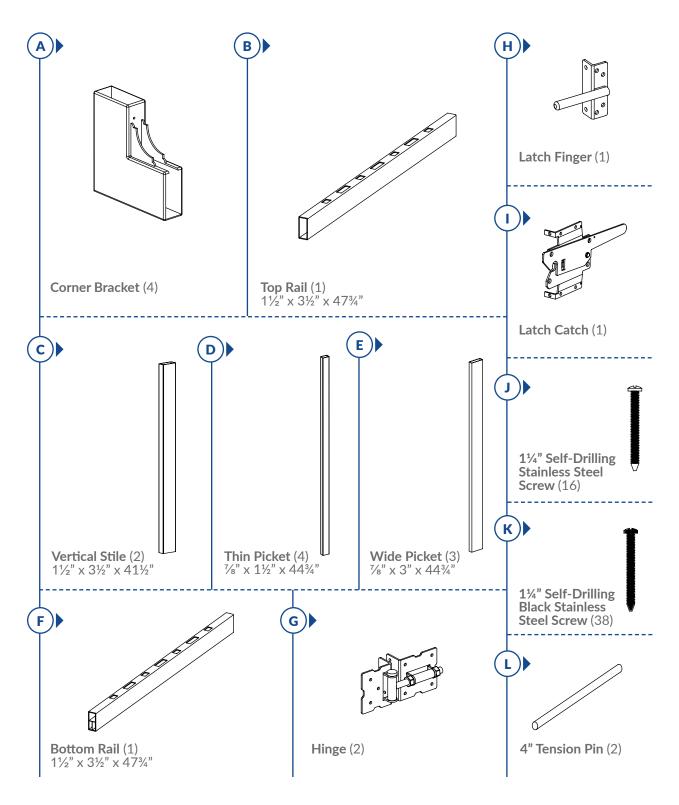


-


STEP 2: ASSEMBLE GATE FRAME

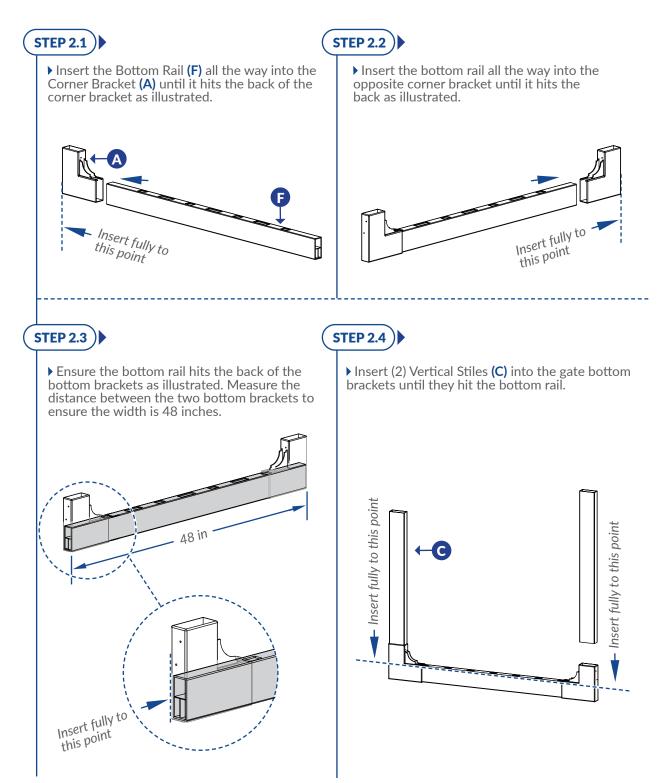

-

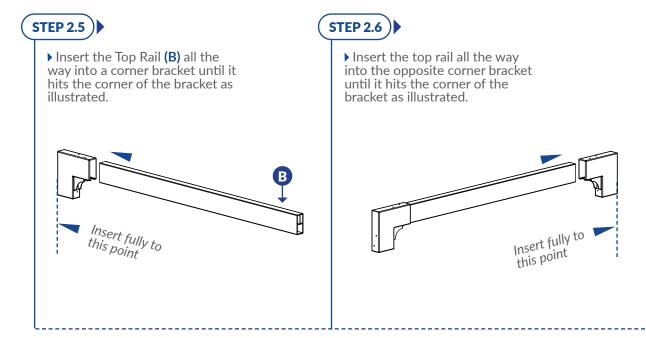


STEP 3: INSERT PICKETS AND **ATTACH** GATE FRAME TOP

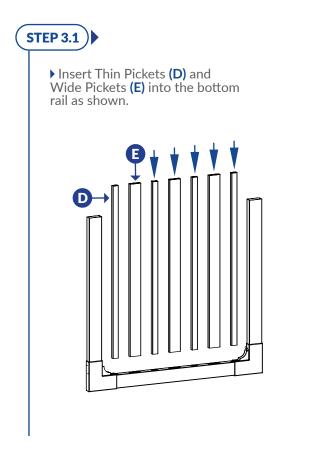


STEP 3.2


• Slide the assembled gate frame top down over the pickets and verticle stiles.

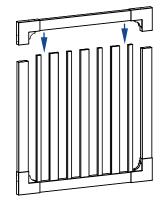

Completely assembled gate frame

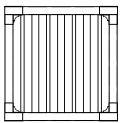


STEP 4: SCREW GATE FRAME TOGETHER

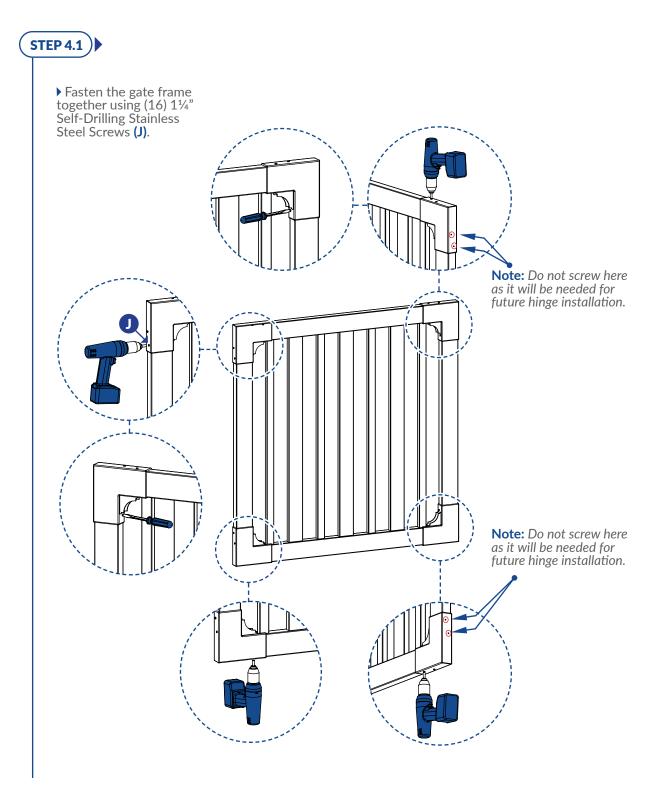


.

STEP 5: FASTEN GATE HINGES AND GATE LATCH

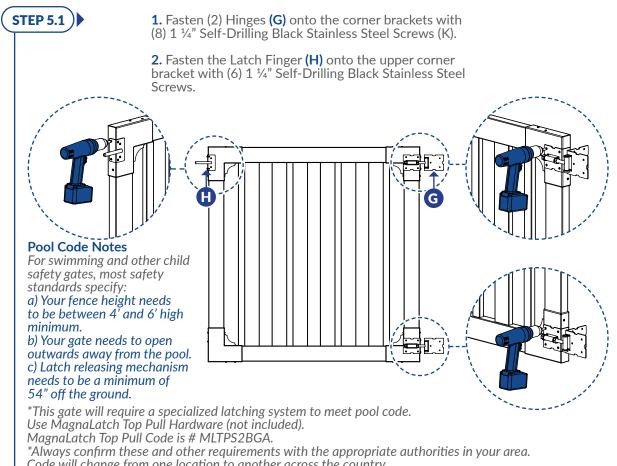


Code will change from one location to another across the country.

STEP 6: ALIGN AND SECURE GATE HINGES TO POSTS

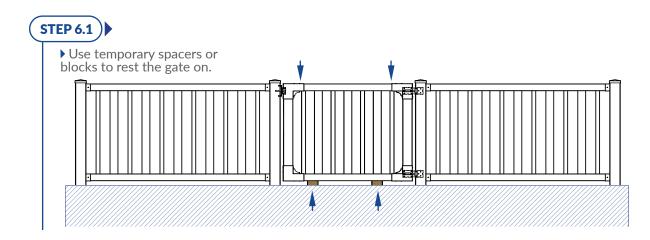


BL19104

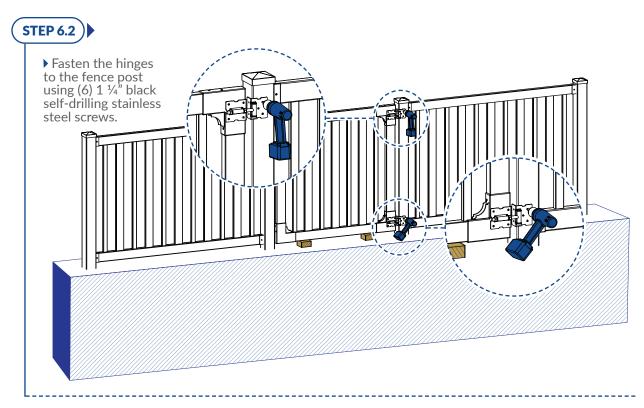

STEP 7: LEVEL GATE AND **ADJUST** HINGES


(STEP 7.1)


▶ Fasten the hinges to the inside of the fence post by swinging the gate out as illustrated and by using (12) 1 ¼" self-drilling black stainless steel screws.

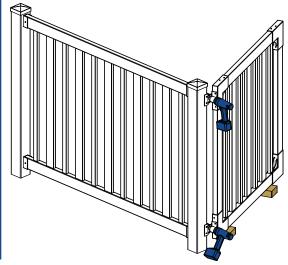

STEP 7.2

• Level the gate to the fence post. Check the gate to make sure it functions correctly.

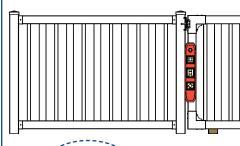

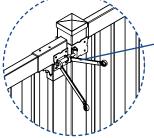

.

• Note: The hinges can be adjusted moderately to level the gate.

Note: To adjust the spring tension in the hinges, use a steel 4" Tension Pin (L).

STEP 8: ALIGN AND INSTALL LATCH CATCH

.

