

HOLIDAY
LIVING®

HOLIDAY LIVING and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

ITEM #8251673
MODEL #00BV225466

RED GOLD SLEIGH

ATTACH YOUR RECEIPT HERE



Serial Number _____

Purchase Date _____

Thank you for purchasing this **HOLIDAY LIVING** product.
Questions, problems or missing parts?
Before returning, contact us on:
888-251-1006, 8 a.m. - 8 p.m., EST, Monday - Sunday or ascs@lowes.com.

DF26160

TABLE OF CONTENTS

Before Assembly..... 2

Package Contents..... 3

Safety Information..... 4

Warning..... 4

Caution..... 4

Preparation..... 4

Assembly Instructions..... 5

Troubleshooting 8

Care and Maintenance..... 8

Note..... 8

Storage Instructions..... 8


Technical Data 8

Warranty..... 8

BEFORE ASSEMBLY


- The shipping box can provide an ideal work surface if none is available.
- Remove all parts from the box. Place all items on a carpeted or scratch-free work surface as this will avoid damaging parts during assembly.
- Use the components below to identify inventory and separate each of the components included.
- To avoid accidentally discarding small components or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.
- DO NOT USE power tools unless it is explicitly identified in this manual as required for use during assembly. Power tools can damage the fasteners, hardware and/or components.
- Do not fully tighten all fasteners/screws until all parts are in place. Failure to follow these instructions may cause the fasteners/screws to misalign during assembly.

PACKAGE CONTENTS

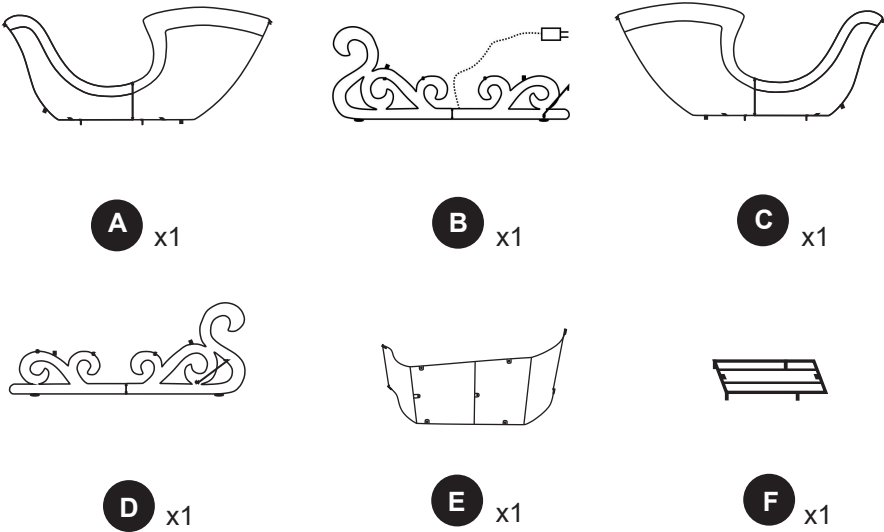

PART	DESCRIPTION	QUANTITY	PART	DESCRIPTION	QUANTITY
A	Sleigh left side	1	D	Right base	1
B	Left base	1	E	Sleigh bottom	1
C	Sleigh right side	1	F	Baffle	1

HARDWARE CONTENTS (shown actual size)

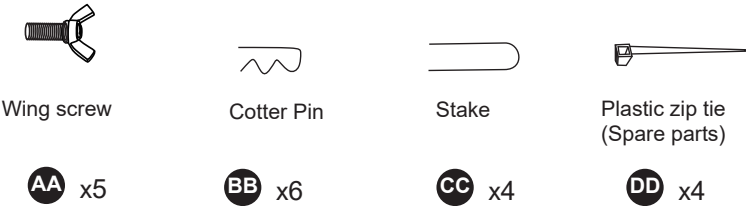

⚠ SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

- Do not grab or push the item, as this may cause tipping. Keep away from the adapter, as it heats up during operation.
This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Unplug the product when leaving the house, when retiring for the night or if left unattended.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other object from cord, wire or light string.

⚠ WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic parts and hardware away from children.
For indoor and outdoor use.

- Please use the adapter supplied by the manufacturer.
 - Please assemble the item according to the instructions.
 - Usage near children should be supervised by adults.
 - Keep away from open flame.
 - Don't climb or pull on the product.
 - Don't add to or modify the product.
 - Assemble and place the product on level surfaces only.
 - Don't push or tilt the product.
 - Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation.
 - Do not plug in the unit before assembly.
 - Keep electric wires clear of being pinched or cut during assembly or installation. Discard sets with cut or damaged insulation.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PREPARATION


Before beginning assembly of the product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 15 minutes


No Tools Required

ASSEMBLY INSTRUCTIONS


1. a) Carefully unwrap all parts from the protective packaging. Do not plug in the lights before the sleigh is fully assembled and lights are properly connected.
b) When we pack the product, we need to fold (A) Sleigh left side and (C) Sleigh right side in half, the position of the light tube may become loose. After assembly, we need to manually adjust them back into place. (Fig 1)

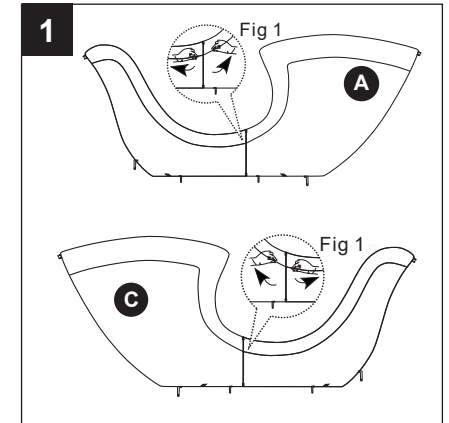

2. a) Align the four insertion rods on (A) Sleigh left side and carefully insert them into the corresponding tubes of (B) Left base. (Fig 2)
b) Secure the two end rods with holes using (BB) cotter pin. (Fig 3)
c) Connect plug L1 to L1, and firmly secure the connection by rotating the supplied nut into place. (Fig 4)

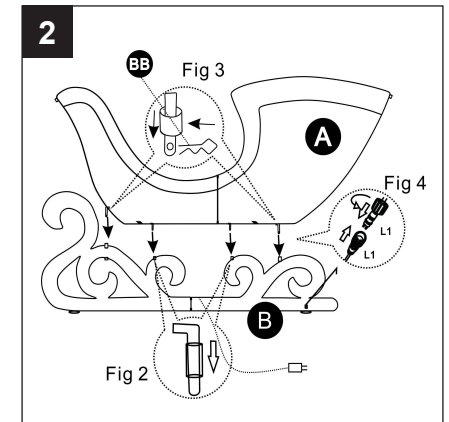


3. a) Align the four insertion rods on (C) Sleigh right side and carefully insert them into the corresponding tubes of (D) Right base. (Fig 5)
b) Secure the two end rods with holes using (BB) cotter pin. (Fig 6)
c) Connect plug L2 to L2, and firmly secure the connection by rotating the supplied nut into place. (Fig 7)

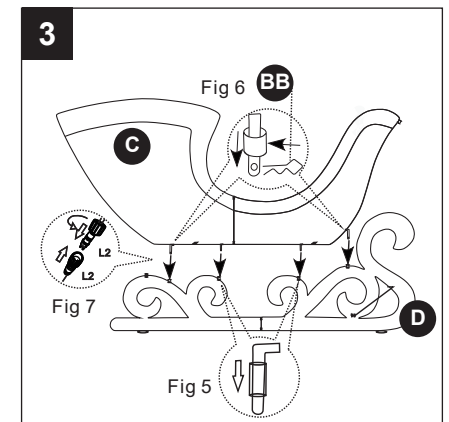


ASSEMBLY INSTRUCTIONS


- 4.
- Slide the sleeves on both ends of (E) Sleigh bottom onto the insertion rods on (C) Sleigh right side. (Fig 8)
 - Align the two connection holes on (C) Sleigh right side and (E) Sleigh bottom, then tighten the (AA) wing screw from bottom to top, ensuring the screw passes through the larger holes for entry and the smaller holes for exit. (Fig 9)

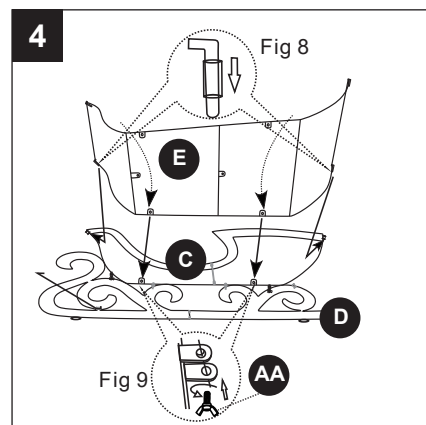

- 5.
- Slide the sleeves on both ends of (E) Sleigh bottom onto the insertion rods on (A) Sleigh left side. (Fig 10)
 - Align the two connection holes on (A) Sleigh left side and (E) Sleigh bottom, then tighten the (AA) wing screw from bottom to top, ensuring the screw passes through the larger holes for entry and the smaller holes for exit. (Fig 11)

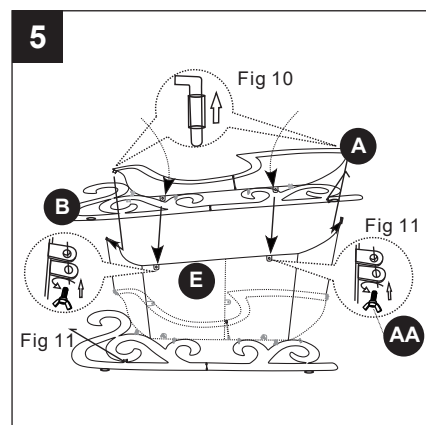


- 6.
- Set the sleigh upright, then insert the pull rod from (D) Right base into the tube on (B) Left base. (Fig 12)
 - Followed by inserting the pull rod from (B) Left base into the tube on (D) Right base. (Fig 13)

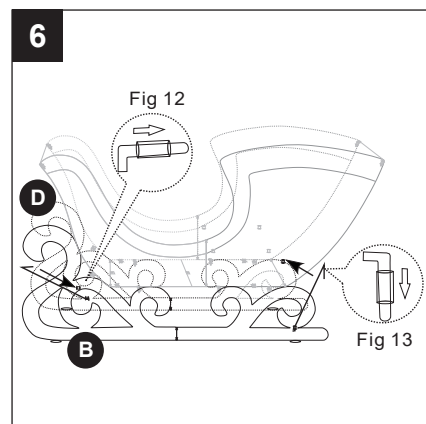


ASSEMBLY INSTRUCTIONS

- 7.
- Align and insert the insertion rods from (F) Baffle into the tubes on both sides of the sleigh. (Fig 14)
 - Secure them by inserting (BB) cotter pin. (Fig 15)
 - Connect connector L3 to L3, then secure them by tightening the included nuts. (Fig 16)

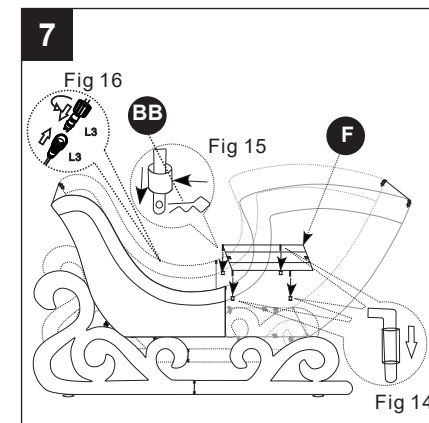

- 8.
- Secure the sleigh firmly to the ground using the provided (CC) Stakes through the rings on the bottom using a rubber mallet if needed (rubber mallet not included).
 - Connect the power cord on the unit to a Ground Fault Circuit Interrupting (GFCI) outlet ensuring the connected power supply is within the voltage range required.

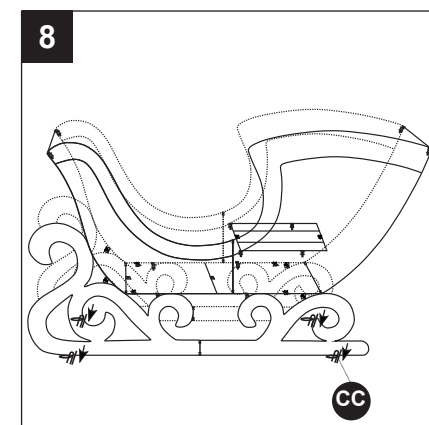

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Item does not light up.	Power is not on.	Turn on the power.
	Extension cord.	Make sure the power is on.

CARE AND MAINTENANCE

- When not in use, store this product in its original package.
- Keep away from heat and moisture.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help. Singsong International Trade Co.,Limited, Call us (1-800) 496-7105 or email us at vipservice@singsong.com.cn.

STORAGE INSTRUCTIONS

1. Carefully place all components into shipping box and/or provided container and tape it shut.
2. When not in use, please store your item in a cool, dry place away from sunlight.
3. Exposing your item to excessive heat or humidity may damage your item.

TECHNICAL DATA

Input: 120V AC 50/60Hz
Output: 3.5V DC 1A

WARRANTY

Please remove all parts from the box to check them against this list before attempting to assemble. If any part is missing or unsatisfactory, please call our toll-free number **888-251-1006** or email us at ascs@lowes.com. Thank you!