


ITEM# 790505

GRAY WASH ACCENT TABLE

MODEL# FR6318

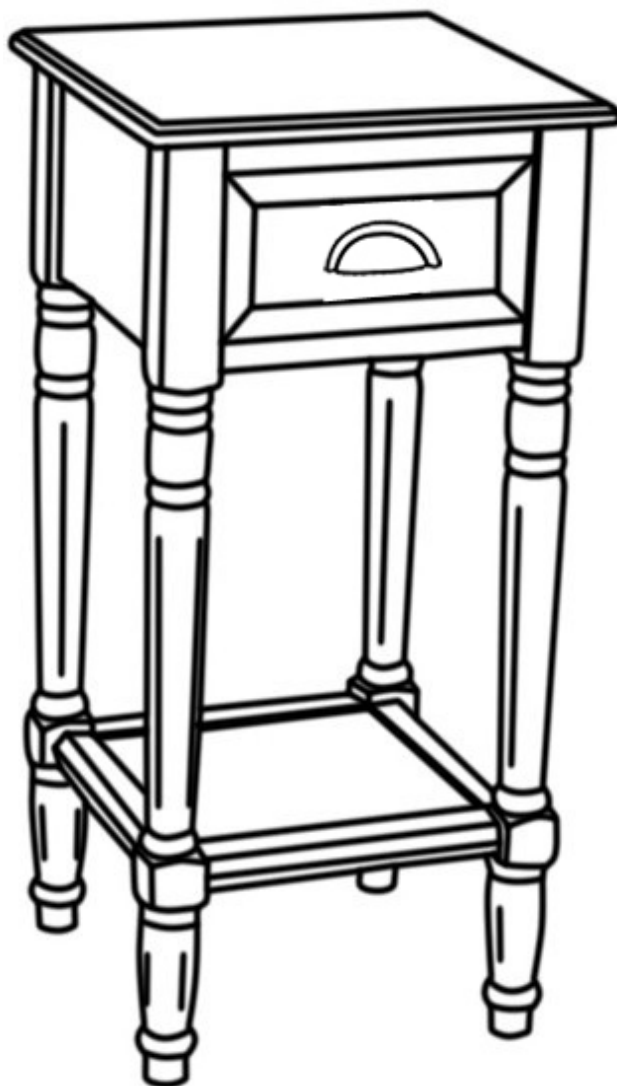

ATTACH YOUR RECEIPT HERE


Serial Number _____

Purchase Date _____



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-800-643-0092 Ext 100, 8 a.m. - 6 p.m., EST, Monday thru Thursday and 8 a.m. to 5 p.m. EST Friday.

PACKAGE CONTENTS

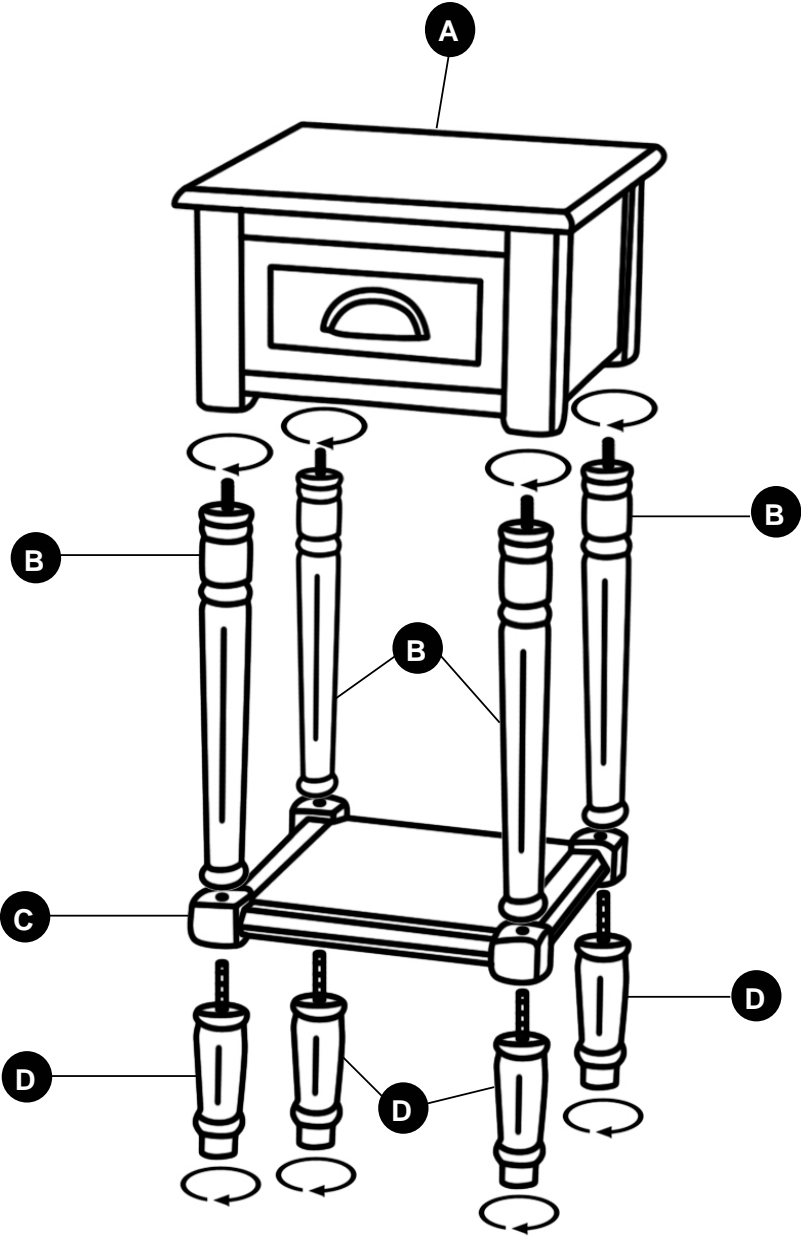

PART	DESCRIPTION	QUANTITY	PART	DESCRIPTION	QUANTITY
A	Table top	1 PC	C	Table Shelf	1 PC
B	Wooden legs	4 PCS	D	Wooden feet	4 PCS



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.



WARNING

If spillage occurs wipe clean with slightly damp cloth immediately.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 3 minutes

Tools Required for Assembly (not included): N/A

ASSEMBLY INSTRUCTIONS


1. Slightly screw one leg to the bottom of the table top and gently tighten the leg. Do not screw the leg too tight.

1

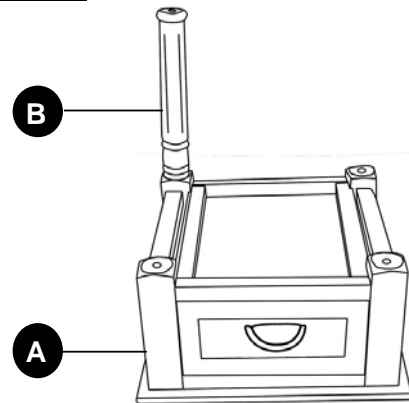


2. Slightly screw the other three legs to the bottom of the table top and gently tighten the legs. Do not screw the legs too tight.

2

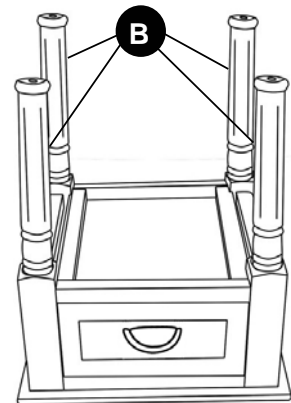

3. Put the bottom shelf over the end of the four legs, slightly adjust the wooden legs so the screw holes on the legs are lined with the holes on the bottom shelf.

3

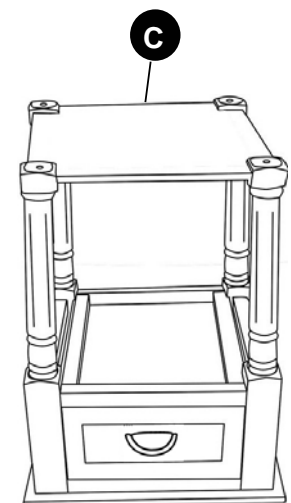

ASSEMBLY INSTRUCTIONS


4. Slightly screw one foot through the bottom shelf to connect with the wooden leg.

4



5. Slightly screw the other three feet through the bottom shelf to connect with the wooden legs.

5

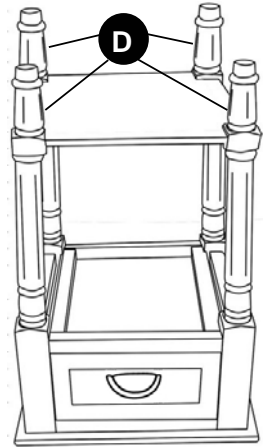

6. Now turn the table up to right side. If the table is not stable enough, please adjust the legs and feet to make it stable.

6

