


Ceiling Fan

Instruction Manual

Model No. : QH1201-42

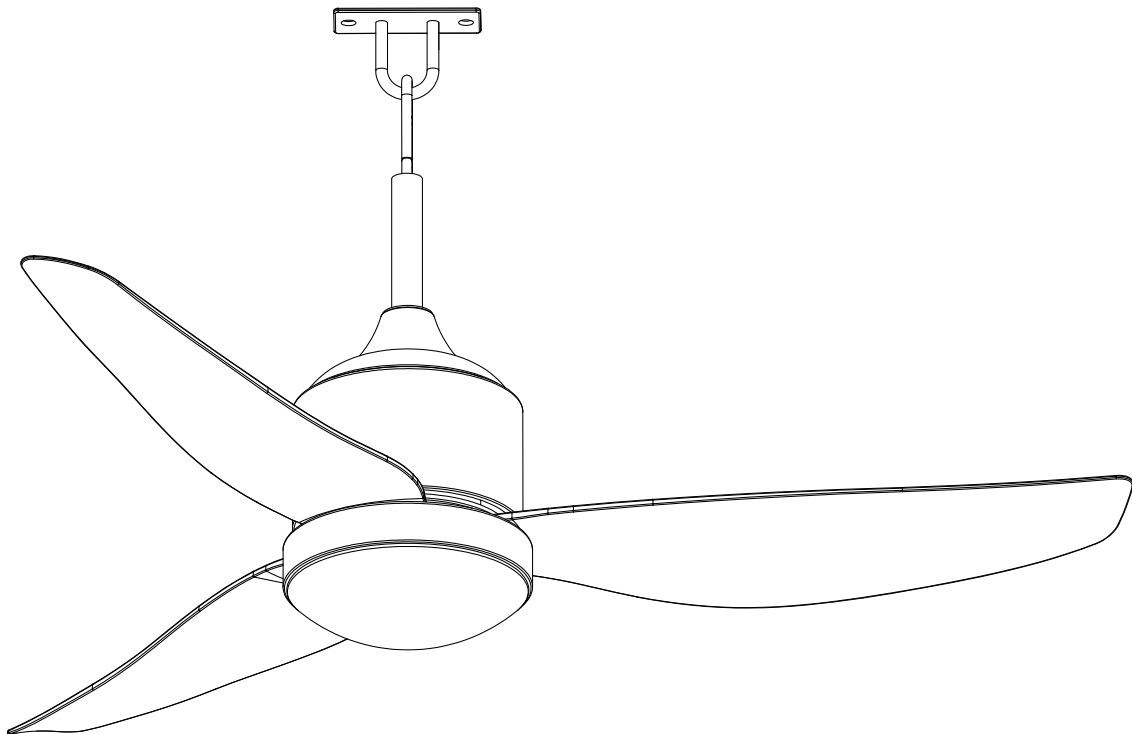

Installation Video



APP Connection

Read and save these instructions

PREPARATION


1

Turn off Your Power

Begin installation by removing fuses or turning off circuit breakers to the wiring you will be using. Use your compatible UL listed junction box if you already have one installed.

Warning


Failure to disconnect the power supply prior to installation may result in serious injury or death.

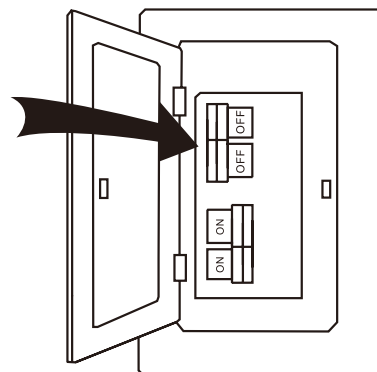


2

Choose Your Mounting Position

If you need to install a new UL listed junction box, secure it directly to your building's structure using appropriate fasteners and materials. **DO NOT** use plastic boxes. The junction box and its supports **MUST** be able to support the **MOVING** weight of the fan (at least 50 lb. or 23 kg) and be rated for fan support. The junction box should create a level surface for the fan that is **NOT** sloped greater than 10 degrees from horizontal in any direction.

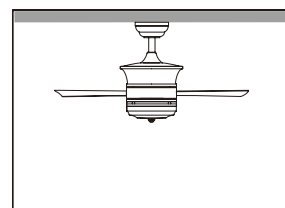

Use **ONLY** on Flat Ceilings ($\pm 10^\circ$)

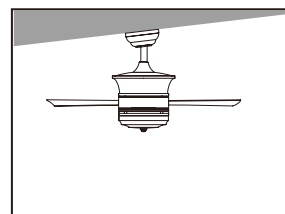


DO NOT Use on Steep Slopes

3

Choose a Suitable Location


Ensure the blades will be at least 30 inches (76 cm) from any obstruction and at least 7 feet (2.5 m) above the floor. In locations without a ceiling joist, a hanger support bar may be required. **DO NOT** install in damp locations.

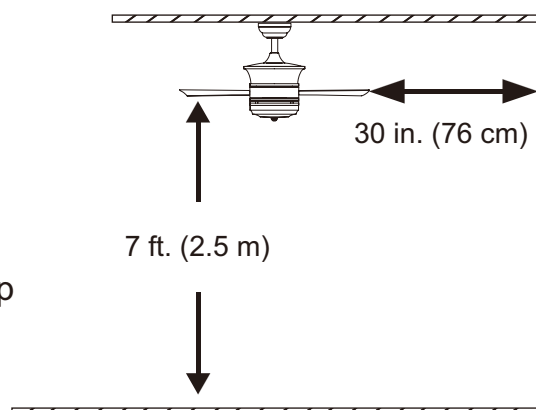

FAN SPECIFICATIONS

QH1201-42

(1 = 1mm)

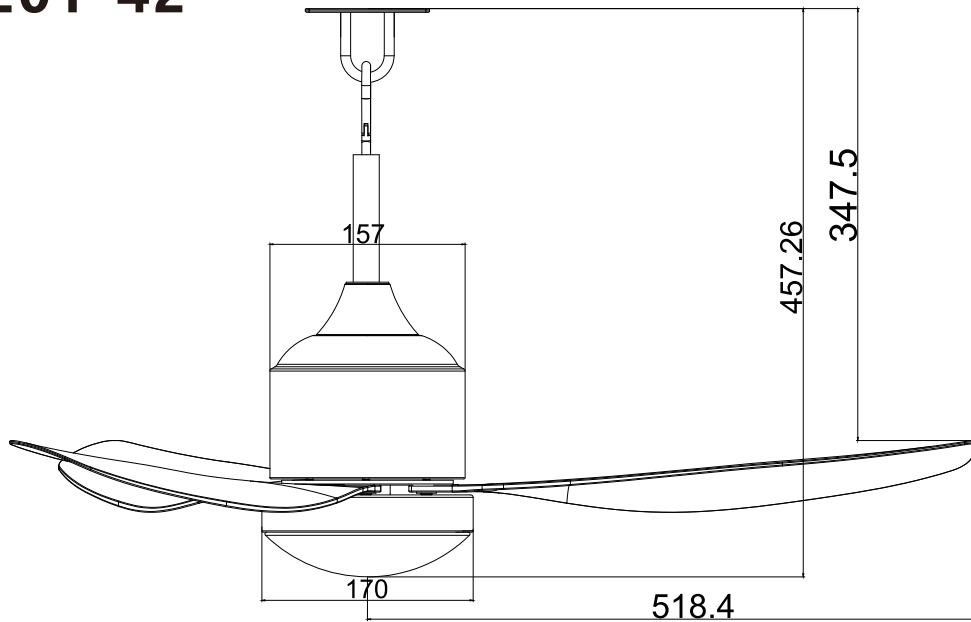

CONTACT INFORMATION We want to hear from you!

Feel free to contact us if you have any problems using our product(s) or would like to know more about our brand.

We will be more than happy to provide you with first class pre-sales & after-sales service 24*7.

E-mail: Cumilo-ceilingfan@foxmail.com

For any problems about this product, you can contact this email

SAFETY RULES



WARNING

SAFETY INFORMATION:

1. Do not install the fan with wet hands.
2. Keep children away from your working area.
3. Do not insert foreign objects between the rotating fan blades.
4. Do not bend the fan blades when installing or cleaning the fan.
5. Do not disassemble or modify this product or use non-original parts without permission.
6. Make sure that the installation location allows the fan blades to rotate without obstacles.
7. To reduce the risk of personal injury, attach the fan directly to the building's support structure.
8. To reduce the risk of fire or electric shock, turn off the power to the fuse box or circuit breaker before installing the fan.
9. Before connecting the power supply, make sure that the power supply used matches the specifications of the ceiling fan.
10. All wiring must comply with national and local electrical codes ANSI/NFPA 70. If you are not familiar with wiring, please use a qualified electrician.
11. Properly dispose of the fan's packaging material. Make sure the ceiling fan is firmly secure to the ceiling. Double check all connections before you restore power. Turn off the fan and wait for the blades to stop completely before performing any maintenance or cleaning.
12. Using power supply 120V/60Hz.

CONTENTS

SAFETY RULES	03
TOOLS AND MATERIALS REQUIRED	04
MOUNTING OPTIONS	04
PACKAGE CONTENTS	05
ATTACHING THE FAN BLADES	06
Installing the LED Light Tray	06
HANGING THE FAN	07
TWO MOUNTING OPTIONS	08
ATTACHING THE LED LIGHT KIT	09
MAKE THE ELECTRICAL CONNECTIONS	10
LEARNING PROCESS	11
ADDING EXTRA REMOTE (OPTIONAL)	11
OPERATING YOUR TRANSMITTER	12
APP OPERATING INSTRUCTIONS	13
App Button Function Description	14
TROUBLESHOOTING	15

TOOLS AND MATERIALS REQUIRED

- Philips screw driver
- Blade screw driver
- Step ladder
- Wire cutters

*The above tools are not included in the package and must be prepared separately.

MOUNTING OPTIONS

If there isn't an existing CUL listed mounting box, then read the following instructions. Disconnect the power by removing fuses or turning off circuit breakers.

Secure the outlet box directly to the building structure. Use appropriate fasteners and building materials. The outlet box and its support must be able to fully support the moving weight of the fan (at least 50 lbs). Do not use plastic outlet boxes.

Figures 1, 2 and 3 are examples of different ways to mount the outlet box.

Note: You may need a longer downrod to maintain proper blade clearance when installing on a steep, sloped ceiling. (Fig. 3)

To hang your fan where there is an existing fixture but no ceiling joist, you may need an installation hanger bar as shown in (Fig.4)

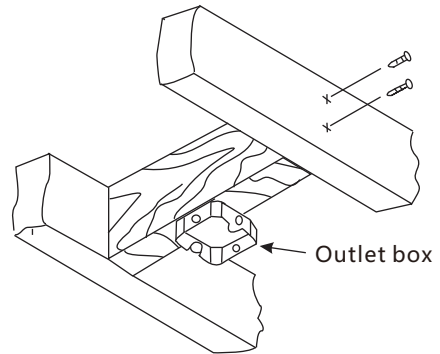
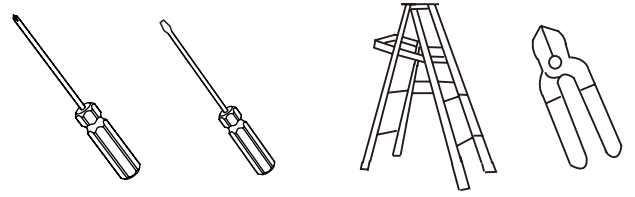


Figure 1

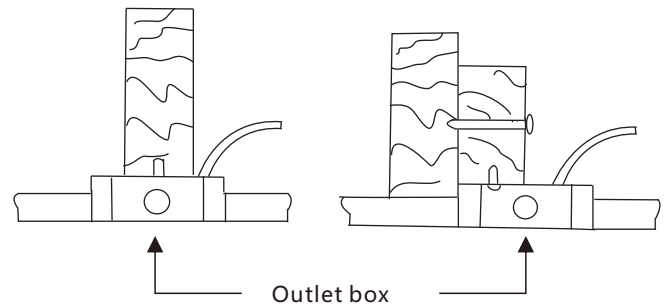


Figure 2

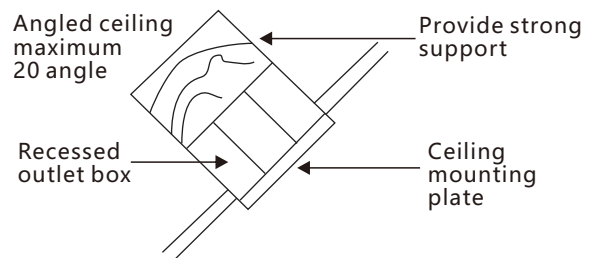


Figure 3


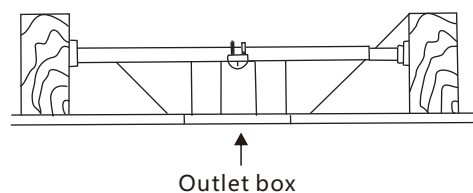


Figure 4

PACKAGE CONTENTS


Unpack your fan and check the contents.
You should have the following items:

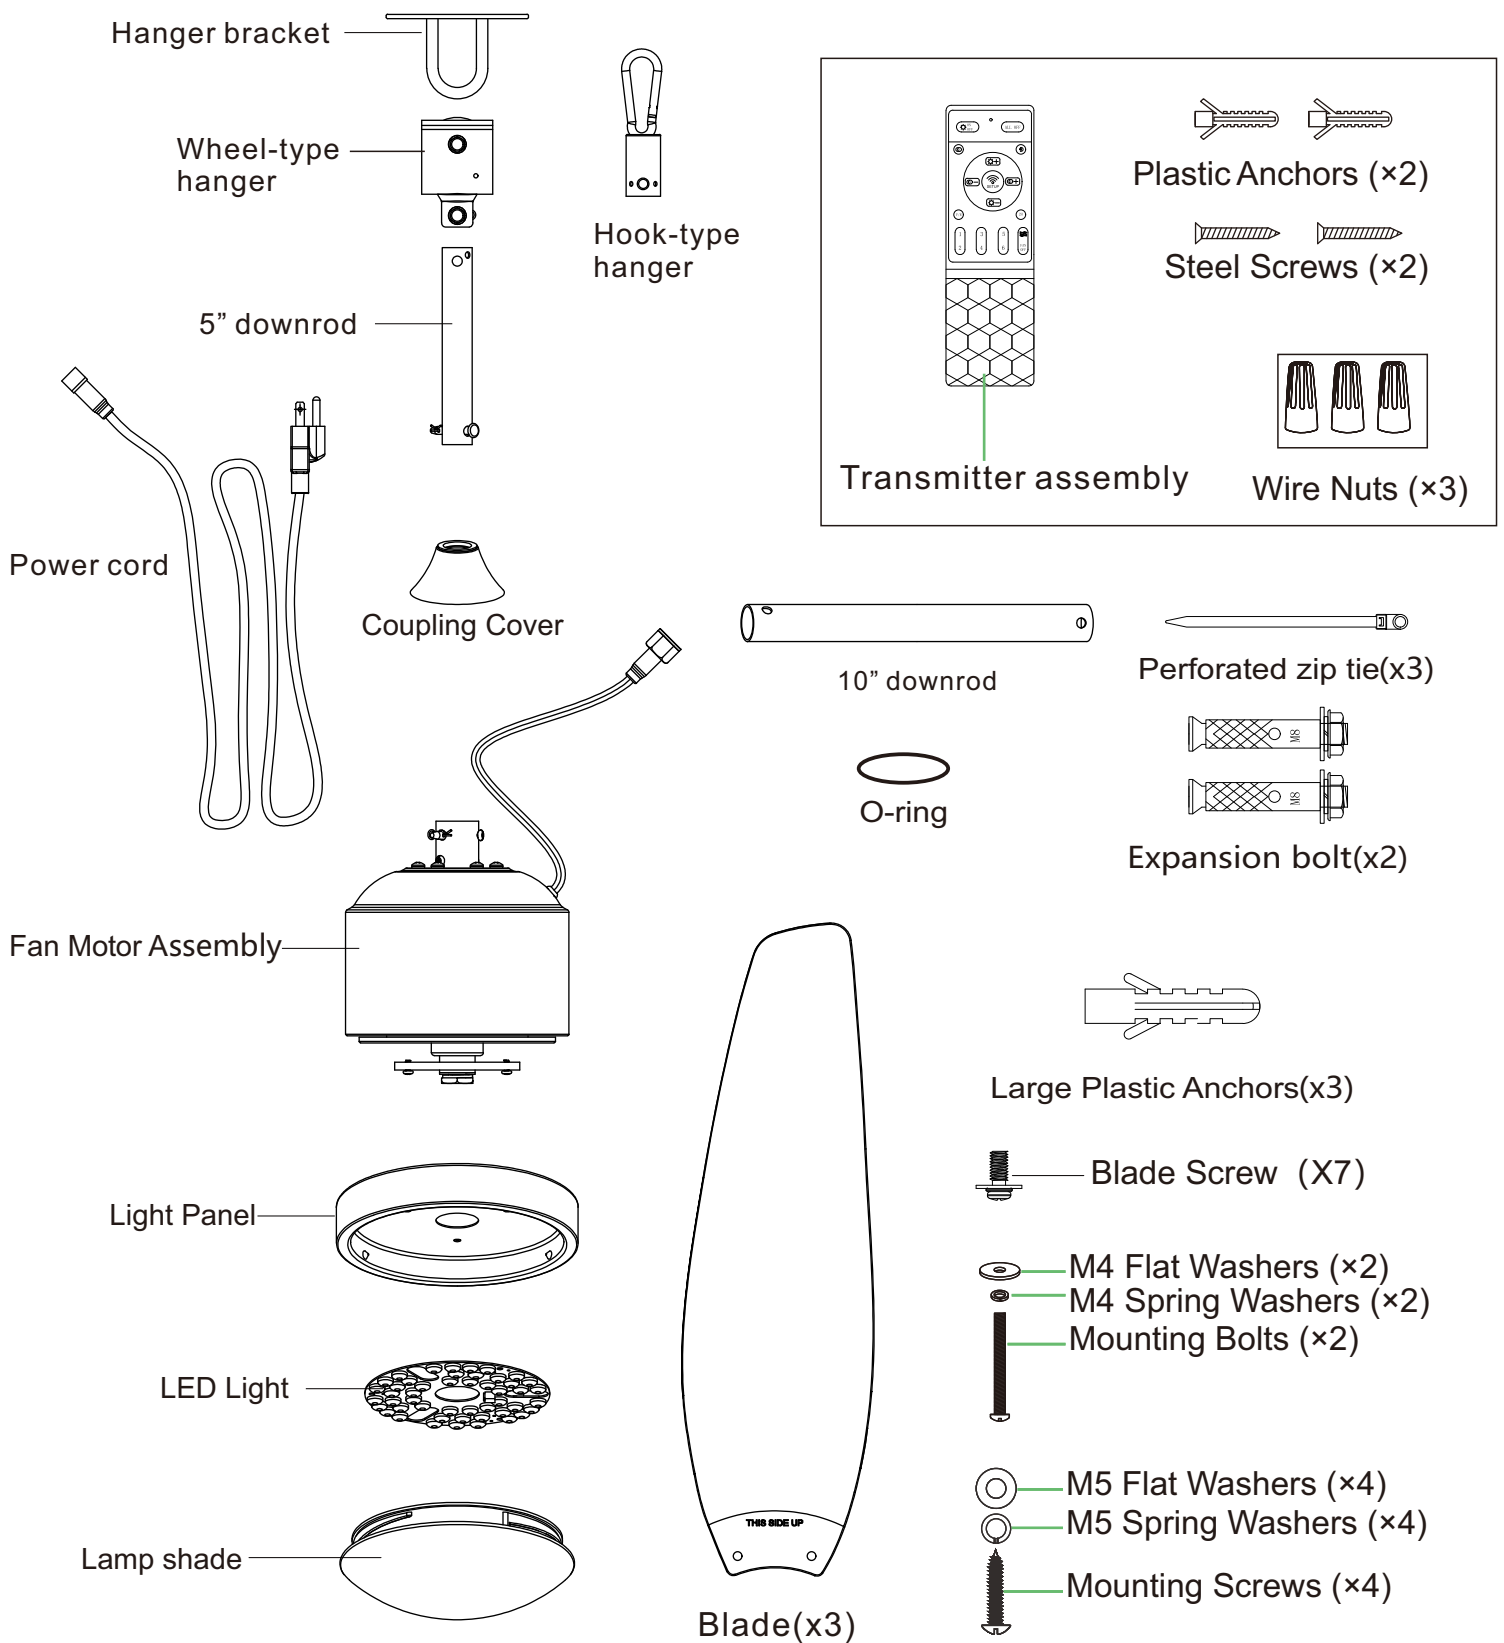

ATTACHING THE FAN BLADES


Secure the blade to the fan motor assembly using the blade screws and blade screw washers.

Note: Please follow the instruction manual and make sure to use correct screws during the installation process.(Fig.5)

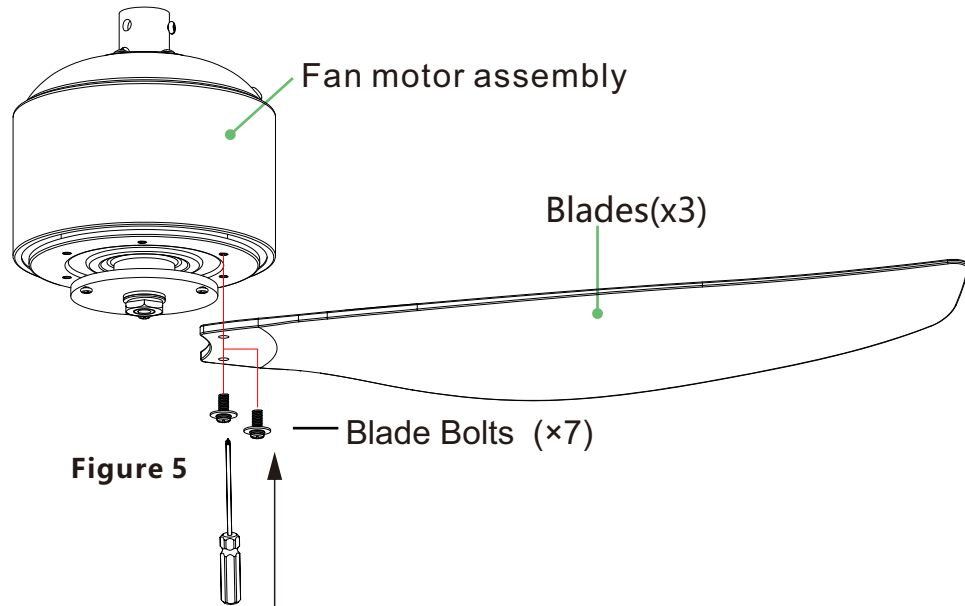


Installing the LED Light Tray

Step 1. Remove 3 screws from light kit adapter. (Do not discard)
(Fig. 6)

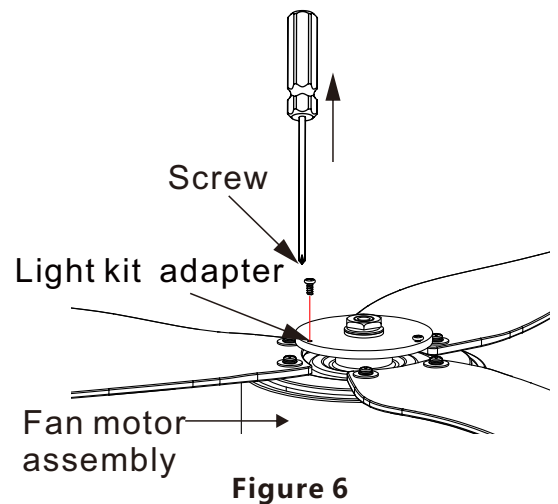

Step 2. Tighten the 3 screws previously removed in step 1
(Fig.7)

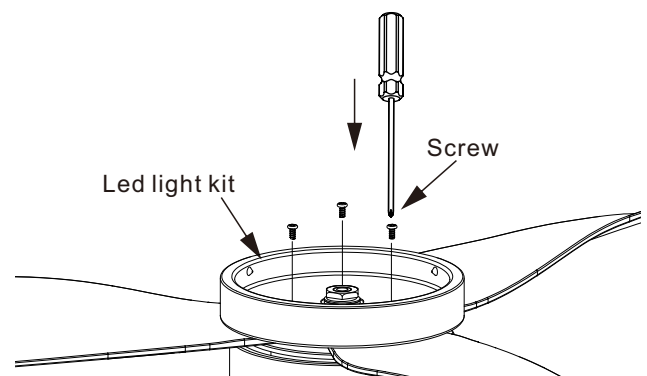

HANGING THE FAN

Follow the steps below to hang your fan properly :

a. For wood ceilings, mount the Hanger bracket using wood screws and matching washers. (Fig. 8a)

b. For concrete ceilings, secure the Hanger bracket with expansion bolts. (Fig. 8b)

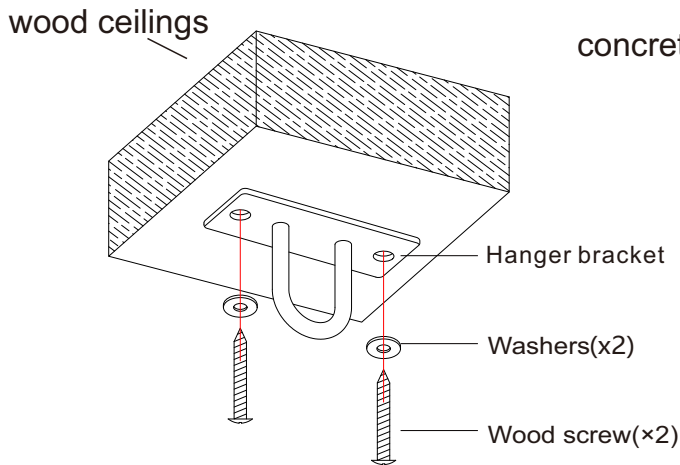


Figure 8a

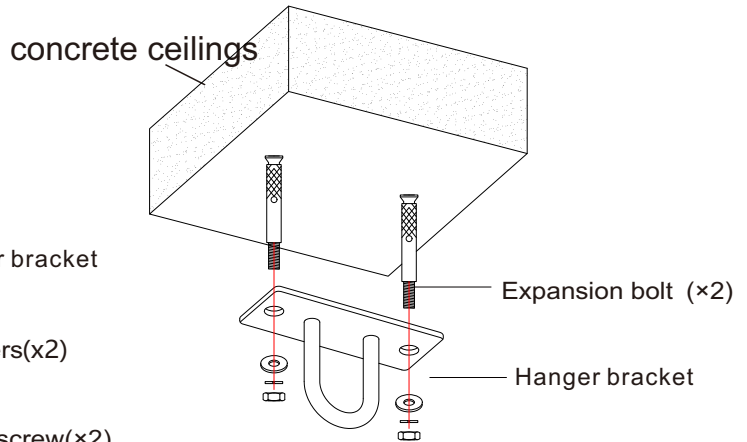


Figure 8b

Thread downrod into the motor coupling until the holes on the downrod and coupling are lined up (Fig.9) Carefully insert the hanger pin through the holes in the collar and downrod. Be careful not to jam the pin against the wiring inside the downrod. Insert the locking pin through the hole near the end of the hanger pin until it snaps into its locked position, as shown in the circle inset of (Fig.9)

⚠ This product comes with two different sizes of downrod assembly.
Please install and use them according to your actual needs.

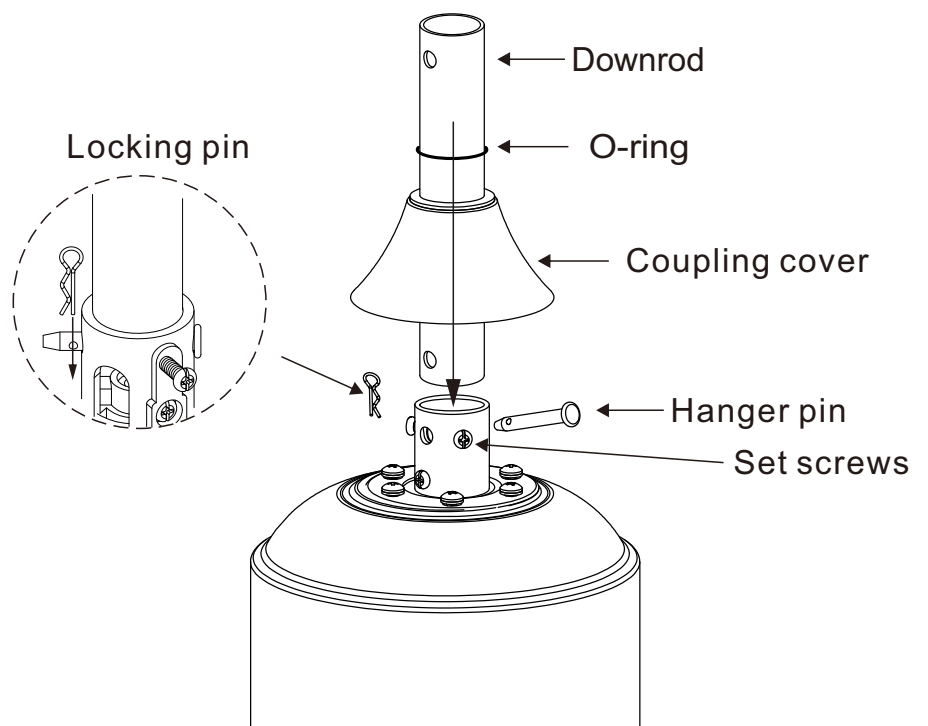
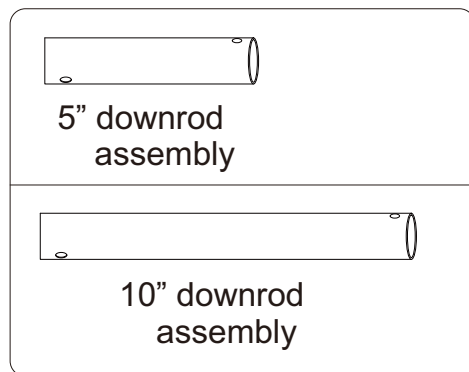


Figure 9

TWO MOUNTING OPTIONS

Choose between two mounting options:

use the hook-type hanger outdoors and the wheel-type hanger indoors.

1. Wheel-type hanger installation(Fig 10):

remove and check all parts; unscrew to disassemble; insert the rubber wheel into the bracket and re-clamp it with the removed screw so the hanger hangs; lift the fan, align the downrod holes with the hanger, insert and tighten the second screw to finish.

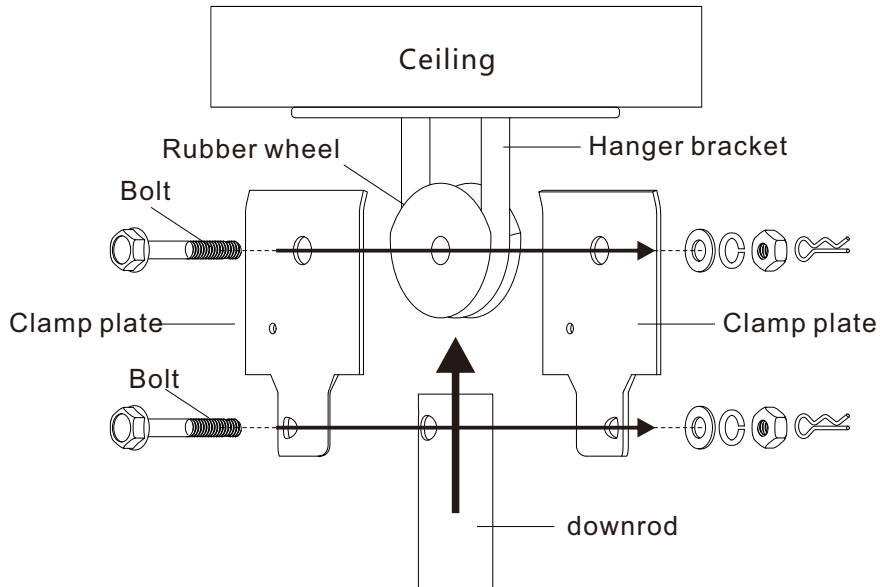


Figure 10

2. Hook-type hanger installation(Fig 11):

Remove the pin from the hook-type hanger, loosen both side screws with a screwdriver (to allow the downrod to pass), insert the hanger lower end into the downrod, rotate to align the two pin holes, insert the pin and lock it with the R-pin, retighten the two screws, then hang the hook on the ceiling-mounted Hanger bracket to complete the suspension.


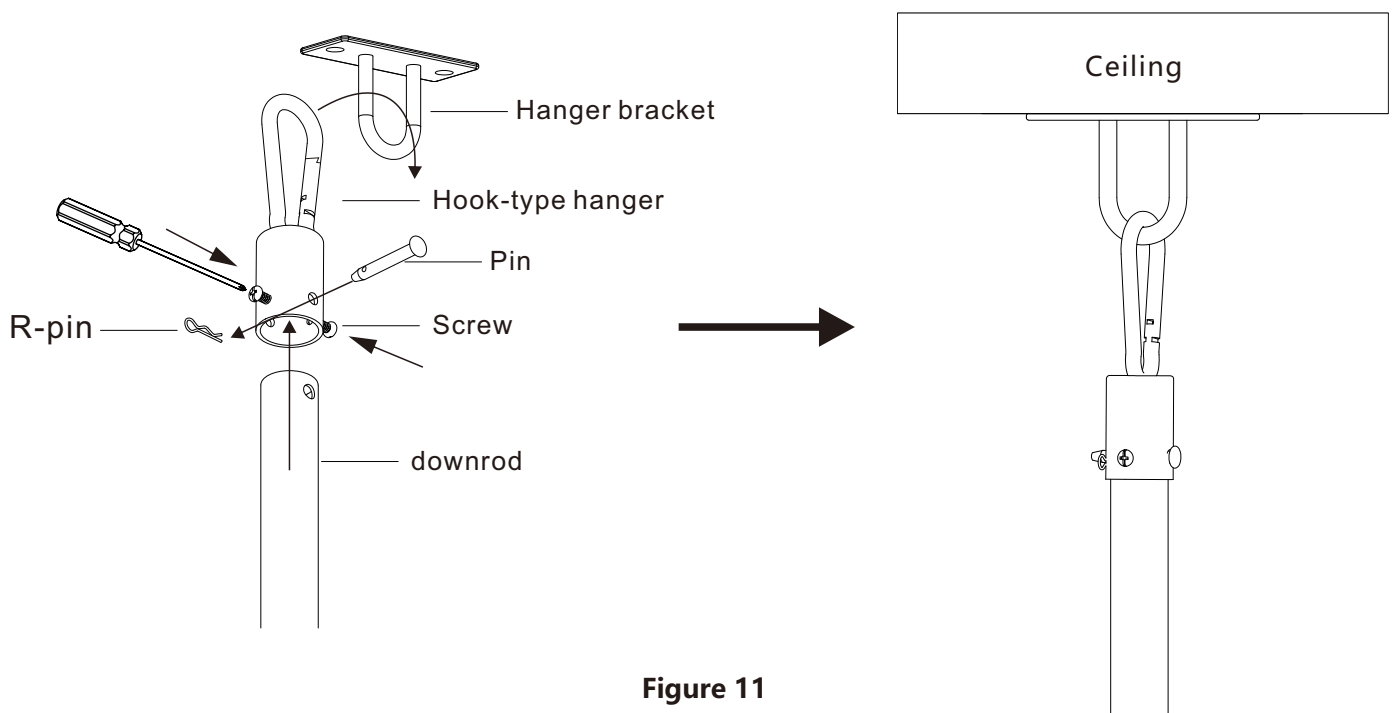



Figure 11

ATTACHING THE LED LIGHT KIT

Pull the light wire from motor through the hole of light kit. Connect the plug as drawing. (Fig 12)

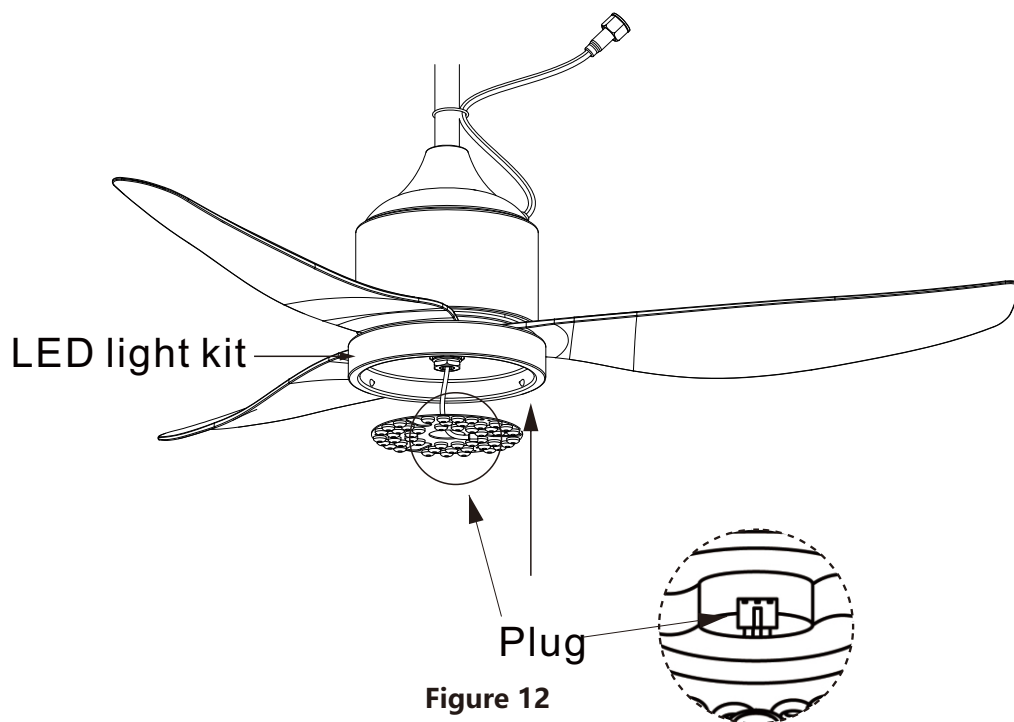


Install light shade up against light kit plate and secure it to the fan by turning the light shade clockwise until snug. (DO NOT OVERTIGHTEN). (Fig.13)

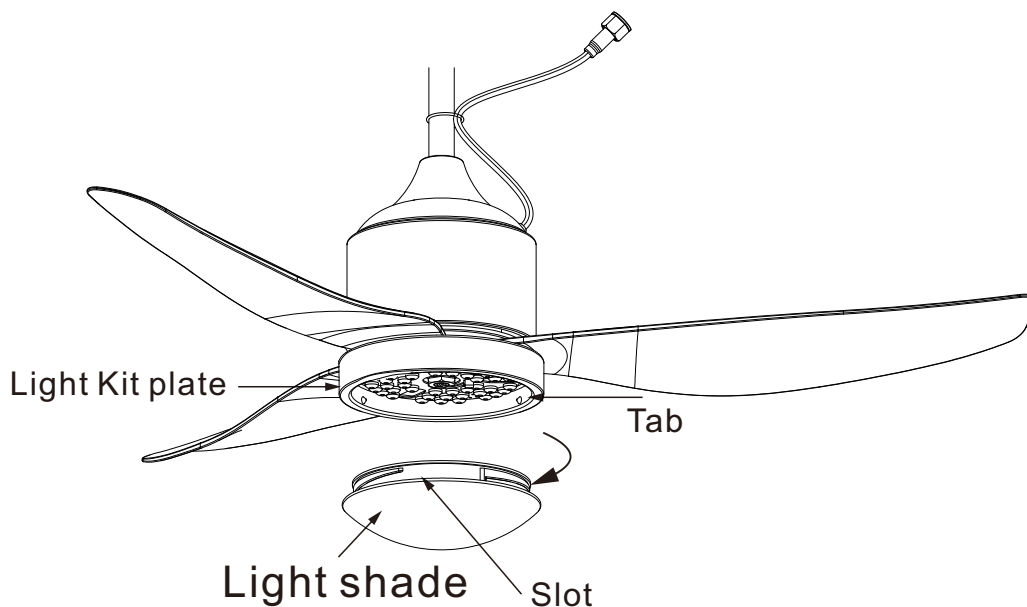


ELECTRICAL CONNECTION

Connect the waterproof cable from the motor to the included cable by plugging them together. Verify that one end of the connector has a O-ring (sealing gasket). Ensure the alignment of the raised tab inside the connector with the corresponding slot. After connection, tighten the waterproof nut on the connector.

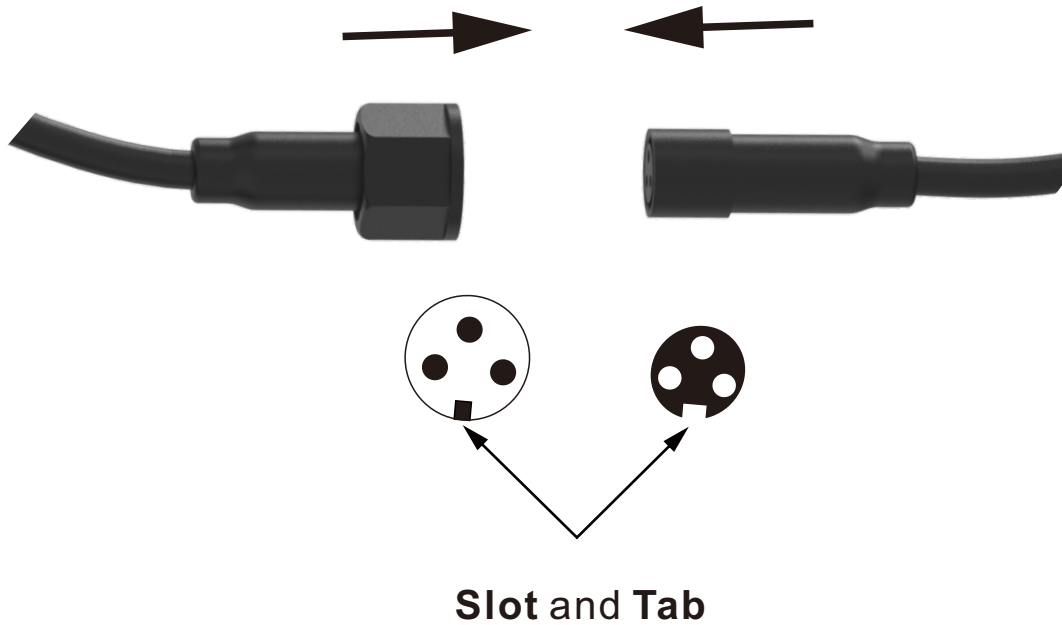

After completing the electrical connections, secure the wiring to the ceiling using the included perforated nylon strapping and plastic expansion anchors from the accessory kit. This prevents potential interference or entanglement with the fan blades that could lead to equipment damage.

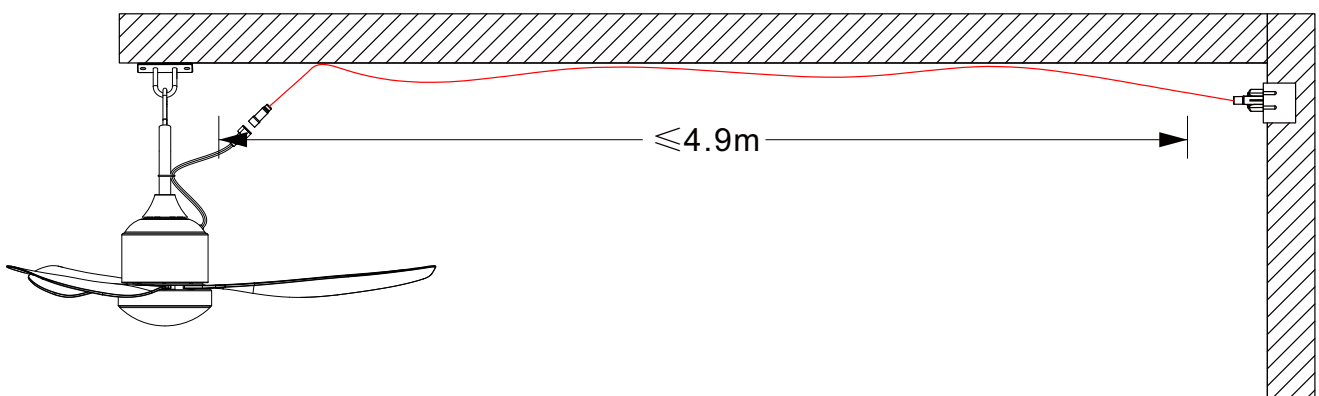

LEARNING PROCESS

The receiver and transmitter are already prepared with each other in the production process, however, if you find the fan is not operating properly or there is interference from another fan, you can pair by the following actions.

Within 10 seconds of turning on the power, press the “” key on the transmitter, the fan will beep, indicating the trans(Fig.14)

Note: If you have more than one fan in close proximity, you will need to make sure the power to the other fan is off when doing this learning process. Otherwise, you may get interference between the two fans.

ADDING EXTRA REMOTE (OPTIONAL)

Turn main power to the fan off and repeat learning process above using the new remote.

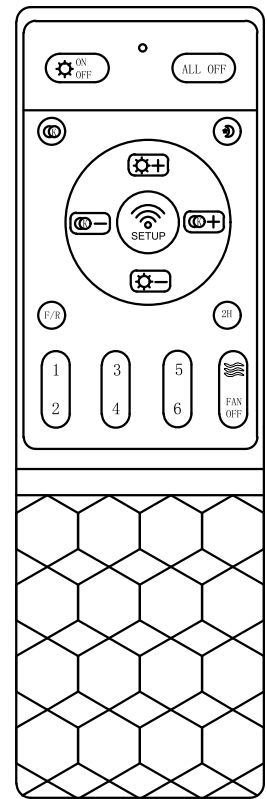


Figure 14

OPERATING YOUR TRANSMITTER

1. LED light indicator.
2. Light ON/OFF button.
3. Turn off the power
4. Switch color temperature
5. Night light
6. Increase brightness by long-pressing
7. Decrease color temperature by long-pressing
8. Decrease brightness by long-pressing
9. Increase color temperature by long-pressing
10. Matching button
(Long press to pair the emitter and receiver)
11. Forward/Reverse switch.


Warm weather-(Forward) A downward airflow creates a cooling effect as shown in (Fig.18) This allows you to set your air conditioner on a warmer setting without affecting your comfort.

Cool weather-(Reverse) An upward airflow moves warm air off the ceiling area as shown in (Fig19) This allows you to set your heating unit on a cooler setting without affecting your comfort.

12. Timer buttons (2 hour)
13. Speed control button:
Speed 1 (Slowest)
Speed 2
Speed 3
Speed 4
Speed 5
Speed 6 (Fastest)
14. Natural Wind: (Short press) Fan speed repeat cycle from 1 to 6.
15. Fan OFF button.


Tips:

1. When the transmitter can't remotely control the receiver, please check if the switch battery contact is normal, whether the positive and negative poles are placed correctly, and the power is sufficient (the signal light can be seen as light or dark or flashing three times, please replace the battery, the two batteries must be the same brand).
2. When the transmitter cannot remotely control the receiver, please check if there are any remote control products in the vicinity, and check if their transmitter buttons are pressed, because the simultaneous transmission of the same frequency remote control products will cause interference and affect the reception. The effect of the wrong command will be normal if the remote control function is excluded.
3. Please do not use the product where children can play when using this product.
4. Please remove the battery from the remote control when not in use for a long time.

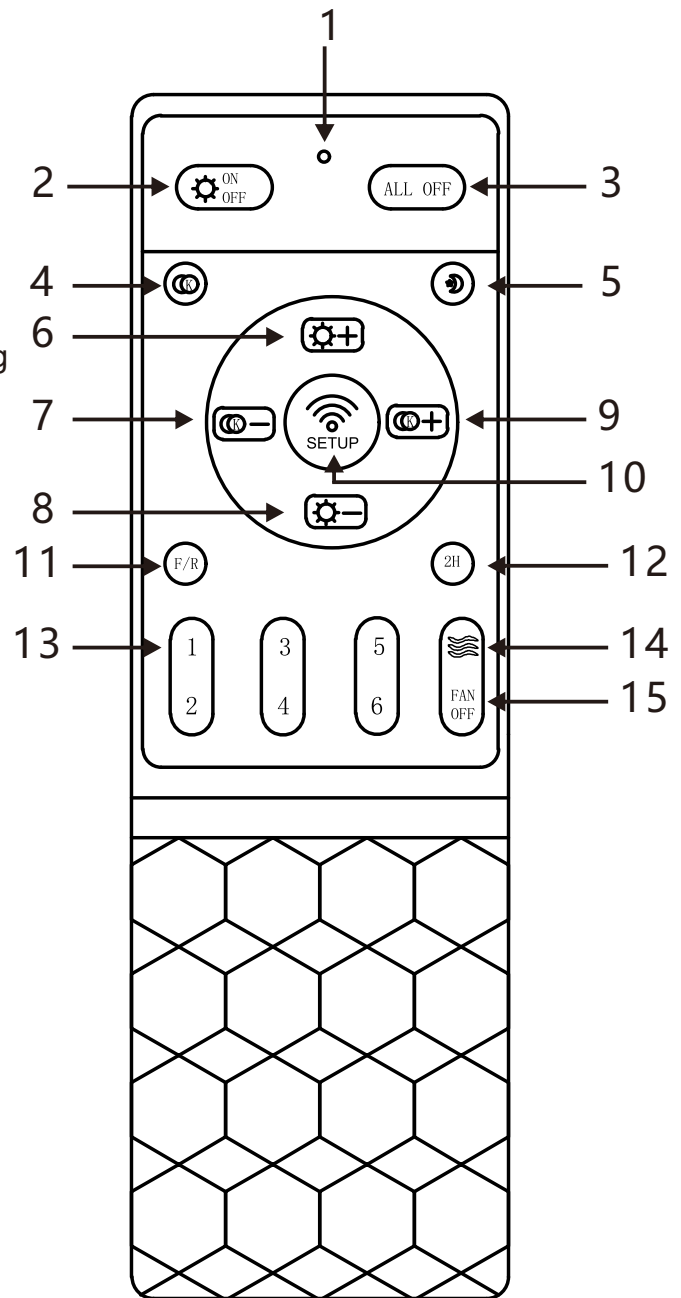


APP OPERATING INSTRUCTIONS

1. Scan the QR code to download the app.
2. Download the corresponding OS app from your phone and install it, then add devices in order.

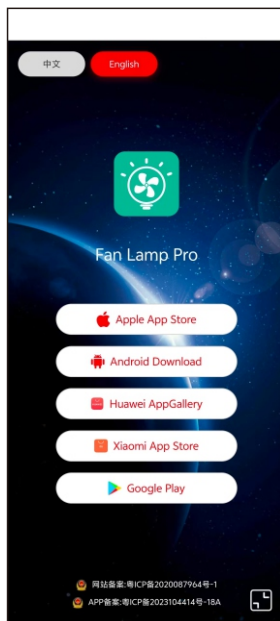


STEP 1

Open the browser to access the download website. Download the app.

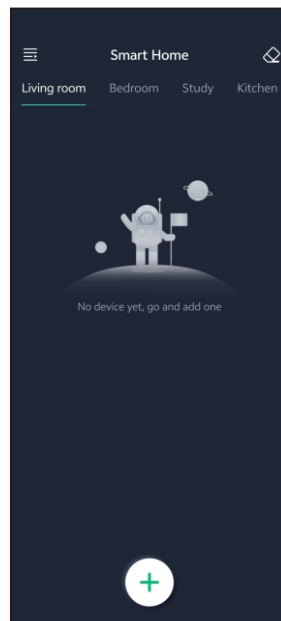


STEP 2

Add equipment according to the position of the ceiling fan.

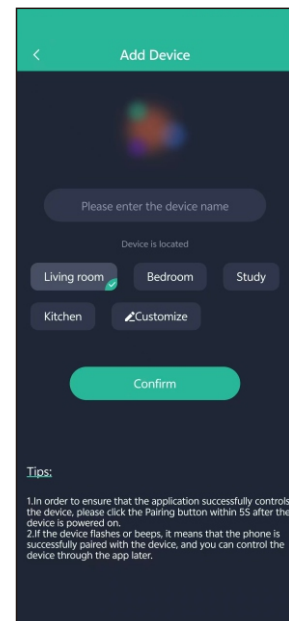


STEP 3

Set the name of the device.

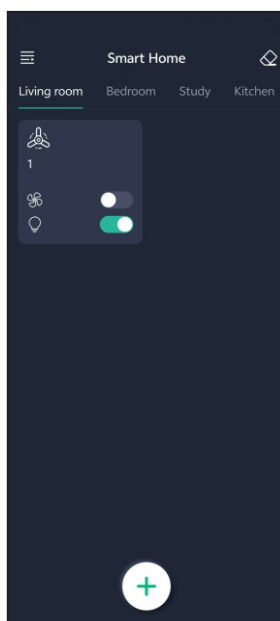


STEP 4

After setting the name, open the Bluetooth on your phone and click on the device to enter the operation interface.

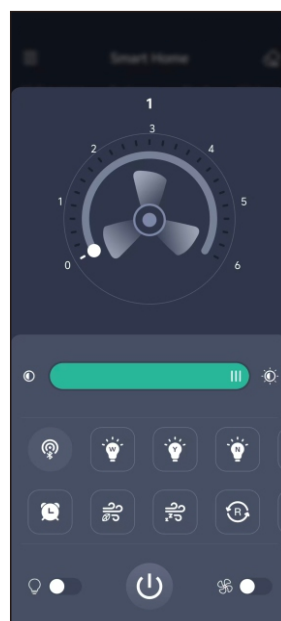

STEP 5

Within 5 seconds of turning on the main power of the ceiling fan, press the button to complete the connection between the phone and the ceiling fan. After successful connection, the LED will flash once.

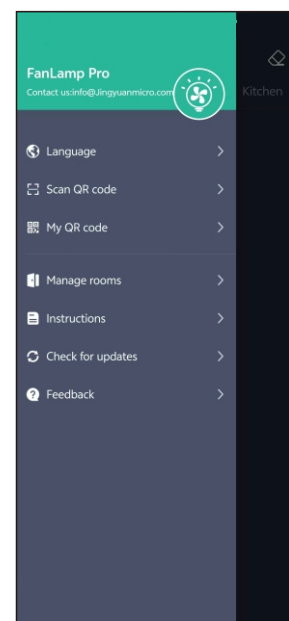

STEP 6

APP Settings Page

APP button function description:


1.  Code matching button (click this button within 5 seconds of turning on the light, such as the light source flashing or the buzzer "di", it proves that the pairing code is successful; if the pairing code fails, repeat this operation).
2.  After clicking, you can choose a time to turn off the device regularly.
3.  After clicking, the wind blown by the fan is like the wind in nature.
4.  The wind blown by the fan after clicking is suitable for sleep.
5.  After clicking, the fan will rotate in the reverse direction.
6.  Click to change the direction of the wind.
7.  After clicking, the fan will rotate forward.
8.  After clicking, the white light and yellow light will light up at the same time, but the brightness is only 10% of the maximum brightness.
9.  After clicking, the white light and yellow light will light up at the same time, and the brightness is the maximum brightness.
10.  After clicking, only the yellow light will light up, and the brightness is the maximum brightness.
11.  After clicking, only the white light will light up, and the brightness is the maximum brightness.

TROUBLESHOOTING


Problem	Solution
Fan will not start.	1. Check circuit fuses or breakers 2. Check all electrical connections to insure proper contact. CAUTION: Make sure the main power is OFF when checking any electrical connection.
Fan sounds noisy.	1. Make sure all motor housing screws are snug. 2. Make sure the screws that attach the fan blade brackets to the motor are tight. 3. Make sure wire nut connections are not rubbing against each other or the interior wall of the switch housing. CAUTION: Make sure main power is off. 4. Allow a 24-hour "breaking-in" period. Most noise associated with a new fan disappear during this time. 5. If using an optional light kit, make sure the screws securing the glassware are tight. Check that the light bulb is also secure. 6. Some fan motors are sensitive to signals from solid-state variable speed controls. If you have installed this type of control, choose and install another type of control. 7. Make sure the upper canopy is a short distance from the ceiling. It should not touch the ceiling.
Fan wobble.	1. Check that all blade and blade arm screws are secure. 2. Most fan wobbling problems are caused when blade levels are unequal. Check this level by selecting a point on the ceiling above the tip of one of the blades. Measure this distance. Rotate the fan until the next blade is positioned for measurement. Repeat for each blade. The distance deviation should be equal within 1/8". 3. Use the enclosed Blade Balancing Kit if the blade wobble is still noticeable. 4. If the blade wobble is still noticeable, interchanging two adjacent (side by side) blades can redistribute the weight and possibly result in smoother operation. WARNING: TO REDUCE THE RISK OF PERSONAL INJURY, DO NOT BEND THE BLADE ARM WHILE INSTALLING, BALANCING THE BLADES, OR CLEANING THE FAN. DO NOT INSERT FOREIGN OBJECTS BETWEEN ROTATING FAN BLADES.

CONTACT US


Feel free to reach out to our Customer Support via Amazon orders for any issues, or you can send inquiry to our official email address:
Cumilo-ceilingfan@foxmail.com

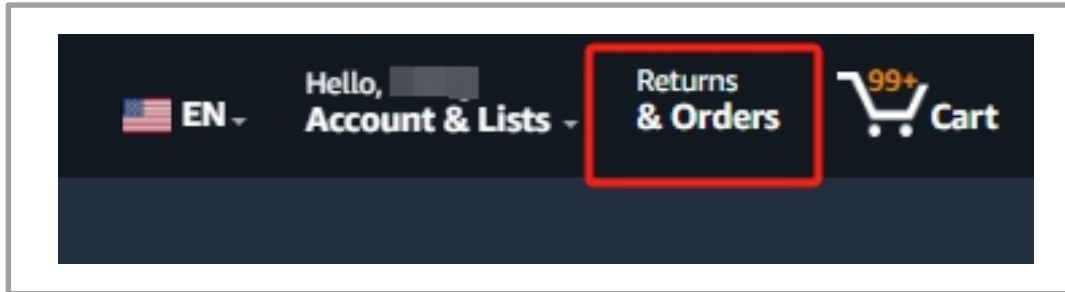


Step 1: Log into your Amazon.com account, click “**Returns&Orders**” on the top-right corner.

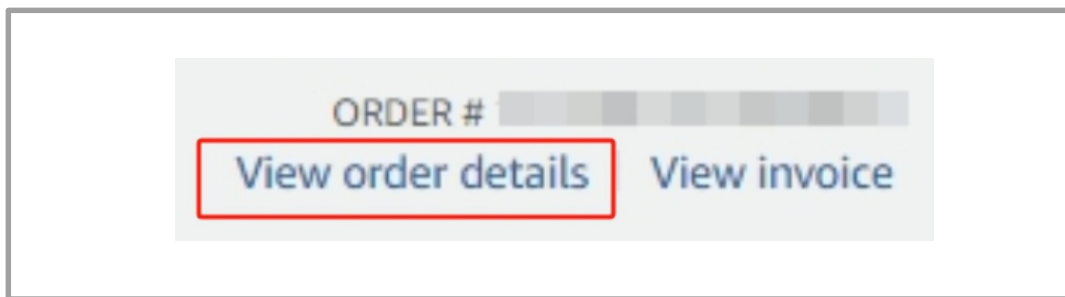

Step 2: Find your order in the list and click “**View order details**”.

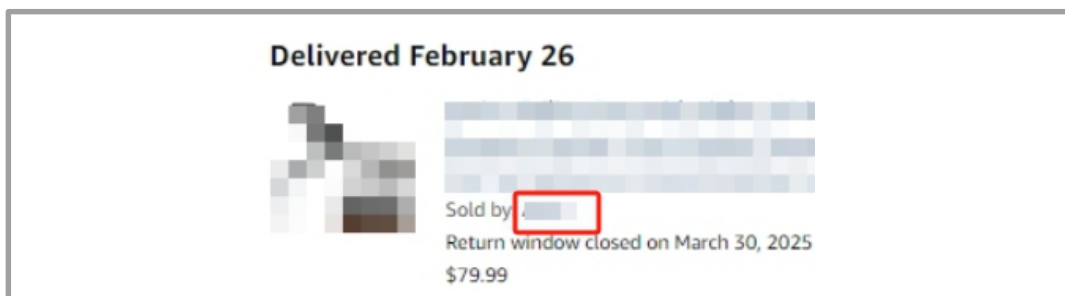

Step 3: Click the “**Store Name**” following the Sold by, below the product title.

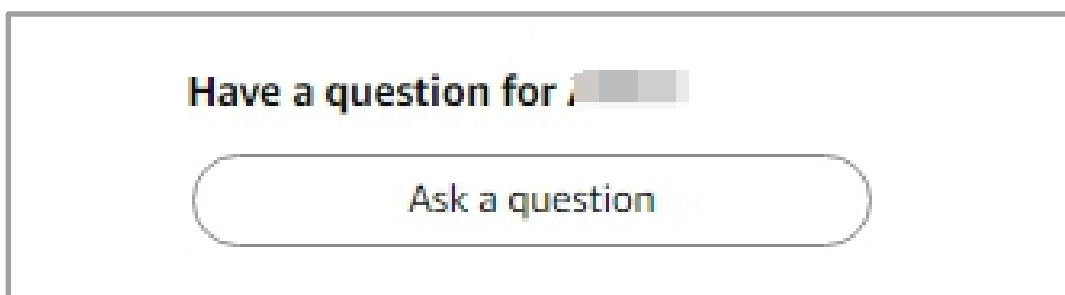

Step 4: Click the button “**Ask a question**”, on the top-right corner, to contact the seller.