


Luminated Outdoor Clock

Please read these instructions carefully and keep them for future reference.

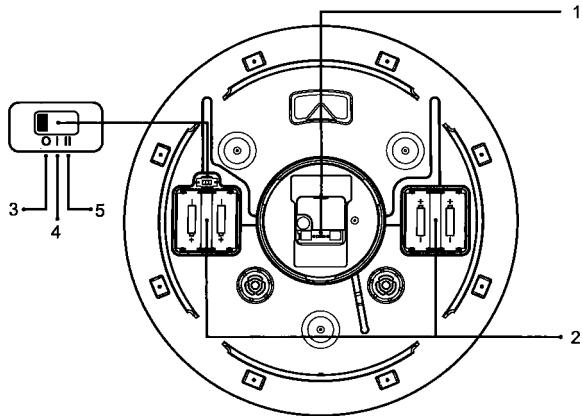

1. Battery compartment for clock movement
2. Battery compartment for light system
3. O: Light function OFF
4. I: Low brightness mode
5. II: High brightness mode

ACTIVATING THE CLOCK AND LIGHTING

1. Open the waterproof cover.
2. Insert 1 x AA battery for the movement (Shown 1), please check the polarity.
3. Insert 4 x D batteries for the LED lighting (Shown 2), please check the polarity.

NOTE:

Although any AA dry battery can power the clock movement, a carbon-zinc battery is recommended for reliable performance. LED sensor light recommends use alkaline battery not carbon-zinc battery for reliable performance.

SETTING THE NIGHT LIGHT FUNCTION

Select the LED light mode by moving the switch to one of the following:

1. The "O" mode is used to turn off the light.
2. The "I" mode puts the light in the "low brightness" mode. When the clock is in a dark environment, it will emit low-level light, staying on for five (5) hours. After 5 hours, the light will switch off automatically. Alternatively, once the environment becomes bright, the light will switch off automatically. When the environment transitions back to dark, the light will reactivate and continue to function for an additional 5 hours.
3. The "II" mode puts the light in the "high brightness" mode. When the clock is in a dark environment, it will emit high-level light, staying on for five (5) hours. After 5 hours, the light will switch off automatically. Alternatively, once the environment becomes bright, the light will switch off automatically. When the environment transitions back to dark, the light will reactivate and continue to function for an additional 5 hours.

HANGING TIPS

Caution: Before drilling any holes in the hanging surface, ensure there are no electrical cables or piping behind the surface.

1. Ensure the hook or screw is appropriate for the weight of the product.
2. To hang the clock, insert the hook or screw into the keyhole mechanism on the back of the clock. You can also use the outer rim of the case to hang the clock on the hook/screw.
3. If in doubt, rely on a professional tradesman for assistance.

CHANGING THE BATTERY

We recommend you replace the clock movement battery annually, even if the clock is still keeping proper time. If you notice that the lights have dimmed, we recommend changing the batteries.

When the clock is not in use, be sure to remove the batteries.

WARNING

Do not try to charge non-rechargeable batteries.

Please dispose of batteries in a responsible manner. For more information, please contact your local authority.

MAINTENANCE

A soft cloth may be used to clean your clock. Do not use any corrosive cleaner or chemical solutions on the clock.

Remarks :

Please avoid placing the instrument exposed to direct sunlight for extended period of time as this will affect the functionality and the outlook of Your new time piece.

When your clock starts to lose time, please replace the battery. Failing to remove old batteries can damage your clock. Should your clock experience any problems within the warranty period, please call 888.346.9544 for assistance. Please do not return your clock to the store.



Printed in China