 


ReGENCY

HATBP2540 Height Adjustable Power Base for 48-72" Table Tops

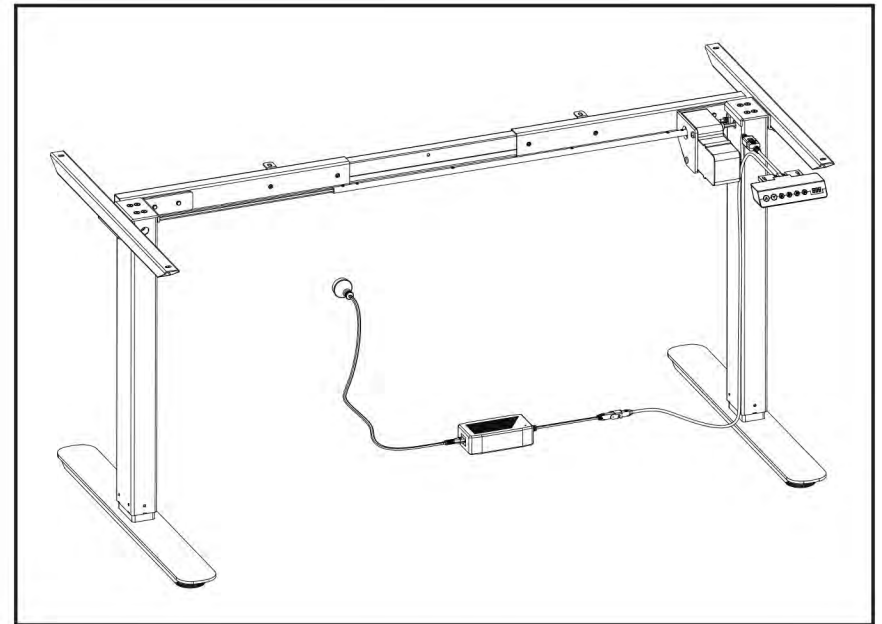

IMPORTANT NOTICE:

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
Check to be sure that you have all parts and hardware.
Remove all wrapping materials, including staples & packing straps before you start to assemble.
Keep all hardware parts and packaging out of reach of children.

Any problems or questions call Regency Office Furniture at 1-866-816-9822 or email customerservice@regencyof.com

(Rev:181130)

Parameter Instruction

Electric Control Part:

Input Voltage:100-240V can be use

Output Voltage:29V DC 1.8A

Duty cycle:10%MAX 2min on 18 min off

Switch power supply,low energy consumption

Manual device can move and long press

Desk frame part:

built-in limit switch

Dynamic load:80KG

 
The maximum static load:100KG

Load speed:30mm/s

Safety and warnings


This appliance can be used by children aged from 8 years and above and persons with reduced physical,sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.Children shall not play with the appliance.Cleaning and user maintenance shall not be made by children without supervision.

Correct Disposal of this product

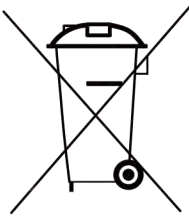

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal ,recycle it responsibly to promote the sustainable reuse of material resources.To return your used device,please use the return and collection systems or contact the retailer where the product was purchased.They can take this product for environmental safe recycling.

 Handset Instruction

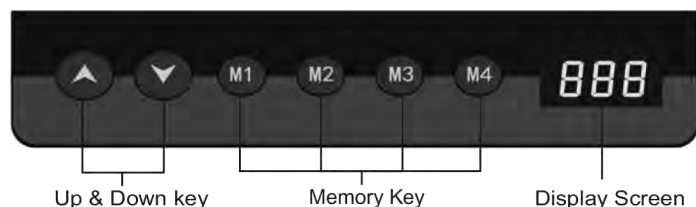

The whole handset surface is a button panel. If there is no press within 30 seconds, the screen is locked and M1/M2/M3/M4 keys are locked correspondingly., you should press Up or Down key first, it can be used when the display screen light up.

■ Up or Down Key

To adjust the height of the desk, keep pressing on "up" or "down" until it fits your best position.

■ Display screen

Display the height value of the desk.

■ Memory Key (M1/ M2/ M3/ M4)

After setting memory keys, the desk can lift automatically to memory height.

※ How to set memory mode

Please keep pressing M1/M2/M3/M4 key for 5 seconds, until "be" sound, the memory height is successfully saved. Then press M1/M2/M3/M4, the desk moves to memory height automatically.

■ Safety function

 
When the desktop is on the rise or down, encountered reverse resistance, the desk will rebound.

■ Hot display

1. When the desk keeps working for 2 to 5 minutes, screen shows "hot"

2. After the screen shows "hot", press any key will not work, the handset can automatically reworking after 5 minutes.

■ Setting solution for desk function

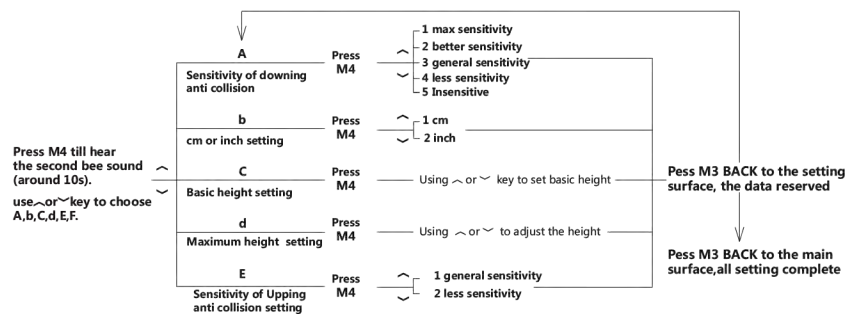

■ Handset shows error code and solution

Error code	Fault cause	Solution
ER1	Motor stop	Power off and restart. If fault still exists, it is motor problem.
ER5	Overload protection	legs Load>120kg, display ER5. Lighten loads, power off and restart.
Hot	Continuous operation for 2 to 5 minutes.	Power protection, automatic recovery after ten minutes ※ with power on .

(0905)

Installation instruction

