

Product #:	WHAP1808
Product Name:	4Ft Pre-Lit Snow-Flocked Potted Artificial Christmas Tree

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

CARTON CONTENTS:

Description	Quantity
Tree	1
Tree Pot	1

Before You Start

- Decide on an appropriate location for your product, please read assembly and Instruction procedure carefully.
Note: These trees may utilize light sets that are marked for indoor and outdoor use, but the artificial trees are for indoor display or covered outdoor display.
- Retain the instructions for future use and save the carton for storing your tree.

Assembly and Instruction Procedure (no tools required for assembly):

Remove all packaging (i.e., cardboard or plastic) before beginning. We suggest unpacking the tree on a large cloth. Some of the flocking may come off during unpacking and fluffing of branches.

- Put the pot base on a flat surface then insert the tree body into the pot firmly. Make sure the tree pole is firmly inserted into the pot.
- Gently lower all branch tips on tree. Take care not to place unnecessary pressure on the brackets during assembly.
- The branches on your tree can be adjusted to give your tree the desired fullness. Begin to shape the branches from the bottom of the tree to the top. Start with the tree tips farthest away from the center pole.
Gently lower all branch tips on tree. Take care not to place unnecessary pressure on the brackets during assembly.

For best results, straighten and separate all branch tips, then bend them slightly upward.



Fig.1

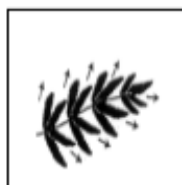


Fig.2



Fig.3

Product #:	WHAP1808
Product Name:	4Ft Pre-Lit Snow-Flocked Potted Artificial Christmas Tree

Battery box button function:



1. Open the battery compartment.
2. Insert 3 AA batteries (not included). Do not mix alkaline, standard, or rechargeable batteries.
3. At the top of the battery box there is a black button that operates the lights (timer, on, and off).
 - Press once to set the timer for the lights (6 hours on; 18 hours off). The cycle will repeat automatically unless the batteries are exhausted.
 - Press twice to set to "On" for lights always on.
 - Press three times to turn the lights off.

YOUR TREE IS NOW READY TO ENJOY!

USE AND CARE INSTRUCTIONS

1. Before using or reusing, inspect the product carefully. Make sure the battery box is properly covered.
2. 3 AA size batteries are to be used (not included).
3. Insert batteries with the correct polarity in the battery box.
4. After inserting or reusing batteries, make sure to cover the battery box.



WARNING

1. Do not place it near fireplaces, candles, outdoor heaters, or other similar sources of heat.
2. Do not install near pools, fountains, tubs, sinks, or other areas of standing water that the tree may fall or blow into.
3. Do not press or grasp bulbs during assembly or installation.
4. Make sure the final assembly is stable enough to hold the tree upright.
5. Do not use candles on the tree. Use only with the included mini lights.
6. This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small children.

Product #:	WHAP1808
Product Name:	4Ft Pre-Lit Snow-Flocked Potted Artificial Christmas Tree

Storage Tips:



1. Remove batteries from battery compartment.
1. Remove all decorations (this does NOT include the pre-installed string lights).
2. Remove tree from pot by pulling up on center pole at base of tree.
3. Starting from the top, carefully press the tips back up against the stem.
4. Store the product in a cool, dry location protected from sunlight where the temperature does not exceed 35°C (95°F).