


INSTRUCTIONS


11² INFLATABLE TENT
CQ0040

SIZE

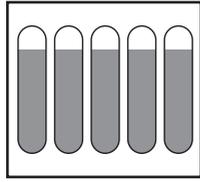

400cm

275cm

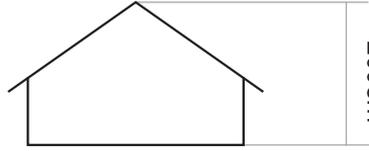

200cm

ACCESSORY



Tent*1



Storage bag * 1



Steel Nail*14



Wind rope*6




Pressure limiting pump*1



Canopy pole*2

INSTALLATION STEPS

01

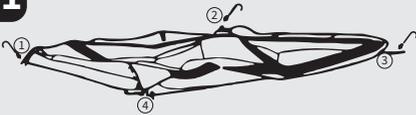

Take out the tent and spread it flat on the ground. Secure the four corners with four ground nails.

02



Adjust the inflatable valve to the closed state, connect the pump to the air valve, and inflate the first air column to 80%

03



Inflate the other column to saturation, then fill the first column to 100%.

04



Secure the tent with ground nails and windbreak ropes. The canopy is connected to the tent with zippers.