 


UNDER PENALTY OF LAW THIS TAG NOT TO BE REMOVED EXCEPT BY THE CONSUMER	NOTICE THIS ARTICLE MEETS THE FLAMMABILITY REQUIREMENTS OF CALIFORNIA BUREAU OF ELECTRONIC AND APPLIANCE REPAIR, HOME FURNISHINGS AND THERMAL INSULATION TECHNICAL BULLETIN 117-2013. CARE SHOULD BE EXERCISED NEAR OPEN FLAME OR WITH BURNING CIGARETTES.
ALL NEW MATERIAL consisting of: POLYURETHANE FOAM PAD 100%	The upholstery materials in this product: contain added flame retardant chemicals
REG. NO.UT 7062(IN)	☒ contain NO added flame retardant chemicals.
Certification is made by the manufacturer that the materials in this article are described in accordance with law.	The State of California has updated the flammability standard and determined that the fire safety requirements for this product can be met without adding flame retardant chemicals.
MADE FOR: GIGACLOUD TECHNOLOGY(USA)INC 4388 SHIRLEY AVENUE EL MONTE, CA 91731	The state has identified many flame retardant chemicals as being known to, or strongly suspected of, adversely impacting human health or development.
MFG. DATE: <u>07/2024</u> MADE IN VIETNAM	
Complies with U.S. CPSC requirements for upholstered furniture flammability.	

ASSEMBLY INSTRUCTION
ITEM: WF318142

DINING TABLE

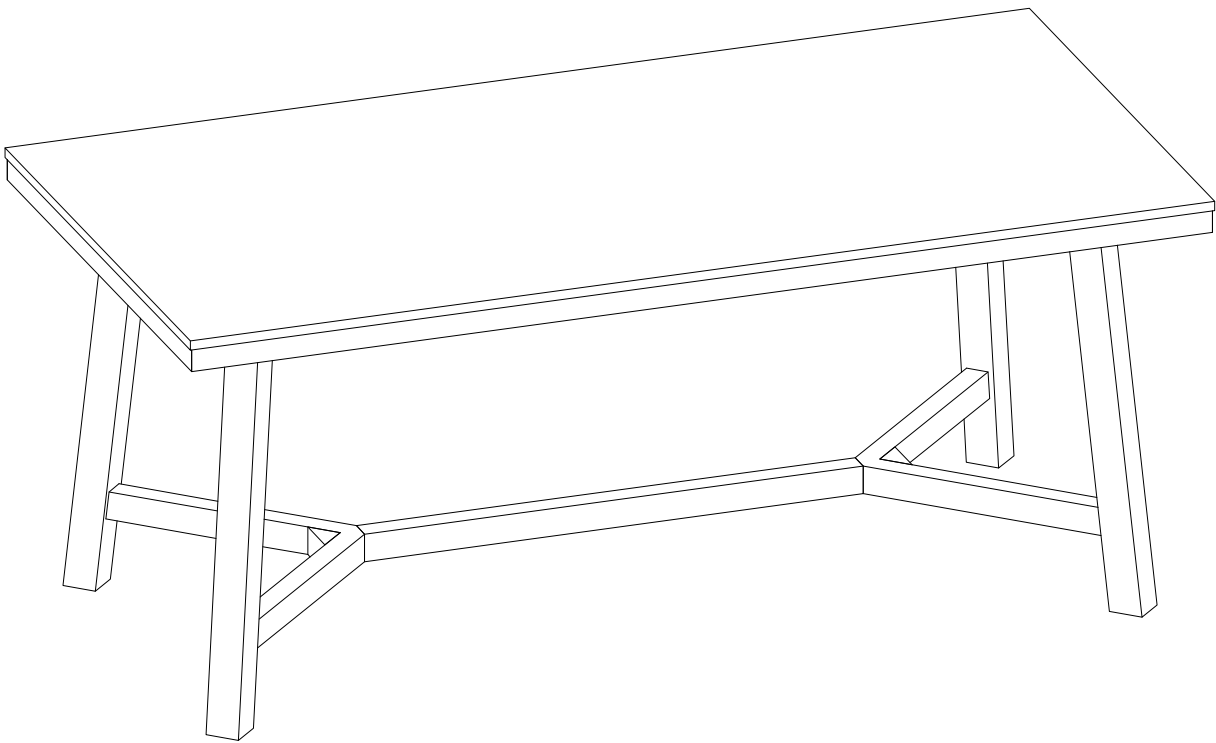

Please read these instructions fully before starting assembly:

 
 
 
 
1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastic supports from the metal insert of the legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.






ASSEMBLY INSTRUCTION

ITEM: WF318142

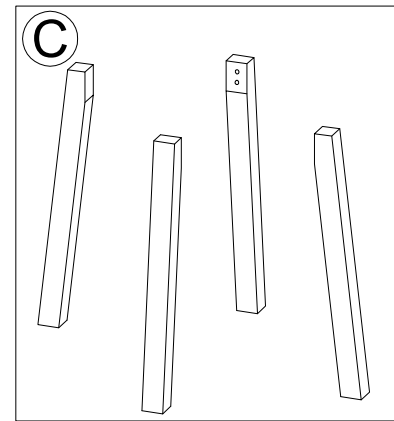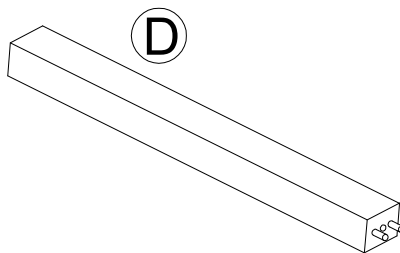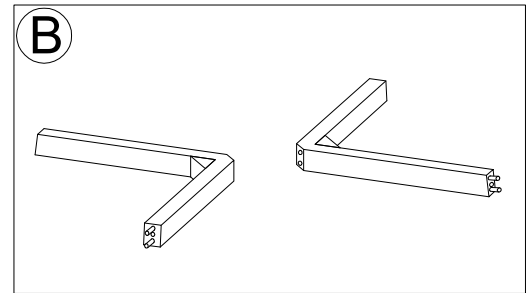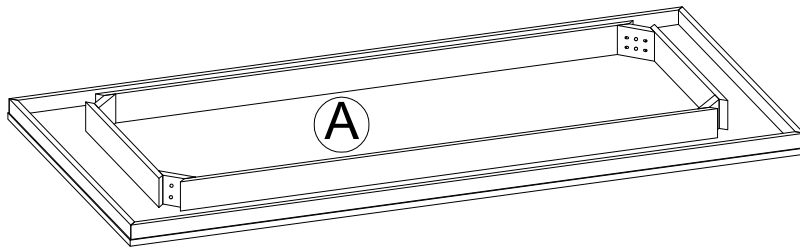


Part List For One

     Hardware List For One

A		TOP TABLE (1PC)	1	 Ø5/16"x60mm	BOLT (12PCS)
B		TABLE LEG (4PCS)	2	 Ø5/16"x75mm	LONG BOLT (2PCS)
C		STRETCHER (2PCS)	3	 Ø5/16"x13mm	SPRING WASHER (14PCS)
D		LONG STRETCHER (1PC)	4	 Ø5/16"x19mm	FLAT WASHER (14PCS)
			5	 M4	ALLEN KEY (1PC)


ASSEMBLY INSTRUCTION
ITEM: WF318142

 STEP 1

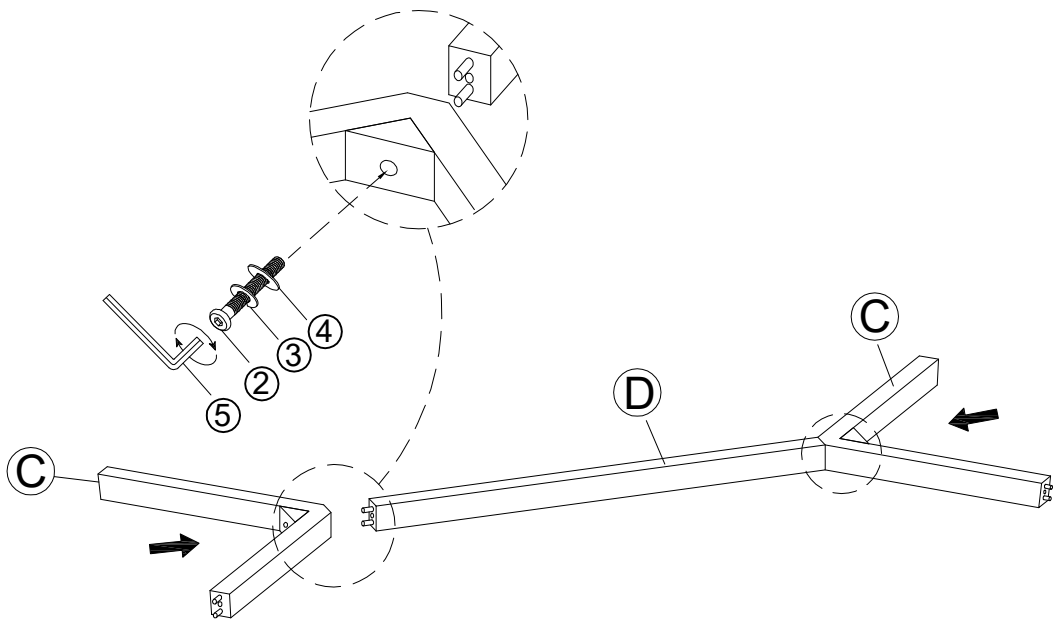

2	 Ø5/16"x75mm	LONG BOLT (2PCS)	3	 Ø5/16"x13mm	SPRING WASHER (2PCS)
4	 Ø5/16"x19mm	FLAT WASHER (2PCS)	5	 M4	ALLEN KEY (1PC)

 
STEP 2

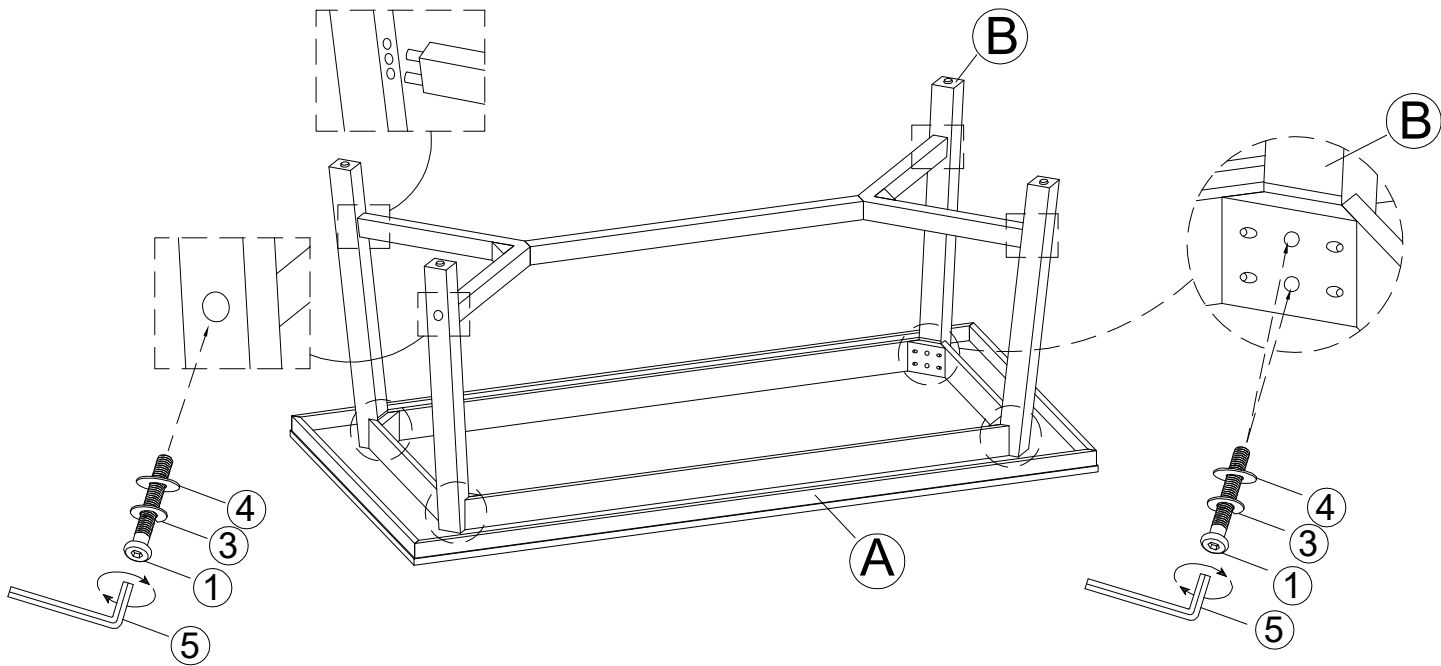

1	 Ø5/16"x60mm	LONG BOLT (12PCS)	3	 Ø5/16"x13mm	SPRING WASHER (12PCS)
4	 Ø5/16"x19mm	FLAT WASHER (12PCS)	5	 M4	ALLEN KEY (1PC)


ASSEMBLY INSTRUCTION
ITEM: WF318142

 COMPLETE

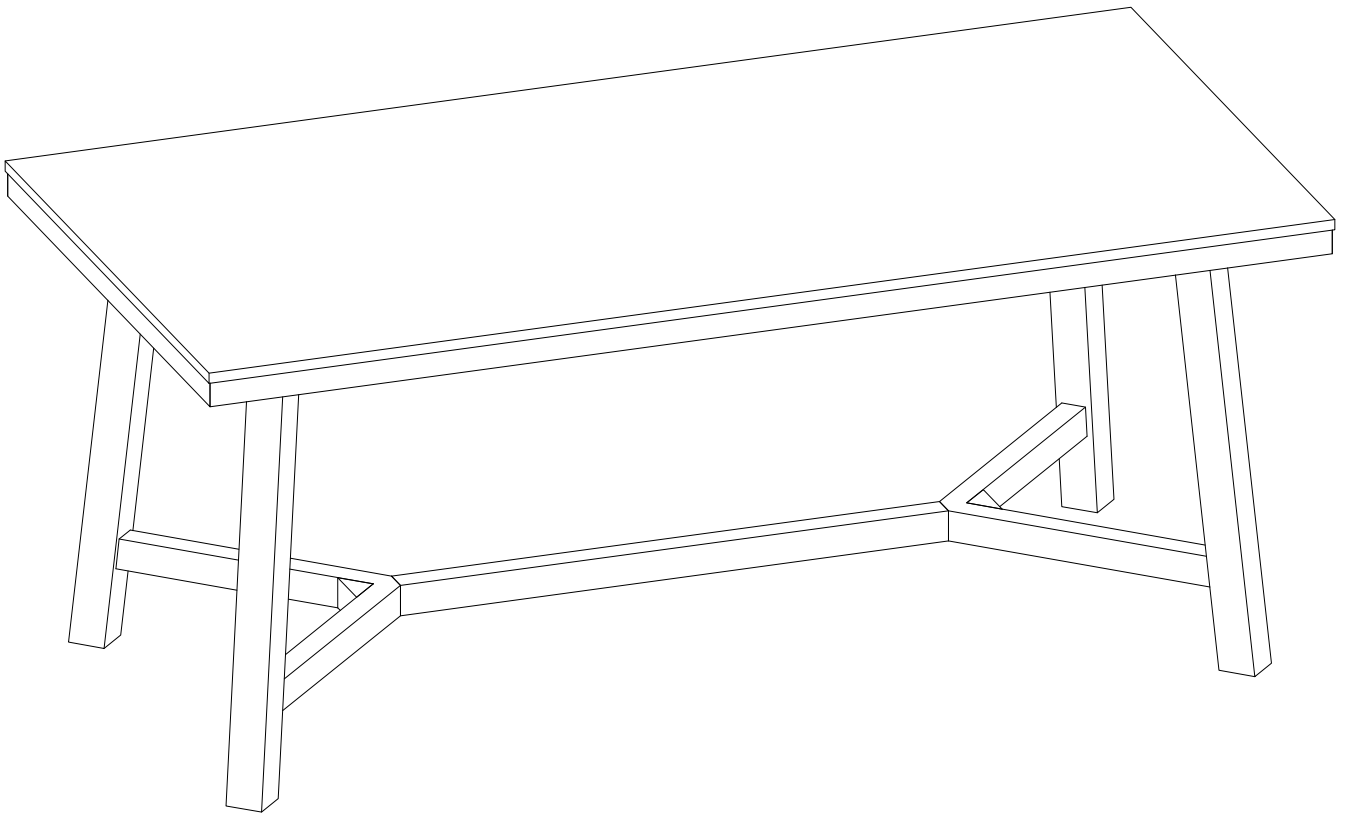

ASSEMBLY INSTRUCTION
ITEM: WF318143

 DINING BENCH

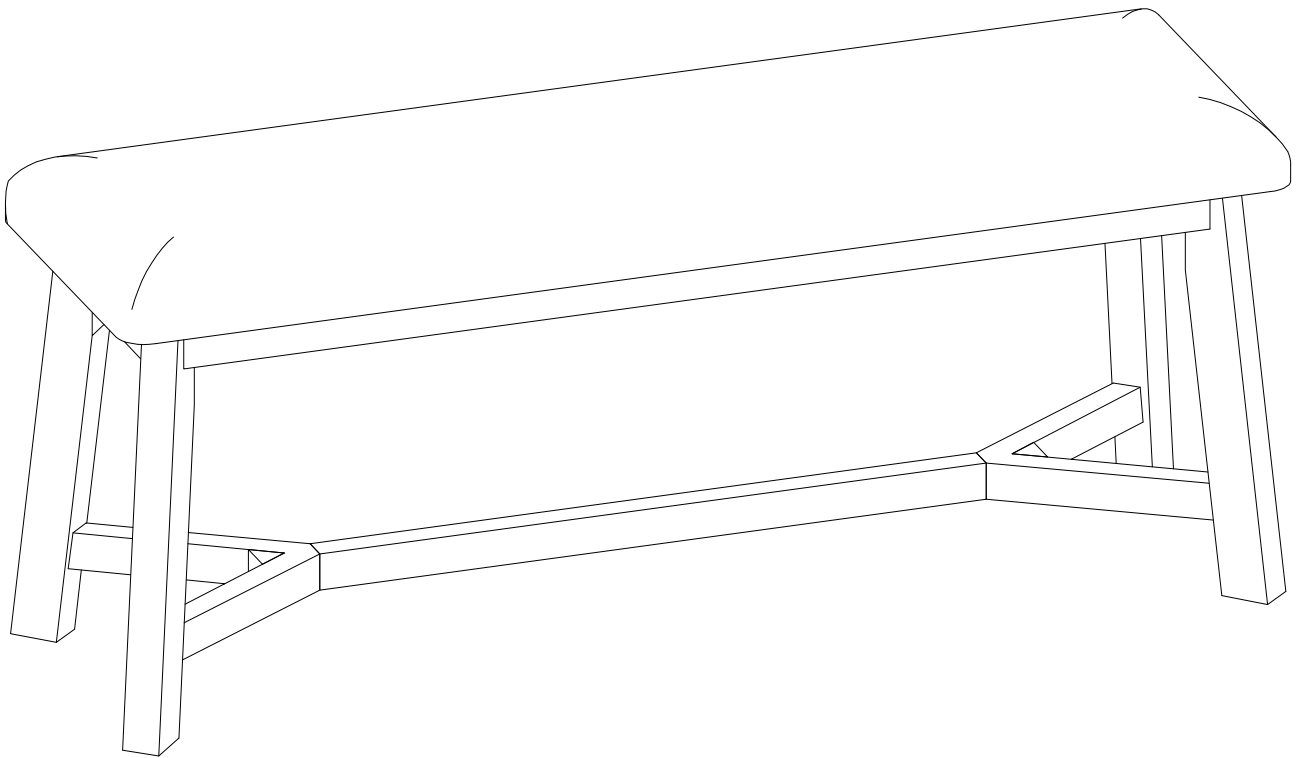

Please read these instructions fully before starting assembly:

 
 
 
 
1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the bench is fully assembled.
4. Unscrew the protective plastic supports from the metal insert of the legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.






ASSEMBLY INSTRUCTION

ITEM: WF318143

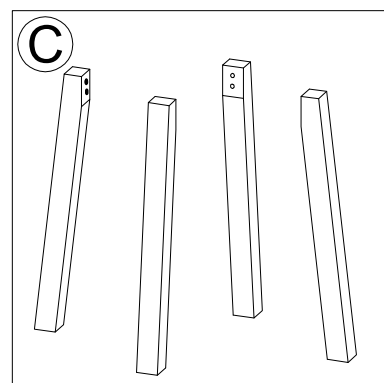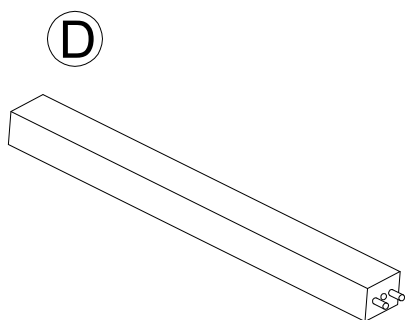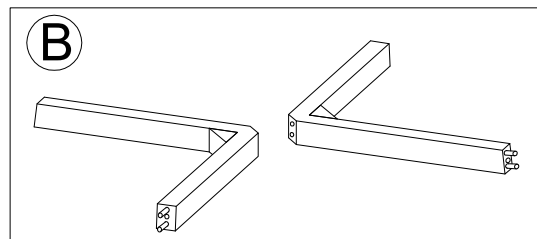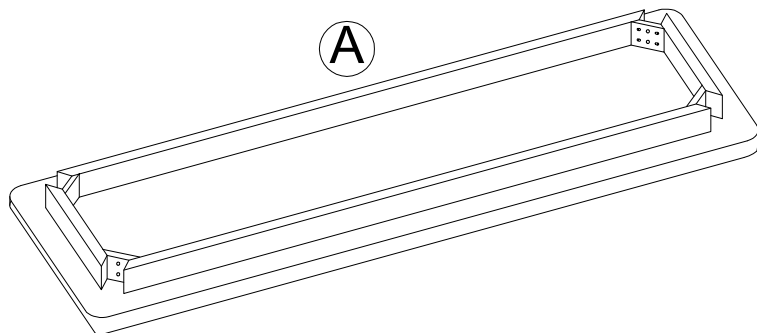


Part List For One

     Hardware List For One

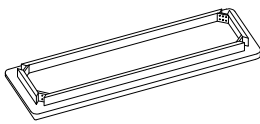	SEAT CUSHION (1PC)	 1 Ø1/4"x50mm	BOLT (12PCS)
	BENCH LEG (4PCS)	 2 Ø1/4"x65mm	LONG BOLT (2PCS)
	STRETCHER (2PCS)	 3 Ø1/4"x11mm	SPRING WASHER (14PCS)
	LONG STRETCHER (1PC)	 4 Ø1/4"x19mm	FLAT WASHER (14PCS)
		 5 M4	ALLEN KEY (1PC)


ASSEMBLY INSTRUCTION
ITEM: WF318143

 
STEP 1

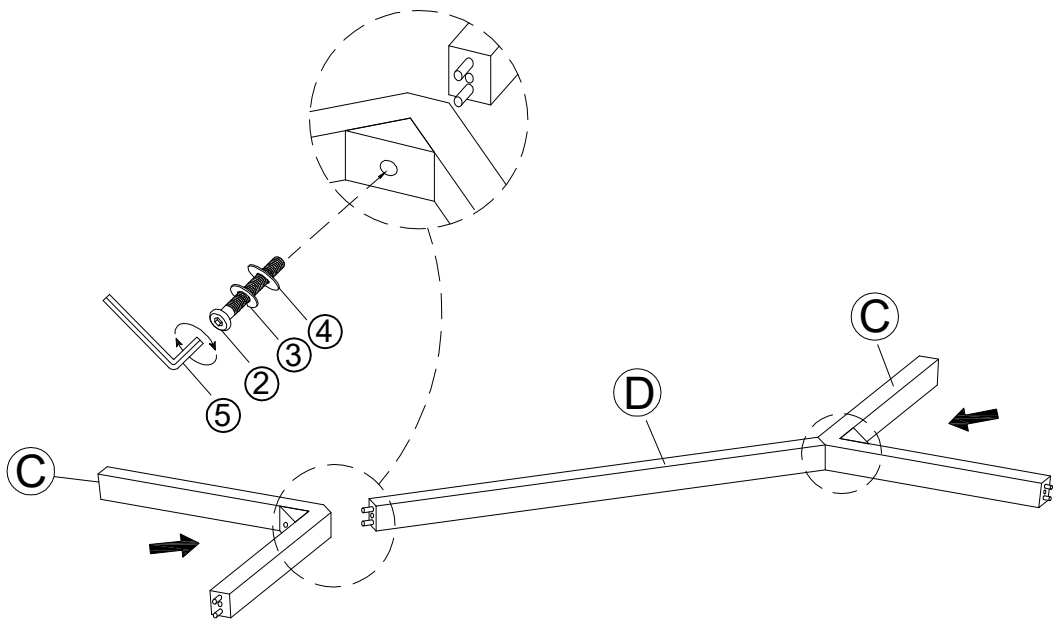

2  Ø1/4"x75mm	LONG BOLT (2PCS)	3  Ø5/16"x11mm	SPRING WASHER (2PCS)
4  Ø1/4"x19mm	FLAT WASHER (2PCS)	5  M4	ALLEN KEY (1PC)

  
STEP 2

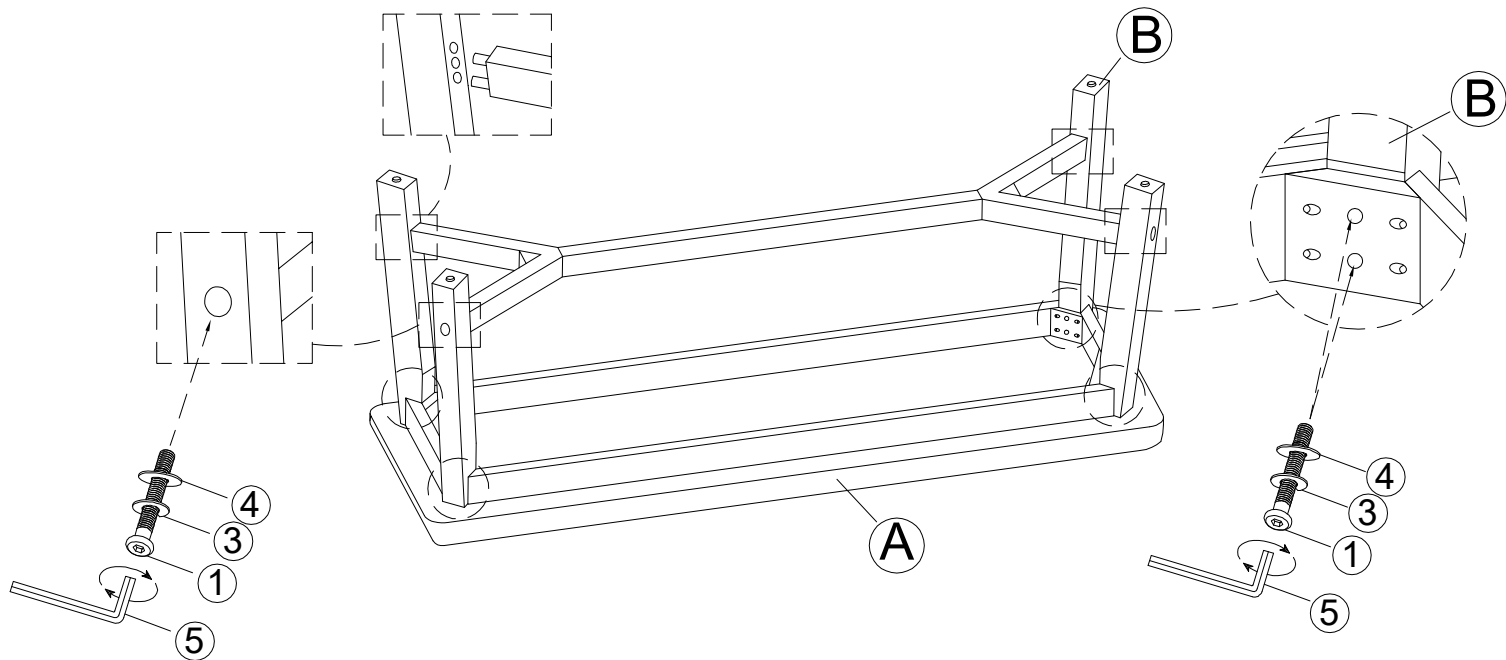

1  Ø1/4"x60mm	LONG BOLT (12PCS)	3  Ø5/16"x11mm	SPRING WASHER (12PCS)
4  Ø1/4"x19mm	FLAT WASHER (12PCS)	5  M4	ALLEN KEY (1PC)


ASSEMBLY INSTRUCTION
ITEM: WF318143

 COMPLETE

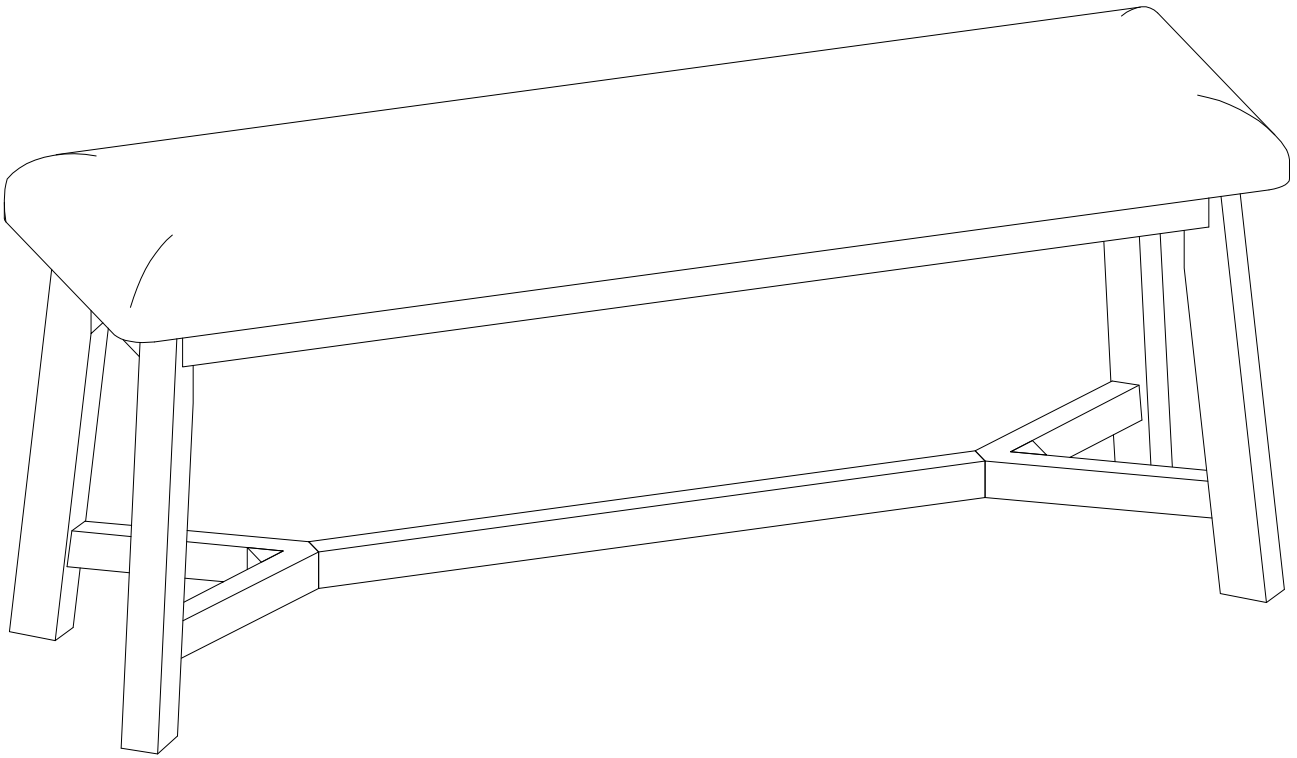

ASSEMBLY INSTRUCTION
ITEM: WF318144

 DINING CHAIR

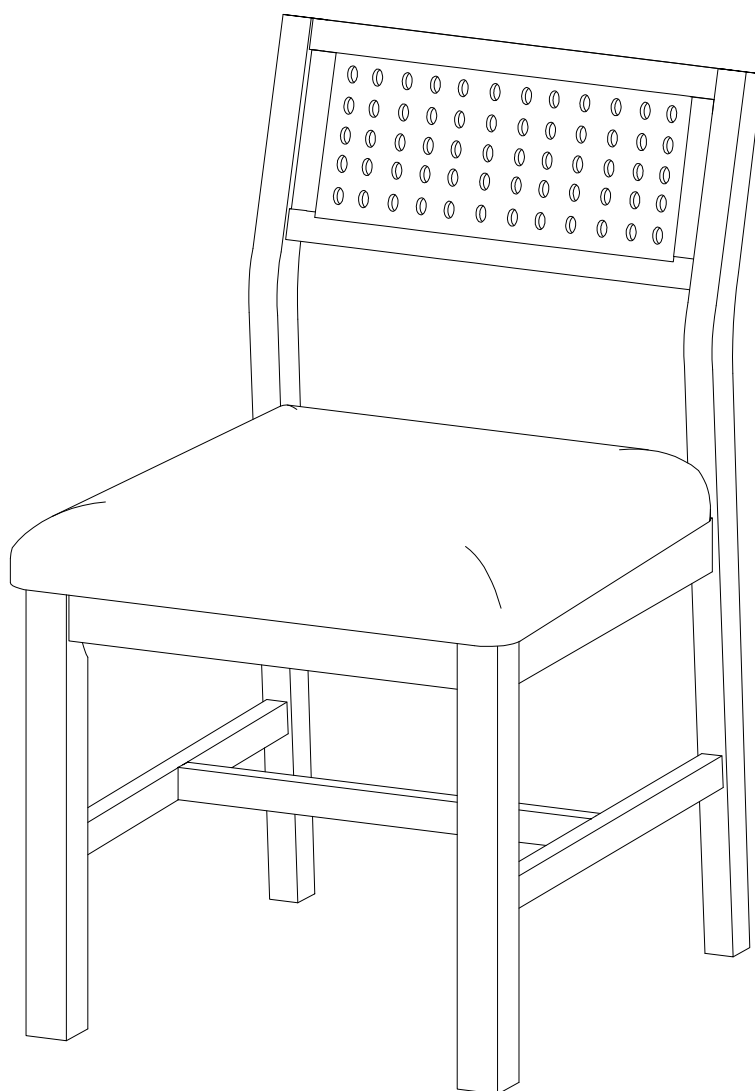

Please read these instructions fully before starting assembly:

 
 
 
 
 
 
 
1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the chair is fully assembled.
4. Unscrew the protective plastic supports from the metal insert of the legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.











ASSEMBLY INSTRUCTION

ITEM: WF318144

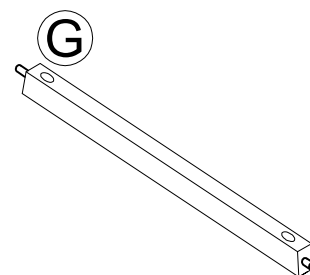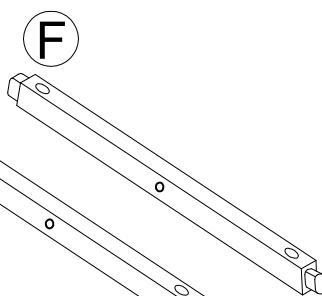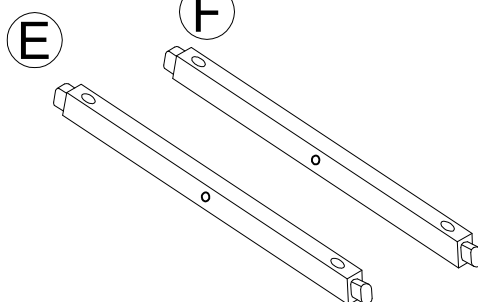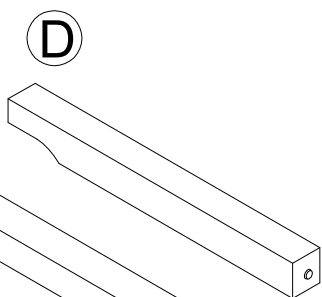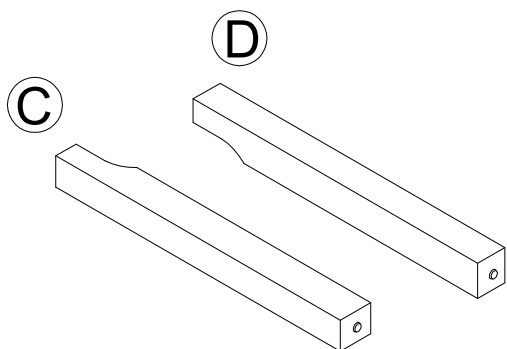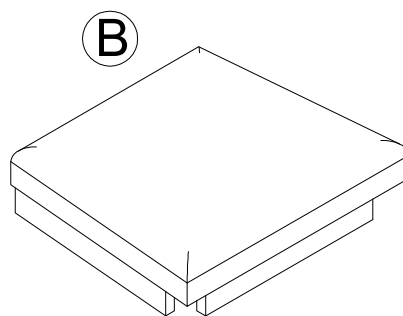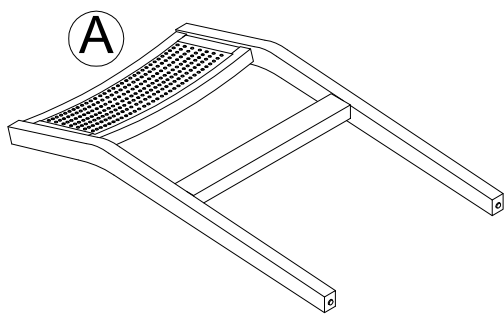


Part List For One

          
Hardware List For One

A		CHAIR BACK (1PC)	1	 Ø1/4"x80mm	LONG BOLT (4PCS)
B		SEAT CUSHION (4PCS)	2	 Ø1/4"x60mm	BOLT (4PCS)
C		LEFT LEG (2PCS)	3	 Ø1/4"x38mm	BOLT (2PCS)
D		RIGHT LEG (1PC)	4	 Ø1/4"x11mm	SPRING WASHER (10PCS)
E		SIDE STRECHER (1PC)	5	 Ø1/4"x19mm	FLAT WASHER (10PCS)
F		SIDE STRECHER (1PC)	6	 M4	ALLEN KEY (1PC)
G		CENTER STRECHER (1PC)	7	 #8x38mm	WOOD SCREW (6PCS)


ASSEMBLY INSTRUCTION
ITEM: WF318144

  STEP 1

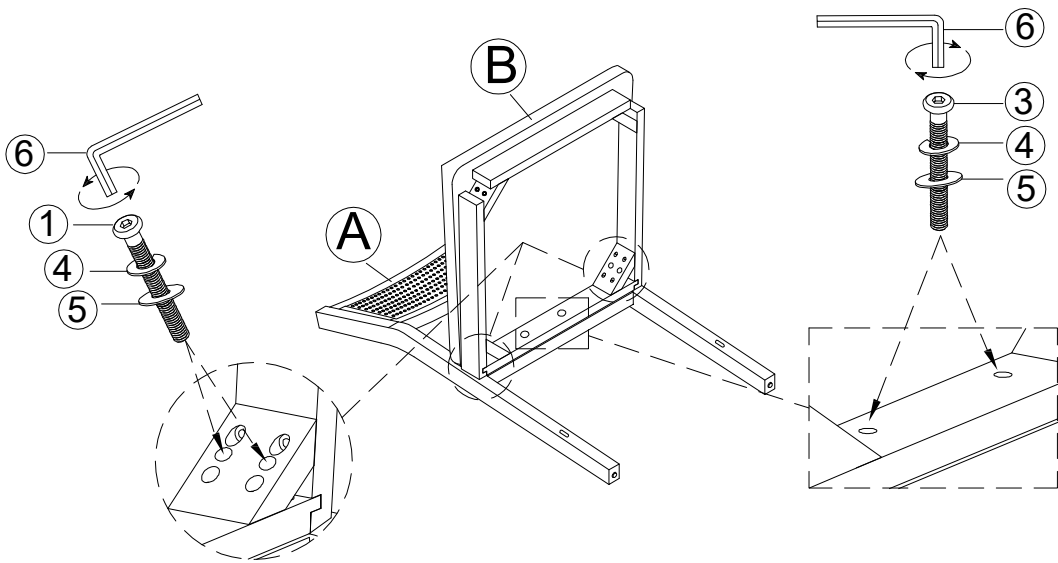

1  Ø1/4"x80mm	LONG BOLT (4PCS)	3  Ø1/4"x38mm	BOLT (2PCS)
4  Ø1/4"x11mm	SPRING WASHER (10PCS)	5  Ø1/4"x19mm	FLAT WASHER (10PCS)
6  M4	ALLEN KEY (1PC)		

 STEP 2

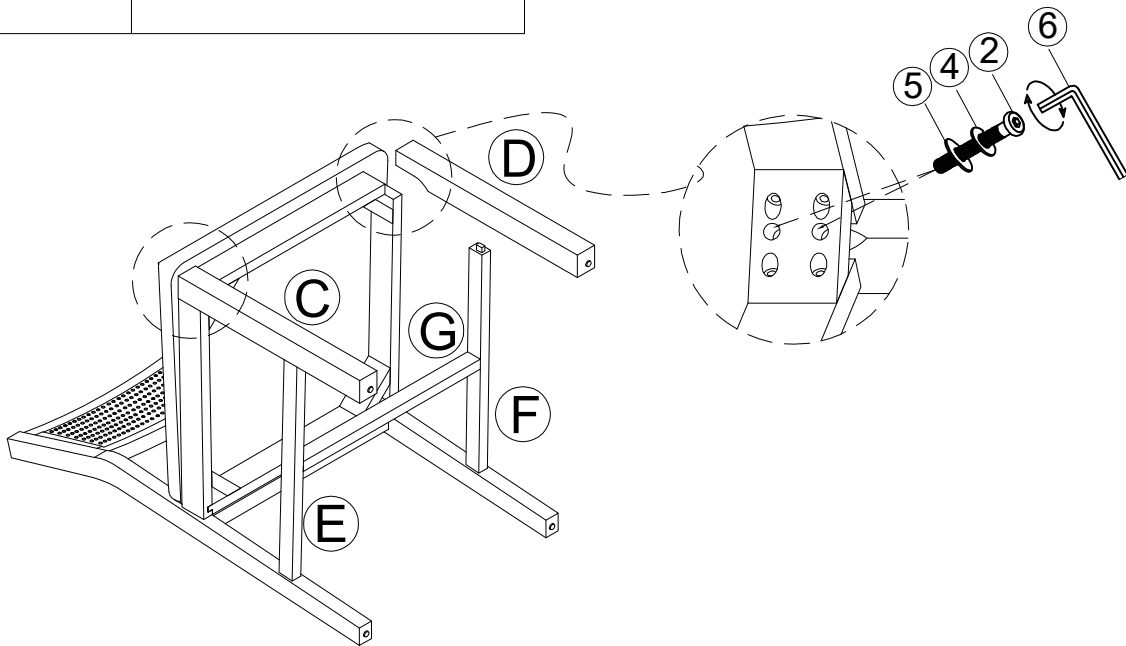


2  Ø1/4"x60mm	BOLT (4PCS)	4  Ø1/4"x11mm	SPRING WASHER (10PCS)
5  Ø1/4"x19mm	FLAT WASHER (10PCS)	6  M4	ALLEN KEY (1PC)


ASSEMBLY INSTRUCTION

ITEM: WF318144

 STEP 3

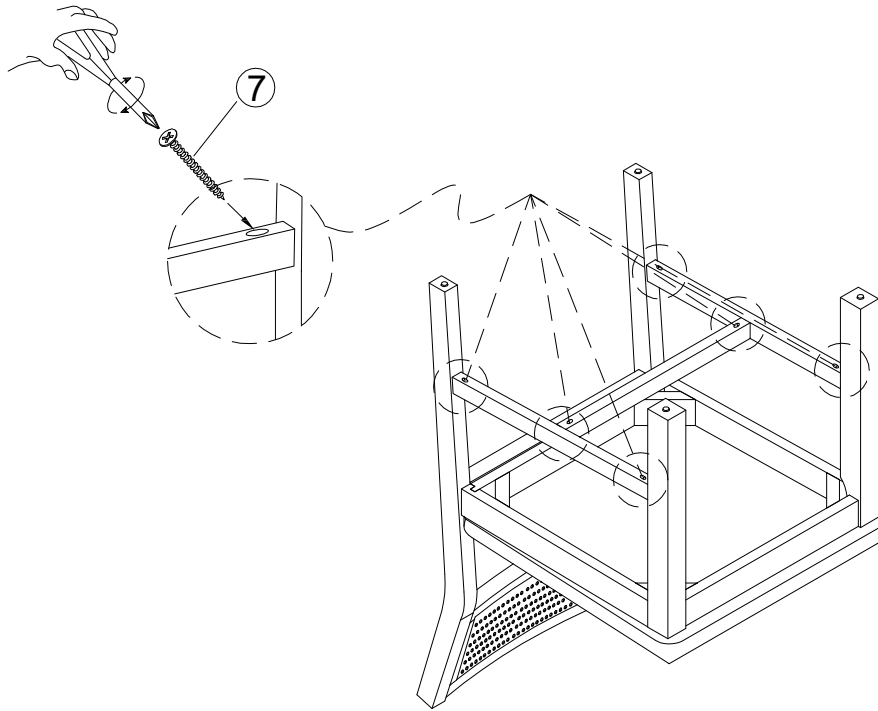

7

 

#8x38mm

WOOD SCREW
(6PCS)

COMPLETE

