


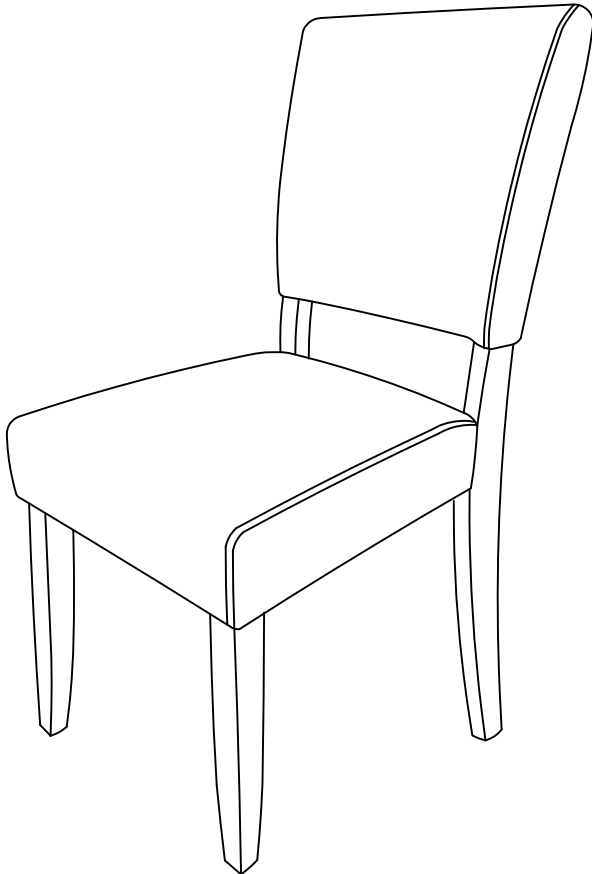








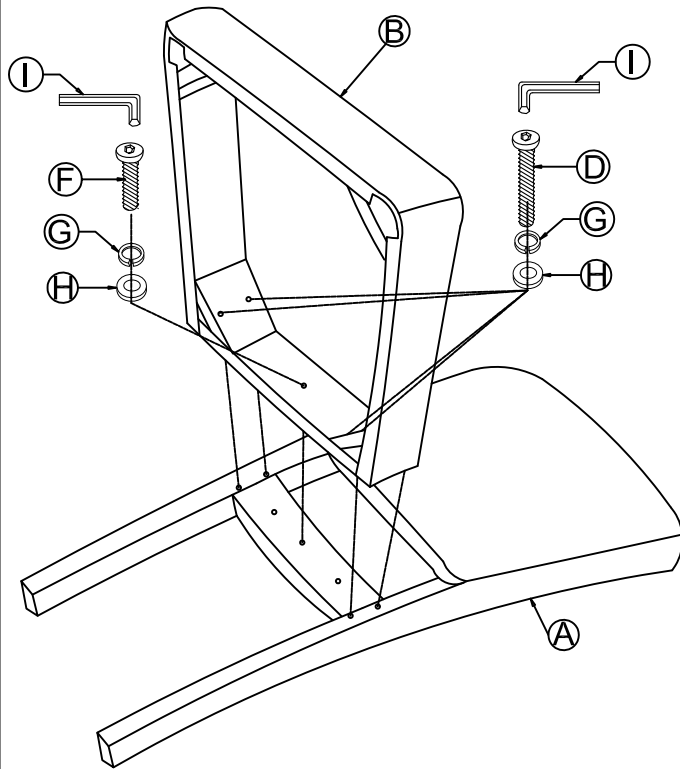
## Assembly Instructions, #10186 Wood Upholstered Back Dining Chair



A: Chair Back	
B: Seat Pad	
C: (2) Legs	
D: (4) Long Bolts	
E: (4) Medium Bolts	
F: Short Bolt	
G: (9) Lock Washers	
H: (9) Flat Washers	
I: Allen Wrench	


## Step 1

Fasten the seat frame onto chair back with one short bolt (F & G & H) in the center and four long bolts (D & G & H) on the sides. Do not tighten.



## Step 2

Place the chair assembly upside down on a table. Attaching two front legs and fasten with four medium bolts (E & G & H). Do not tighten bolts.

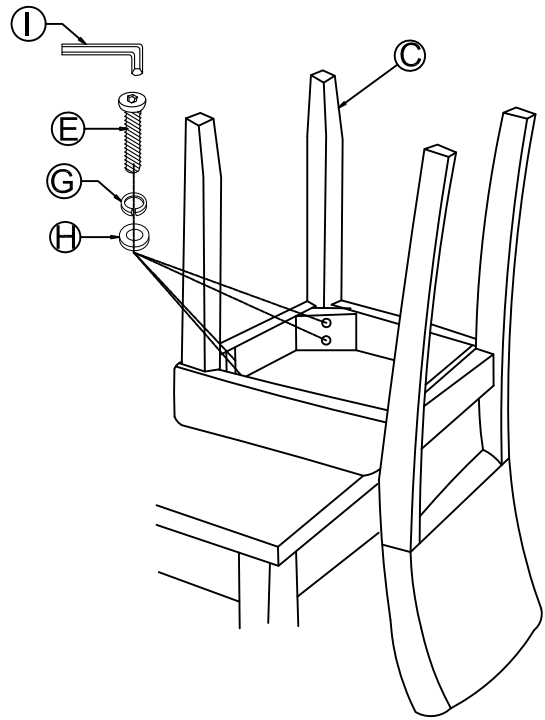

## Step 3

Place the chair right side up on an even surface. Now tighten all bolts when all legs are properly leveled.

