



Portfolio® is a registered trademark of LF, LLC. All rights reserved.


ITEM #0048185  
0048196

**FLUSHMOUNT  
CEILING FIXTURE**

MODEL #FY09-004  
FY09-005

Français p. 8

Español p. 15

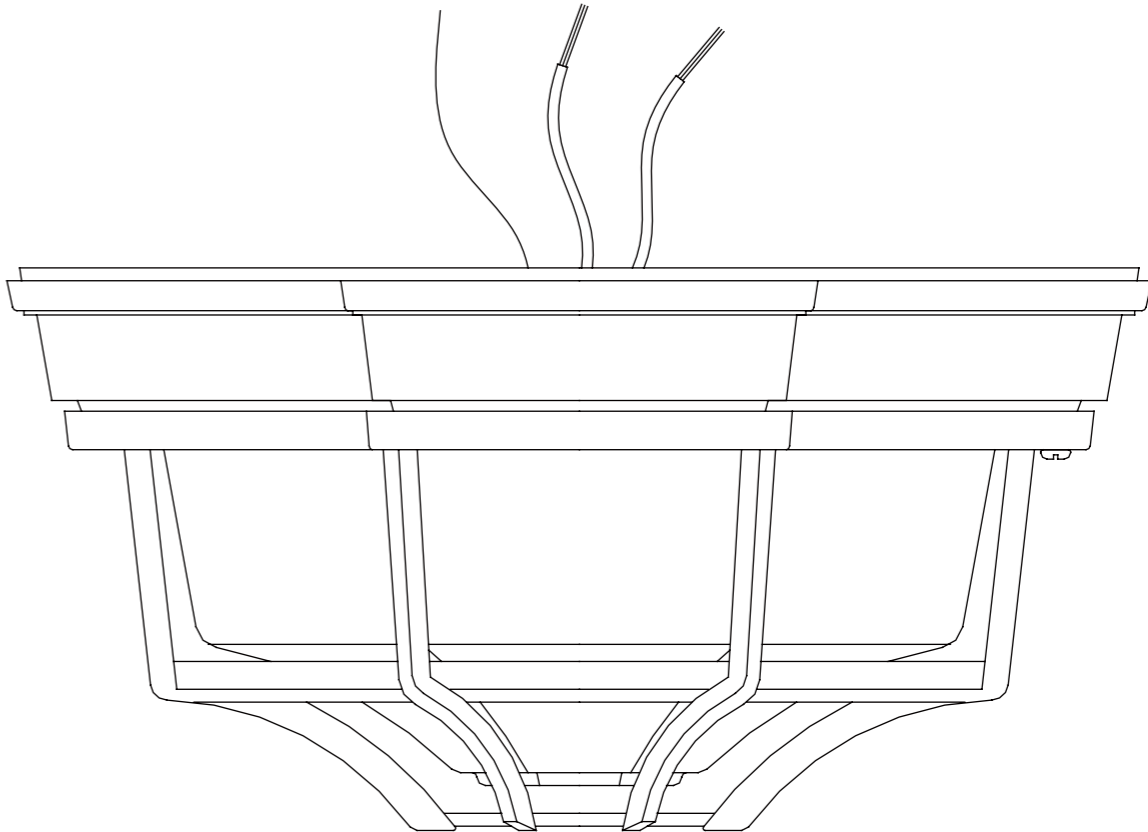


**ATTACH YOUR RECEIPT HERE**

Serial Number \_\_\_\_\_ Purchase Date \_\_\_\_\_




**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PACKAGE CONTENTS

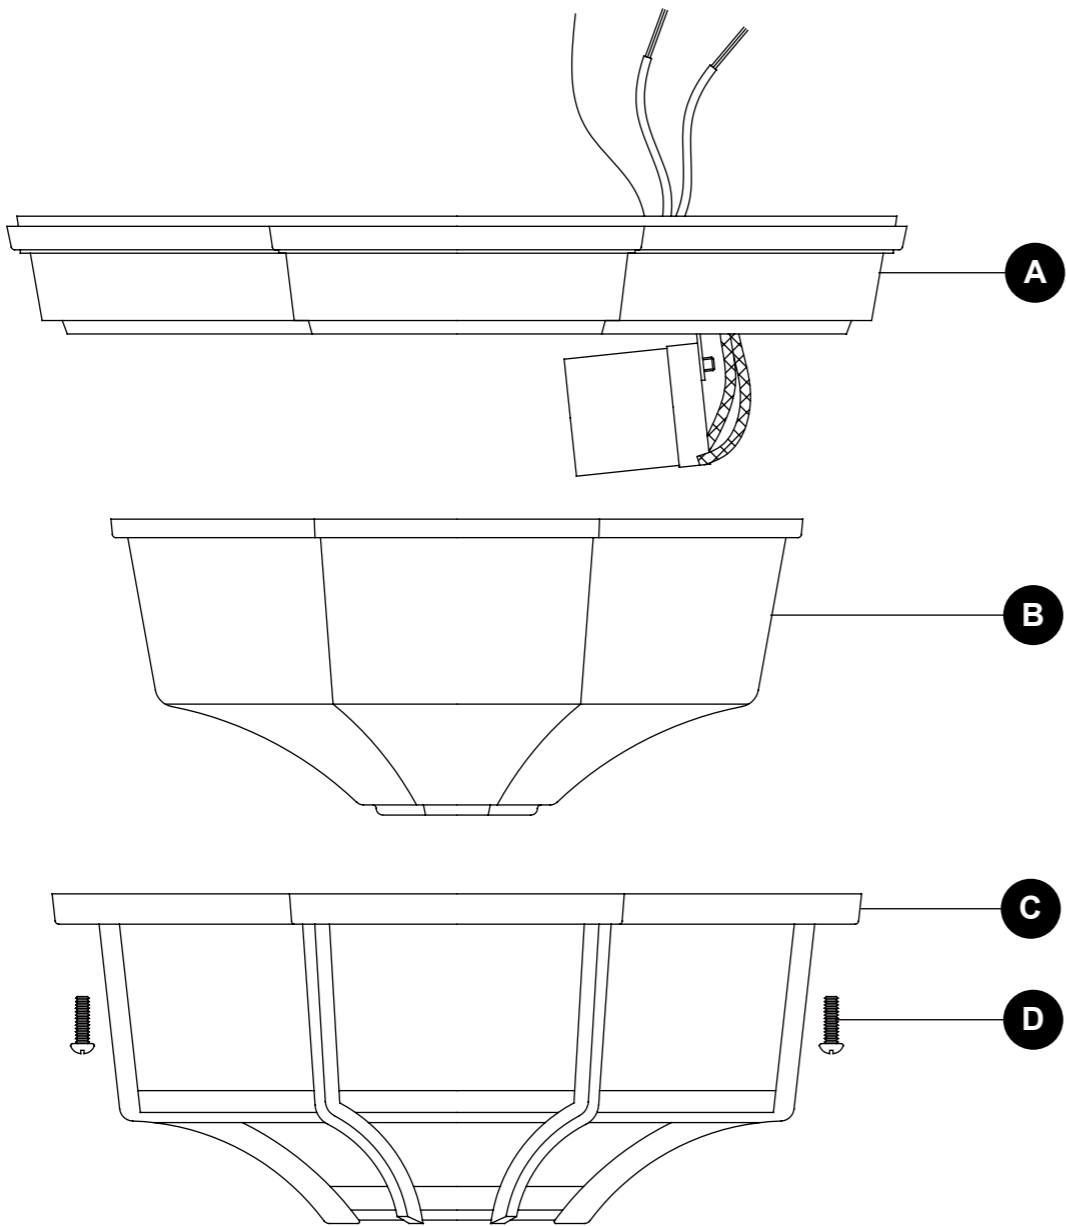

PART	DESCRIPTION	QUANTITY
A	Ceiling plate	1
B	Glass shade (preassembled to Cage (C))	1
C	Cage (preassembled to Ceiling plate (A))	1
D	Thumbscrew (preassembled to Ceiling plate (A))	2

HARDWARE CONTENTS (shown actual size)

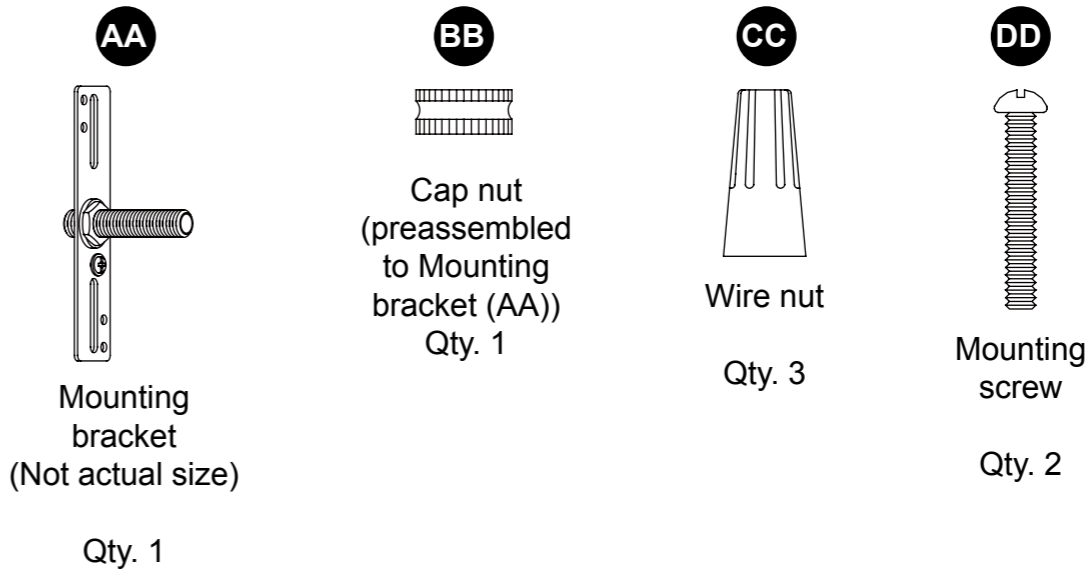

**! SAFETY INFORMATION**

Please read and understand this entire manual before attempting to assemble, operate or install the product.

**! WARNING**

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- MINIMUM 90°C SUPPLY CONDUCTORS.

**CAUTION**

- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- If in doubt about electrical installation, consult a licensed electrician.

**PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

**Estimated Assembly Time: 35 minutes**

 
 

Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Electrical tape.

Helpful Tools (not included): Wire strippers, Pliers, Wire cutters, Safety glasses, Step ladder.

ASSEMBLY INSTRUCTIONS




1. Remove cap nut (BB) from mounting bracket (AA). Attach mounting bracket (AA) to the outlet box (not included) with mounting screws (DD). Note: The preassembled screw on mounting bracket (AA) should protrude away from the outlet box.

Hardware Used

AA	Mounting bracket		x 2
BB	Cap nut		x 1
DD	Mounting screw		x 2

2. Remove the glass shade (B) and cage (C) from the ceiling plate (A) by loosening the two thumbscrews (D).

3. Strip 3/4 in. of insulation from wire ends. Twist stripped ends together with pliers (not included), black to black (power) and white to white (neutral). Attach copper wire to ground wire. **Helpful hint:** If necessary, attach copper ground wire to grounded outlet box.

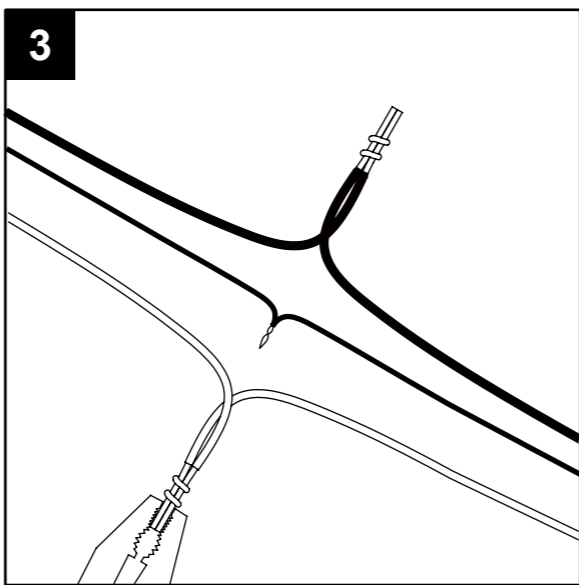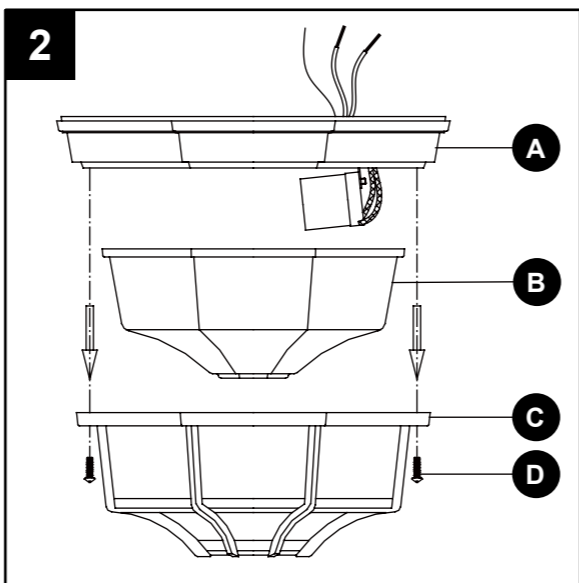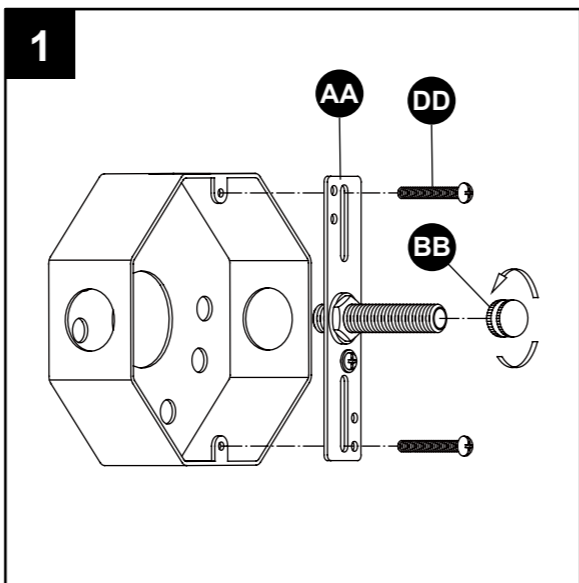

ASSEMBLY INSTRUCTIONS



4. Attach wire nuts (CC). Tape wire nuts (CC) and wires together.

Hardware Used




CC	Wire nut		x 3
----	----------	---	-----

5. Place ceiling plate (A) onto the mounting bracket (AA). Secure with cap nut (BB).

 Hardware Used


AA	Mounting bracket		x 2
BB	Cap nut		x 1

6. Install light bulbs (not included). Use one 60-watt max. standard-base bulb or one 13-watt standard-base CFL bulb.

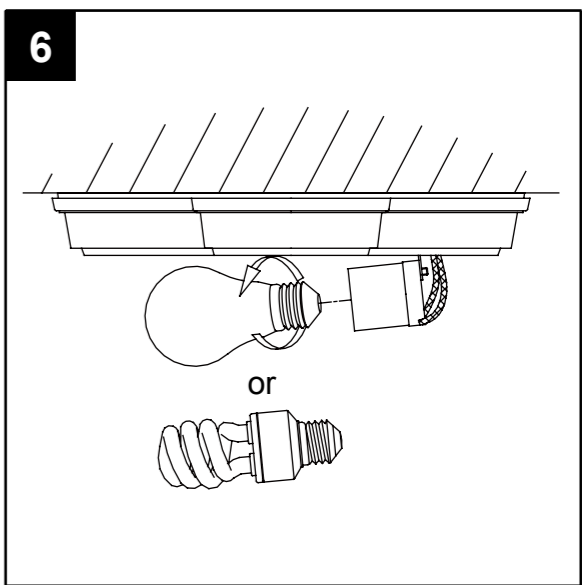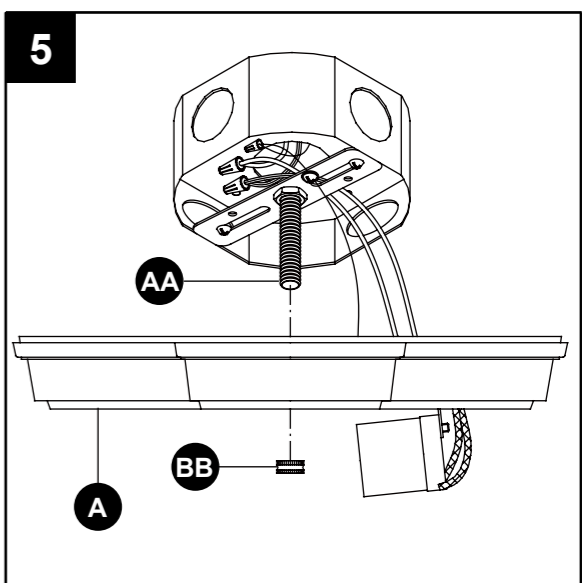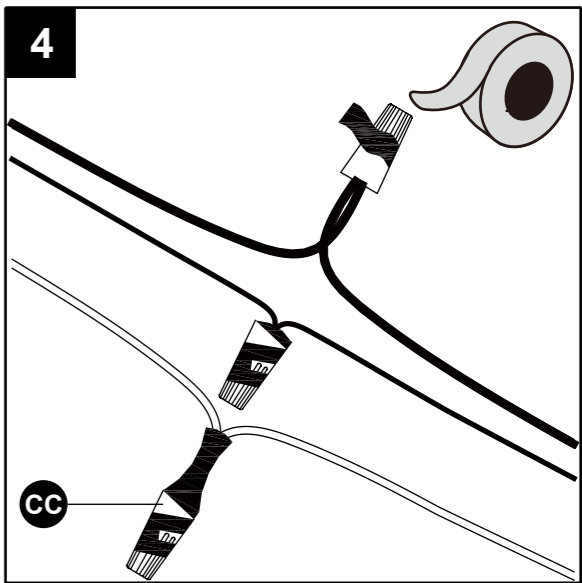

ASSEMBLY INSTRUCTIONS

7. Put glass shade (B) into cage (C). Place cage (C) onto the ceiling plate (A). Secure with thumbscrews (D).

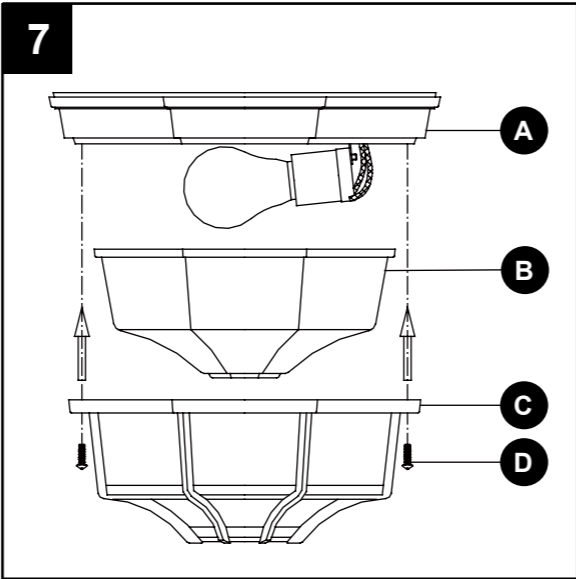

• Note: Before use, add silicone glass sealant between the ceiling and the canopy to completely cover the gap.

CARE AND MAINTENANCE

• Shut off main power supply before wiping product with damp cloth or window cleaner. Do not use abrasives.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb won't light.	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch.	1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring. 4. Test or replace switch.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.


WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for three (3) years from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
AA	Mounting bracket	139-103009
BB	Cap nut	110-130600
CC	Wire nut	375-022000
DD	Mounting screw	109-042600

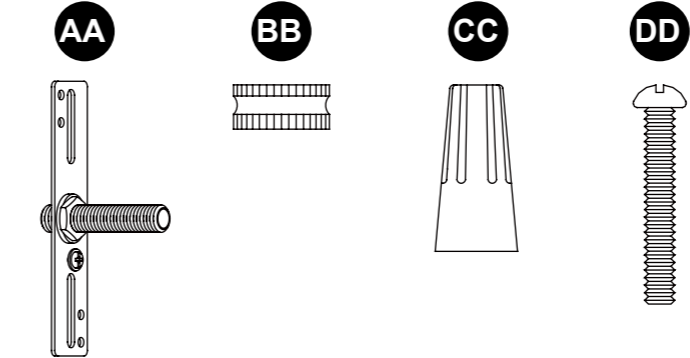

Printed in China

Portfolio® is a registered trademark of LF, LLC. All rights reserved.