If you have any questions, please feel free to contact us. Email: service@aminalife.com

User's Manual



INSTALLATION INSTRUCTIONS

Installation Manual





BEFORE INSTALLATION

NO.	Item	Qty
1	Switch valve body (hot)	1
2	Spout	1
3	Switch valve body (cold)	1
4	Diverting valve body	1
5	Hand shower	1
6	Hand shower seat	1
7	Inlet pipe	4
8	1/2 Takeover	1
9	Shower hose	1
10	Gravity ball	1

This product is suitable for working pressure of 0.1-0.5Mpa and applicable temperature range of 5-85°C.

(Please pay attention to safety when installing the faucet.)



Check accessories

Standard List of Accessories:

When you open the product packaging, please check whether the objects in it are consistent with the main body and accessories you purchased. If there is any inconsistency, please contact our company or our distributor.

Note: 1.Accessories are subject to change without prior notice if the change does not affect usage;

2. The appearance of the product is subject to the physical objects you receive, and the schematic diagram is only for reference.

INSTALLATION STEPS

4.72"

(Recommended

size)

Ø0.98"

Ø1.3"~1.38^{"J} Ø1.3"~1.38"

This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.

4.72"

(Recommended

size)

Ø1.3"~1.38'



4.72"

(Recommended

size)

Ø1.3"~1.38"

4.72"

(Recommended

size)

Before installing the product, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the product.



Ceramic drilling:

1. Measure the distance between the hole and the hole according to your own needs (or punch the center distance according to the size given in Figure 2), and the hole size is mainly based on Figure 2 on the left.

2. Clean up the drilling position and install it.



1. Check whether the diameter of the through hole of the installation table is consistent with the size marked in Figure 2, if not, please make a hole.

2. Take the faucet out of the box, remove the lock nut and rubber washer on the tooth tube, install them one by one according to Figure 3, and screw the two water inlet hoses into the switch valve core in turn (hot left, cold right).

3. The two water inlet hoses installed on the switch valve core are threaded through the through hole of the table, and the bottom is sequentially sleeved. Rubber washer and lock nut are installed, and the lock nut is tightened and then fixed with a wrench.

4. Connect the two water inlet pipes to the angle valve in the order of hot left and cold right.

5. Install the hose according to the diagram in Figure 3 to complete the full installation (as shown in Figure 4).

INSTALLATION DIMENSION



CLEANING CARE

In order to keep the appearance of product clean, bright and good performance, please take care of the product as follows;

1.Rinse with water only and dry with soff cotton cloth;

2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;

3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc;

4.Do not use acid cleaner, or cleaner and soap with insoluble gran etc;

5.In the process of use, mud my accumulate in the bubbler and make the water flow show, The bubbler can be unscrewed, rinsed with water, and then installed back in place.



