


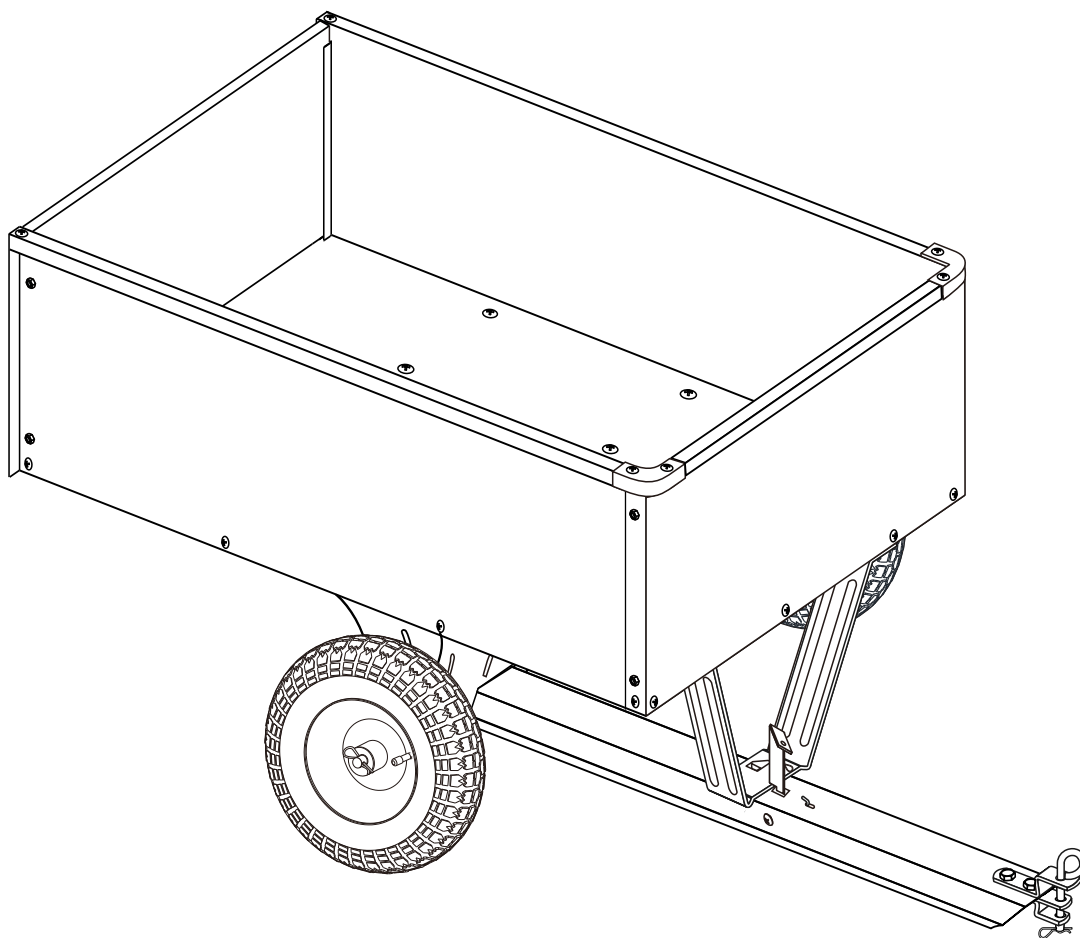

ITEM #0806320
DUMP CART
MODEL #DU0001

Español p. 12


Blue Hawk & Design® is a registered trademark of LF, LLC. All rights reserved.




ATTACH YOUR RECEIPT HERE

Serial Number _____

Purchase Date _____

 **Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-877-888-8225, 8 a.m. - 8 p.m., EST, Monday - Friday.


PACKAGE CONTENTS

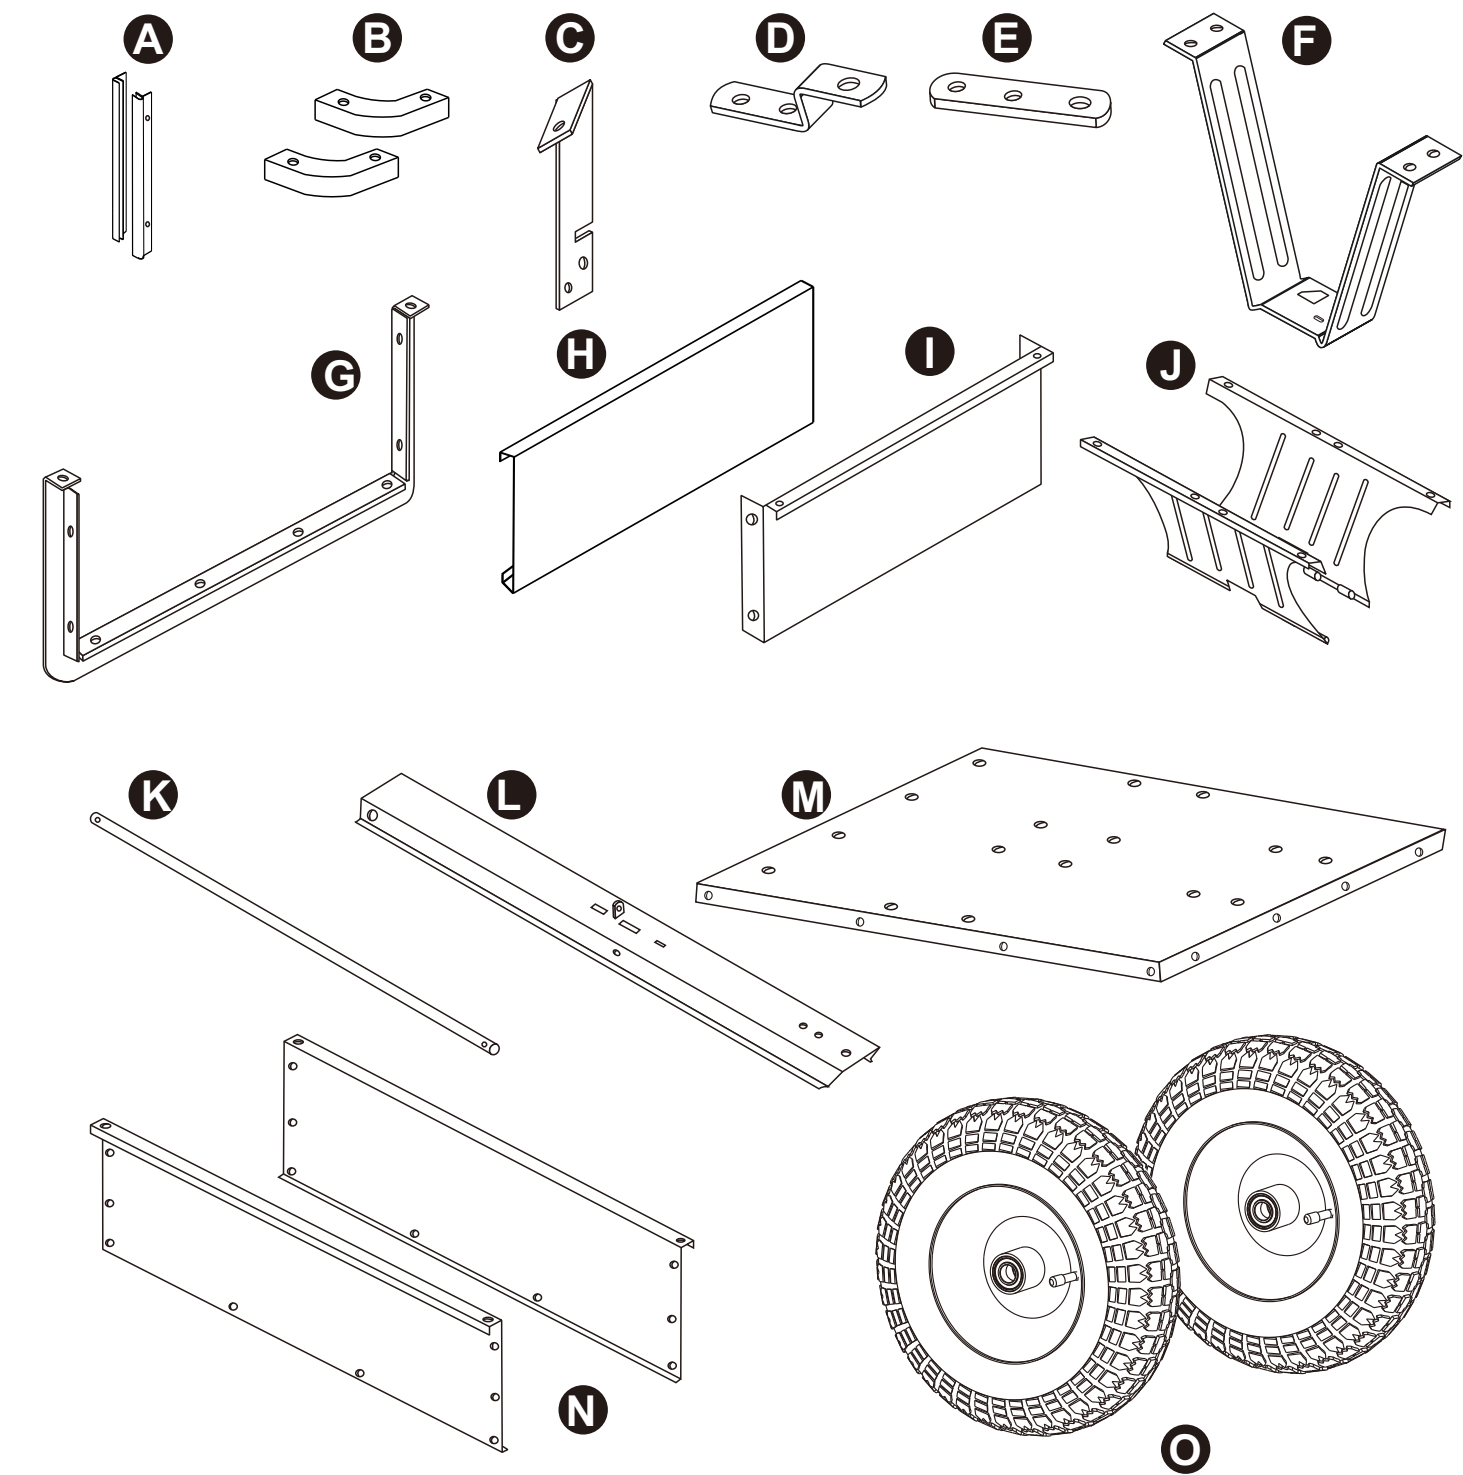

PART	DESCRIPTION	QUANTITY	PART	DESCRIPTION	QUANTITY
A	Tailgate Guides	2	I	Front Panel	1
B	Corner Caps	2	J	Wheel Bracket	2
C	Release Pedal	1	K	Axle	1
D	Hitch Bracket	2	L	Tongue	1
E	Middle Plate	1	M	Bed Panel	1
F	Tongue Support	1	N	Side Panel	2
G	Tailgate Reinforcement Bracket	1	O	Wheel	2
H	Tailgate	1			


HARDWARE CONTENTS

AA

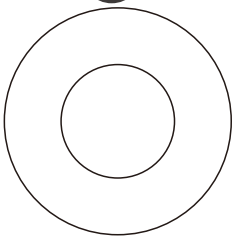


Ø16 mm Flat Washer
Qty. 4

BB




Hitch Pin
Qty. 1

CC




Spacer
Qty. 2

DD

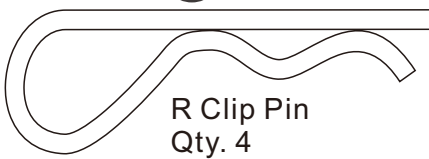


R Clip Pin
Qty. 4

EE

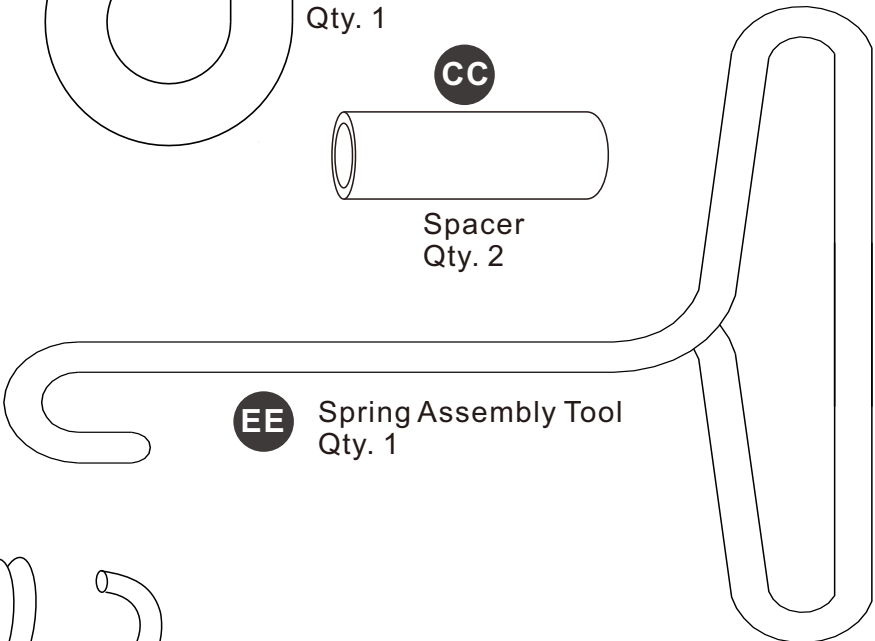


Spring Assembly Tool
Qty. 1

FF

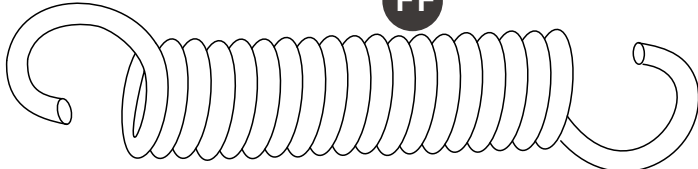


Spring
Qty. 1

GG




M8 x 95 mm Screw
Qty. 1

HH

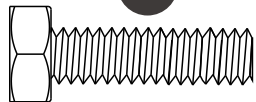


M8 x 30 mm Hex Bolt
Qty. 2

II

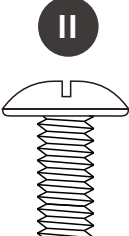


M8 x 16 mm Screw
Qty. 12

JJ




M6 x 12 mm Screw
Qty. 30

KK




Ø8 mm Lock Washer
Qty. 14

LL




Ø6 mm Lock Washer
Qty. 30

MM

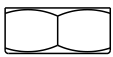


M8 Hex Nut
Qty. 14

 NN



M6 Hex Nut
Qty. 30

OO



M8 Lock Nut
Qty. 1

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.



WARNING:

- A full capacity load is 400 lbs. evenly distributed over the wheels. **DO NOT** exceed rated capacity.
- **NOT** recommended to carry full loads on slopes, which can cause loads to shift to one side and damage wheels or side panels.
- Always begin with the transmission in first (low) and gradually increase speed as conditions permit.
- Cart only to be used with lawn tractor or ATV.
- Cart is **NOT** for highway use.
- **DO NOT** at anytime carry passengers in this cart. It is not designed to carry passengers.
- **DO NOT** allow children to operate the tractor or the cart attachment.
- **DO NOT** drive too close to a creek or ditch.
- **DO NOT** exceed 10 mph when towing.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes

 

 
Tools Required for Assembly (not included): Phillips Screwdriver, 10 mm and 14 mm Wrenches.


Helpful Tools for Assembly (included): Spring Assembly Tool

ASSEMBLY INSTRUCTIONS

1. Attach the tailgate reinforcement bracket (G) to the bed panel (M) with **four** sets of M6 x 12 mm screws (JJ), Ø6 mm lock washers (LL) and M6 hex nuts (NN). Do not tighten until **STEP 2**.

Hardware Used

JJ	M6 x 12 mm Screw		x4
LL	Ø6 mm Lock Washer		x4
NN	M6 Lock Nut		x4

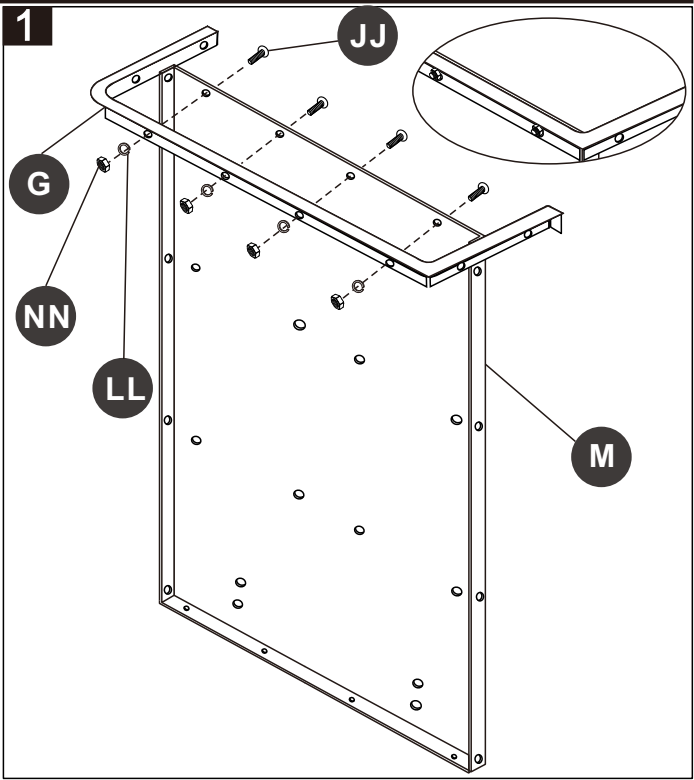




2. Attach the side panels (N) to the bed panel (M) with **six** sets of M6 x 12 mm screws (JJ), Ø6 mm lock washers (LL) and M6 lock nuts (NN). Tighten all hardware assembled in Steps 1 & 2. Make sure the **bottom holes** on both side panels (N) are left for step 4.




CAUTION

 Do not leave the cart unattended in upright position during assembly. A falling cart can cause personal injury! Pay close attention to the stability of the cart while it remains in an upright position. For stability, assemble on a smooth, level surface.




Hardware Used

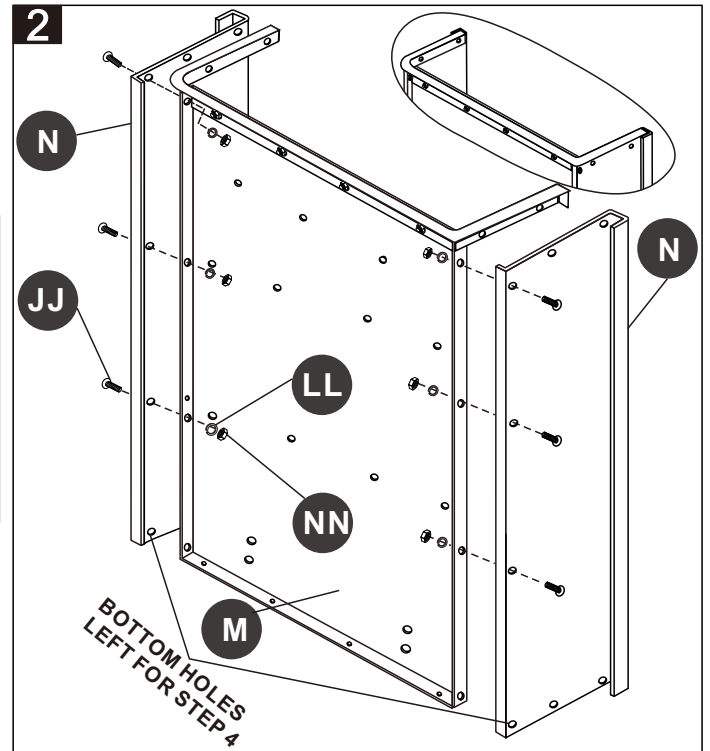
JJ	M6 x 12 mm Screw		x6
LL	Ø6 mm Lock Washer		x6
NN	M6 Lock Nut		x6



3. Attach the two tailgate guides (A) with channel facing downward to the side panels (N) with **four** sets of M6 x 12 mm screws (JJ), Ø6 mm lock washers (LL) and M6 lock nuts (NN). Tighten.




Hardware Used

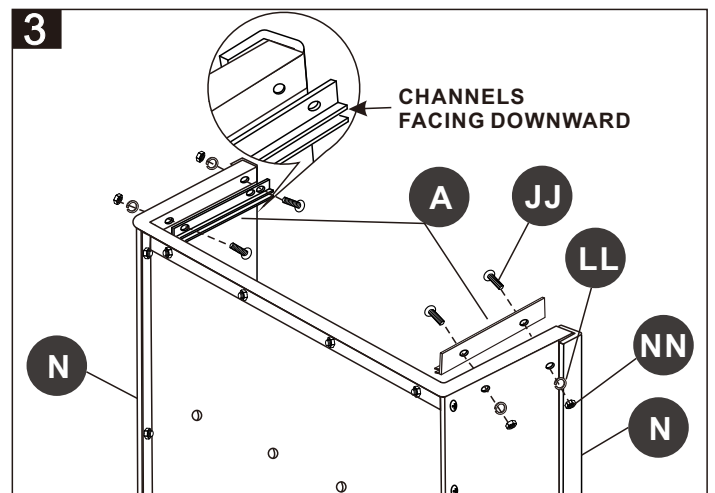
JJ	M6 x 12 mm Screw		x4
LL	Ø6 mm Lock Washer		x4
NN	M6 Lock Nut		x4



 4. Reverse the cart bed. Attach the front panel (I) to the cart bed and secure with **ten** sets of M6 x 12 mm screws (JJ), Ø6 mm lock washers (LL) and M6 lock nuts (NN). Tighten.




Hardware Used

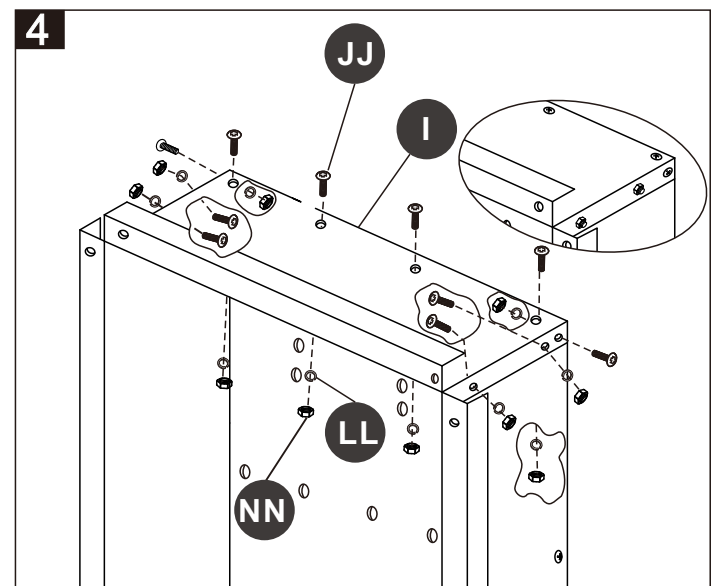
JJ	M6 x 12 mm Screw		x10
LL	Ø6 mm Lock Washer		x10
NN	M6 Lock Nut		x10



 5. Attach the corner caps (B) to the front ends of cart bed using **four** sets of M6 x 12 mm screws (JJ), Ø6 mm lock washers (LL) and M6 lock nuts (NN). Then secure the rear ends of cart bed with another **two** sets of M6 x 12 mm screws (JJ), Ø6 mm lock washers (LL) and M6 lock nuts (NN). Tighten all hardware.




Hardware Used

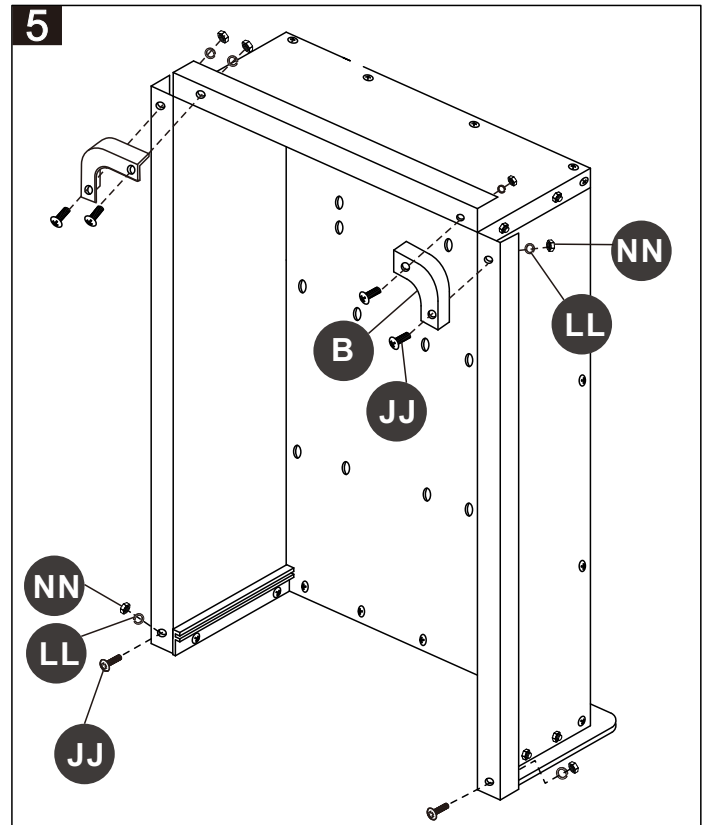
JJ	M6 x 12 mm Screw		x6
LL	Ø6 mm Lock Washer		x6
NN	M6 Lock Nut		x6



6. Attach the wheel brackets (J) to the cart bed with **eight** sets of M8 x 16 mm screws (II), Ø8 mm lock washers (KK) and M8 hex nuts (MM). Do not tighten until **STEP 9**.

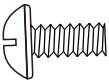


Hardware Used

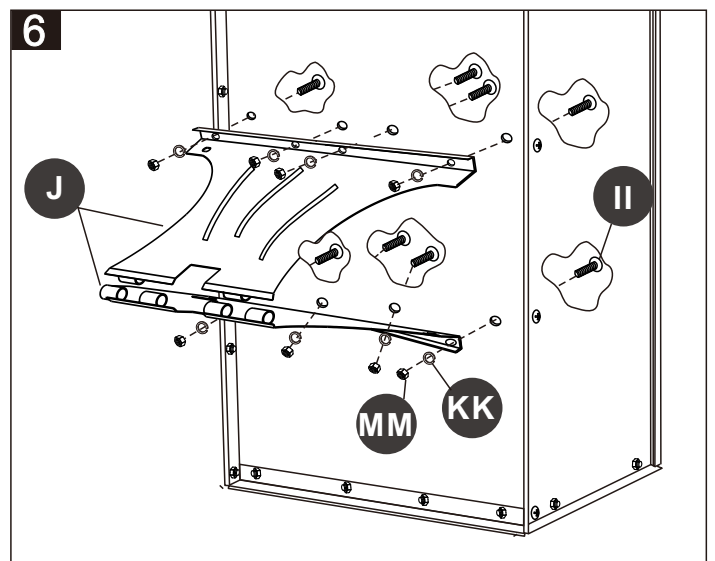
II	M8 x 16 mm Screw		x8
KK	Ø8 mm Lock Washer		x8
MM	M8 Lock Nut		x8



7. Attach the tongue support (F) with spike facing as shown to the cart bed with **four** sets of M8 x 16 mm screws (II), Ø8 mm lock washers (KK) and M8 hex nuts (MM). Tighten.

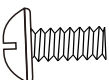
 



Hardware Used

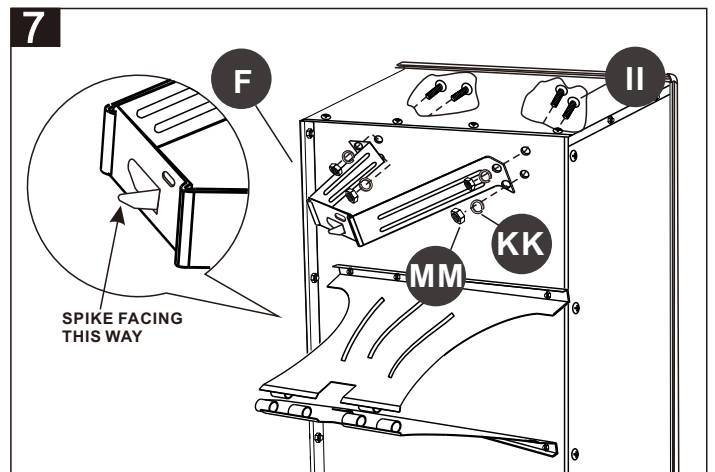
II	M8 x 16 mm Screw		x4
KK	Ø mm Lock Washer		x4
MM	M8 Lock Nut		x4




8. Insert the release pedal (C) through the slot on the tongue (L), thread the M8 x 95 mm bolt (GG) through the tongue (L), spacer (CC), release pedal (C) and the other spacer (CC) on each side. Tighten with the M8 hex lock nut (OO). Then hook the spring (FF) onto the end hole on the pedal release (C), stretch the other end of spring (FF) to the hole on the tongue (L) with the help of spring assembly tool (EE).

Hardware Used

GG	M8 x 95 mm Screw		x1
CC	Spacer		x2
OO	M8 Lock Nut		x1
FF	Spring		x1
EE	Spring Assembly Tool		x1

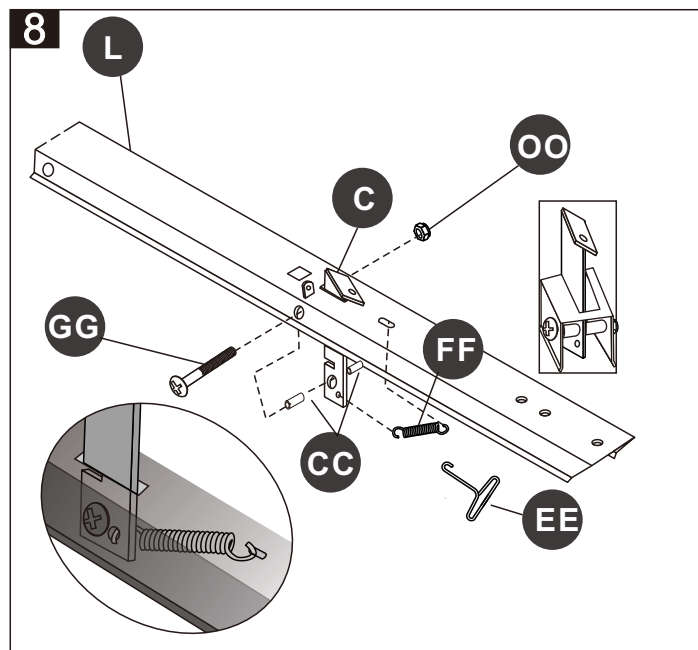

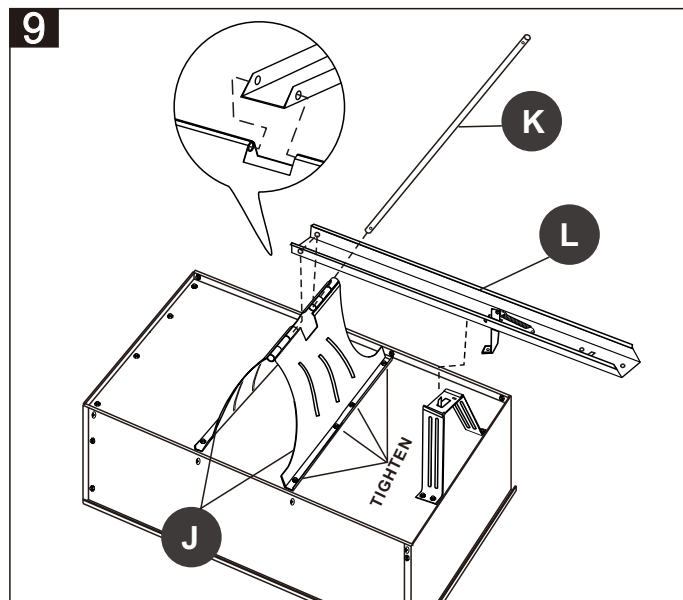


9. Lay the cart bed down, position the tongue (L) into the wheel brackets (J). Slide the axle (K) through the wheel brackets (J) and tongue (L). Tighten the hardware left from **STEP 6**.



10. Attach a wheel (O) (with valve stem facing out) to the axle (K) with two Ø16 mm flat washers (AA), then secure with one R clip pin (DD). Repeat for the other end of axle (K).

Hardware Used


AA	Ø16 mm Flat Washer		x4
DD	R Clip Pin		x2

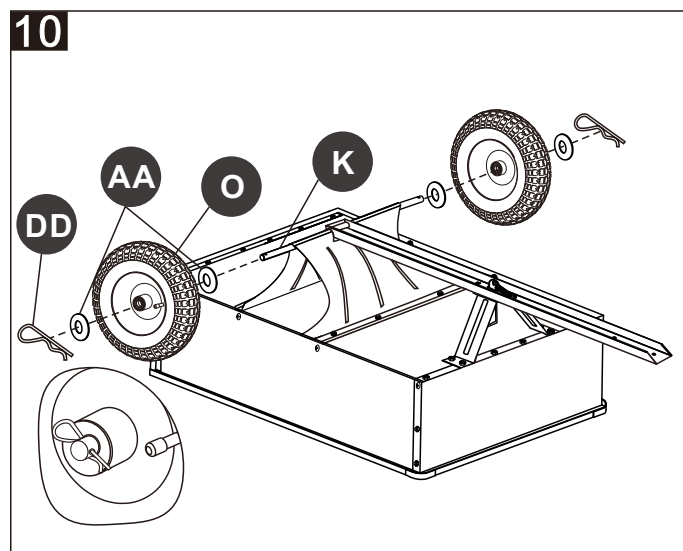

11. Turn the cart right side up, thread an R clip pin (DD) through the peg on the tongue to lock to prevent accidental dumping. Remove the R clip pin (DD) and step on the release pedal (C) to dump load.

Hardware Used


DD R Clip Pin  x1

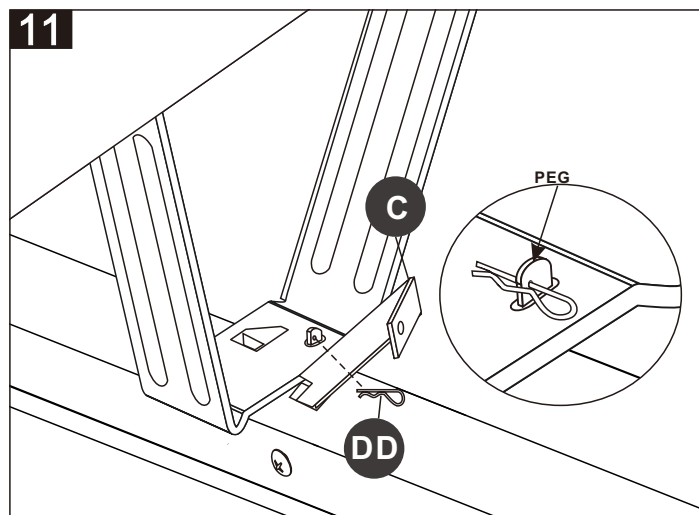

12. Attach the hitch brackets (D) and middle plate (E) to the tongue (L) with **two** sets of M8 x 30 mm hex bolts (HH), Ø8 mm lock washers (KK) and M8 hex lock nuts (MM). Tighten. Insert the hitch pin (BB) into the hitch brackets (D) and middle plate (E), then secure with an R clip pin (DD).

Hardware Used


HH M8 x 30 mm Hex Bolt  x2

KK Ø8 mm Lock Washer  x2


MM M8 Lock Nut  x2

BB Hitch Pin  x1

DD R Clip Pin  x1

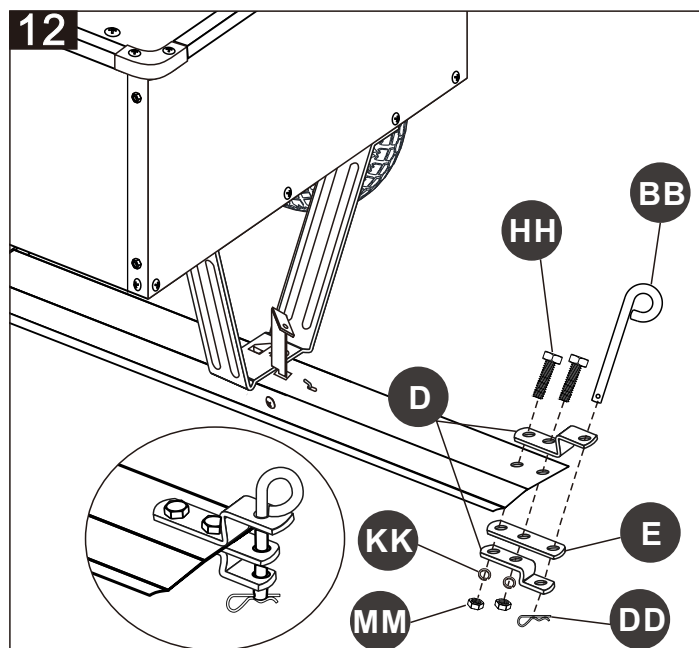

13. Slide the tailgate (H) down through the channels on the tailgate guides (A).

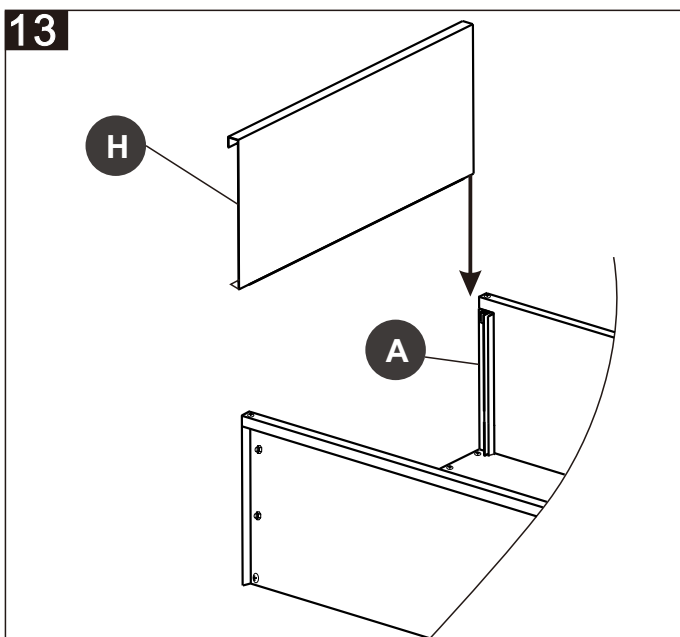

OPERATING INSTRUCTIONS

USING YOUR UTILITY DUMP CART

1. **DO NOT** exceed rated capacity of 400 lbs. (182 kg).
2. **NEVER** tow the dump cart with cart bed raised.
3. **ALWAYS** secure and lock the utility cart to the vehicle hitch before operating.
4. **DO NOT** overfill the utility dump cart. Overflow loads can cause the cart and the towing vehicle to lose traction and skid out of control.
5. **ONLY** fill the dump cart to a comfortable dumping load. Extremely heavy loads will be difficult to operate and dump.
6. **ALWAYS** use the dump cart for its intended purpose.
7. **ONLY** use approved vehicles when towing the dump cart (lawn/garden tractors and ATVs).
8. **ALWAYS** make sure that the combined weight of the tow vehicle and the operator **ARE GREATER THAN** the load of the cart weight for proper control.
9. **DO NOT** use cart on public highways or roads.
10. **NEVER** exceed 10 mph when towing the dump cart.
11. **DO NOT** make sharp turns that may cause the lawn/garden tractor or ATV tires to rub against the utility dump cart.
12. **ALWAYS** slow down before turning.
13. **ALWAYS** use caution when backing the utility cart. To avoid “jack-knifing” the cart, always back up in a straight line.

CARE AND MAINTENANCE

- On a regular schedule, check that tires are inflated properly. Pressure should be approximately 25 PSI. **NEVER** over-inflate tires. **ALWAYS** check rated pressure on each tire.
- Use household grease or oil on axle and wheel bearing area regularly or when needed.
- Clean and dry off cart after using in wet conditions and before long storage periods. For long storage periods, it is recommended to cover, keep inside, or store under a covered area.
- After each use, clean material out of the cart bed.
- Periodically check fasteners for tightness.
- Rinse/dry inside and outside of the dump cart after each use.
- Annually clean and lightly lubricate parts.
- Never exceed load capacity rating of 400 lbs. (182 kg). This will damage the utility dump cart.

WARRANTY

Limited 1 year warranty on the dump cart and 2 year warranty on all parts:

- 1) This product is not intended for commercial use.
- 2) This warranty applies only to product which has been assembled correctly and operated in accordance with the instructions contained within this manual. Any alteration, misuse, abuse, shipping damage, or normal wear and tear on this product is not covered.
- 3) Excluded from this warranty is normal wear, normal adjustments, and normal maintenance.

This warranty gives you specific rights and you may have other rights that vary from state to state.


REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-877-888-8225, 8 a.m. - 8.p.m., EST, Monday - Friday.

PART	DECRPTION	QUANTITY
A	Tailgate Guides	2
B	Corner Caps	2
C	Release Pedal	1
D	Hitch Bracket	2
E	Middle Plate	1
F	Tongue Support	1
G	Tailgate Reinforcement Bracket	1
H	Tailgate	1
I	Front Panel	1
J	Wheel Bracket	2
K	Axle	1
L	Tongue	1
M	Bed Panel	1
N	Side Panel	2
O	Wheel	2

PART	DECRPTION	QUANTITY
AA	Ø16 mm Flat Washer	4
BB	Hitch Pin	1
CC	Spacer	2
DD	R Clip Pin	4
EE	Spring Assembly Tool	1
FF	Spring	1
GG	M8 x 95 mm Screw	1
HH	M8 x 30 mm Hex Bolt	2
II	M8 x 16 mm Screw	12
JJ	M6 x 12 mm Screw	30
KK	Ø8 mm Lock Washer	14
LL	Ø6 mm Lock Washer	30
MM	M8 Hex Nut	14
NN	M6 Hex Nut	30
OO	M8 Lock Nut	1

EXPLODED VIEW

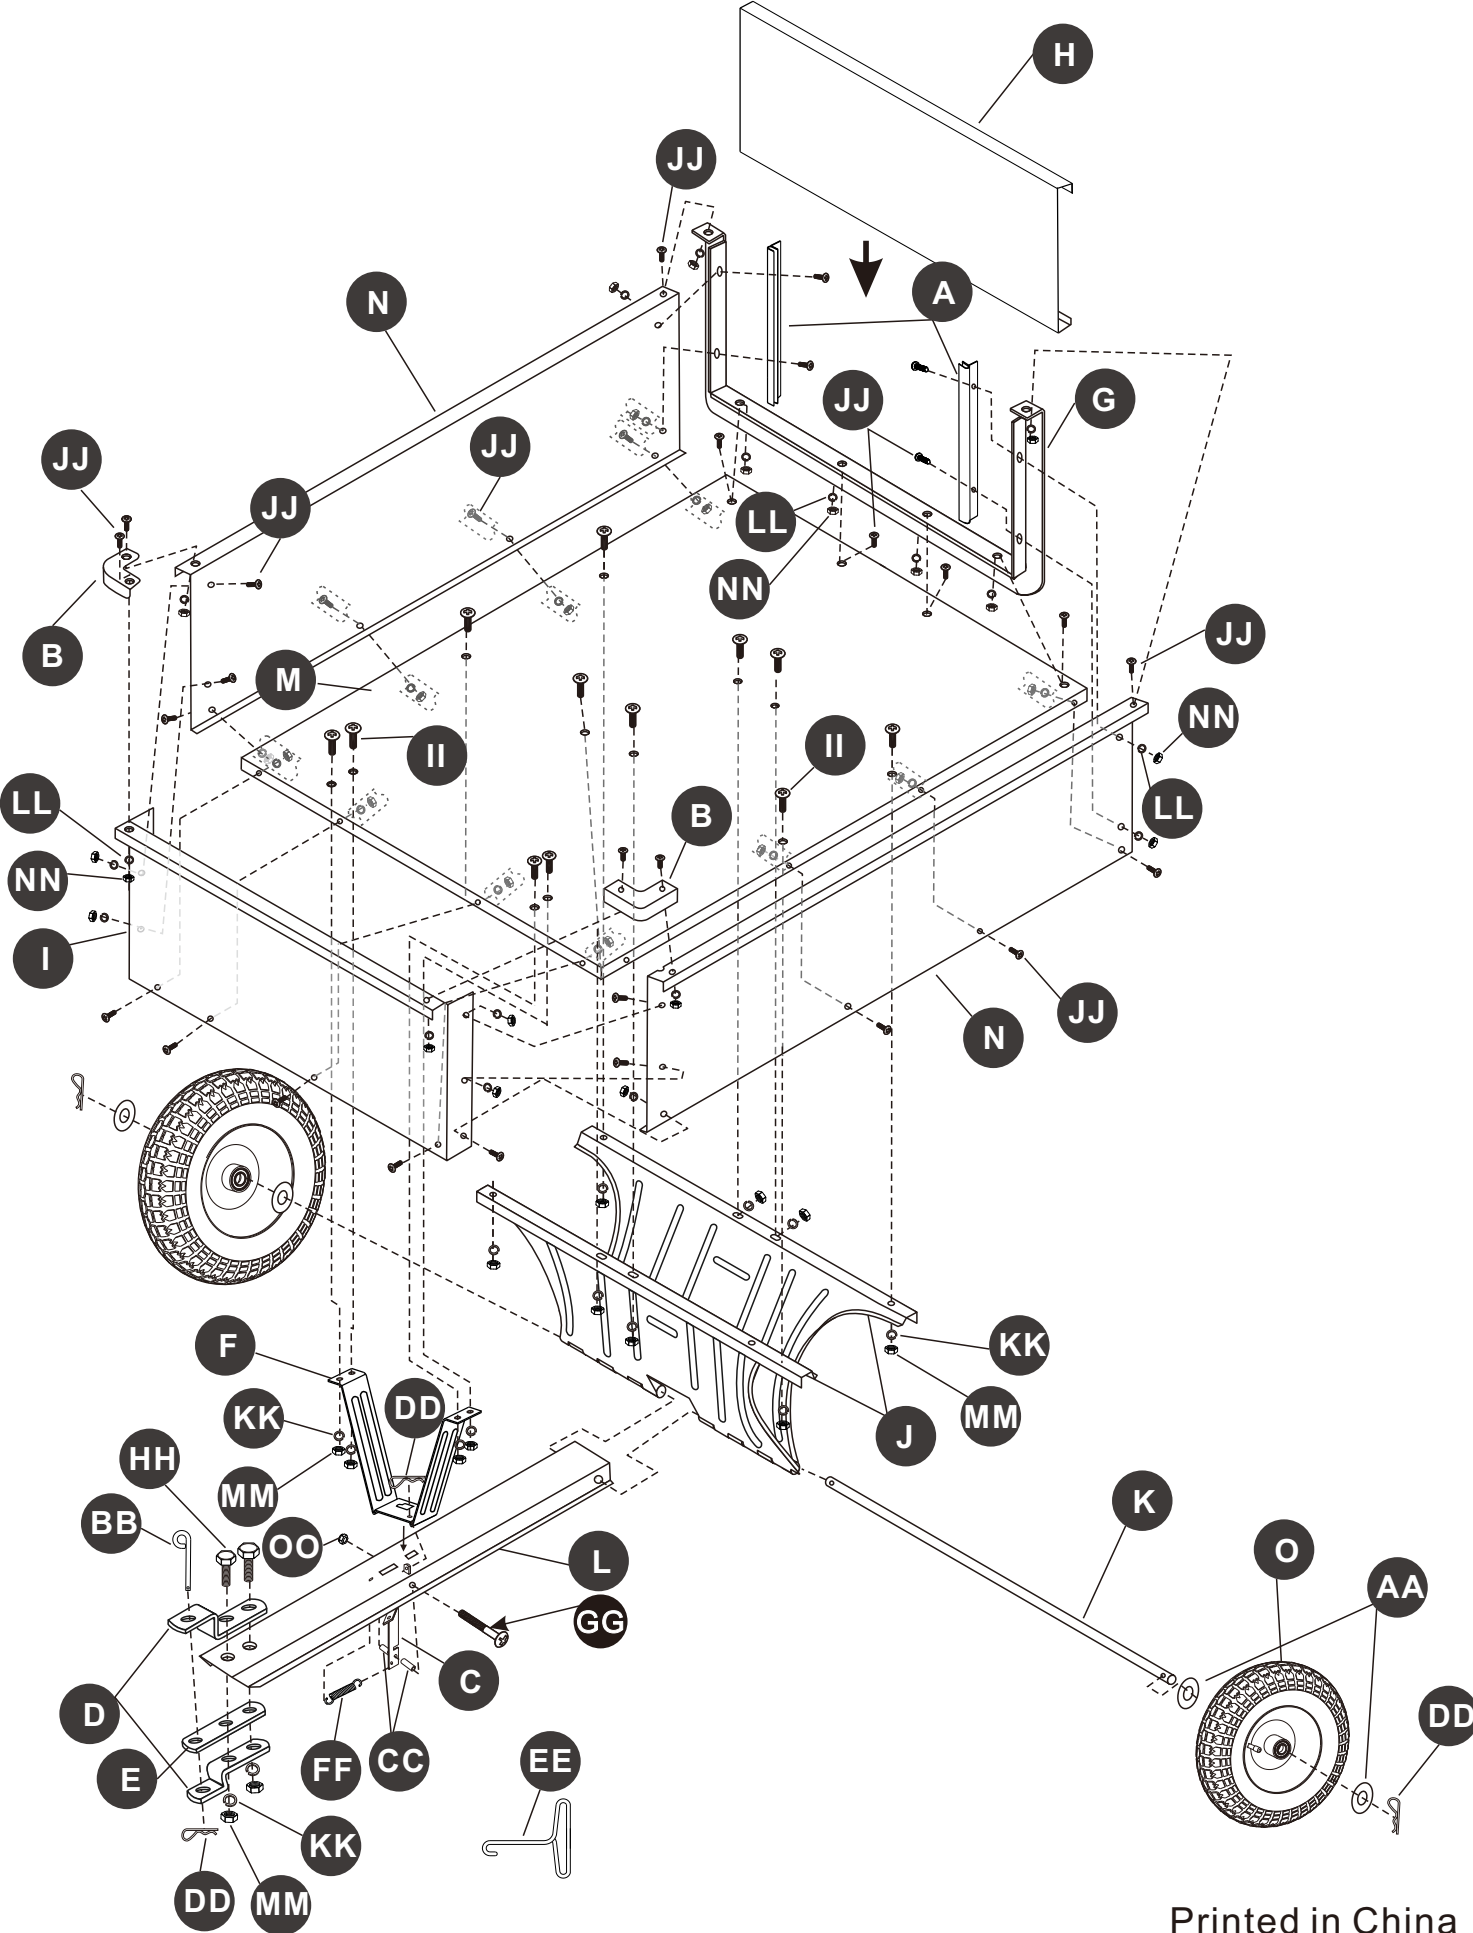

Printed in China