88 5180 691 Arts & Crafts Dining Buffet (Cottage Oak)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



Head Cap Bolt 28 pcs. (+1 extra)

N. Base

Small

1 pc.

Hex Wrench

1 pc.



Wood Screw (long) 16 pcs. (+1 extra)

Magnet 4 pcs.

Adjustable Pin

16 pcs. (+2 extra)



For assembly see instructions in carton 88 5180 692

Tools required for assembly: Phillips screwdriver

8 pcs.(+1 extra)

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

88 5180 692 Arts & Crafts Dining Buffet (Cottage Oak)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



ß

C)

C

Casual Attire For Today's Home



Also need the following from carton 88 5180 691 :

Hardware List in carton 88 5180 691 Part List in carton 88 5180 691 Hardware List in carton 88 5180 691 **Cam Lock Screw** Top (A) 1 pc. 9 pcs. Hex Wrench 1 pc. Shelf (L) Cam Lock 9 pcs. **Door Pull Handle** 2 pcs. 4 pcs. 2 pcs. Rack (M) 1 pc. Magnet 4 pcs. **Drawer Pull Handle** 8 pcs. 9 pcs. Machine Screw Wood Screw for Magnet Base (N) 1 pc. **Small Hex Wrench** 1 pc. Head Cap Bolt 29 pcs. Leg (O) 2 pcs. Adjustable Pin 18 pcs. 1 pcs. Leg (P) Wood Screw (long) 17 pcs. Wood Screw 25 pcs.

Tools required for assembly : <u>Phillips</u> screwdriver Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

Assembly Instructions 2/5

Cam Lock Screw

IMPORTANT

Do not tighten up all the screws until each part is properly assembled. You should keep Hex Wrench in the safe place as you may need to tighten up the Head Cap Bolts in the future.

STEP 1



STEP 2

Attach Back Stretcher (H) to Side Panel (B) with Cam Lock.

Attach Back Piece (G) to Back Stretcher (H) then slide Back Panel (F) into place.

Attach second Back Stretcher (H) to the unit with Cam Locks.

Assembly Instructions 3/5



Assembly Instructions 4/5



Insert Adjustable Pins into both side panels and middle panels at the desired level. Slide Shelf (L) into place.

Assemble Pull Handles to Door (Q) and (R) with Machine Screws.(see Figure 2)

Attach Door (Q) and (R) to the side panels by sliding the door lift hinges into the side panel lift hinges. (see Figure 3)

STEP 8

Wood Screw

Insert Wood Screws from the back and tighten.



Assembly Instructions 5/5

