 


Assembly Instructions

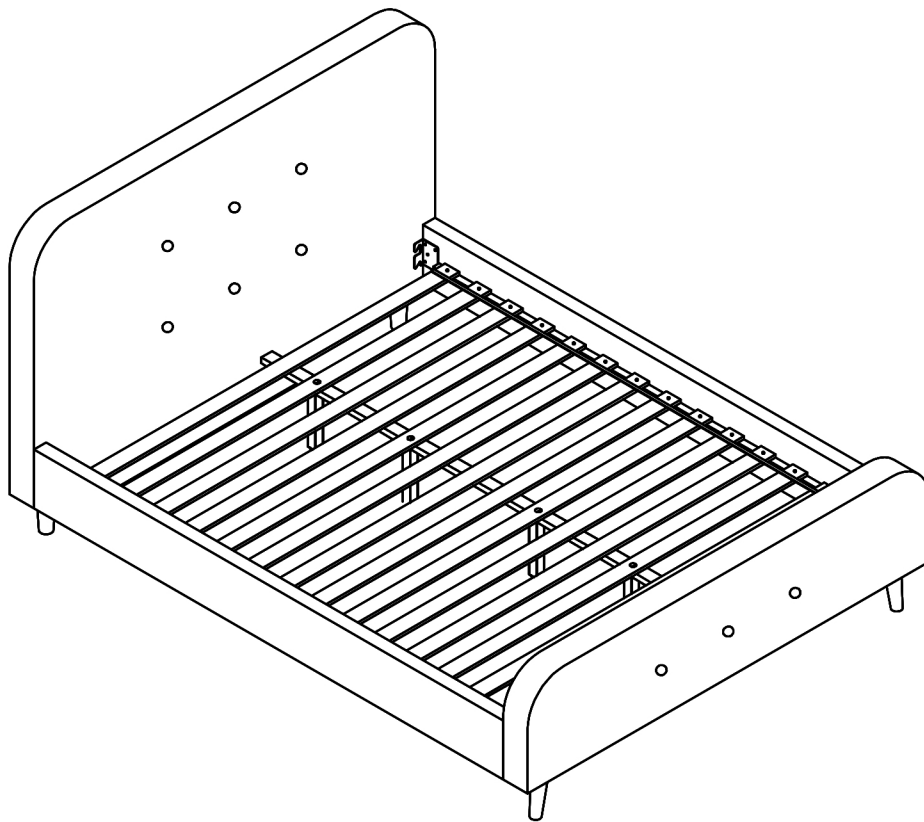

 
ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)

Phillips Screwdriver



(Not Included)

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

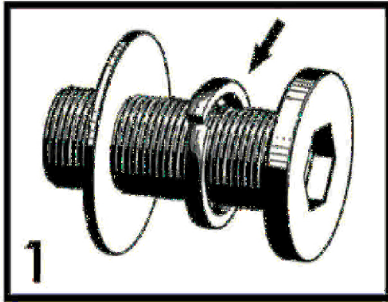

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

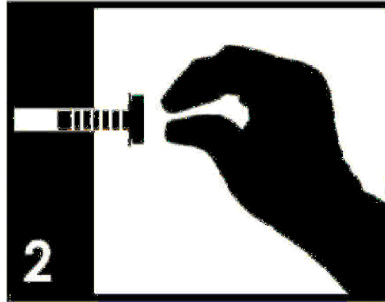

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

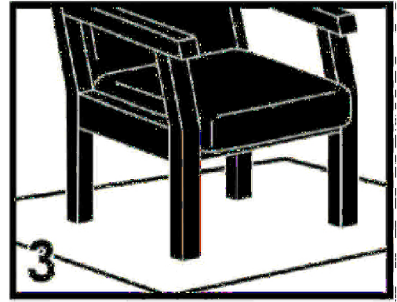

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor. No dragging of products/parts.

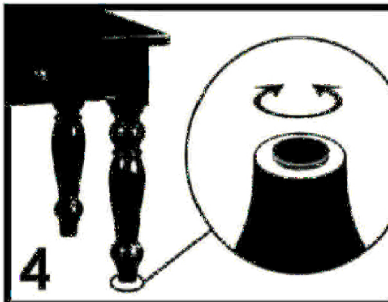

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

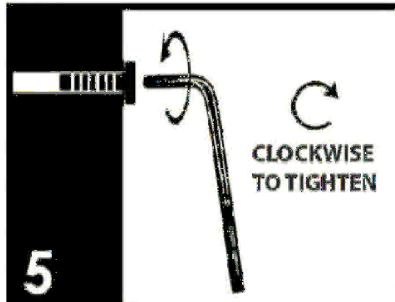

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

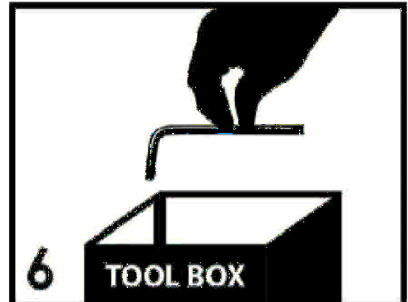


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

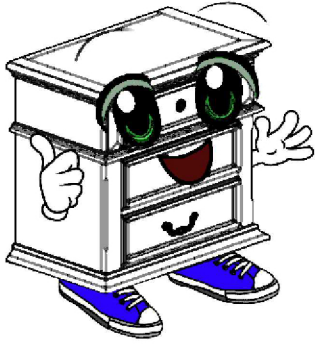


Before you begin, please read Page 2 of "Assembly and Care Advice".


And remember, do not tighten until each step is completed or instructed.

Parts List

 Hardware List



#1 x 1pc
Headboard

 


#2 x 1pc
Footboard



#3 x 2pcs
Side Rail


 
#4 x 4pcs Ø5/16"
Support Leg 30x30x270mm

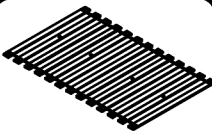

#5 x 1set
Slat (13pcs)



 
#6 x 2pcs
Headboard Leg



#7 x 2pcs
Footboard Leg



#8 x 1pc
Center Rail



#A x 8pcs
Bolt Ø5/16" x 1-1/2"



#B x 8pcs
Lock Washer Ø5/16"



 
#C x 8pcs
Flat Washer Ø5/16"



#D x 1pc
Allen Wrench 5mm



#E x 34pcs
Screw #8 x 38mm

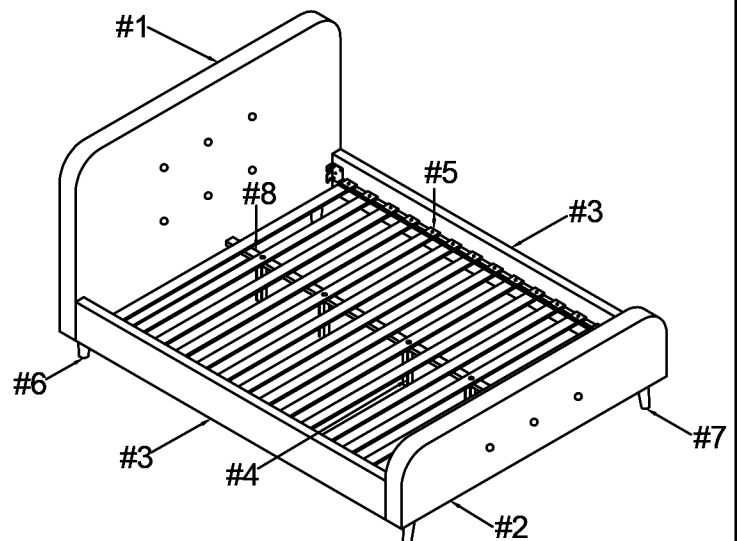




#E x 8pcs


Attach HB legs (#6) to the headboard (#1).

 Align FB legs (#7) to the footboard (#2), then secure by using screws (#E).

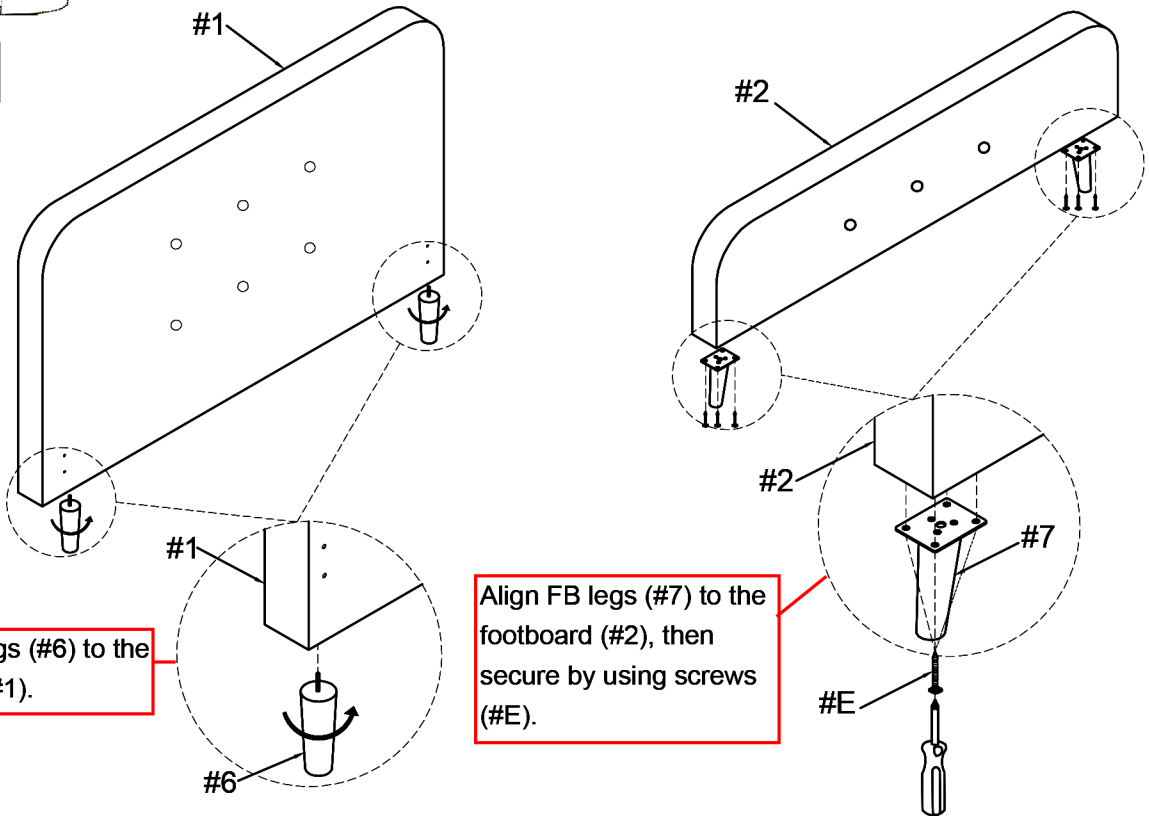


#A x 8pcs
#B x 8pcs
#C x 8pcs

 Secure bolts (#A) with washers (#B,C) 75% into headboard (#1) and footboard (#2). Hook side rails to the bolts (#A) of headboard (#1) and footboard (#2), then fully tighten bolts (#A).

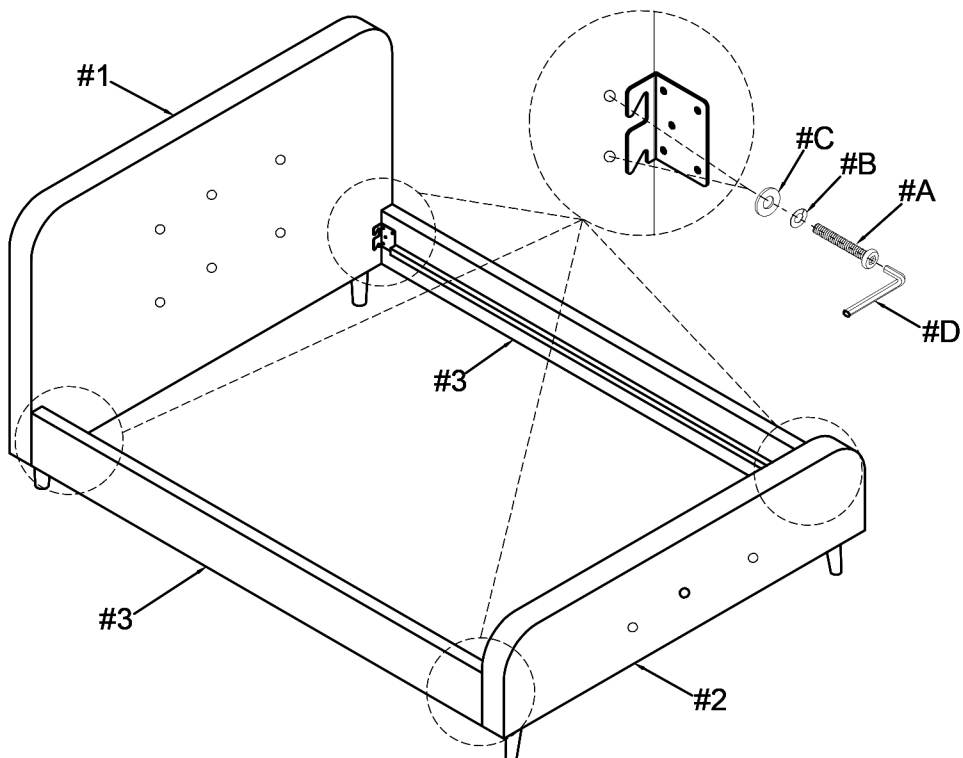



 Align center rail (#8) to the slats (#5), then secure by attaching support legs (#4) to the center rail (#8) and slats (#5). Adjust the leveler on the support legs (#4) according to ground level.

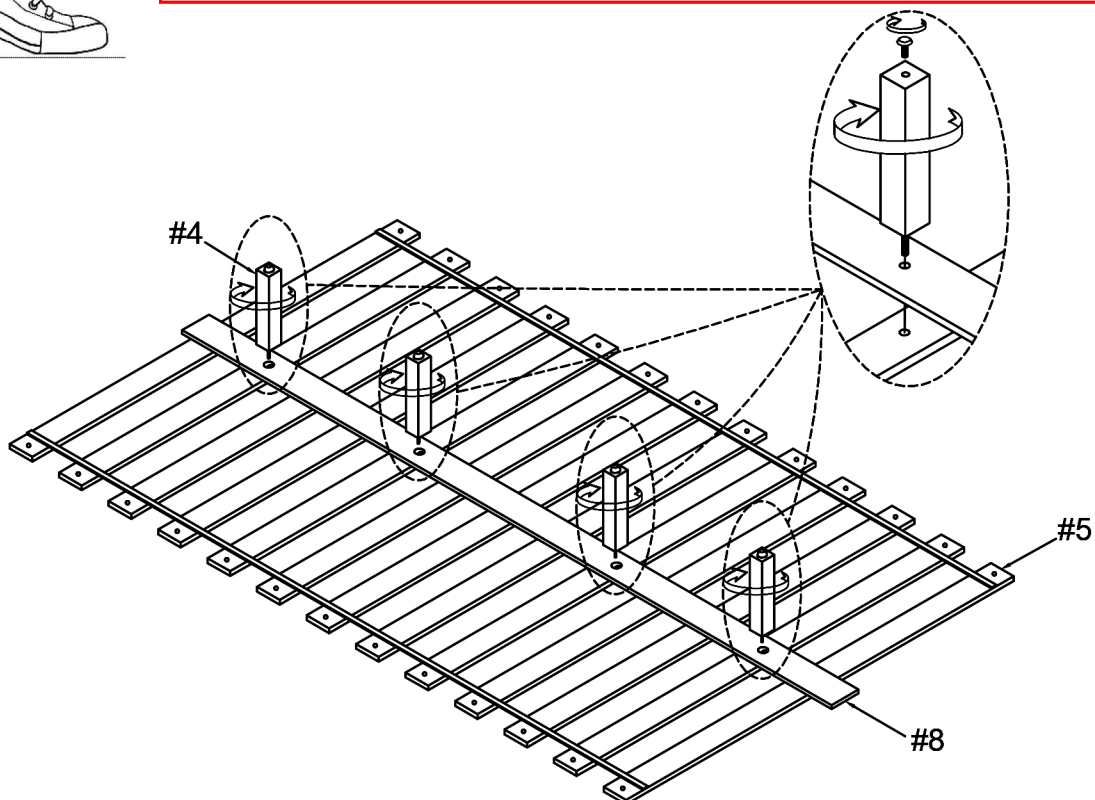

Align slats (#5) to the side rails (#3), then secure by using screws (#E).

#E x 26pcs

