ASSEMBLY INSTRUCTION:

1.Initial Tightening

Use a hex key (Allen wrench), not a power drill, to tighten each screw to about 50% before fully securing any of them. Fully tightening one screw too early may cause others to misalign.

2.Final Tightening

Once all parts are aligned, gradually and evenly tighten all screws using the proper tools.

3. Misalignment Fix

If some screws don't line up, loosen all screws to 50%, adjust the parts, and try again.

4.Stability Issue


If the item feels unstable, loosen all screws, adjust it on a flat surface, then retighten them evenly.

Hardware Fittings


ltem No.	Reference Image	Description	Qity.	Extra Spare Parts Qty.
A		screw M8*20	6	1
В		screw Mó*15	4	1
С		spring washer for Mó	4	1
D		spring washer for M8	6	1
E		washer for Mó	4	1
F		washer for M8	6	1
G		Screw cap	10	1

Item No.	Reference Image	Description	Qity.	Extra Spare Parts Qty.
Н		allen key for M8	1	0
I		allen key for Mó	1	0
J				
К				
L				
М				
N				


Step1

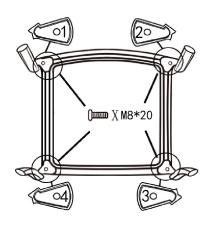




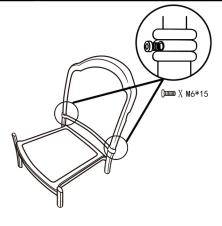



Step3

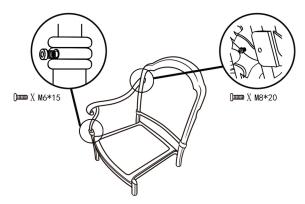



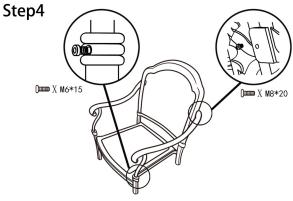

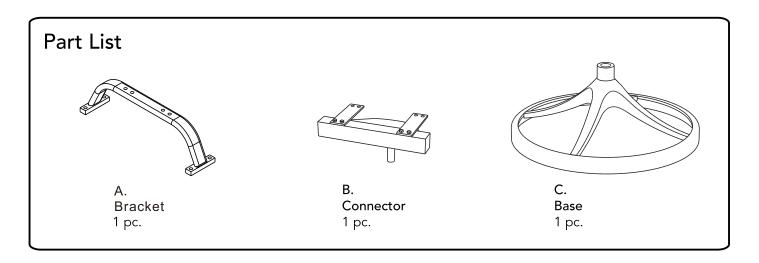


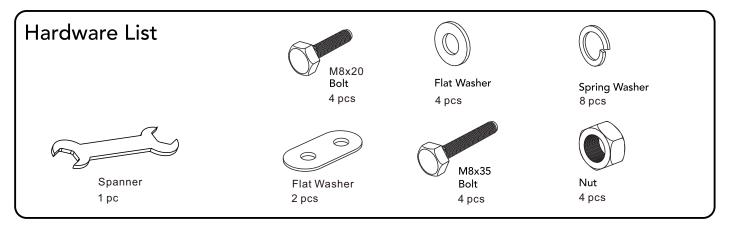

Assembly Instructions 1/2

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Wrench as the bolts may need to be tightened in the future.

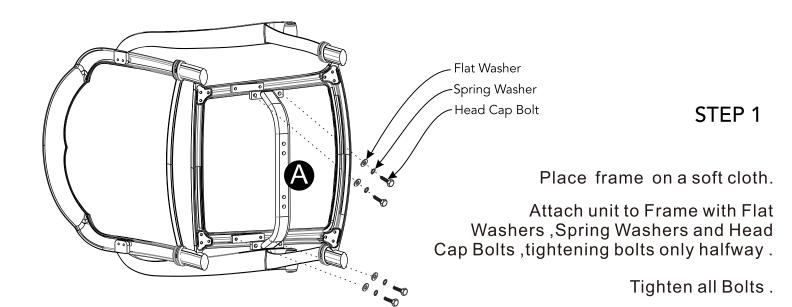

Assembly Instructions 2/2

STEP 2

Attach unit to Connerctor (B) with Bolts, Flat Washers, Spring Washers and Nuts, tightening bolts and nuts only haflway. (See Figure 1)

Tighten all Bolts and Nuts.


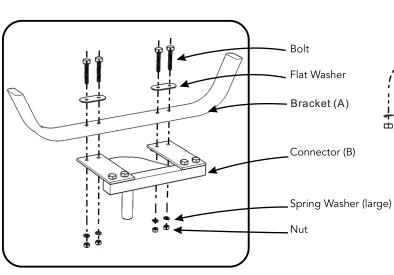


Figure 1

STEP 3

Place unit onto Base (C).

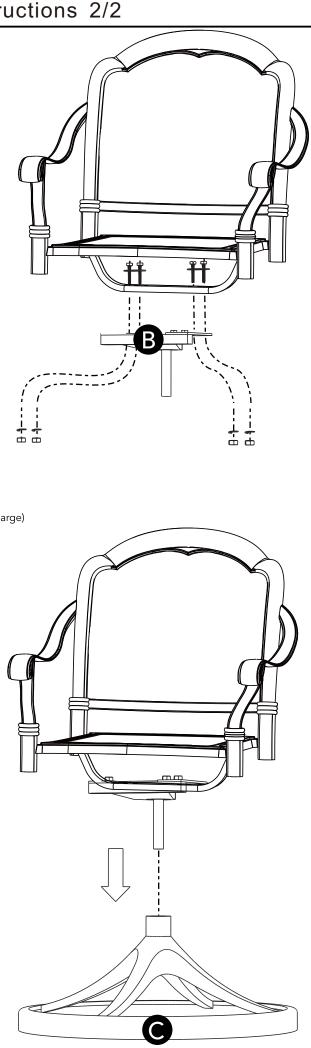

ASSEMBLY INSTRUCTION:

1.Initial Tightening

Use a hex key (Allen wrench), not a power drill, to tighten each screw to about 50% before fully securing any of them. Fully tightening one screw too early may cause others to misalign.

2.Final Tightening

Once all parts are aligned, gradually and evenly tighten all screws using the proper tools.

3.Misalignment Fix

If some screws don't line up, loosen all screws to 50%, adjust the parts, and try again.

4.Stability Issue

If the item feels unstable, loosen all screws, adjust it on a flat surface, then retighten them evenly.

Hardware Fittings

ltem No.	Reference Image	Description	Qty.	Extra Spare Parts Qty.
А		screw M8*35	12	1
В	0	washer for M8	12	1
С		spring washer for M8	12	1
D		nut for M8	12	1
E	9	Screw cap	12	1
F		Adjustable foot pads	4	1

Item No.	Reference Image	Description	Qty.	Extra Spare Parts Qty.
G		allen key for M8	1	0
Н		Spanner for M8	1	0
ı				
J				
К				
L				

