 


How to better use your microwaves


To have a better using experience, get familiar with your microwaves and maintaining are very useful. Here are a few tips:

- **Get familiar with your microwaves**

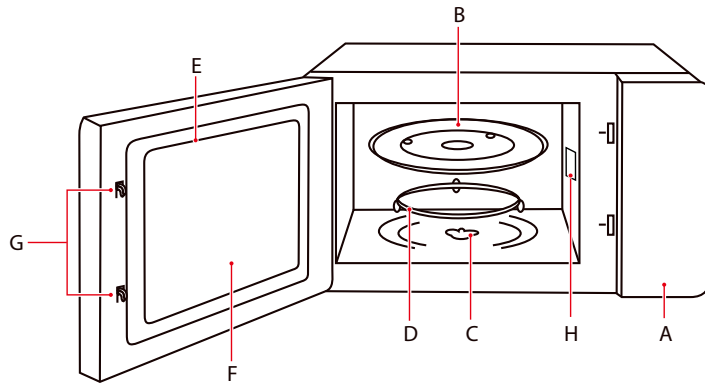

- | | |
|----------------------------|----------------------------|
| A. Control panel | E. Door assembly |
| B. Glass tray | F. Observation window |
| C. Turntable shaft | G. Safety interlock system |
| D. Turntable ring assembly | H. Waveguide cover |

- **How to install your microwaves**

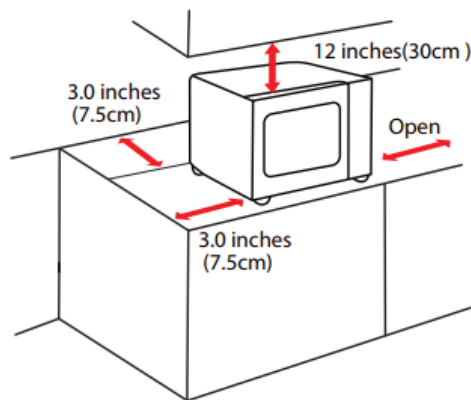


SIDE	DISTANCE (INCHES/CM)
Top	12 inches/30cm
Left	3.0 inches/7.5cm
Right	Open
Behind	3.0 inches/7.5cm
Front	Open

- **Keep cavity clean of your microwaves**

Failure to clean food residue may cause innocuous sparking or some smoke in the microwave cavity, discoloration of the cavity may also occur.



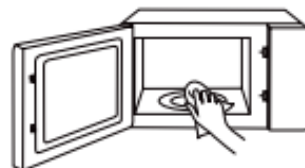




KEEP THE CAVITY CLEAN



- **What material cannot be put in your microwaves**

Avoid to put metal such as metal spoon or aluminum tray in your microwaves. Also, not to put paper bags or something like that in the microwaves. In case of sparking, try the following trouble shooting:

- Use microwave-safe cookware only.
- Do not operate with oven empty.
- Clean cavity with wet towel

UTENSILS	REMARKS	
 Aluminum tray	May cause sparking. Transfer food into microwave-safe dish.	⊗
 Food carton with metal handle	May cause sparking. Transfer food into microwave-safe dish.	⊗
 Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause sparking.	⊗
 Metal twist ties	May cause sparking and could cause a fire in the oven.	⊗
 Paper bags	May cause a fire in the oven.	⊗
 Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.	⊗
 Wood	Wood will dry out when used in the microwave oven and may split or crack.	⊗

For more information on the instructions, you may refer to the user manual or contact us at:

Email: Customercare@us.toshiba-lifestyle.com

Toll free hot line: 855-204-5313