




1. Identify and mark anchor location; drill a ½" diameter hole. Fold metal toggle against plastic strap and insert through the drilled hole.

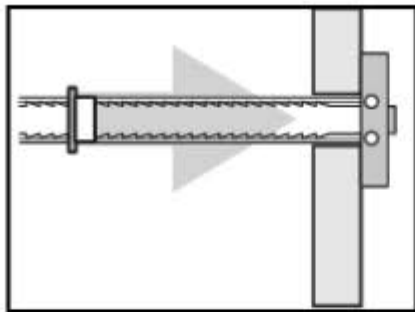

2. Pull end of straps away from wall or ceiling until toggle sits flush against the back of your wall or ceiling.
3. Slide plastic cap towards wall or ceiling until the cap flange is snug against the surface of the wall or ceiling.

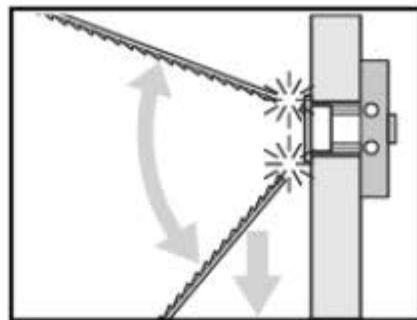

4. Gently separate straps and bend straps away from one another at the point where the strap meets the cap. Do not wiggle the straps or break in same direction. Broken straps can be discarded.

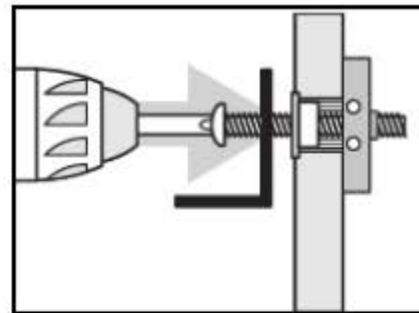

5. Place fixture mount over the flange, insert bolt*, and tighten against fixture. Ensure bolt length is at least ½" longer than the combined thickness of your fixture and wall or ceiling.
 *Choose bolt diameter according to fixture hole size. Hole fixture size should be larger by 1/16".