
## **ASSEMBLY INSTRUCTION**

## FIRE PIT TABLE

If you have any questions, please feel free to contact us. Email: lowesteam@aminalife.com

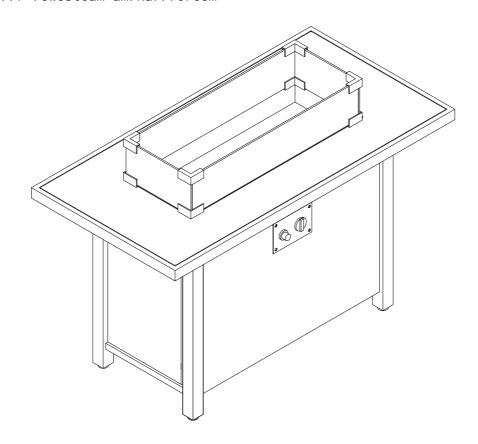



## N707P210158


PLEASE READ AND UNDERSTAND THIS ENTIRE MANUAL BEFORE ATTEMPTING TO ASSEMBLE, OPERATE OR INSTALL THE PRODUCT.


## Notice:


- 1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
- 2. Place the item on a flat ground to adjust and make sure it remains stable.
- 3. Tighten up all screws with tools gradually.
- 4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
- 6. Note: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

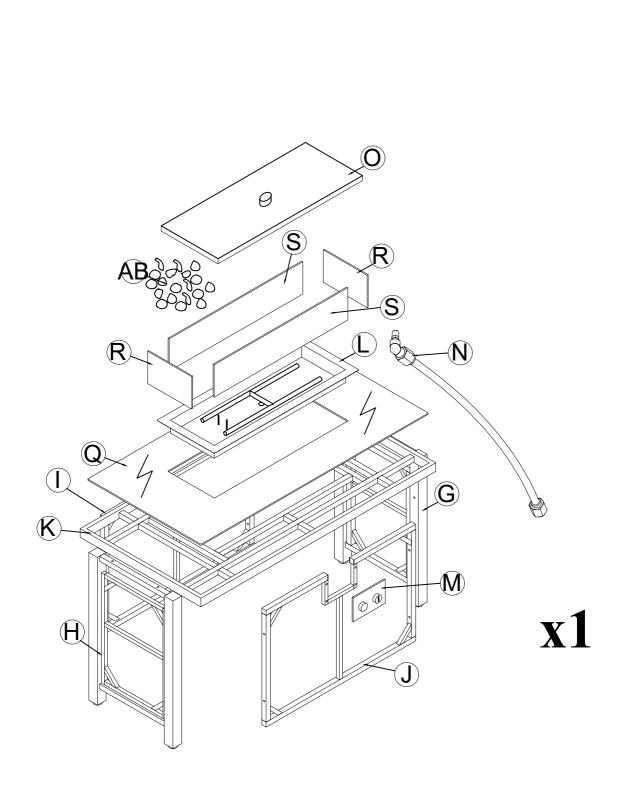

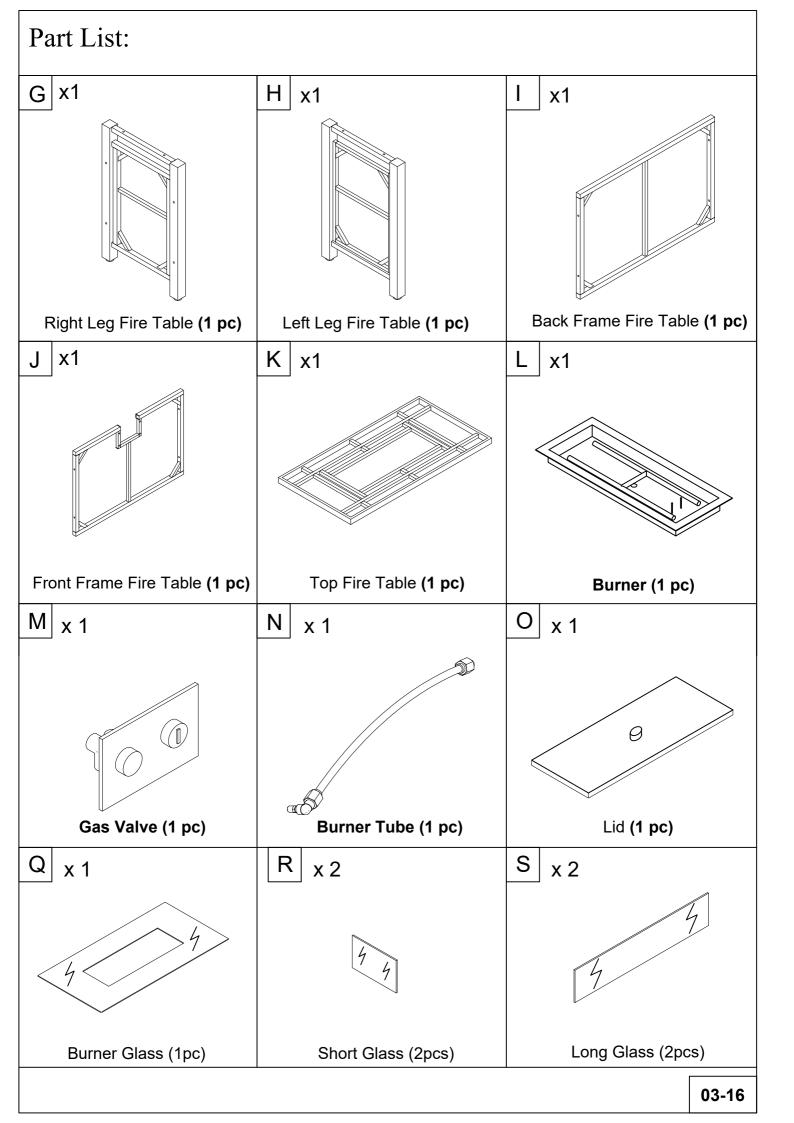


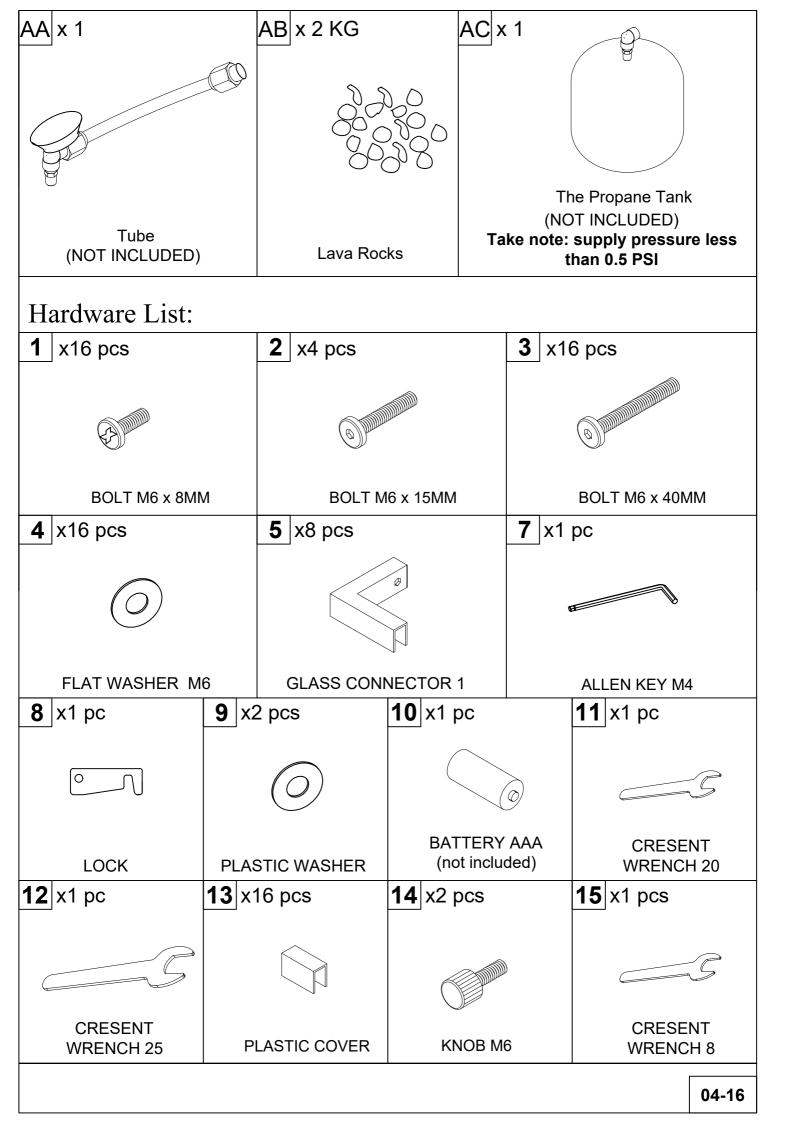

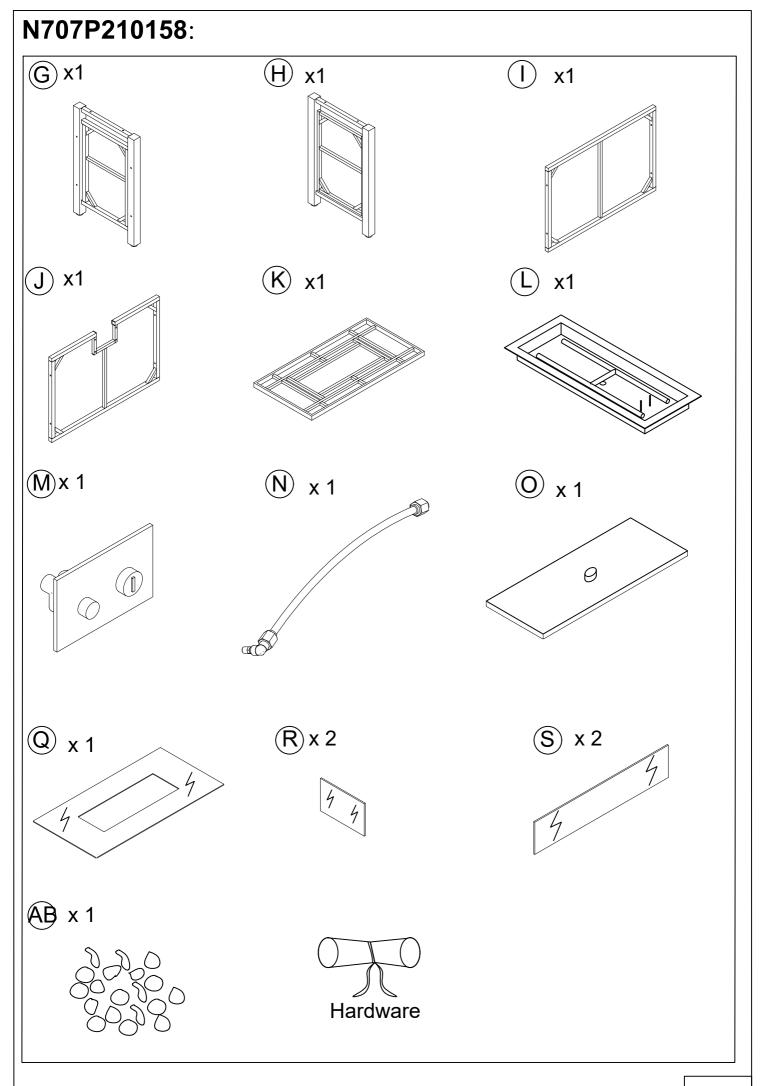


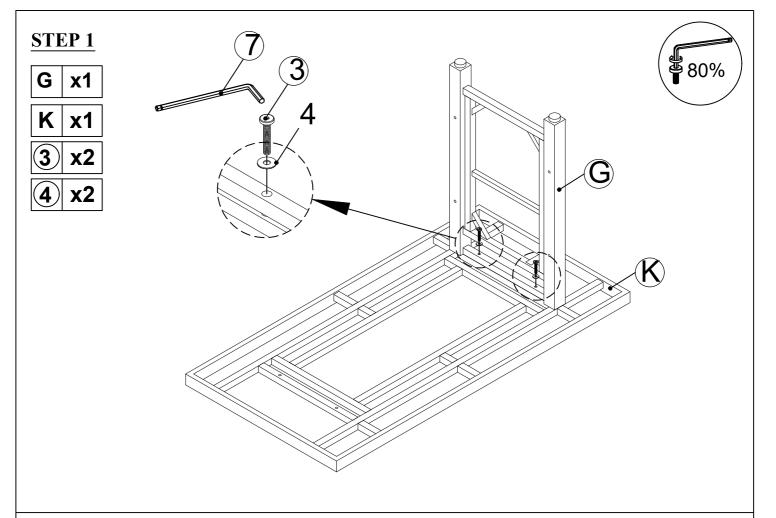


Connect Right Leg Fire Table (G) & Top Fire Table (K), Tighten Bolt (3) & Flat Washer (4) with Allen Key (7).

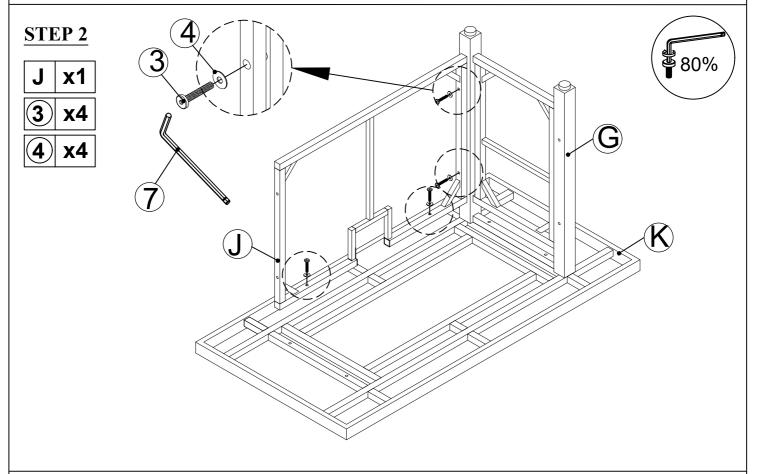


Connect the part from step 1 & Front Frame Fire Table (J), Tighten Bolt (3) & Flat Washer (4) with Allen Key (7).

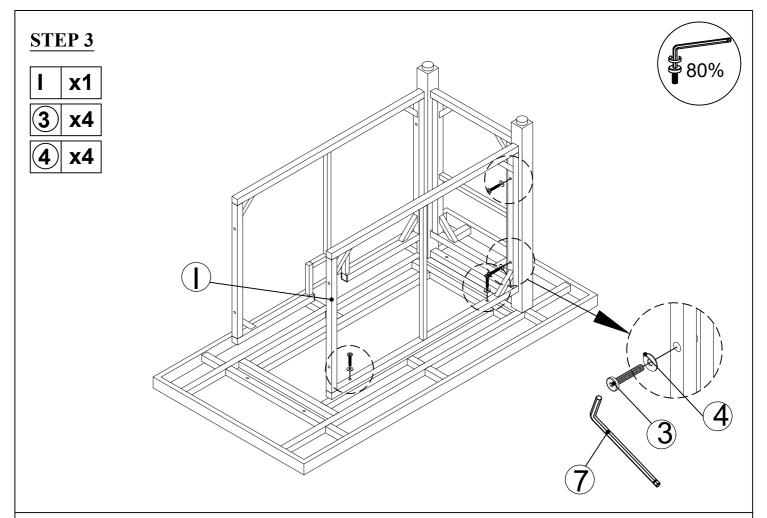


Connect the part from step 2 & Back Frame Fire Table (I), Tighten Bolt (3) & Flat Washer (4) with Allen Key (7).

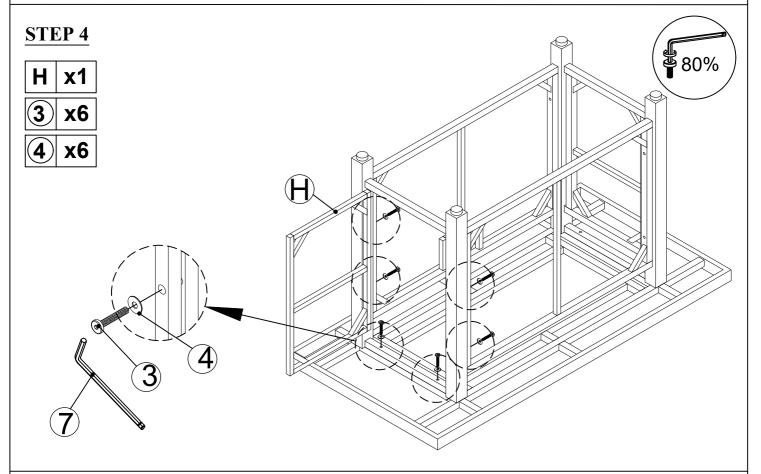


Connect the part from step 3 & Left Leg Fire Table (H), Tighten Bolt (3) & Flat Washer (4) with Allen Key (7).

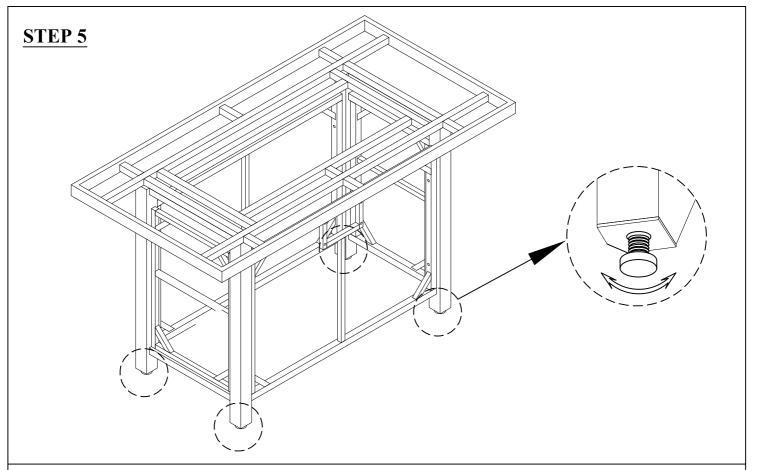


Adjust for balance.

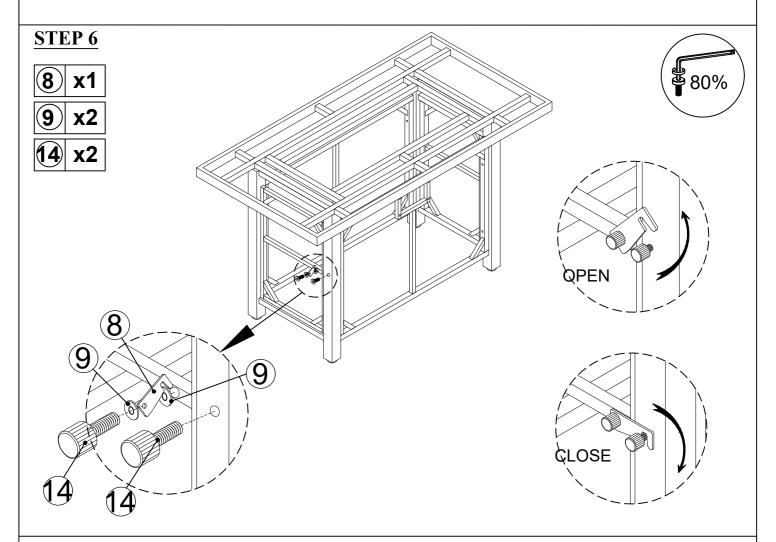


Attach the locking part (8) with plastic washer (9), knob (14).

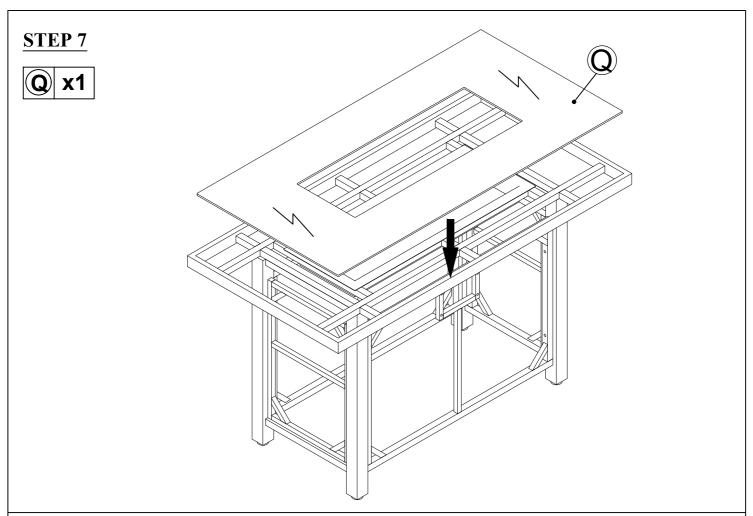


Put on Burner Glass (Q) to the part from step 16.

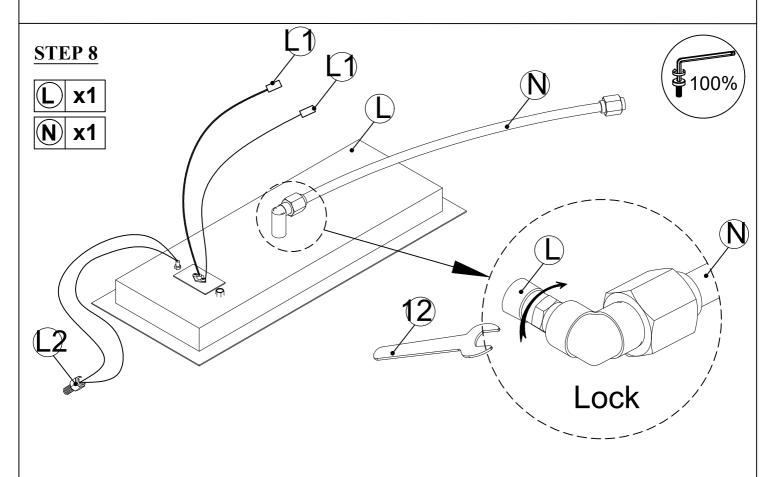


Connect Burner (L) & Gas Valve (N) with Cresent Wrench 25 (12).

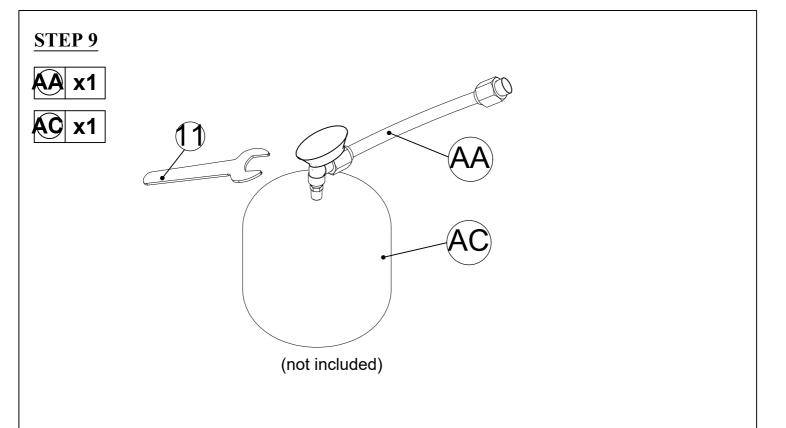

Connect Tube (AA) & Propan Tank (AC) with Cresent Wrench 20 (11). (not included) Take note: supply pressure less than 0.5 PSI

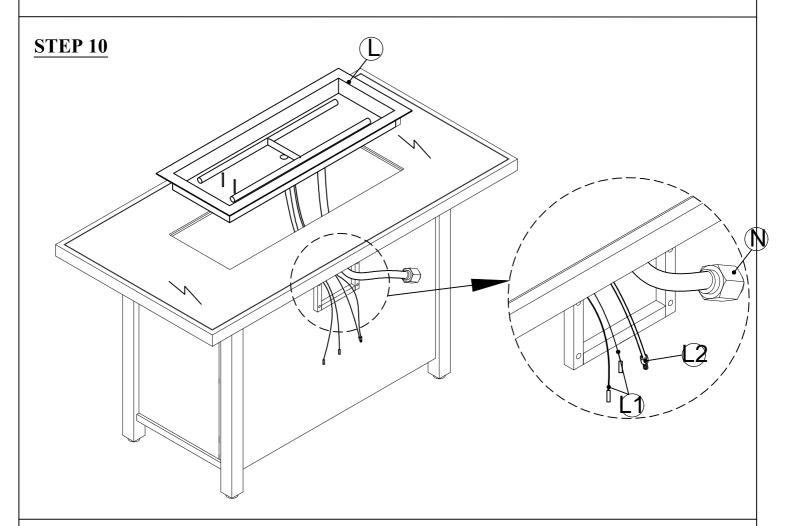


Put on the part from step 8 to the part from step 7. Place the tube as shown in the picture.

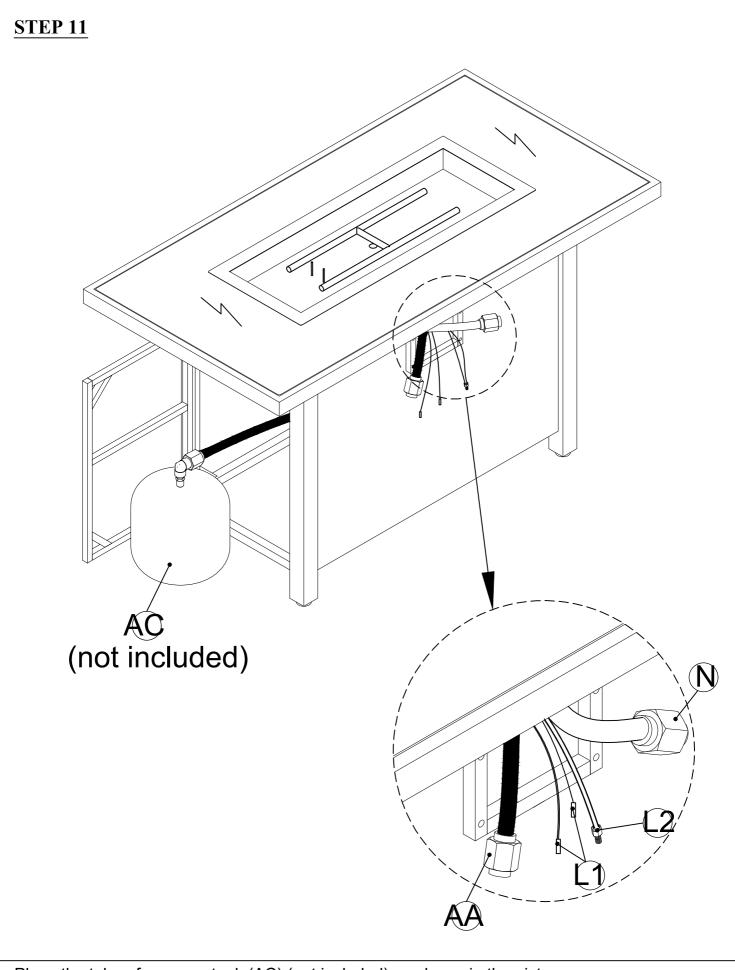

Place the tube of propane tank (AC) (not included) as shown in the picture.


Take note: supply pressure less than 0.5 PSI

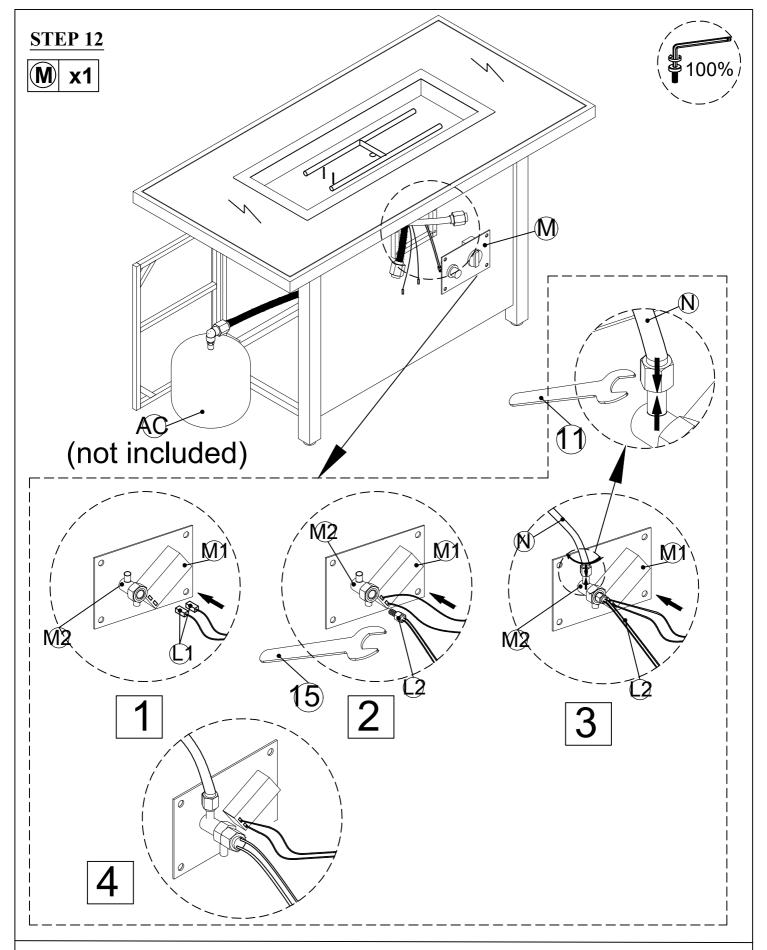


Check that the Gas Valve (M), for the gas supply system is turned to the OFF position before starting any assembly.

Connect thermocouple (L1) to ignition module hole (M1) of Gas Valve.


Connect Orificecouple (L2) to Control Knor (M2) of Gas Valve with cresent wrench 8 (15). Connect Gas Outlet Tupe (N) to Outlet Hole of Gas Valve with Cresent Wrench 20 (11) in the direction of the arrow.

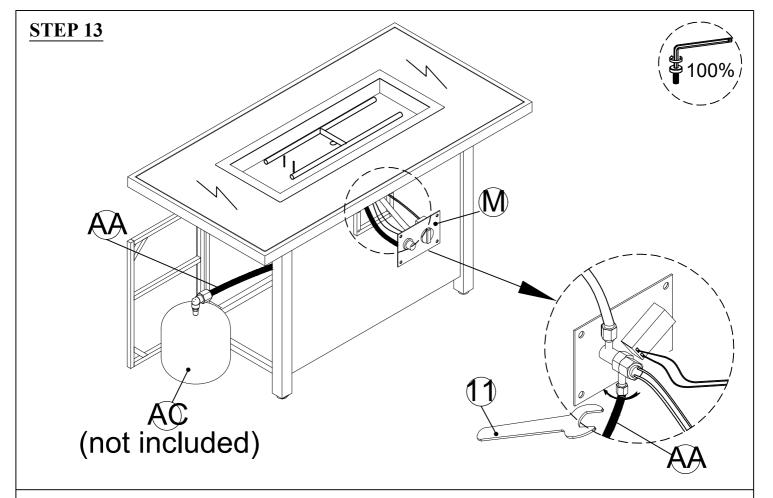

Connect Gas Inlet Tupe of Propan Tank (AA) to Inlet Hole of Gas Valve with Cresent Wrench 20 (11) in the direction of the arrow. (as shown in the picture)

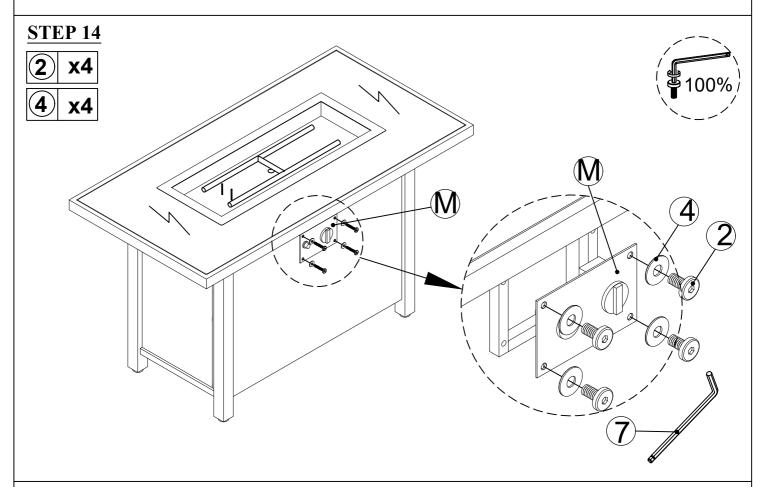


Connect the part from step 13 & Gas Valve (M), Propan Tank (AA) with Tighten Bolt (3) & Flat Washer (4) with Allen Key (7).

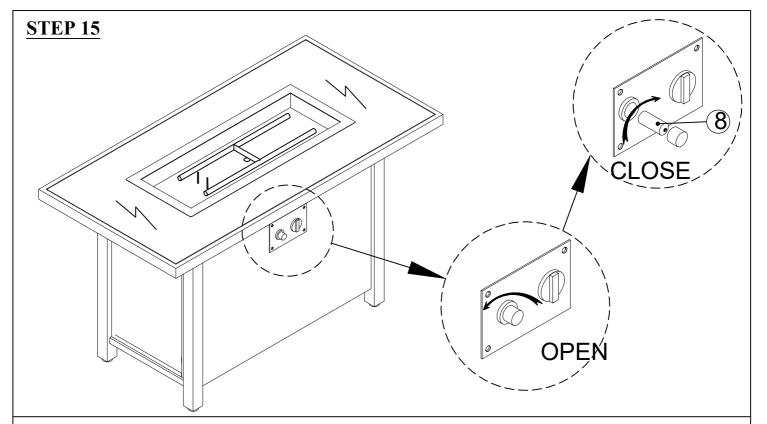


Open the igniter cover and place the battery AA (8) (not included) into it. Then tighten the igniter cover completely.


PLEASE READ AND UNDERSTAND ATTACHED WARNING AND OPERATION DOCUMENT BEFORE ATTEMPTING TO OPERATE OR INSTALL THE PRODUCT.

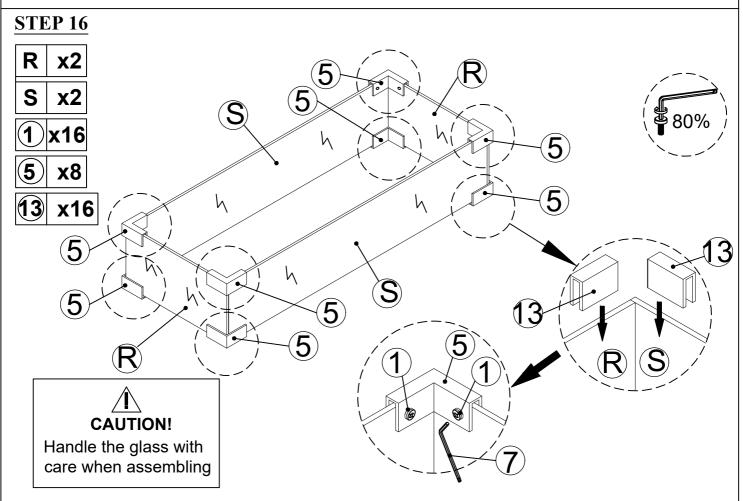


Put on Plastic Cover (13) to Cornner of Short Glass (R) and Long Glass (S). Connect Short Glass (R) & Long Glass (S) with Tighten Bolt (1) & Glass Connector 1 (5) with Allen Key (7).

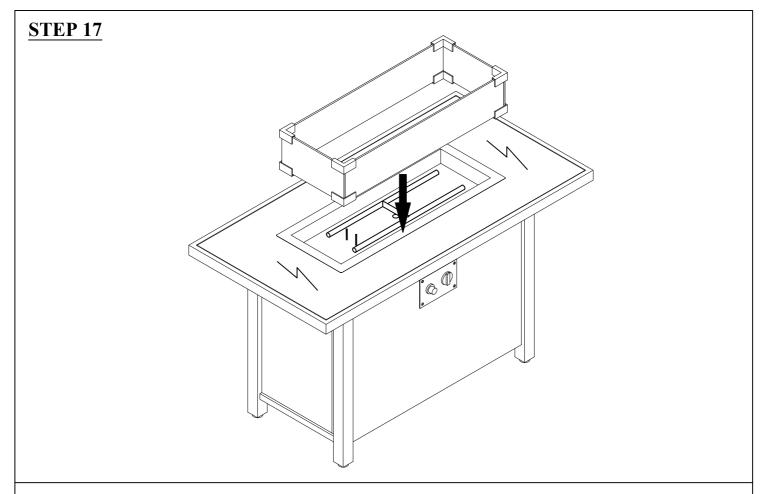


Put on the part from step 16 to the part from step 15.

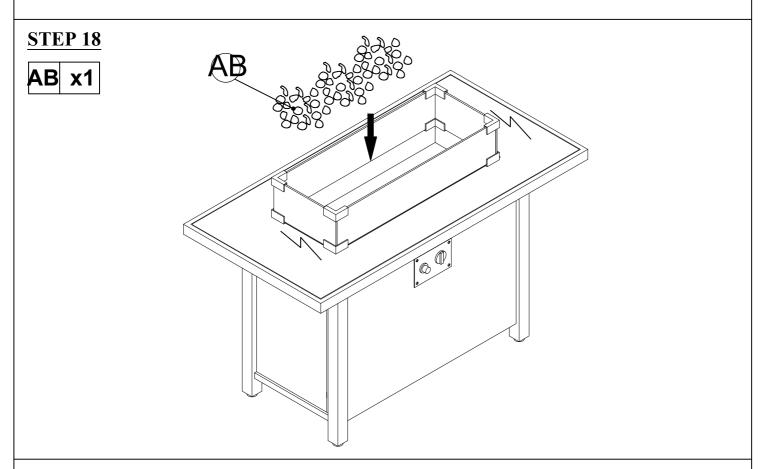

Pour ALL lava rocks (AB) into the burner pan. The burner MUST be completely covered to ensure the appliance functions properly and safely. Remove any lava rocks (AB) on top of the ignition well.

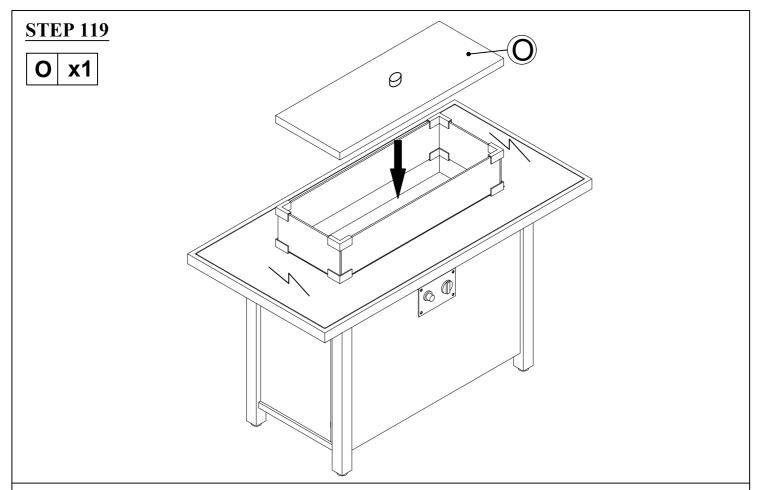

Place Lid (O) to cover the top. The lid must be removed when the burner is in operation. Please wait until the units cools completely before place lid.

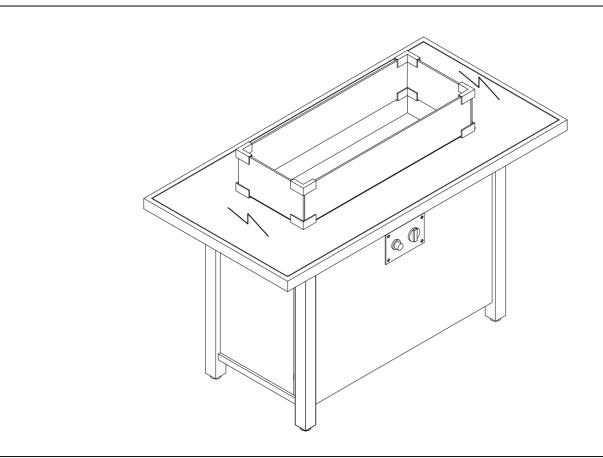

Finished