info@hangmanproducts.com 818-610-0487 fax: 818-610-0488 www.hangmanproducts.com

HANGMAN®


NO STUD TV HANGER®

FITS 26"-55" LED/LCD FLAT-PANEL TVS

Model: S2040-A


Security Cable Installation

Insert Cable through the slot on the bracket.

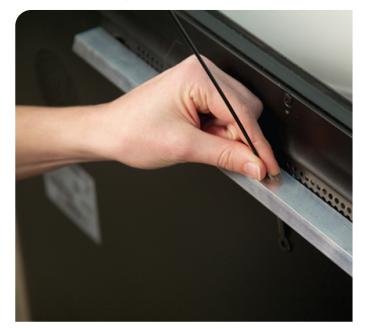



Hang your television and insert BearClaw security screw through the eyelet and into the wall.

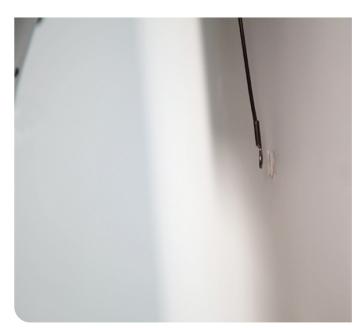








Parts List

Hangman 18" Wall Bracket

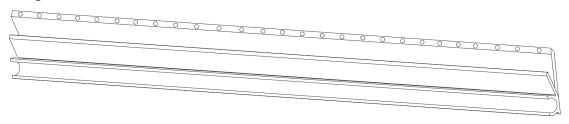

20 Nails

Hangman 18" TV Mounting Bracket



TV Mounting Bolts









(2) 8mm x 16mm Bolts

(2) 6mm x 12mm Bolts

(2) 5mm x 12mm Bolts

(2) 4mm x 12mm Bolts



(2) 8mm x 20mm Bolts

 


(2) 6mm x 20mm Bolts






Bolt Washers (6)



 (2) 8mm x 35mm Bolts



(2) 6mm x 35mm Bolts



(2) 5mm x 35mm Bolts



(2) 4mm x 35mm Bolts

Security Cable



BearClaw Security Cable Screw (1)





For Drywall Installation.


For other wall types please use our Simple Mount TV Hanger (\$2060).

STEP 1: Place the TV face down on a soft surface where it is secure and stable. If your TV is already attached to the base, it must be removed by removing the screws holding the base. The TV will have 4 bolts in the back. Remove these, **they are not required**. The 4 inserts on the back of the TV are either 4mm, 5mm, 6mm or 8mm depending on the brand of the TV. This kit includes all sizes.




Note: It is very important to make sure to select the correct bolt diameter and length.


STEP 2: Attach TV mounting bracket to the top 2 holes using the appropriate bolts and lock washers. This kit also includes different lengths of each size. Hand tighten to choose appropriate length then use a handheld Phillips screwdriver and tighten until snug. **Do not overtighten.**

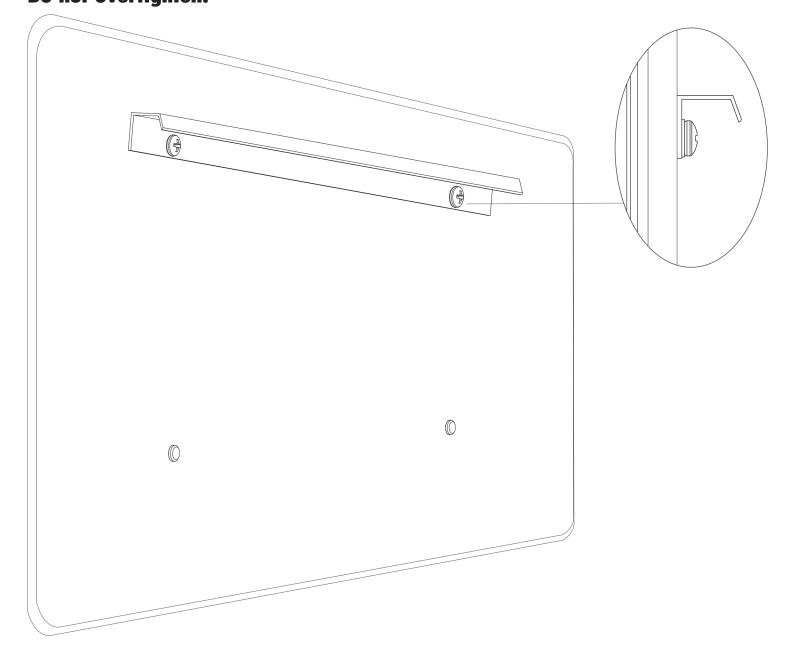

 
STEP 3: Locate the desired area and insert level vial into wall bracket.



STEP 4: Hold the wall bracket in place and install center nail first. This will allow you to adjust the bracket and make sure it is level before installing the remaining nails.

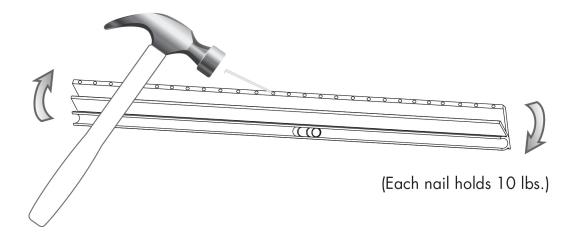

STEP 5: Hang TV by engaging the TV bracket on top of the wall bracket. It can also be tilted out from the bottom for easy cable access.

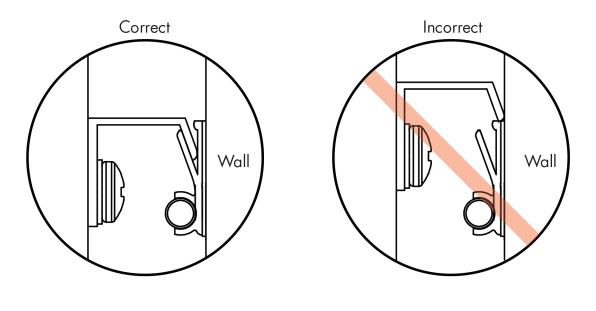

TV can be tilted away from wall for cable access.



Α