


OPEN OR CLOSE MICROWAVE DRAWER

The keysheet is hidden behind the control panel.
To open, push in on the top front face of the unit.

Option 1: Press **OPEN**
CLOSE pad on the control panel

Option 2: Wave twice over the Easy Wave Open sensor
(Works to open microwave drawer only. Does not close microwave drawer.)

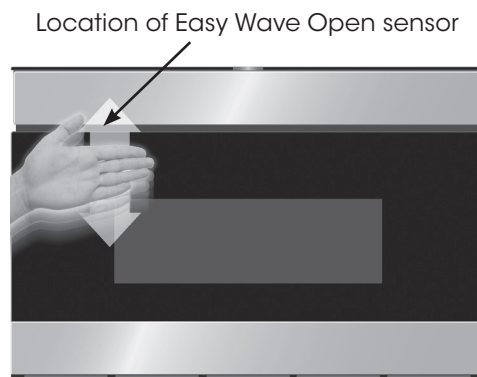

HOW TO ACTIVATE EASY WAVE OPEN FUNCTION

Note: Easy Wave Open is default OFF when plugged in. To activate, please do the following:

Step 1: Touch **Timer**
Settings pad 8 times.

Step 2: Touch **START**
+30 SEC pad

Easy Wave Open is activated when the blue light on the center of the panel is illuminated.

To use the Easy Wave Open function, simply wave your hand twice in front of the sensor in consecutive motions. This can either be up and down or side to side motions.

EASY WAVE OPEN BLUE LED INDICATOR

OFF <ul style="list-style-type: none"> • Out of the box • Control Lock • User selects OFF • Drawer is at full open position 	BLUE LED ON <ul style="list-style-type: none"> • Easy Wave Open is activated • On when fully closed • On when cooking 	BLUE LED FLASHING <ul style="list-style-type: none"> • Drawer is opening
--	---	--

MENU OPTION LABEL

Open the drawer to view the menu option label that is located on the top edge of the microwave drawer.

DEFROST	SENSOR COOK		MORE MENUS	
1 Ground Meat	1 Baked Potatoes	7 Longer Fresh Vegetables	Melt 1 Butter	7 Beverage Reheat
2 Steaks/Chops	2 Sweet Potatoes	8 Steamer Bag	2 Chocolate	8 Hot Water
3 Boneless Poultry	3 Fish/Seafood	9 Frozen Vegetables	3 Ice Cream	9 Hot Cereal
4 Bone-in Poultry	4 Brown Rice	10 Ground Meat	4 Cream Cheese	
5 Roast	5 White Rice	11 Frozen Entrees	5 Syrup	
6 Casserole or Soup	6 Quick Fresh Vegetables		6 Dessert Topping	

NOTE : See the Auto Touch Guide for more set up information on page 23 and back cover of your Operation Manual.



Microwave Oven Drawer Extended Warranty Program



Extended Warranty Options

1 Year Extended Warranty.....	\$68.00
2 Year Extended Warranty.....	\$102.00
3 Year Extended Warranty.....	\$153.00



How to Purchase?

- Call Sharp's Contact Center, 800-BE-SHARP (1-800-237-4277)
- Online at Sharp.Yourserviceplan.com



What Is Covered?

- Parts and Labor, an extension of the original manufacturer product warranty.
- Functional accessories, such as turntable trays and roller stays.



Program Highlights

- Dedicated customer support line available 7 days per week
- In-Home expert service provided by qualified technicians



How to file a Claim

- Call Sharp's Contact Center, 1-866-258-7190
- Requirements for Claims:
 - Model Number and Serial Number
 - Proof of Purchase