


Freestanding Electric Fireplace

Instruction Manual

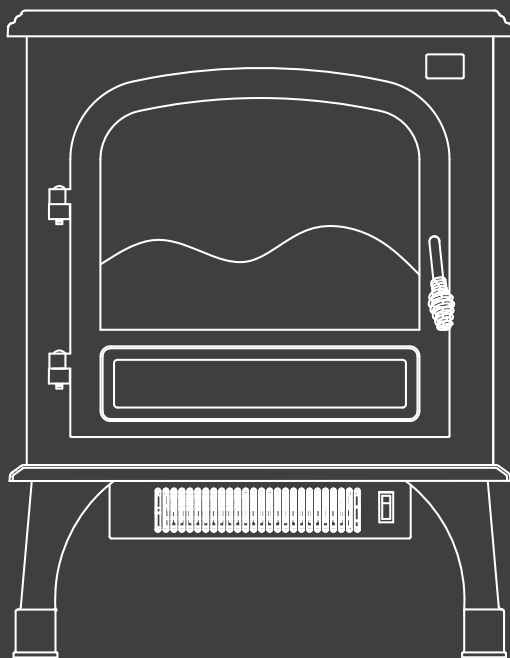

DBL-D01-26IN-BK



✉ HJ-Customer-Service@outlook.com

☎ (909)637-7665 | (909)637-7593

EST 9:00AM--17:00PM

PLEASE SAVE THESE INSTRUCTIONS AND READ THIS MANUAL CAREFULLY BEFORE USE.

Thank you for choosing our Freestanding Electric Fireplace. This manual contains important information for the proper use, care, and maintenance of your new fireplace. Please take a moment to read it carefully and familiarize yourself with all operating instructions.

IMPORTANT SAFETY INSTRUCTIONS

When using this electric fireplace, basic safety precautions should always be followed to reduce the risk of fire, electric shock, injury, and overheating, including the following:

1. Read all instructions before using this appliance.
2. **CAUTION: Risk of electric shock.** Do not open or attempt to repair the fireplace yourself.
3. This fireplace becomes hot during operation. To avoid burns, Do not touch hot surfaces with bare skin. If equipped, use the handles when moving the fireplace.
4. Keep combustible materials—such as furniture, pillows, bedding, paper, clothing, and curtains—at least 3 feet away from the front of the fireplace, and clear of the sides, top, and rear. DO not place towels or other objects on the fireplace.
5. Use extreme caution when operating the fireplace near children, individuals with disabilities, or when left unattended.
6. Do not operate the fireplace if the power cord is damaged, or if the unit malfunctions, has been dropped, or otherwise damaged. Please contact our after-sales service for further assistance.
7. This fireplace is not intended for use in bathrooms, laundry areas, or other similar indoor locations. Never place the fireplace where it could fall into a bathtub or any other water container. To reduce the risk of electric shock, do not immerse the unit in water or other liquids.
8. Do not touch the control panel or plug with wet hands.
9. Do not run the power cord under carpeting or cover it with rugs, runners, or similar coverings. Arrange the cord away from traffic areas and in a location where it will not cause tripping hazards.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust openings, as this may result in electric shock, fire, or damage to the fireplace.
11. To reduce the risk of fire, do not block air intakes or exhaust openings. Do not use the fireplace on soft surfaces, such as a bed, where openings may be obstructed.
12. This appliance contains hot, arcing, or sparking components. Do not use in areas where gasoline, paint, or flammable/explosive liquids are used or stored. Keep the unit away from heated surfaces and open flames.

13. Always plug the fireplace directly into a wall outlet. Do not use with extension cords or relocatable power taps (such as power strips).
14. To avoid the risk of fire or electric shock, plug the unit directly into a 120 V AC wall outlet.
15. To disconnect the fireplace, turn the controls to OFF, then remove the plug from the outlet. Always remove the plug directly—do not unplug by pulling on the cord.
16. Always unplug the unit before moving or cleaning, or whenever it is not in use.
17. Use this fireplace only as described in this manual and only for intended household purposes. Any other use not recommended by this manual may result in fire, electric shock, or injury.
18. The use of attachments not recommended by our after-sales service may pose safety hazards.
19. Always operate on a dry, level surface. Use on floor only.
20. Do not use the fireplace outdoors.
21. **WARNING:** To reduce the risk of fire or electric shock, do not use this unit with any solid-state speed control device.
22. Do not attempt to repair or modify any electrical or mechanical components of this unit. Doing so will void the warranty. There are no user-serviceable parts inside. All servicing must be performed by qualified personnel.
23. Hyperthermia can be fatal. Symptoms may include elevated body temperature, headache, nausea, vomiting, fatigue, dizziness, fainting, and rapid heartbeat. If you experience any of these symptoms, turn off the fireplace immediately and seek medical attention.
24. To prevent excessive room temperatures that may lead to hyperthermia, do not leave the unit running unattended in confined spaces or near infants, or individuals with reduced physical, sensory, or cognitive abilities.

TECHNICAL SPECIFICATIONS


Rated Voltage/ Frequency	120V ~ 60Hz
Rated Power	1500w
Dimensions	20.2in. (W) x 13.78in. (D) x 25.54in. (H)
Net Weight	9.7 kg

OVERHEAT PROTECTION:

This fireplace is equipped with an overheat protection feature. If the internal components reach a temperature that may cause overheating or pose a fire risk, the unit will automatically shut off.

PACKAGE CONTENTS

 
A



Remote control

(2 AAA Batteries Not Included)

B ×4

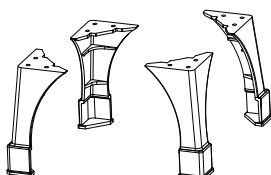

Leg

C ×12



Screws

D



Handle

PREPARATION


Before beginning assembly, ensure all parts are present. Compare the included components with the package contents above. If any parts are missing or damaged, do not attempt assembly. Contact our after-sales service for replacement parts.

Tools Required (not included): Phillips screwdriver




ASSEMBLY INSTRUCTIONS

Place the fireplace on its side on a padded surface, with the bottom panel accessible. Align the holes on one leg with the corresponding holes on the bottom of the fireplace, as shown in the diagram. Insert three screws and tighten them firmly. Repeat this process for the remaining three legs.

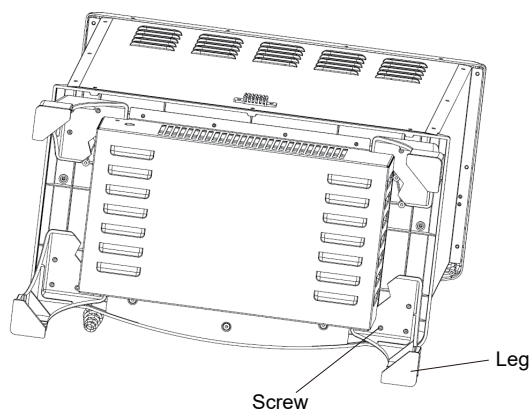


Align the handle with the hole on the door and secure it with a screw.

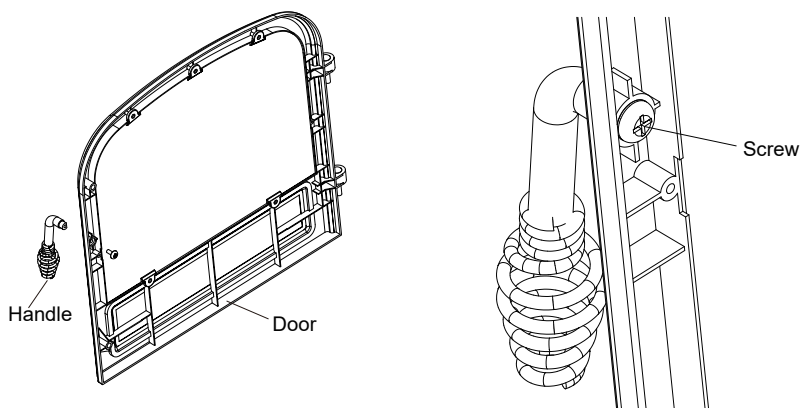

WARNING: It is normal for the power cord to feel warm during use. However, a loose connection between the plug and the outlet may cause the plug to overheat. If this occurs, try a different outlet and contact a qualified electrician to inspect the original outlet for damage.




PRODUCT DIAGRAM

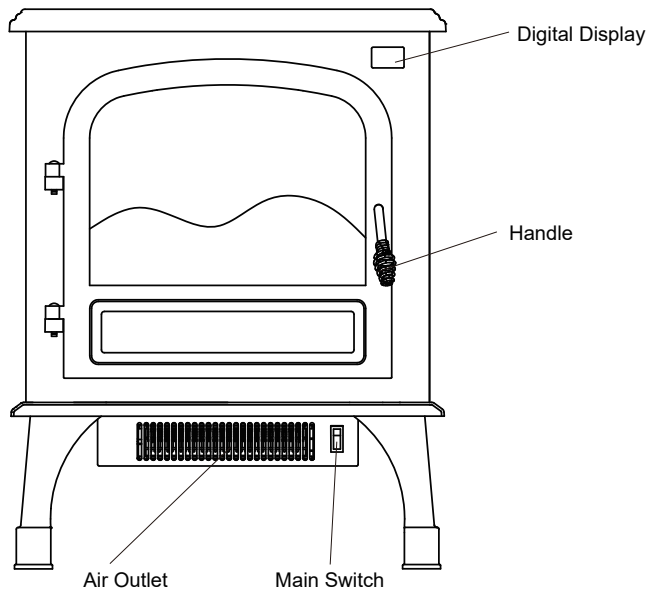

CONTROL PANEL

(accessible after opening the front door)

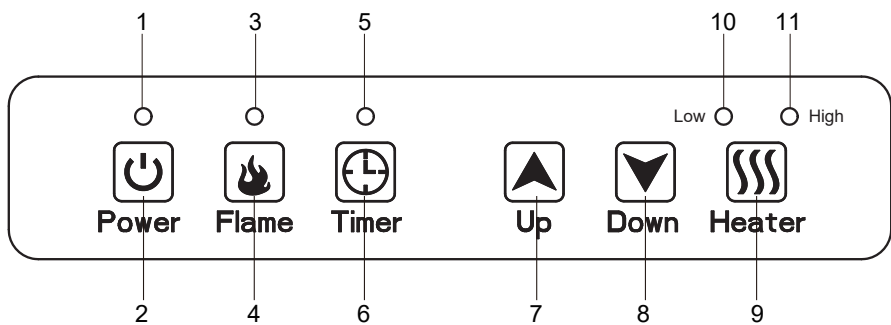


1. Power Indicator Light: illuminates red when the unit is plugged in. Press the power button to activate the display and flame effect.
2. Power Button: turns the display and flame effect on or off.
3. Flame Indicator Light: lights up when the flame function is active.
4. Flame Button: adjusts the brightness of the flame effect.
5. Timer Indicator Light: illuminates when the timer function is enabled.
6. Timer Button: allows the user to set a scheduled power-on or power-off time.
7. Up Button: increases the temperature or timer value.
8. Down Button: decreases the temperature or timer value.
9. Heater Button: switches between heating modes or turns the heater off.
10. Low Heat Indicator Light: lights up when the fireplace is operating in low heat mode.
11. High Heat Indicator Light: lights up when the fireplace is operating in high heat mode.

Digital Display:

Displays the set room temperature or timer value, based on the selected mode (Timer, Low Heat, or High Heat). The display automatically deactivates after 5 seconds of inactivity. Press any button except the power button to wake up the display.

Remote control

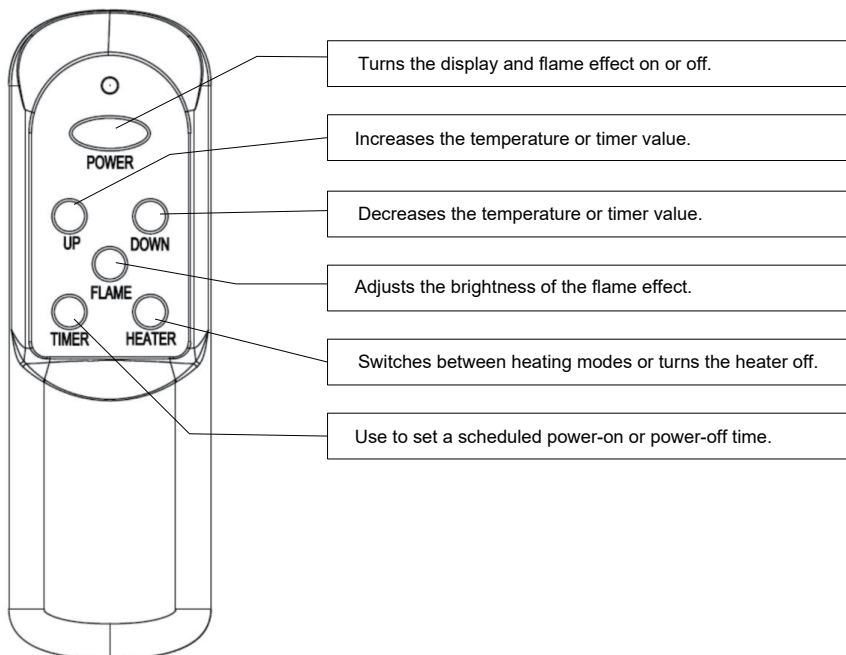



BEFORE USE

1. Place the fireplace on a firm, level surface, and plug it into a 120 V, 60 Hz power outlet. Operate the fireplace only in the upright position, and only after the legs have been properly installed
2. Turn on the main switch in the front of the fireplace.
3. Insert 2 AAA batteries into the remote control before use. Batteries are not included in the package.



HOW TO USE THE ELECTRIC FIREPLACE

Once the electric fireplace has been properly assembled and plugged into a power outlet, and the main switch is turned ON (the main switch indicator light is illuminated), the unit is ready for operation:

1. Turning On and Operating the Fireplace:

 POWER	or	 POWER	Press the power button on the control panel or on the remote control to turn on the fireplace. When the unit is turned off, the heating element stops immediately, while the fan continues to run for approximately 3 minutes to release residual heat. The fan will then shut off automatically.
 HEATER	or	 HEATER	Press the HEATER button to cycle through Low Heat, High Heat, and Off; the corresponding indicator light will turn on. Power for High Heat mode is 1500W; Low Heat mode is 750W.

2. Setting the Room Temperature:


 UP	 DOWN	or	 UP	 DOWN	Use these buttons to increase or decrease the desired room temperature or timer value.
When adjusting the timer, the display will cycle from 59 to 95(59,60,61,62...95).					The set temperature ranges from 59°F to 95°F. Once the desired temperature is selected, the heater will stay on until the room temperature reaches the set temperature. The heater will then cycle on and off to maintain the target temperature.

3. Setting the Flame:

 or  FLAME or FLAME	Adjust the flame brightness to desired level.
--	---


4. Setting the Timer-Off Function:

 Caution: The timer-off function can only be set in power-on mode.

 or  TIMER or TIMER	When the unit is powered on, press the timer button to set the timer-off function.
  or   UP DOWN or UP DOWN	Use the UP and DOWN buttons to adjust the timer.
	The digital display shows the selected timer value. Press the UP or DOWN button repeatedly to adjust the time, increasing or decreasing by 1 hour per press, from 0 to 12 hours.
 Timer	The timer indicator light is illuminated when the timer-off function is set.


5. Setting the Timer-On Function:

 Caution:The timer-on function can only be set in standby mode.

 or  TIMER or TIMER	When the unit is powered on or in standby mode, press the Timer button to activate the timer-on function.
  or   UP DOWN or UP DOWN	Use the UP and DOWN buttons to adjust the timer.
	The digital display shows the selected timer value. Press the UP or DOWN button repeatedly to adjust the time, increasing or decreasing by 1 hour per press, from 0 to 12 hours.
 Timer	The timer indicator light is illuminated when the timer-on function is set.

6. Child Lock:

The child lock function helps prevent accidental operation by children.

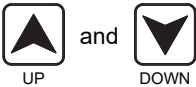	1. The child lock can be activated both when the unit is on and when it is in standby mode. 2. To enable the lock, press and hold both the "UP" and "DOWN" buttons for 3 seconds. A buzzer will sound, indicating that the control panel and remote control are now locked. 3. While the lock is active, pressing any button on the control panel or remote control will trigger a buzzer sound, but the unit will not respond. 4. To deactivate the lock, press and hold both the "UP" and "DOWN" buttons for 3 seconds. A buzzer will sound, indicating that the lock has been released. The control panel and remote control will then resume normal operation.
---	--

MAINTENANCE

1. Glass Safety

- * Do not operate this product if the glass is missing or broken under any circumstances.
- * Do not strike or slam the glass.
- * Do not use abrasive cleaners to clean the glass.
- * If the glass needs to be replaced, please contact our after-sales service for assistance.
Do not attempt to replace the glass yourself.

2. Cleaning

*Before cleaning, turn off the fireplace and unplug it from the power outlet.


*To clean the glass door:

Use a clean, dry cloth to remove dust. For fingerprints or smudges, use a clean, damp cloth. Do not use abrasive cleaners or spray liquids directly on the glass surface.

*To clean metal or painted metal surfaces:

Wipe with a clean, damp cloth only. Do not use abrasive cleaners or spray liquids on these surfaces.

NOTE: If the fireplace is not going to be used for an extended period, remove the remote control batteries to prevent corrosion. Store the remote in a safe place.

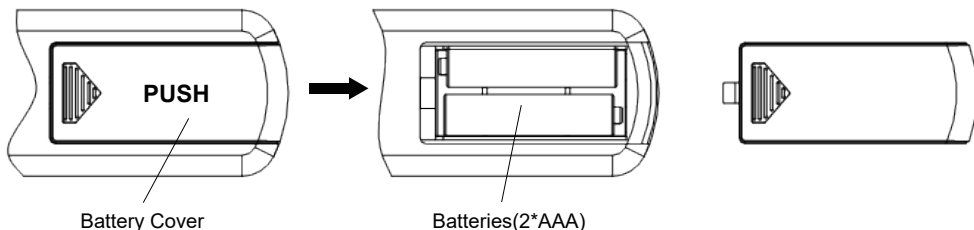


TROUBLESHOOTING

If the fireplace does not operate, please check the following before contacting after-sales service:

1. Ensure the power cord is securely plugged into a working electrical outlet.
2. Check if the outlet is receiving power by testing it with another device.

STORAGE

When not in use, store the fireplace in a cool, dry place. To prevent dust and dirt buildup, it is recommended to repack the unit in its original packaging.

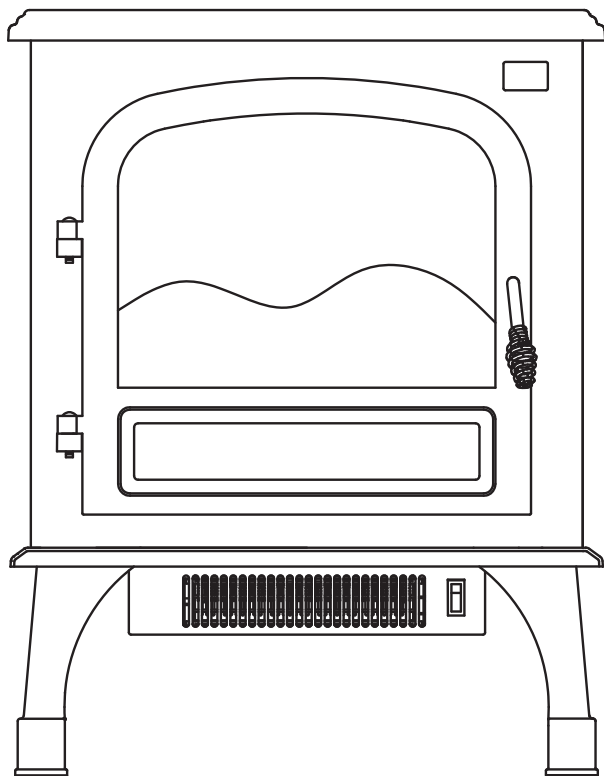

Technical Support

(909)637-7665 | (909)637-7593

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and services in the industry. Should you have any issues, please don't hesitate to contact us.