




Classic Pre-Lit Wall Tree-28"
Item # DCWD0001



To set up:

- 1) Place the wall tree on a flat surface. Straighten and separate all branch tips. To achieve maximum fullness, tips should not touch one another. To shape the bow, slip fingers into the loop molding the loop into a rounded shape, straighten tails so they are hanging down.
- 2) From back of the wall tree, find the battery box and open it. Insert 3 AA batteries into the battery box then close it (see Figure A, B, C, D & E). **When using outdoors, locations with temperatures -10 or colder we recommend using lithium batteries. Suitable for indoor and outdoor use.*
- 3) Each battery Box is featured with a 3-position switch: On – Off – Timer (see Figure F). The timer enables the LED lights to remain on for 6 hours, then off for the next 18 hours. This will repeat daily.

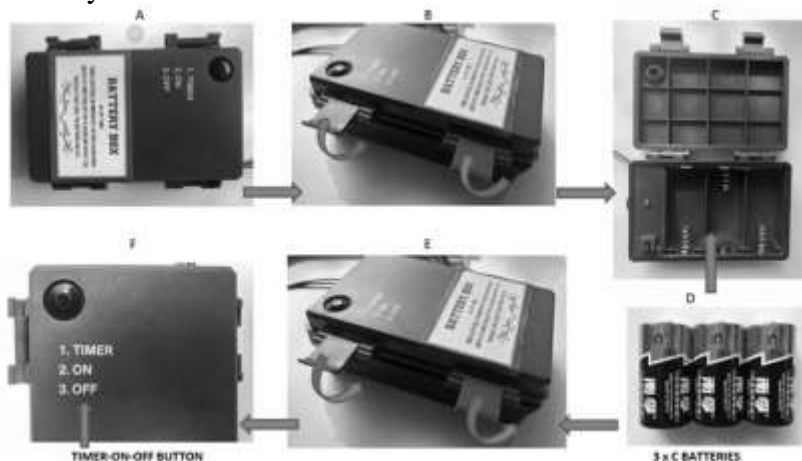

- 4) Hang the tree using the include garland loop tie located on the back of the tree.

ATTENTION:

1. Adult supervision is necessary when changing and disposing of batteries.
2. Slide switch to "OFF" position when changing batteries.
3. Confirm proper polarity when inserting batteries (See Fig. 1).
4. Do not attempt to charge non-rechargeable batteries. Only recharge rechargeable batteries and do it under adult supervision.
5. Do not mix old and new batteries or batteries of different types.
6. Replace batteries when the light is faint.
7. Replace all batteries at the same time.
8. Remove dead batteries from unit.
9. Do not short-circuit terminals under any circumstances.
10. Do not allow the bottom of the unit to come into contact with heat.
11. Never throw batteries in a fire or attempt to open batteries.
Batteries may explode or leak.
12. Remove all batteries from unit before storage.
13. Batteries are harmful if swallowed. Keep away from young children.

Made in China
0520RevA

THANK YOU FOR YOUR PURCHASE

Comments or questions?

Call us at 1-877-359-0115 or

Contact us at customerservice@haute-decor.com

Haute Decor
PO Box 1594
Allen, TX 75013

