



OWNER'S MANUAL

30" OSCILLATING FAN

PEDESTAL FAN



MODEL 2VAFP30

PRODUCT SPECIFICATIONS

- Model No: 2VAFP30
- Item Name: Oscillating Pedestal Fan
- Rated Voltage: 120V (60Hz)
- Rated Power: 200W
- Mode Fan Speeds: Low / Medium /High
- Fan Blade Diameter: 30 Inch

CONSUMER PRODUCT INFORMATION

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location and date purchased below:

Store Name: _____

Location: _____

Date Purchased: _____

CONTENTS

Important Instructions4

Product Diagram4

Assembly Instructions.....5

Operation Instructions.....5

Storage and Maintenance.....6

Troubleshooting7

IMPORTANT NOTE:
Please read and save these instructions. Read through this owner’s manual carefully before using this product. Protect yourself and others by observing all safety information, warnings, and cautions. Failure to comply with instructions could result in personal injury and/or damage to property. Illustrations in this manual are for explanatory purposes only, your actual product may look slightly different. **SAVE THIS MANUAL FOR FUTURE REFERENCE.**

 **WARNING:** Cancer www.P65Warnings.ca.gov

 
INSTRUCTIONS

IMPORTANT INSTRUCTIONS

PLEASE READ CAREFULLY- ALWAYS MAINTAIN SAFETY WHEN WORKING WITH ANY APPLIANCE

1. Check that the power supply voltage corresponds with the rating of the appliance before operating.
2. To protect against electric shock. Do not immerse cords plugs or appliances in water or any other liquid.
3. Do not leave any appliance unattended while it is operating.
4. Close supervision is necessary when any appliance is used by or near children or infirm persons.
5. Unplug from the outlet when not in use or before cleaning. Allow cooling before taking off any parts.
6. Do not operate the appliance with damaged power cords or plugs, and do not use a damaged appliance. If the power cord or appliance is damaged, it must be replaced by the manufacturer, service agent, or similarly qualified professional to avoid a hazard.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces
10. To disconnect-remove the plug from the outlet. Do not pull the plug out by the cord.
11. Do not use this product for anything other than its intended use. This appliance is for household use only.
12. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.
13. Do not use the appliance without the protective grills.
14. Do not attempt to force the grill to make the fan turn or stop.
15. Never put objects into the grills when the appliance is connected to the mains.
16. It is not advisable to expose people ,especially babies or older people, to a continuous cold air stream for a long time.

PRODUCT DIAGRAM

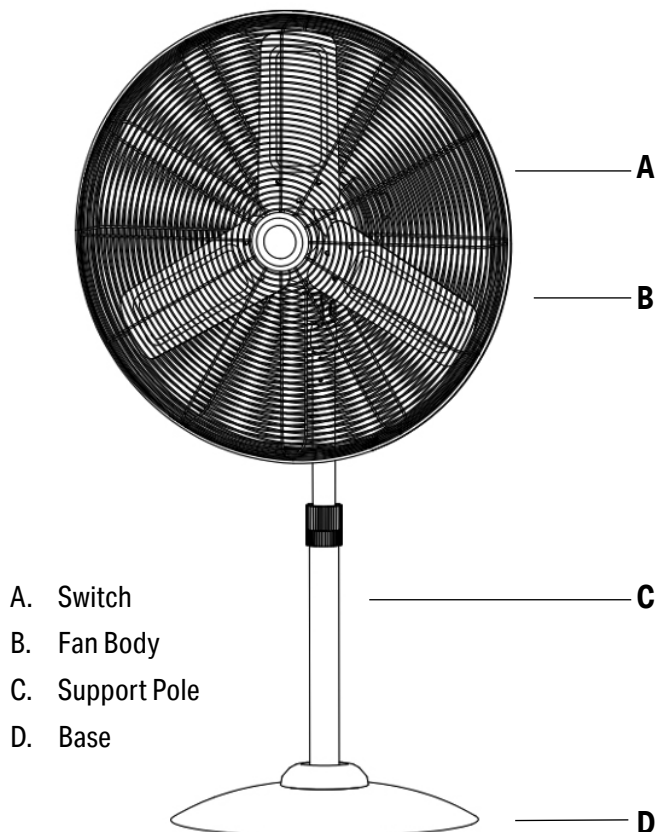


PACKAGE INCLUDES

- Support Pole x 1
- Base x 1
- Screws x 4

ASSEMBLY & OPERATION


ASSEMBLY INSTRUCTIONS

 1. Take out all of the spare parts from box, all screw have been pre-installed.
2. Place the fan base on level ground.
3. Loosen the locking collar on the support pole using the wrench. Extract the upper support pole slowly to adjust the height of the fan. The support pole must be fully extended.
4. Mount the entire support pole to the base. Align holes and use the screws from the metal base, then install the entire support pole to the base.
5. Mount the motor assembly to the connector on the upper support pole. Make sure the holes align.
6. Secure the motor assembly with pivot bolt and nut. Tighten the nut and bolt firmly using the wrench.
7. Slide the rear fan guard onto the motor assembly and secure it with flange screws (screws from the motor). Tighten the screws firmly using the wrench.
8. Loosen the set screw on the back of the fan blade assembly using the wrench assembly using the wrench. Slide the fan blade assembly onto the motor shaft.
9. Tighten the set screw on the back of the fan blade assembly using the wrench onto the flat part of the fan shaft.
10. Attach the front fan guard to the rear fan guard and secure with the fasteners on the rear fan guard.

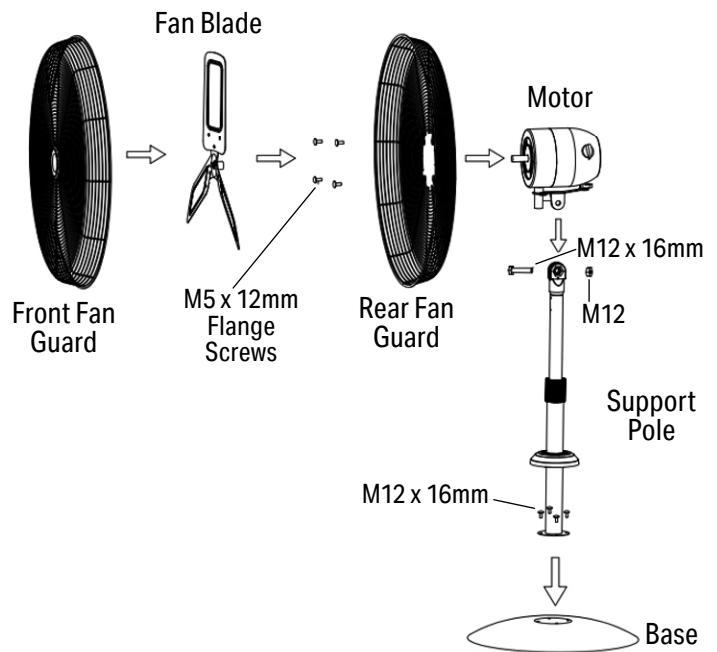

OPERATION INSTRUCTIONS

 1. Plug the power cord into 120V the volt AC wall outlet.
2. You can twist the switch on the control box to turn on or off the fan and select to different speeds.
0=Stop 1=Low speed 2=Medium speed 3=High speed

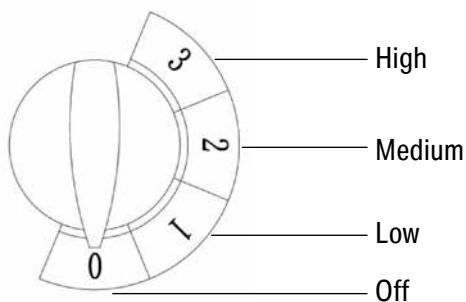

STORAGE & MAINTENANCE

STORAGE & MAINTENANCE GUIDELINES

1. Turn the control OFF and unplug the fan before cleaning.
2. Use only a soft damp cloth to clean the fan.
3. Do not place the fan in water and never allow water to drip into the Motor Housing.
4. Do not use gasoline, paint thinner or other chemicals to clean the fan.
5. To clean the fan blade, remove the front grill and wipe the blade and grills.
6. Store the fan in its original box or cover the fan to protect it from dust.
7. Store it in a cool and dry place.

TROUBLESHOOTING

ISSUE	POSSIBLE CAUSE	RECOMMENDED SOLUTION
Fan not turning on	Power cord not plugged in securely	Ensure the power cord is fully inserted into a working outlet.
	Circuit breaker has tripped or fuse blown	1. Check your circuit breaker panel for a tripped breaker. 2. Reset the breaker, or replace the fuse if blown.
	Fan switch not in the "On" position	Turn the fan speed control switch to the "On" position or desired speed.
	Faulty power outlet	Test the outlet with another device (e.g., a lamp) to ensure it's functioning. If the outlet is faulty, use another outlet.
	Motor issue	If the fan doesn't turn on after checking the power supply, unplug the fan and contact customer service.
Unusual noise during operation	Loose screws or parts	1. Turn off and unplug the fan.
		2. Inspect all screws on the housing and blades.
		3. Tighten any loose screws using a screwdriver.
	Fan blades are unbalanced	1. Turn off and unplug the fan.
		2. Inspect each blade for bends or damage.
		3. Remove any objects or debris obstructing the blades.
	Fan placed on an uneven surface	1. Ensure the fan is placed on a stable, level surface.
		2. If necessary, move the fan to a different location.
Fan vibrating excessively	Fan placed on an uneven surface	1. Ensure the fan is placed on a stable, level surface.
		2. If necessary, move the fan to a different location.
	Loose fan blade	1. Turn off and unplug the fan.
		2. Check if the fan blades are securely attached and tighten any loose screws.
Fan overheating	Dust or debris buildup in motor vents	1. Turn off and unplug the fan.
		2. Clean the motor vents using a soft brush to remove dust.
		3. Wipe down the fan blades and housing with a dry cloth.
	Prolonged use in a poorly ventilated space	1. Turn off the fan and allow it to cool down.
		2. Ensure it is operating in a well-ventilated area.
	Electrical issue	3. If the fan continues to overheat, unplug it and contact customer service for further assistance.
Reduced airflow	Dirty fan blades	1. Turn off and unplug the fan.
		2. Clean the blades with a soft, dry cloth to remove dirt or debris.
Fan not oscillating (if applicable)	Obstruction preventing oscillation	1. Ensure there are no objects around the base blocking the oscillation.
		2. Remove any obstructions and restart the fan.
	Mechanical issue	If the fan does not oscillate, unplug it and contact customer service for further assistance.



4560 West 160th Street
Cleveland, OH 44135

833-950-1185 | support@visionairproducts.com | www.visionairproducts.com