 



75" TV STAND ENTERTAINMENT CENTER WITH 44" ELECTRIC FIREPLACE

ASSEMBLY, CARE & USE INSTRUCTIONS

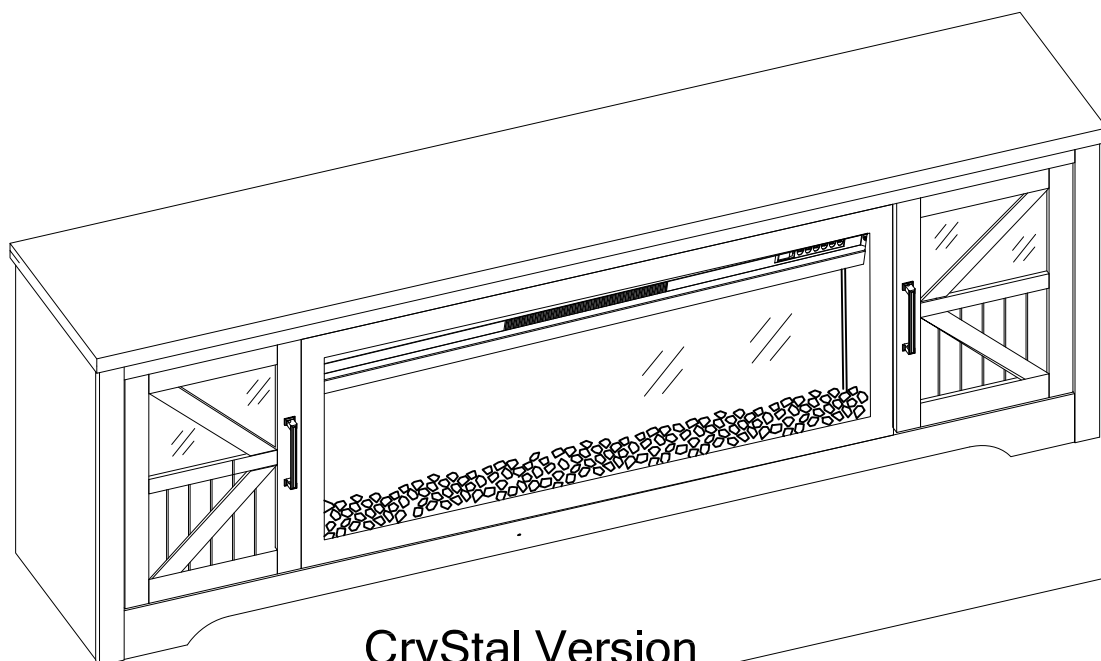

CryStal Version

 Wood Log Version

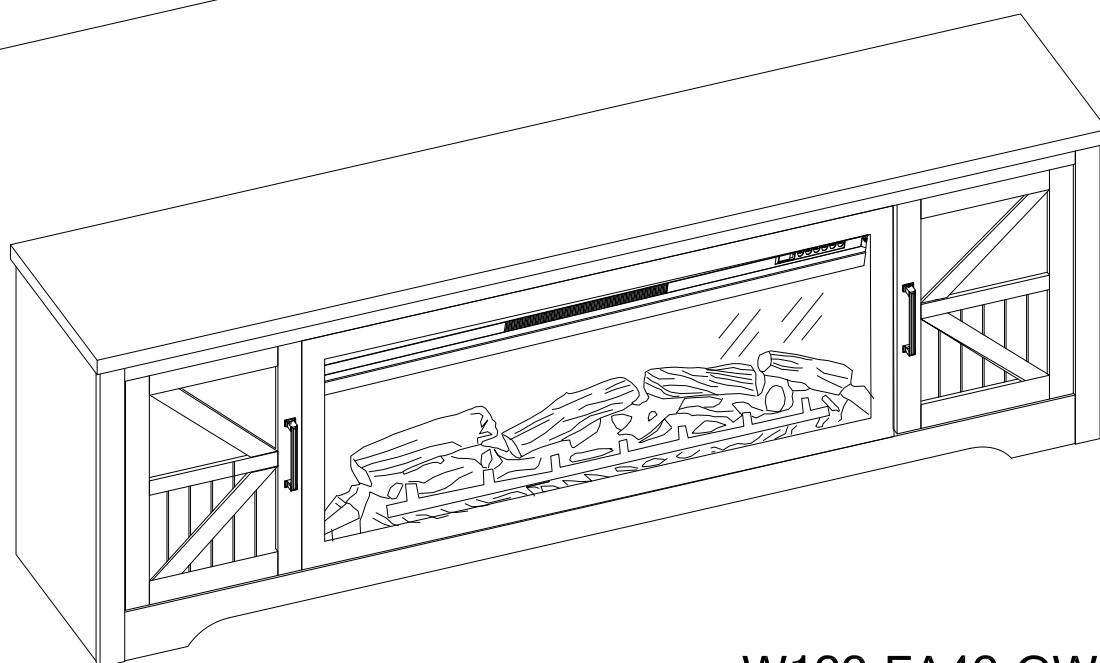

W122-FA42-GW

 
 
Thank you for your trust in purchasing our electric fireplace media mantel. We are committed to continuously developing quality products designed to enhance your home. For more information and to view our full range of products available for your home improvement needs.

 
CAUTION: This unit is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury.

Note: Flat Panel TVs with base support should be placed squarely in the center of the stand with no overhang on any side.



Weight limitations are as follows:

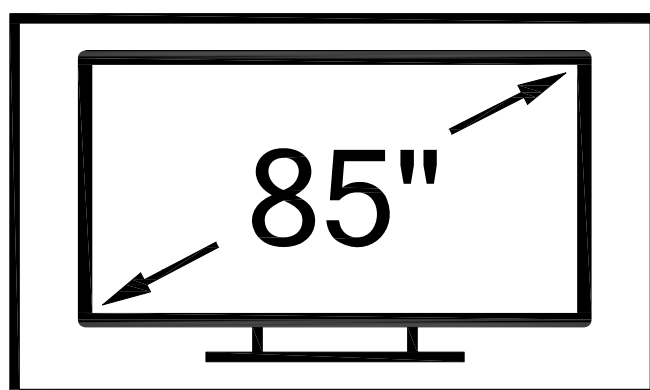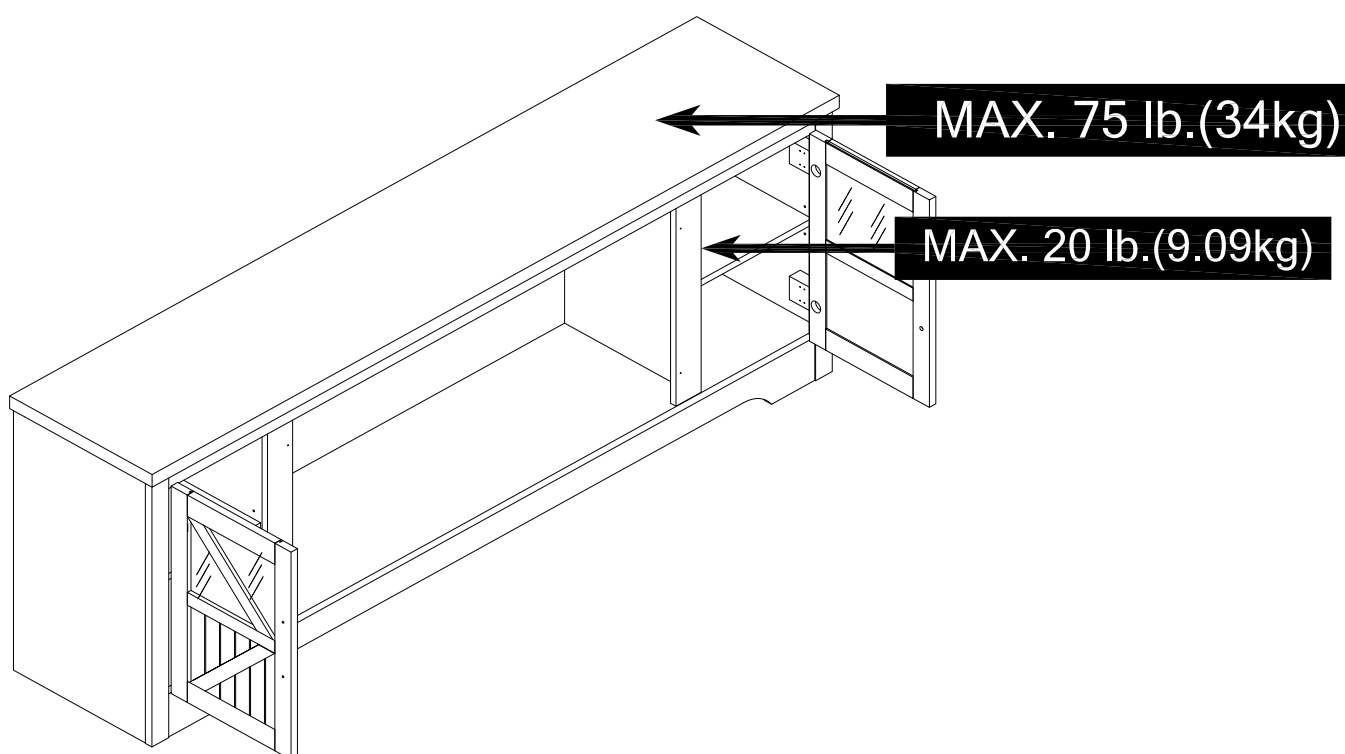


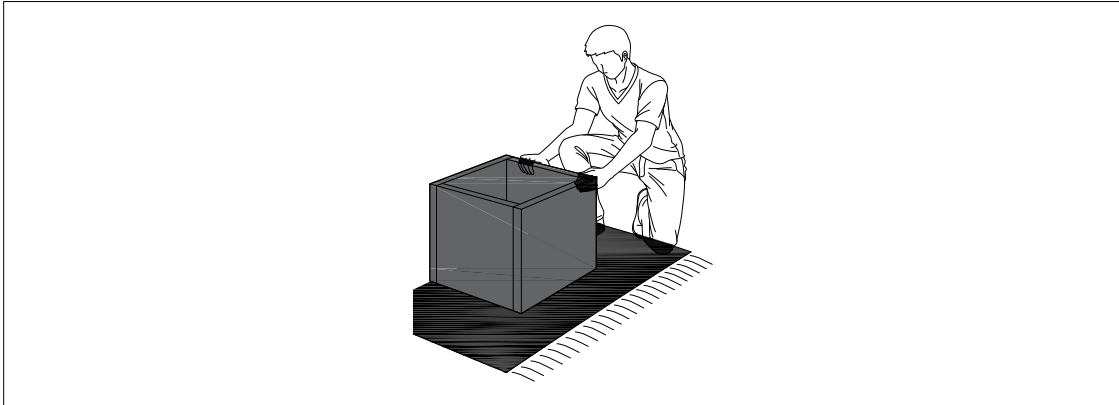

Assemble the furniture on an empty carton, carpet, or rug to prevent scratches or damage.

For safety, please keep pets and children away from the assembly area.

 Ensure the product is fully assembled before use. If you are missing any hardware or products, do not use it until you have restored the missing parts.

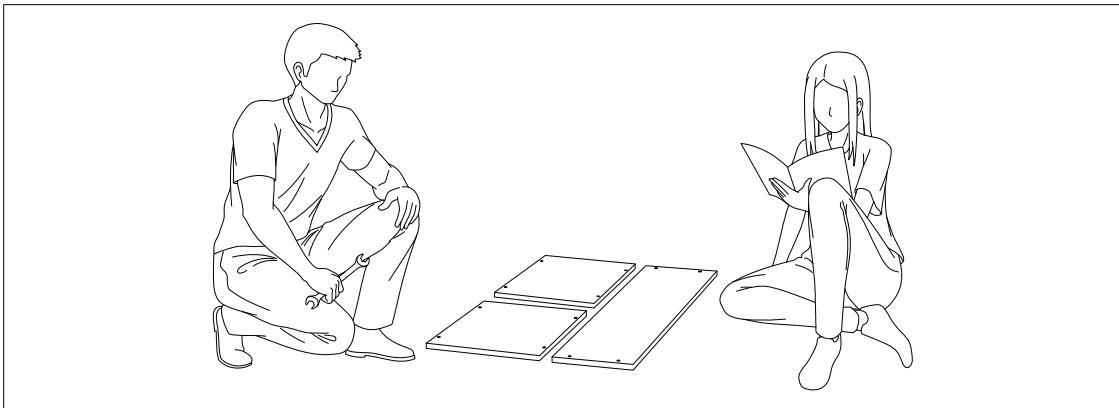

This furniture requires 2 people for assembly.

Read this instruction manual prior to assembly to familiarize yourself with the various steps.

Lay out all components and hardware separately on a flat surface and make sure that no parts are missing or damaged before assembly. Do not destroy or discard any packaging until you are certain that you have all the necessary parts for assembly.

 
Hand tight all hardware and careful not to over tighten to avoid damaging the product.

CAUTION

There are small components used in the construction of this product. Loose items should be kept away from pets and children to avoid a choking hazard.

Keep all plastic bags and packaging film away from pets and children to avoid suffocation






PARTS IDENTIFICATION

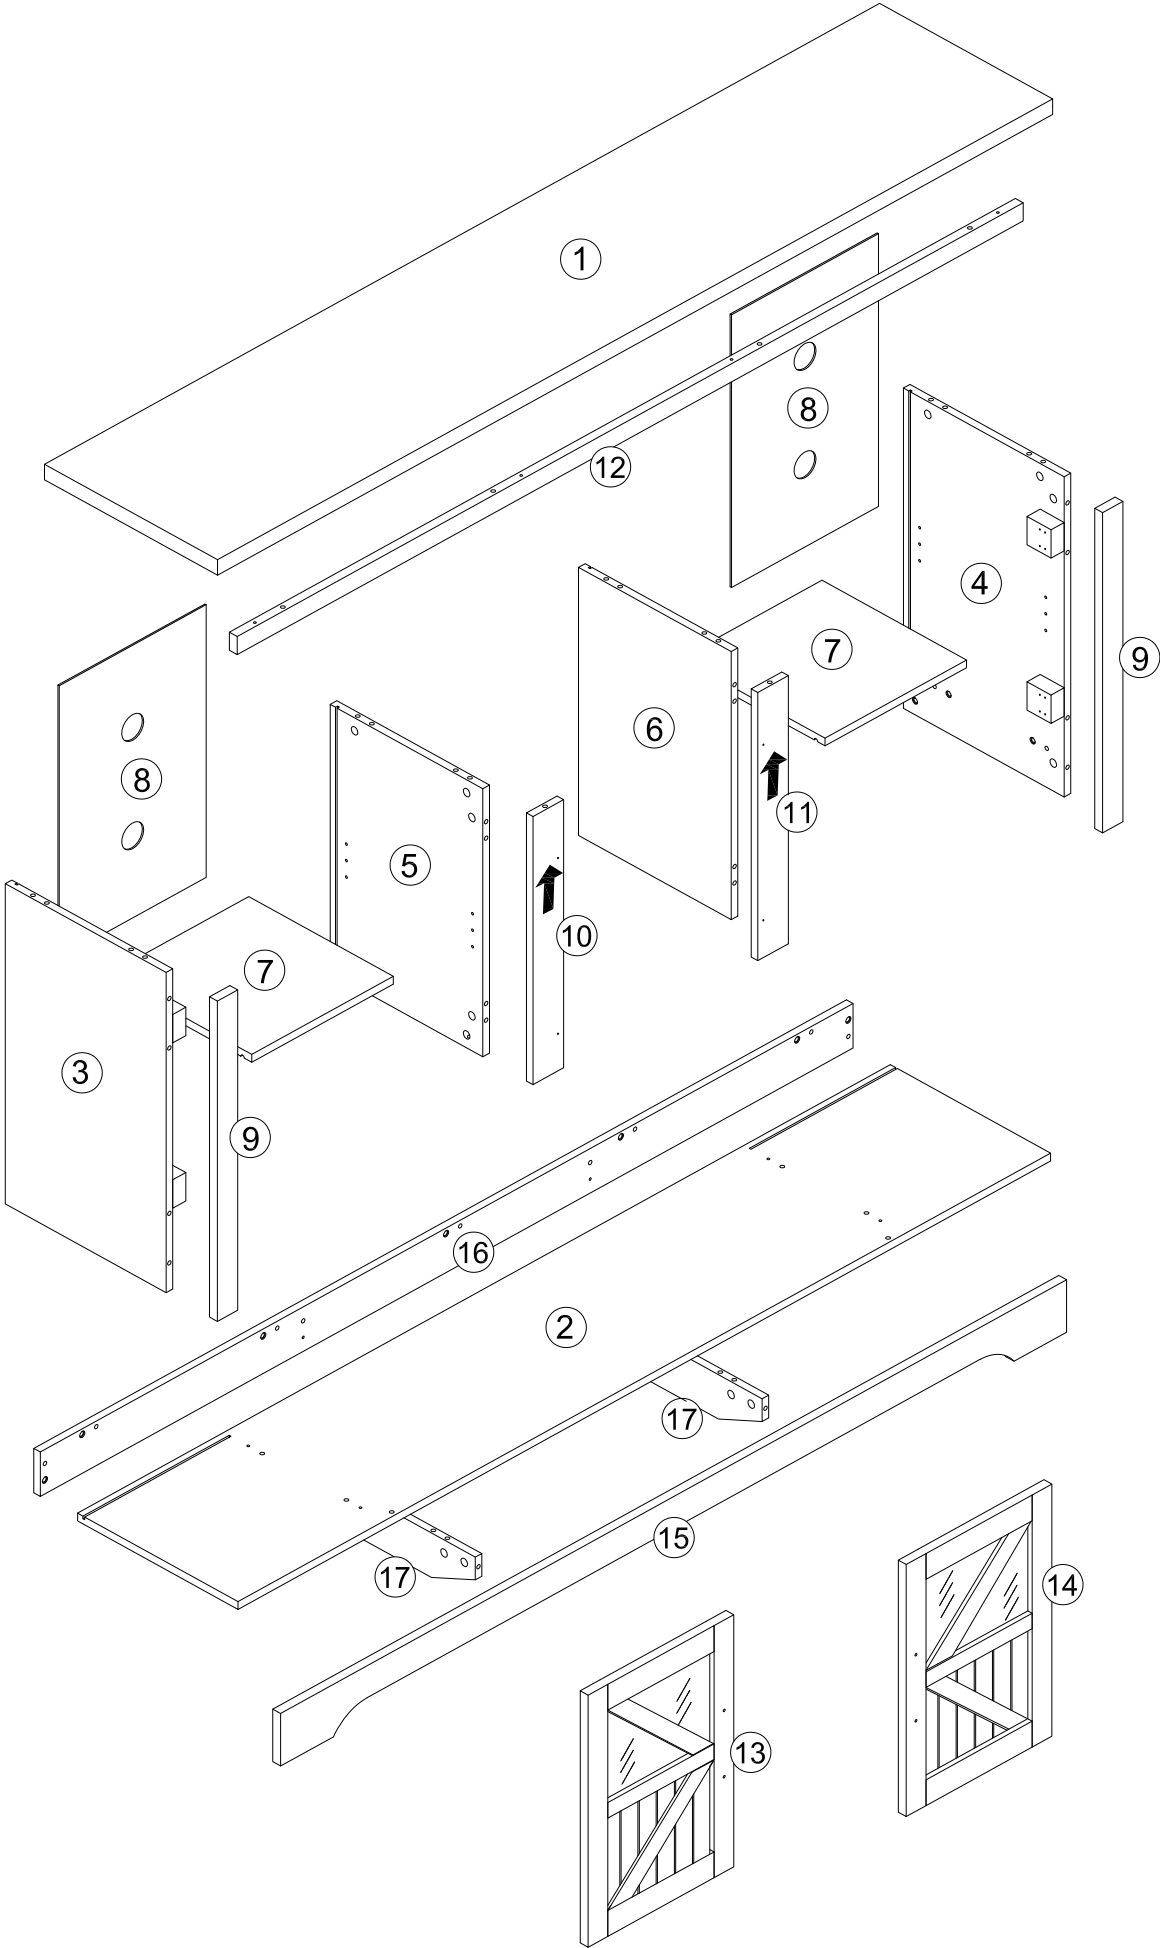



PACKAGE CONTENT (A)

CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Bottom Panel	1
3	Left Lateral Panel	1
4	Right Lateral Panel	1
5	Left Medial Panel	1
6	Right Medial Panel	1
7	Shorage Shelf Panel	2
8	Side Back Panel	2
9	Side front bumper	2
10	Left side panel barrier	1
11	Right side panel stopper	1
12	Horizontal bar under the panel	1
13	Left door	1
14	Right door	1
15	Front foot strip	1
16	Rear foot strip	1
17	Mid foot strip	2

     PACKAGE CONTENT

 28x+2x	 28x+2x	 28x+2x	 34x+3x	 16x
	$\phi 15 \times 11$		$\phi 8 \times 30$	L57 x 20*20
 32x+3x	 1x	 2x	 4x	 8x
$M6 \times 12$	M4		M4x16	16x16*10.5
 8x	 8x	 4x	 24x+2x	 4x
$\phi 3.5 \times 17$			3.5 x 14	M4x40
 4x	 2x	 2x	 2x	 2x
$\phi 3.5 \times 12$	$\phi 8.5 \times 30$	$\phi 4 \times 18$	140x25	$\phi 4 \times 25$

  STEP 1

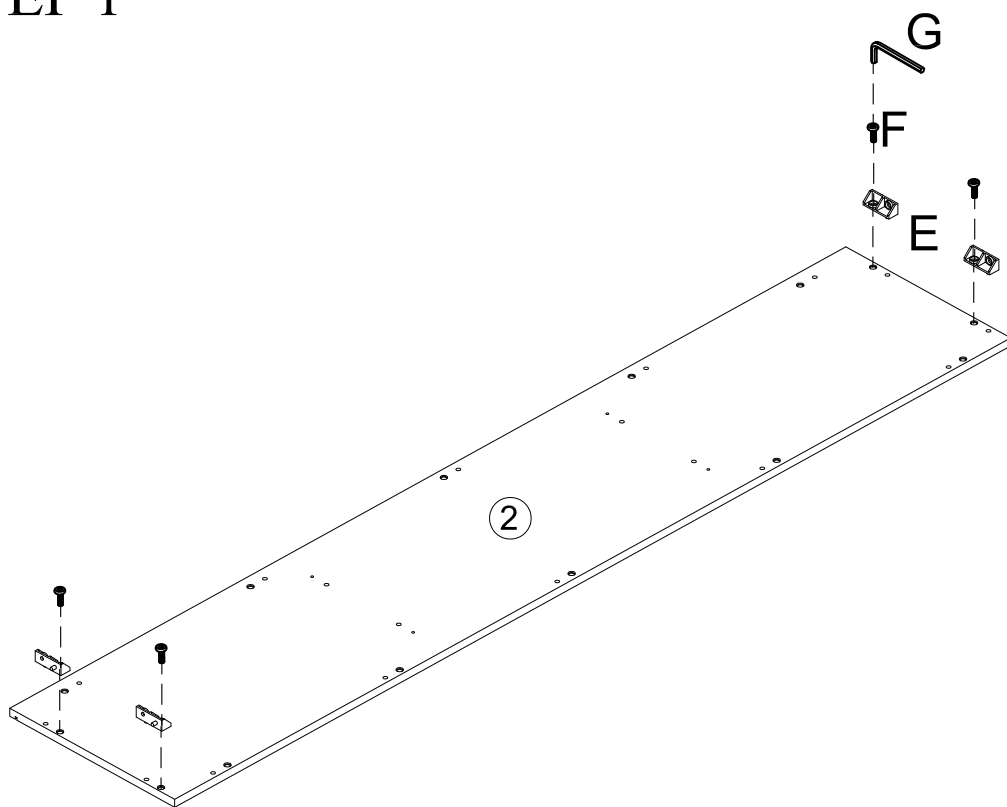

Ex 4




F x 4





Gx 1




 
STEP 2

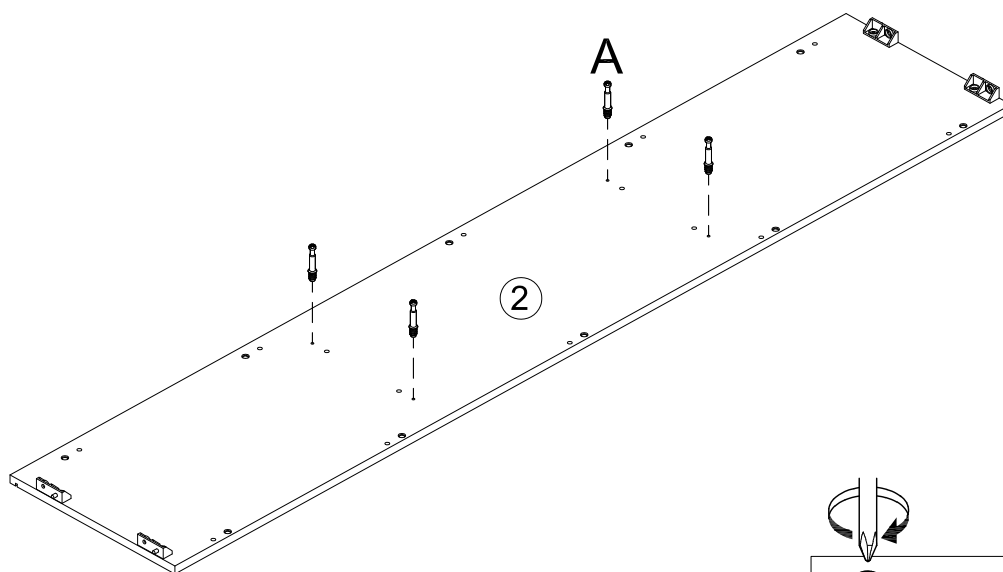


A x 4

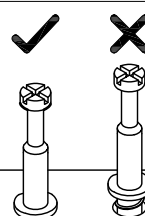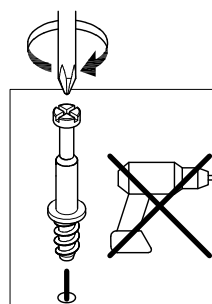  

  STEP 3

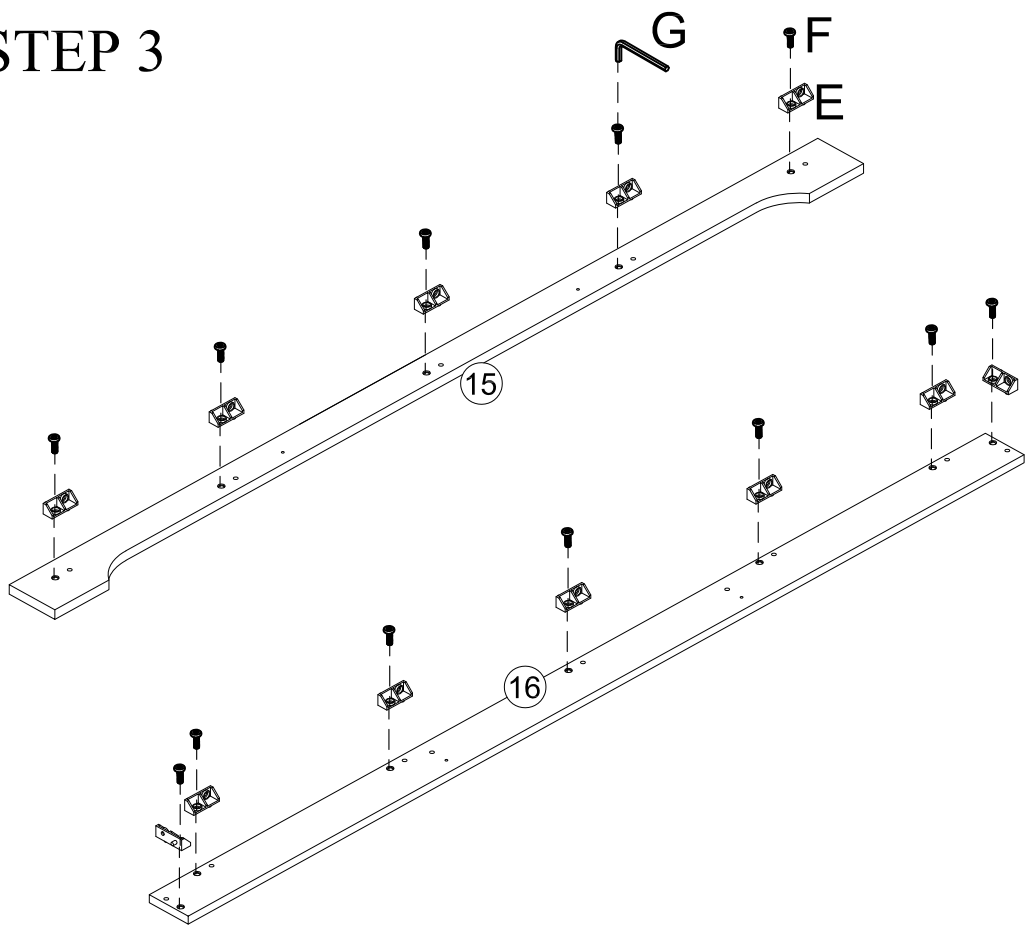


E x 12

 

F x 12



 
G x 1



F







 E




A x 4

    STEP 4

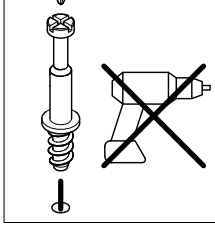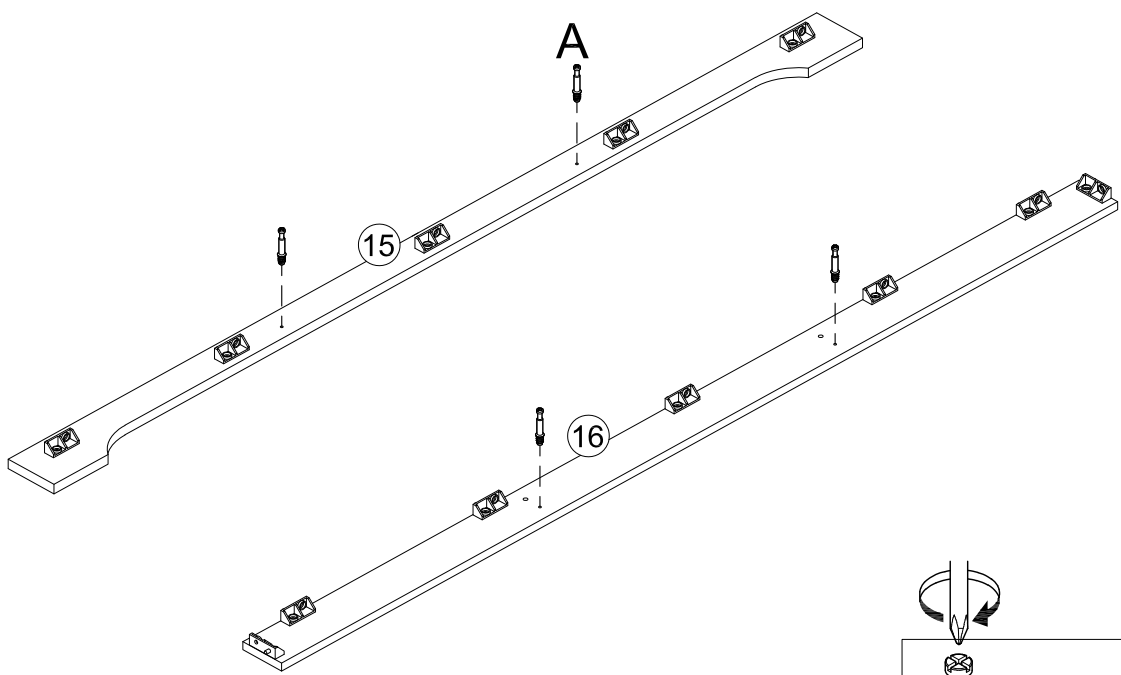

 
STEP 5

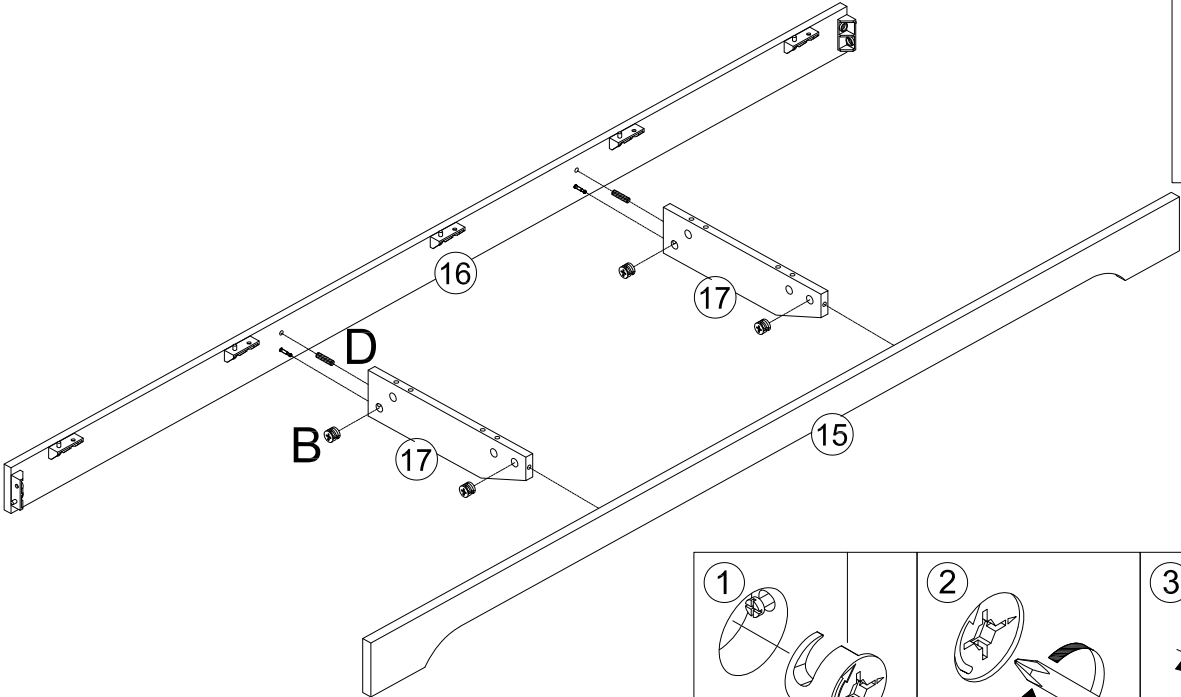


B x4



 D x2

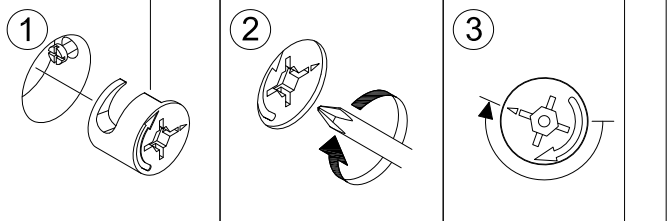

 
STEP 6

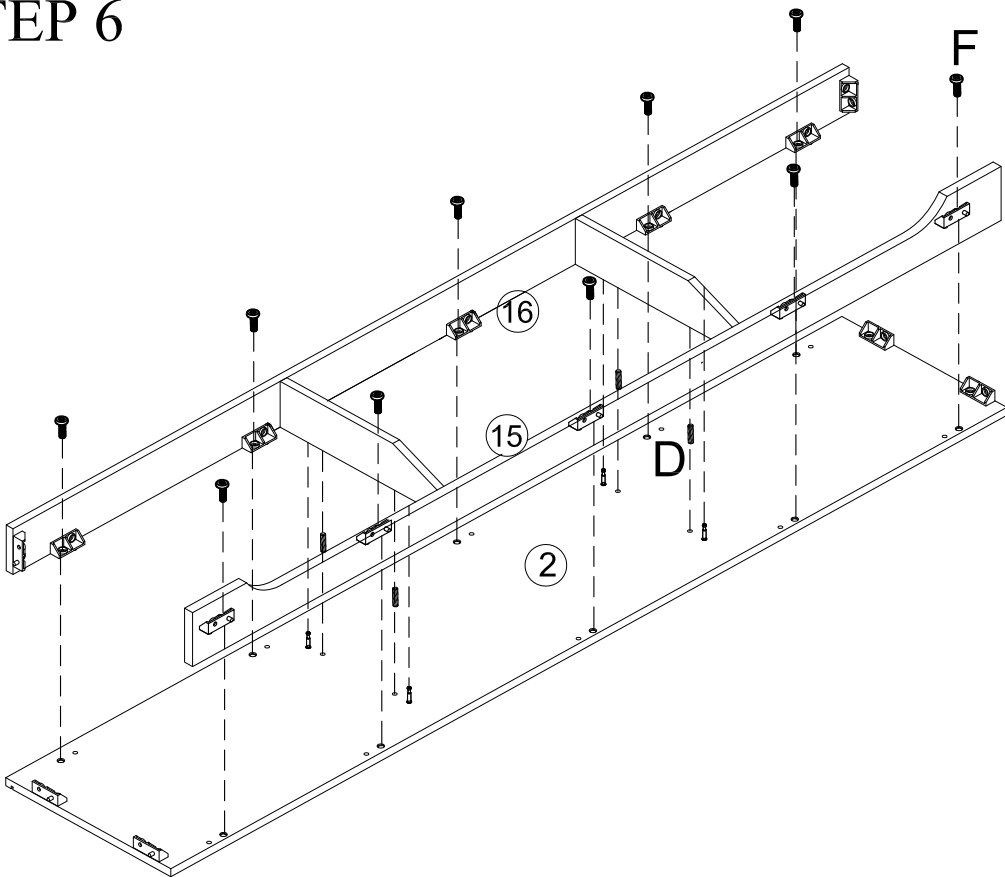




F x 10





 
D x 4

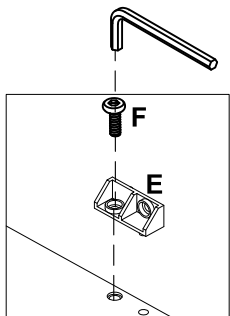

 
 
 
STEP 7

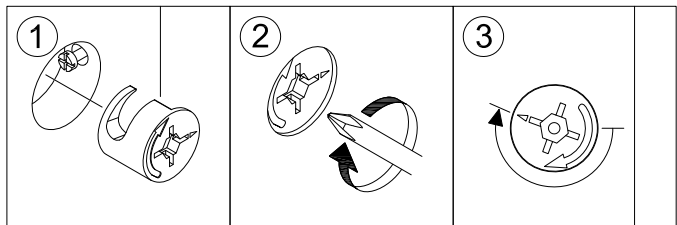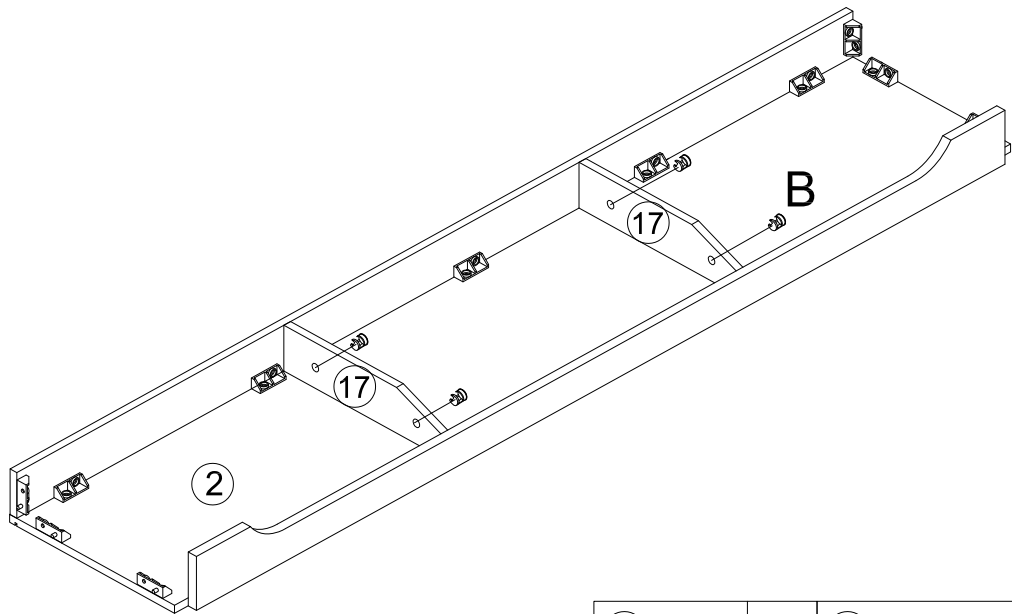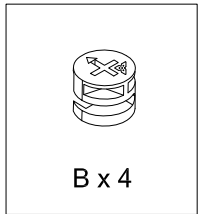

 
 
 
STEP 8

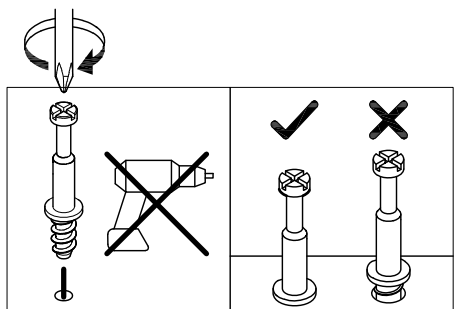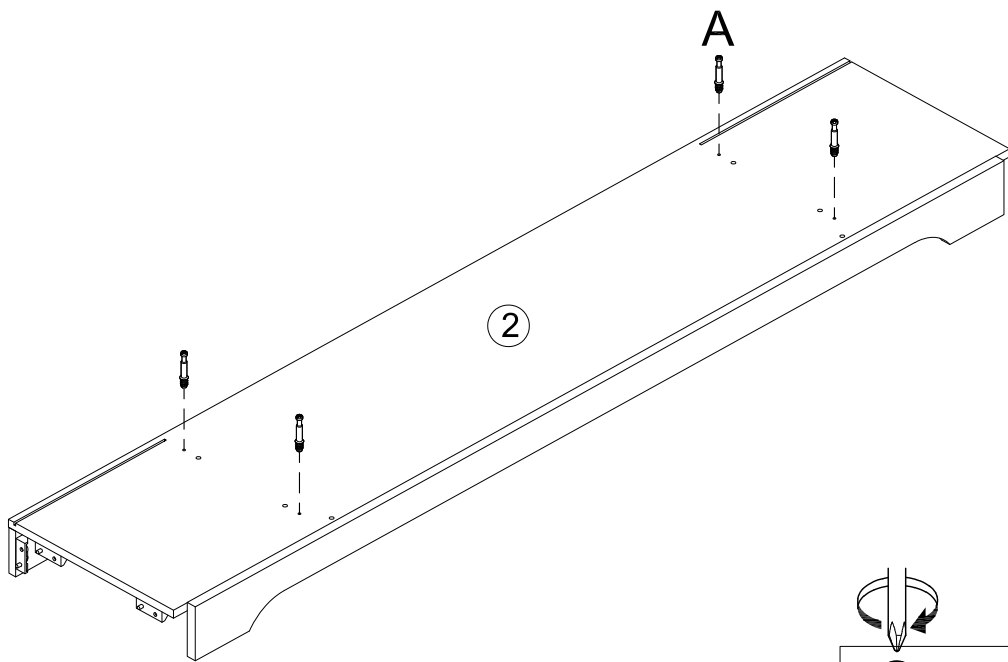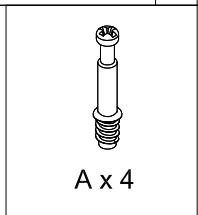

 
 
 
STEP 9

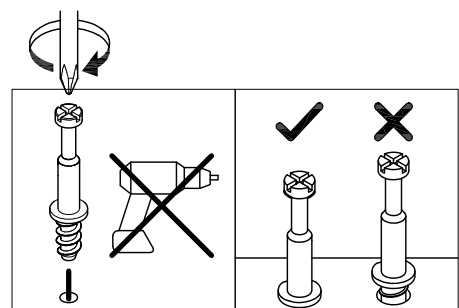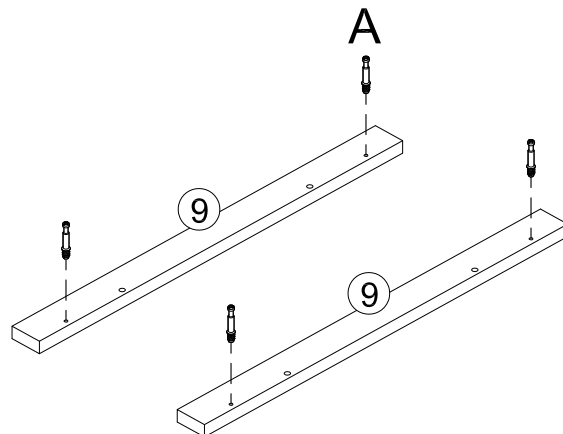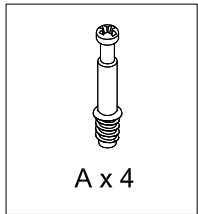

 
 
 
STEP 10

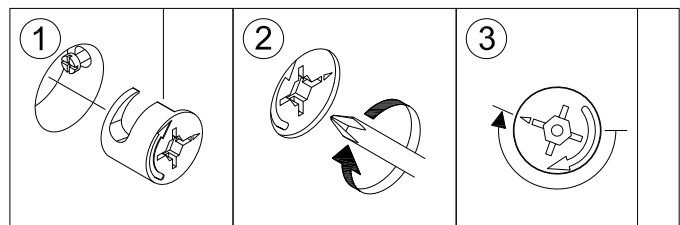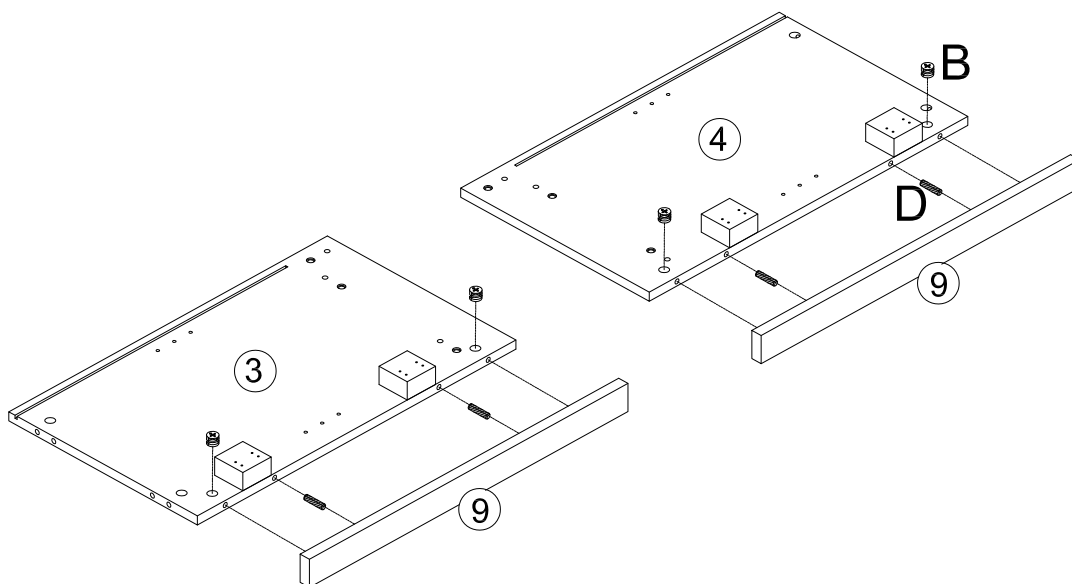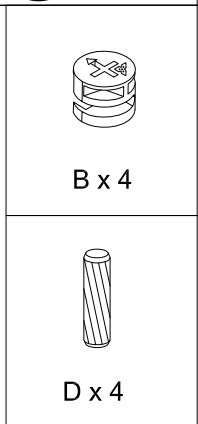

 
 
 
STEP 11

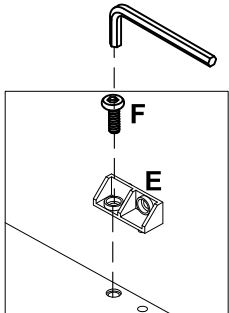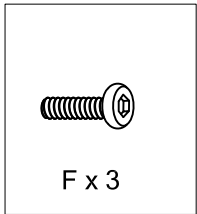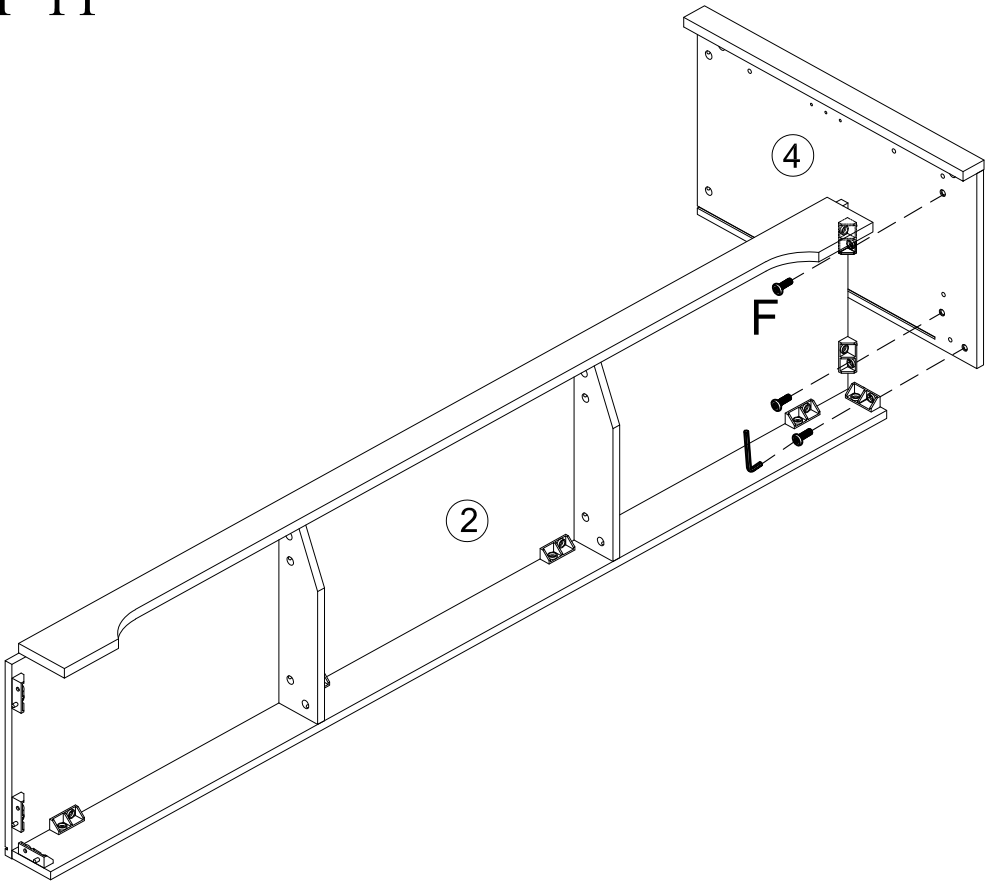


 
 
 
STEP 12

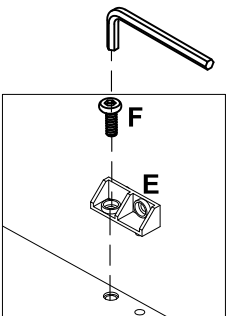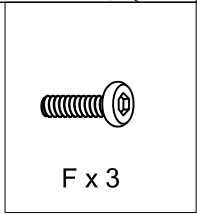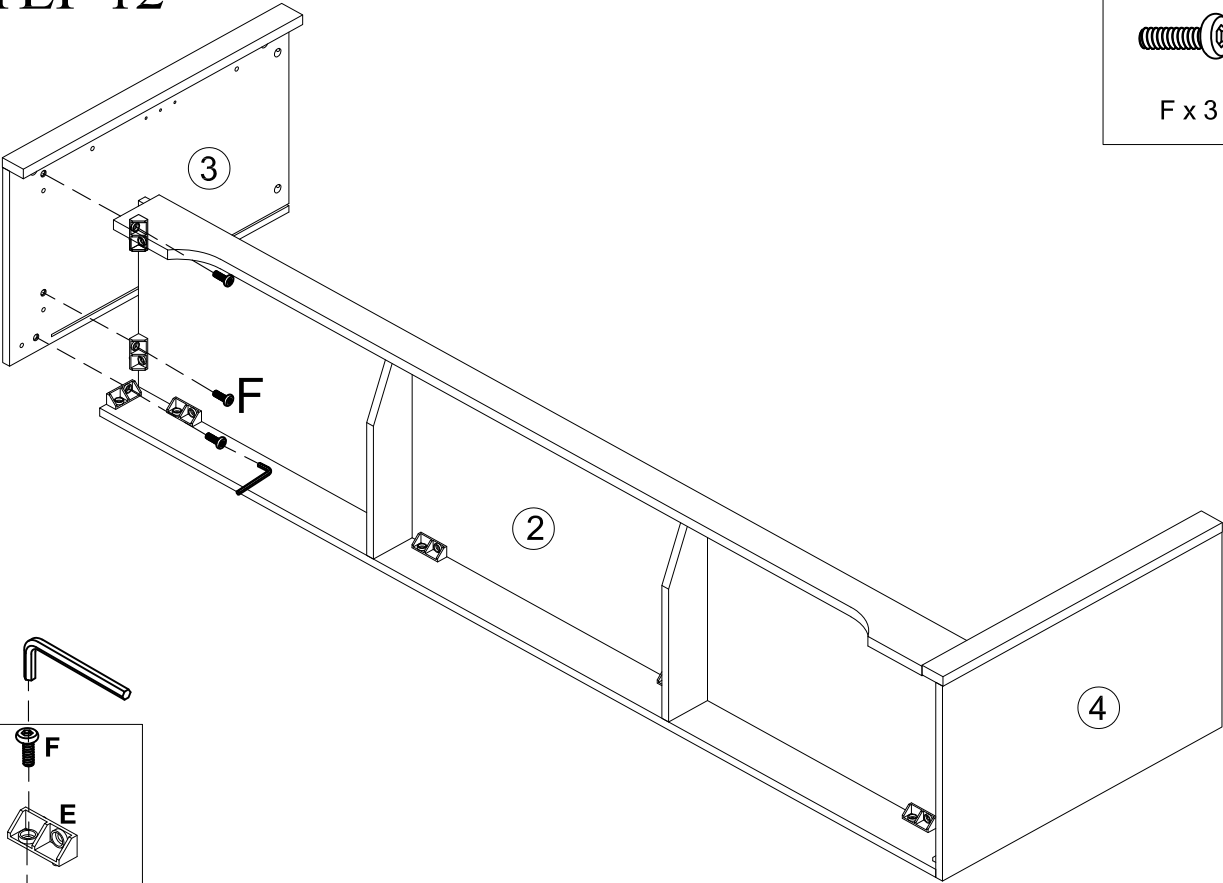

   
STEP 13

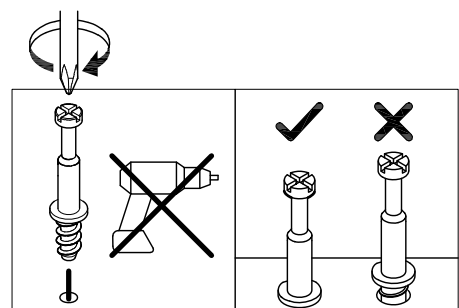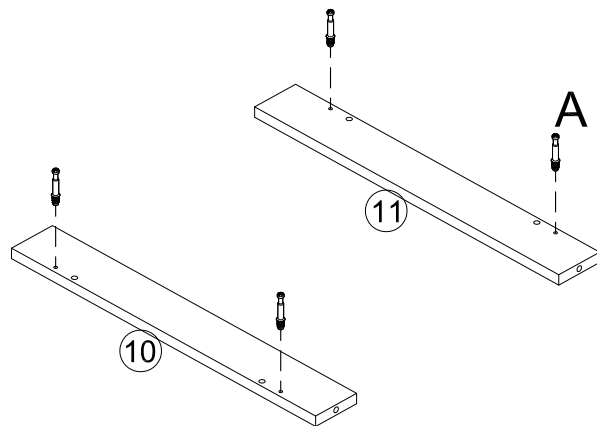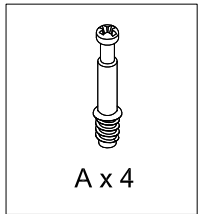

    
STEP 14

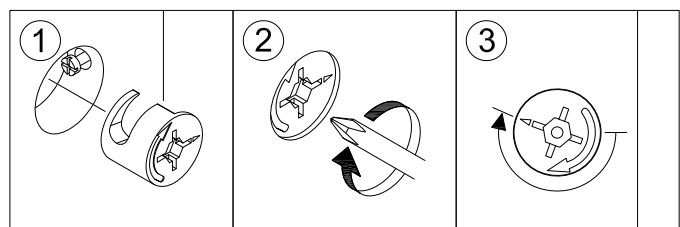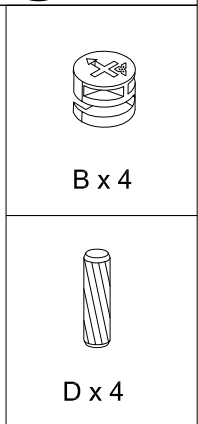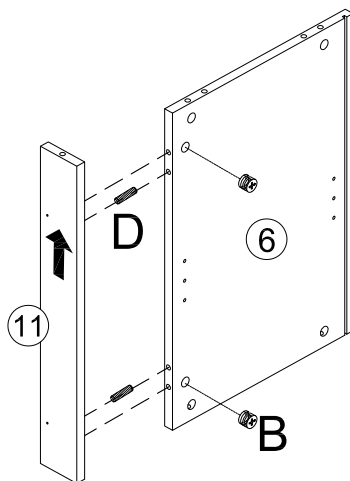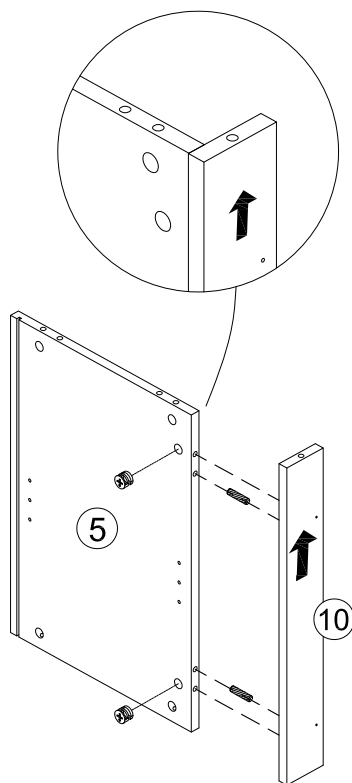



 
STEP 15

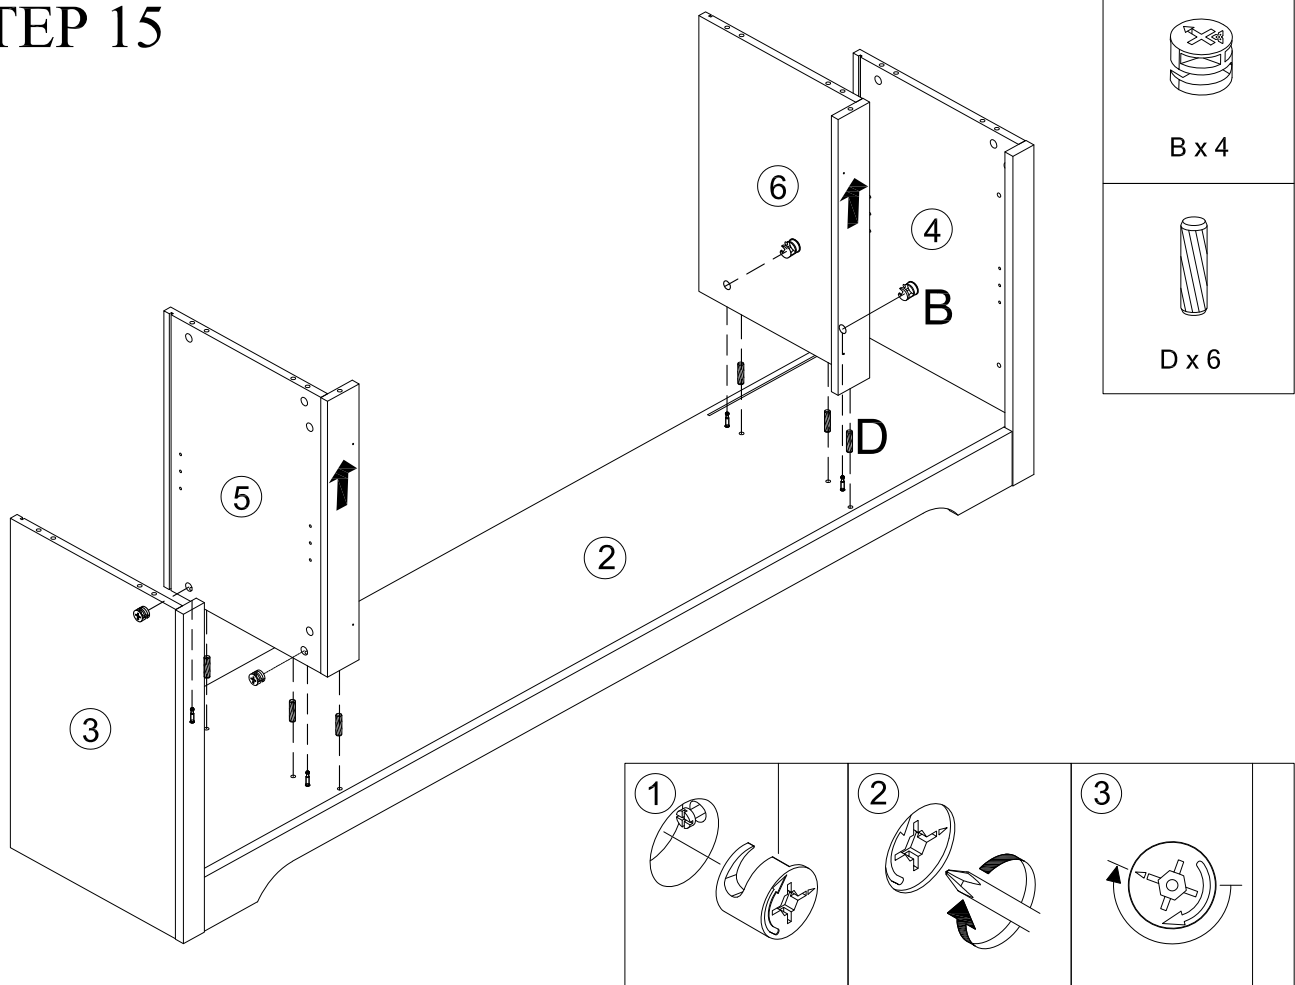



 
STEP 16

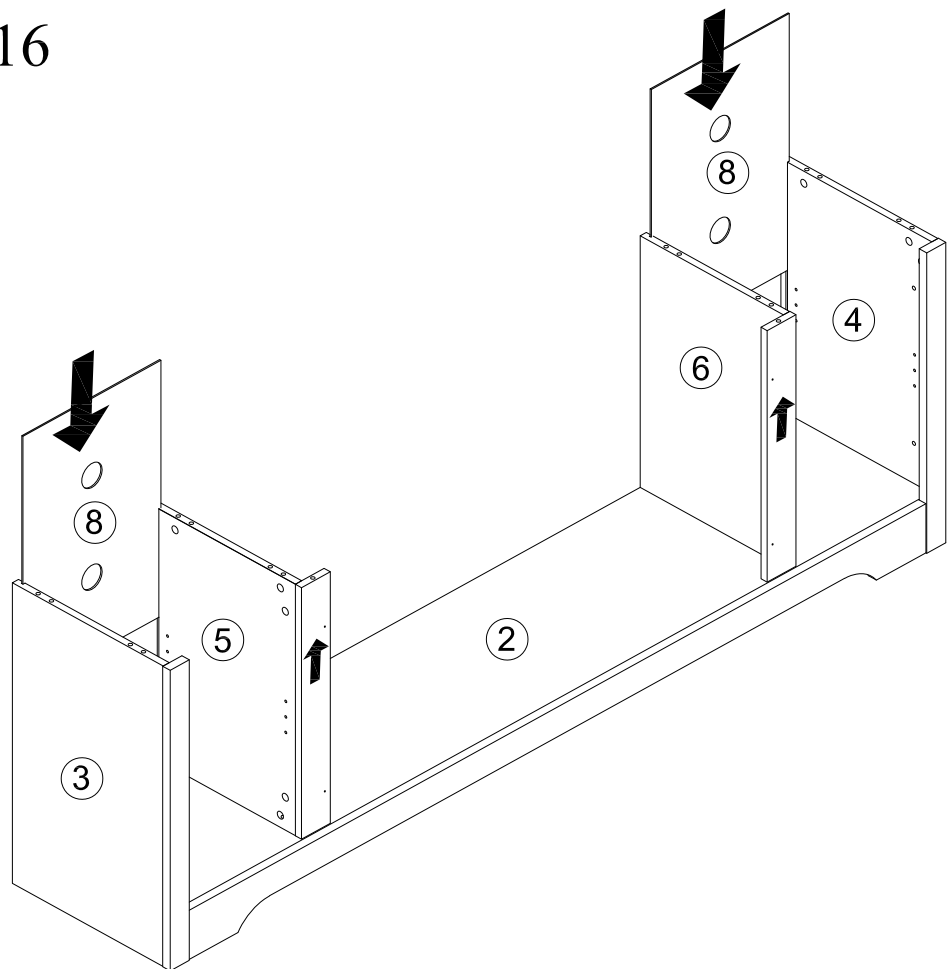

  
 
STEP 17

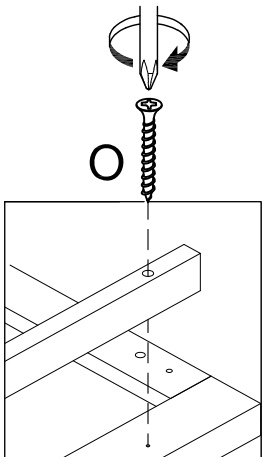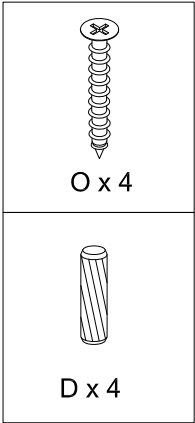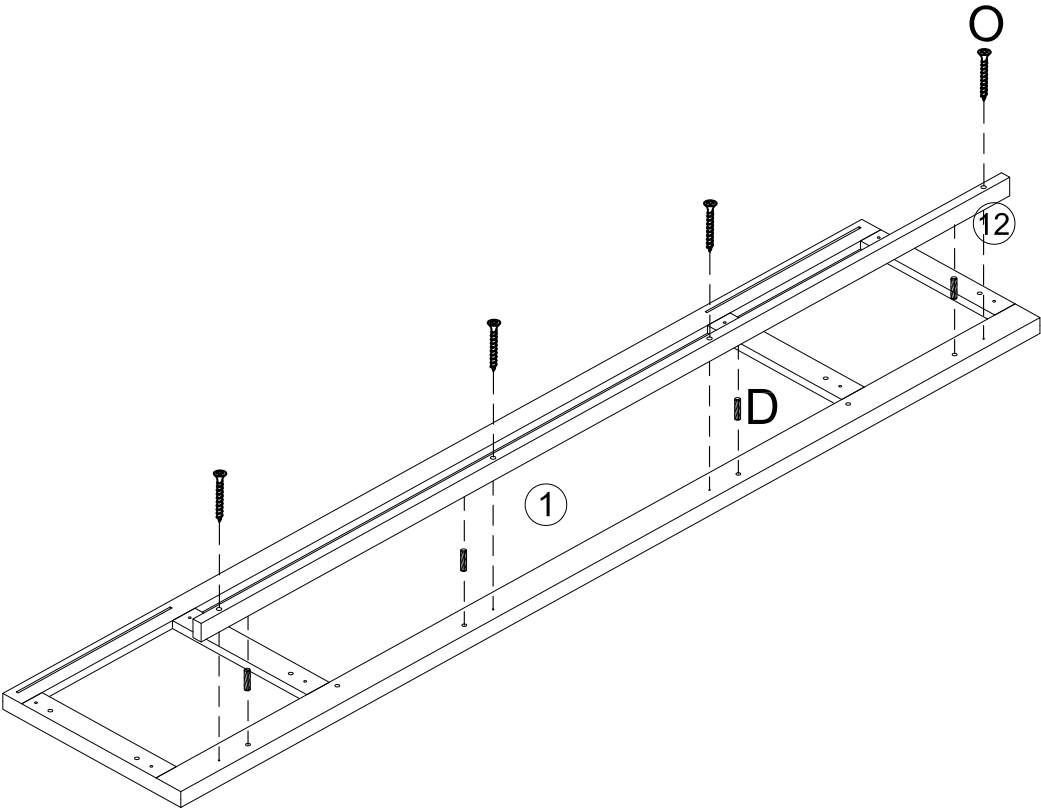

   STEP 18

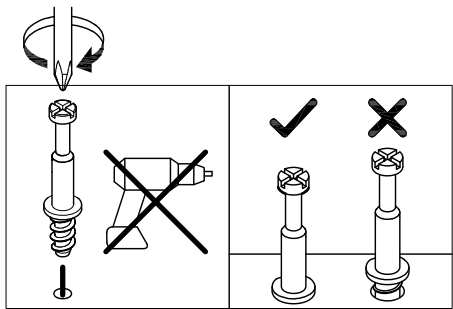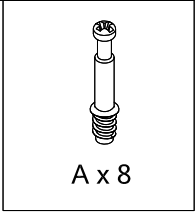
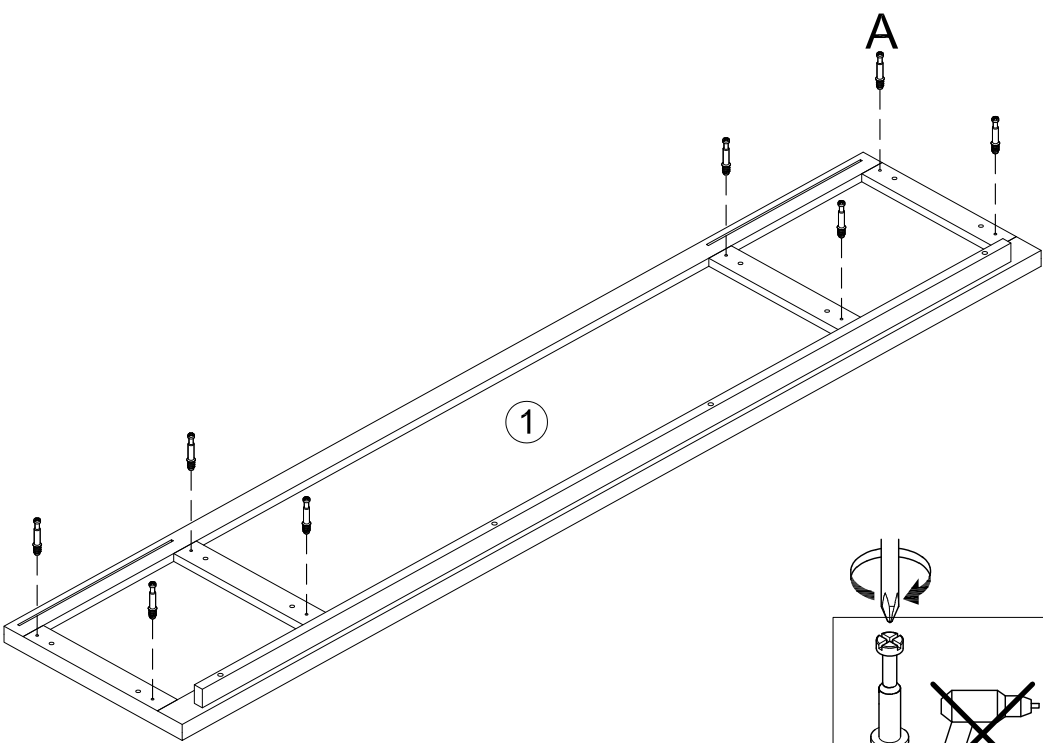


  STEP 19

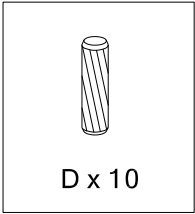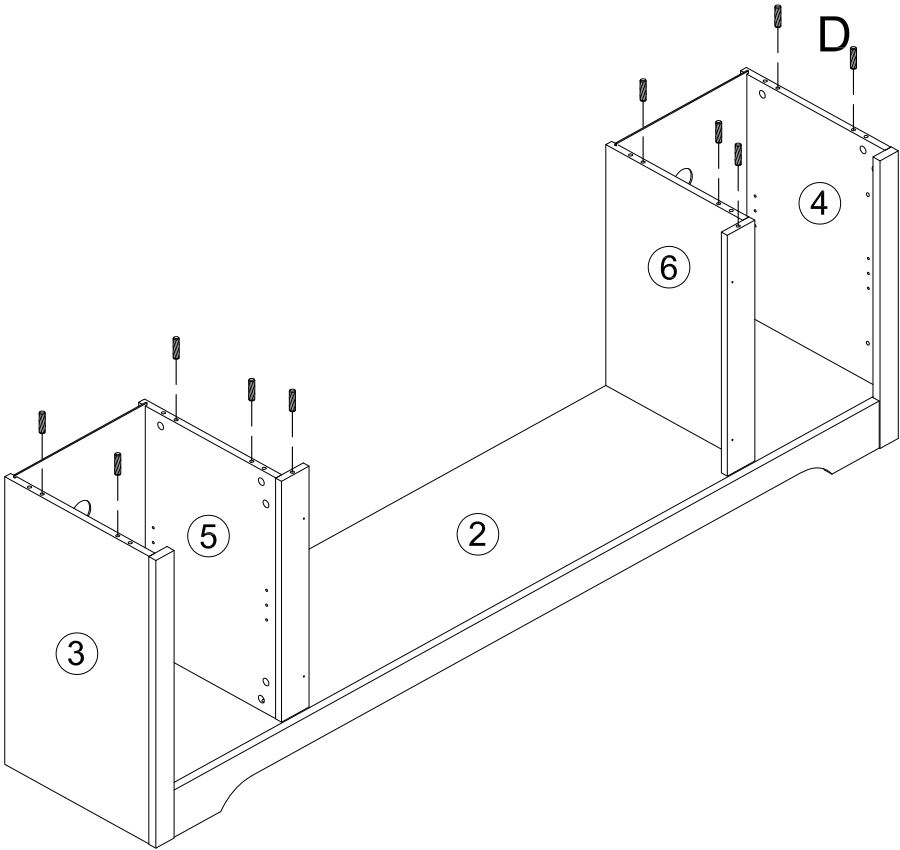


D x 10


 
 
STEP 20

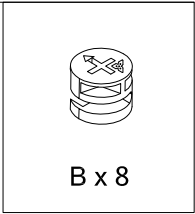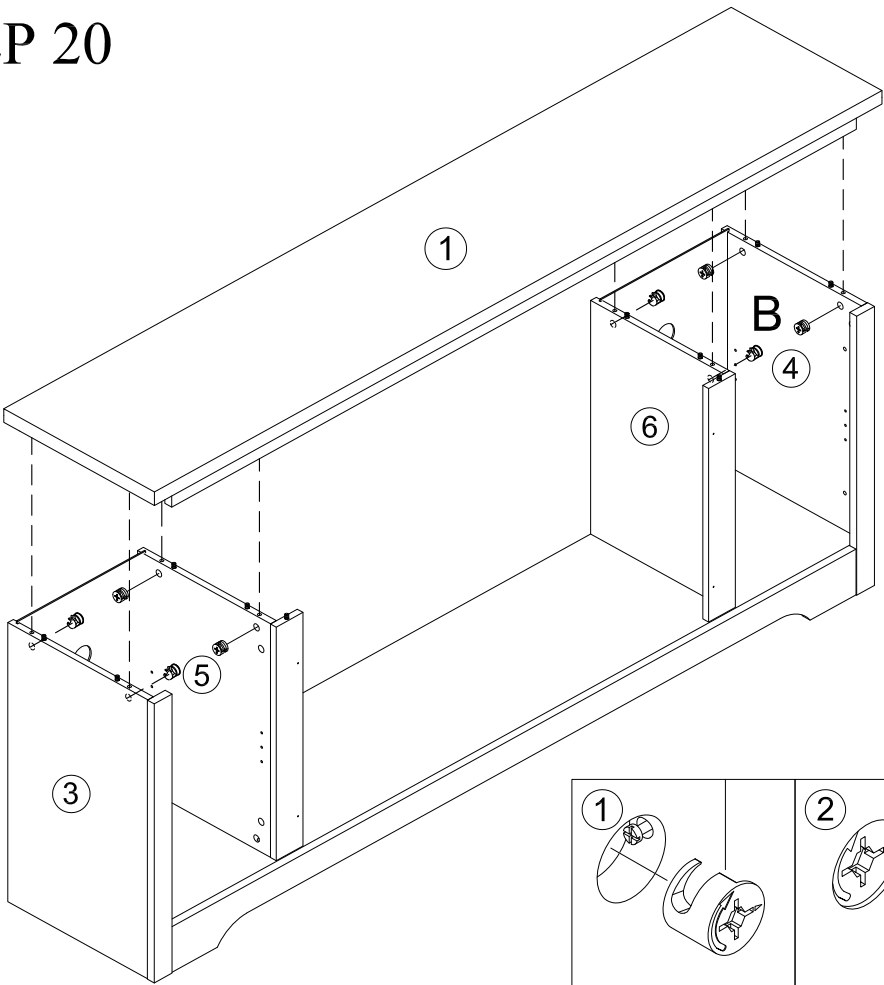





B x 8

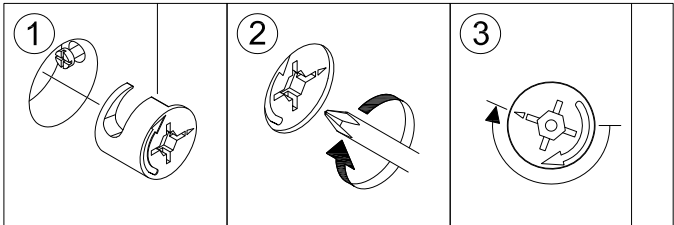 

  
 
STEP 21

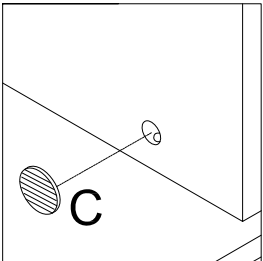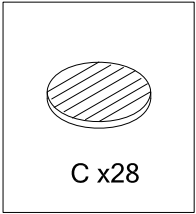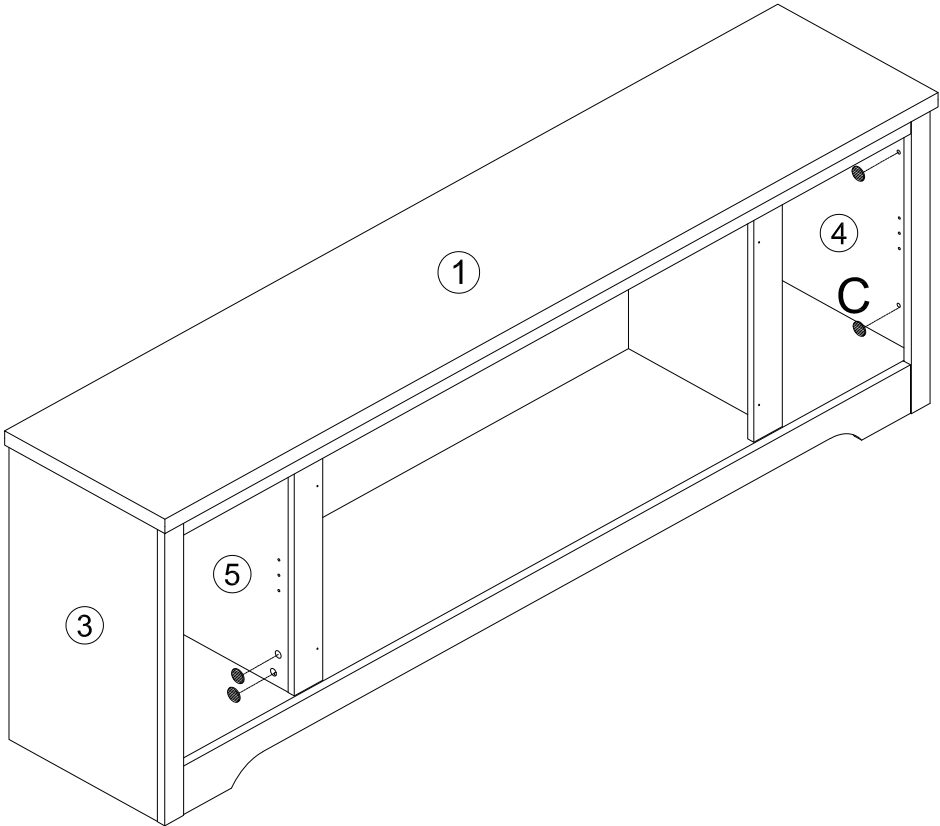

    
STEP 22

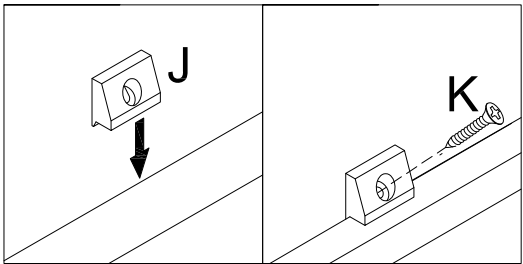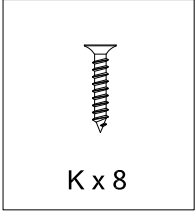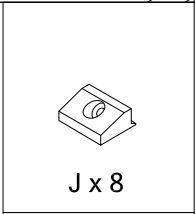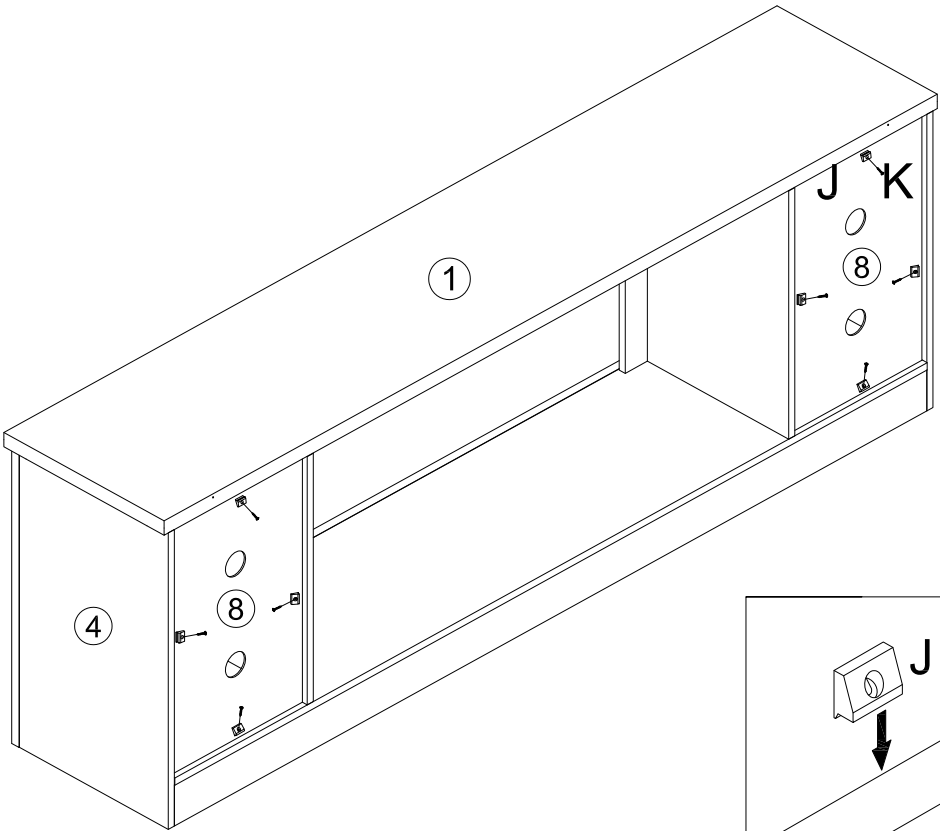

 
 
STEP 23

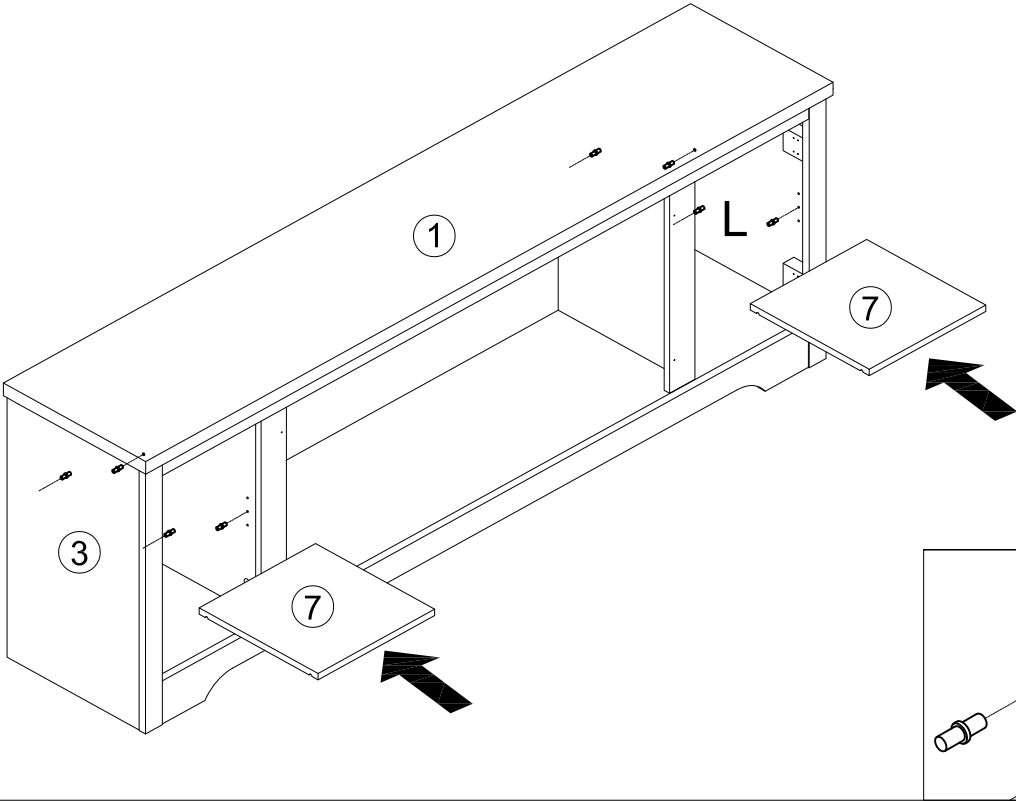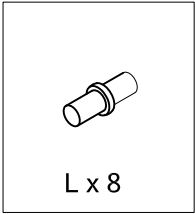

 STEP 24

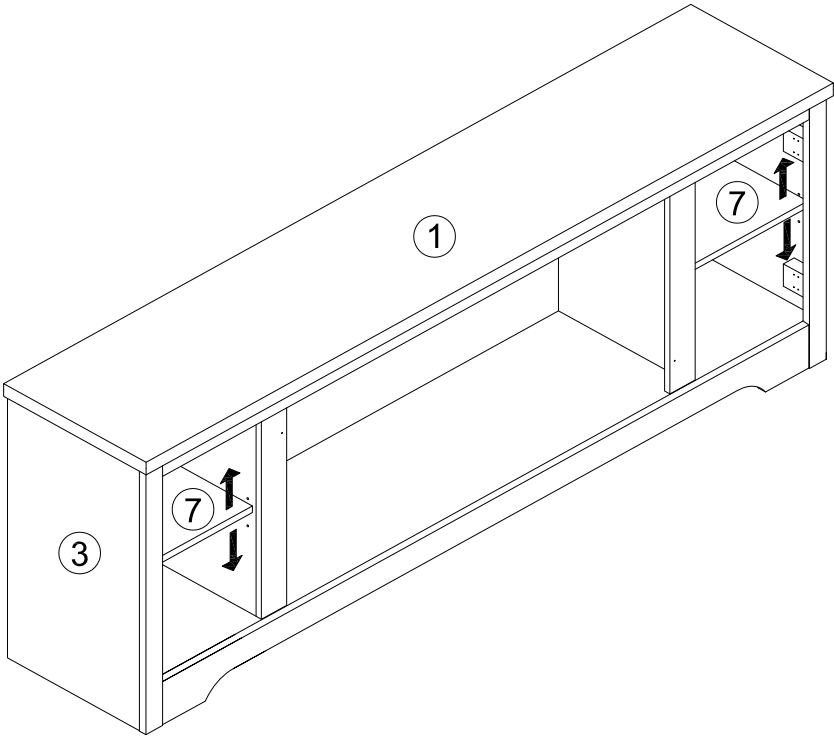

  
STEP 25

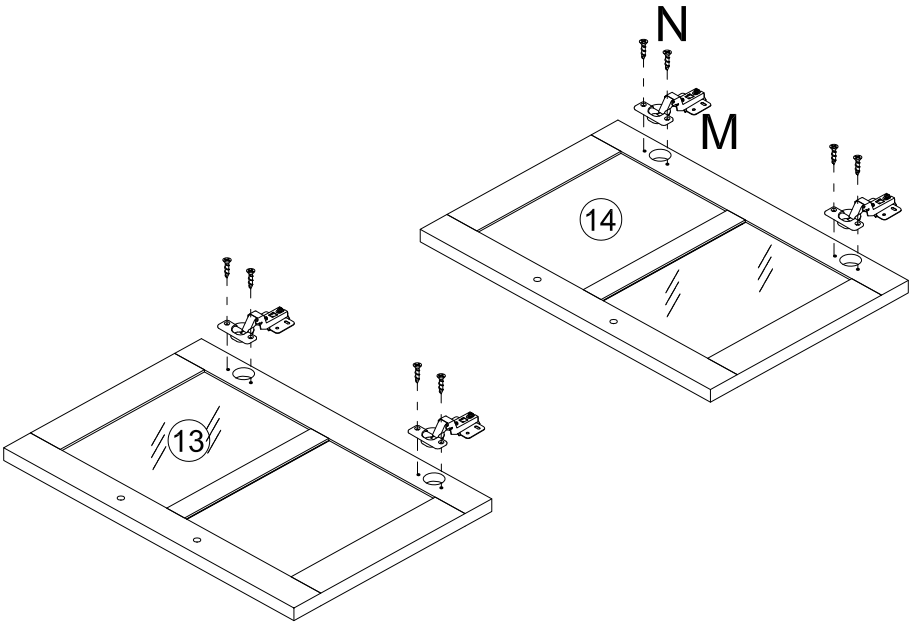


M x 4



 N x 8

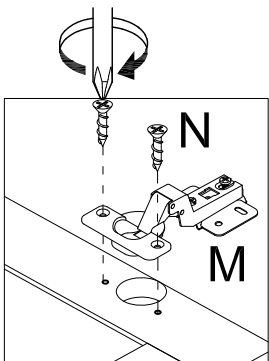

 
STEP 26

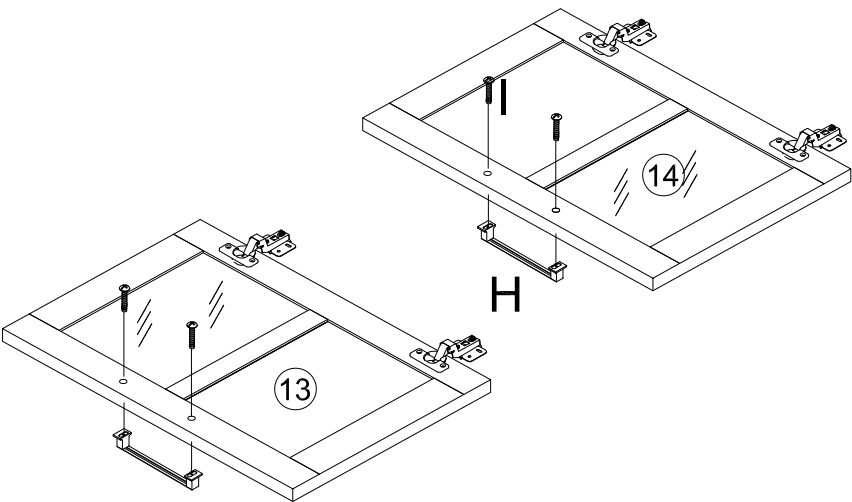

H x 2



 
I x 4

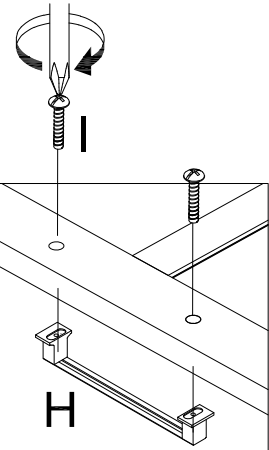


STEP 27



 
N x 16

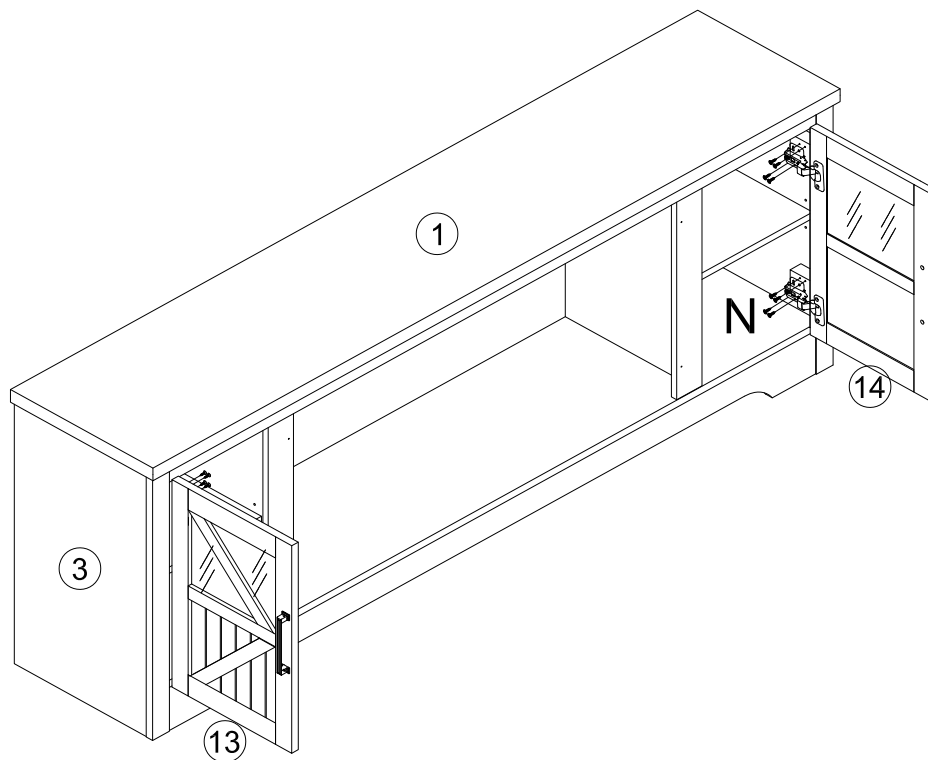

 
Concealed hinges are three-way adjustable.

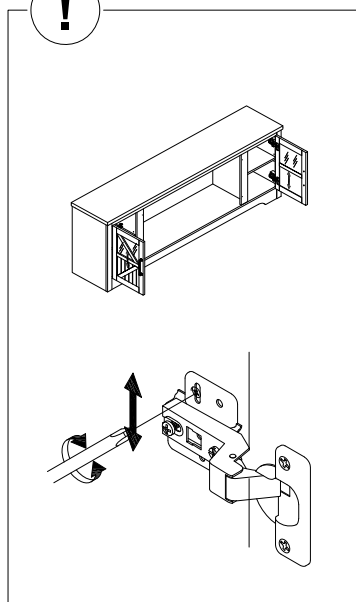

 Up and down adjustment by loosening the screws on the mounting plate.

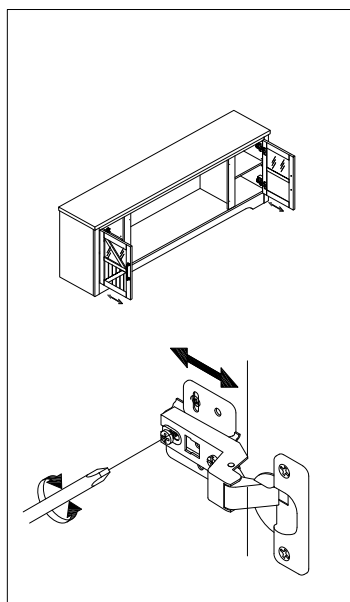


 In and out adjustment by loosening the screws on the hinge arm.

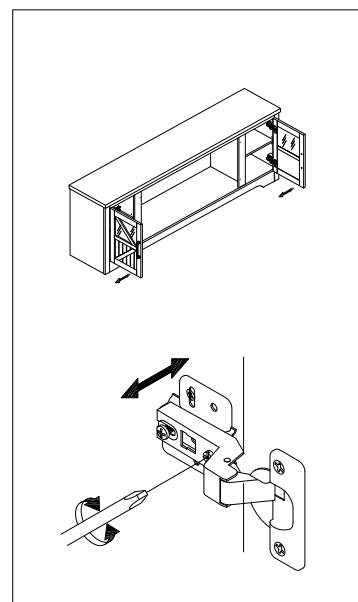

Side to side adjustment using the front adjustment screw on the hinge.

 
STEP 28

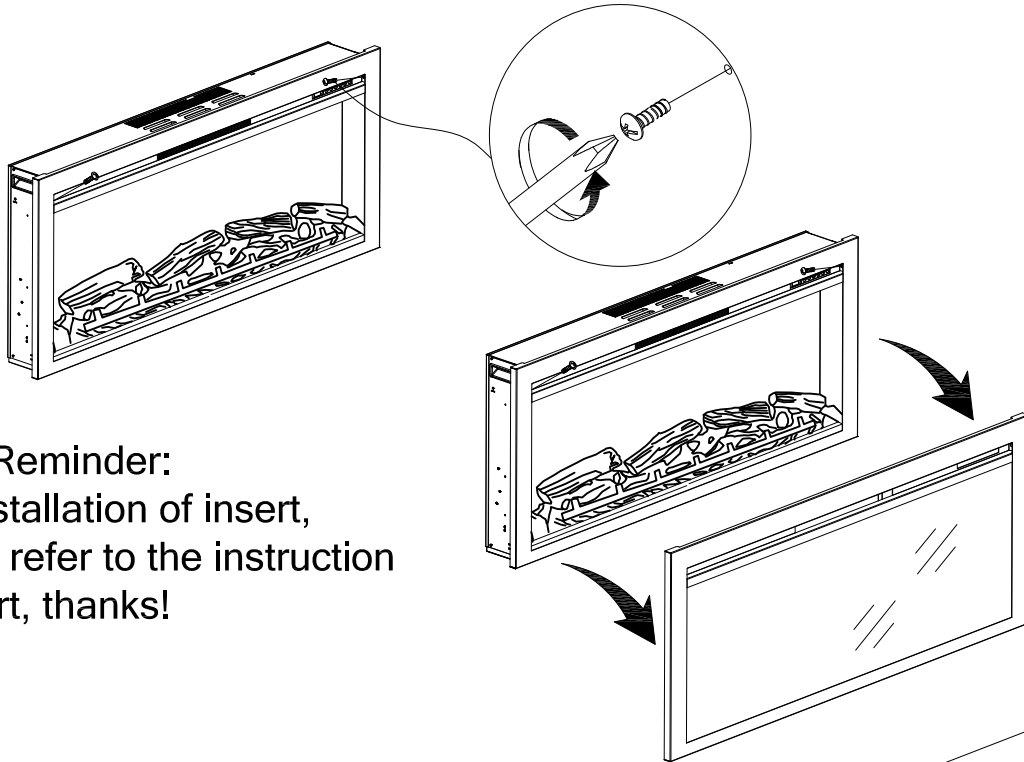

Kindy Reminder:
The installation of insert,
Please refer to the instruction
of insert, thanks!



Wood Log Version

 CryStal Vension

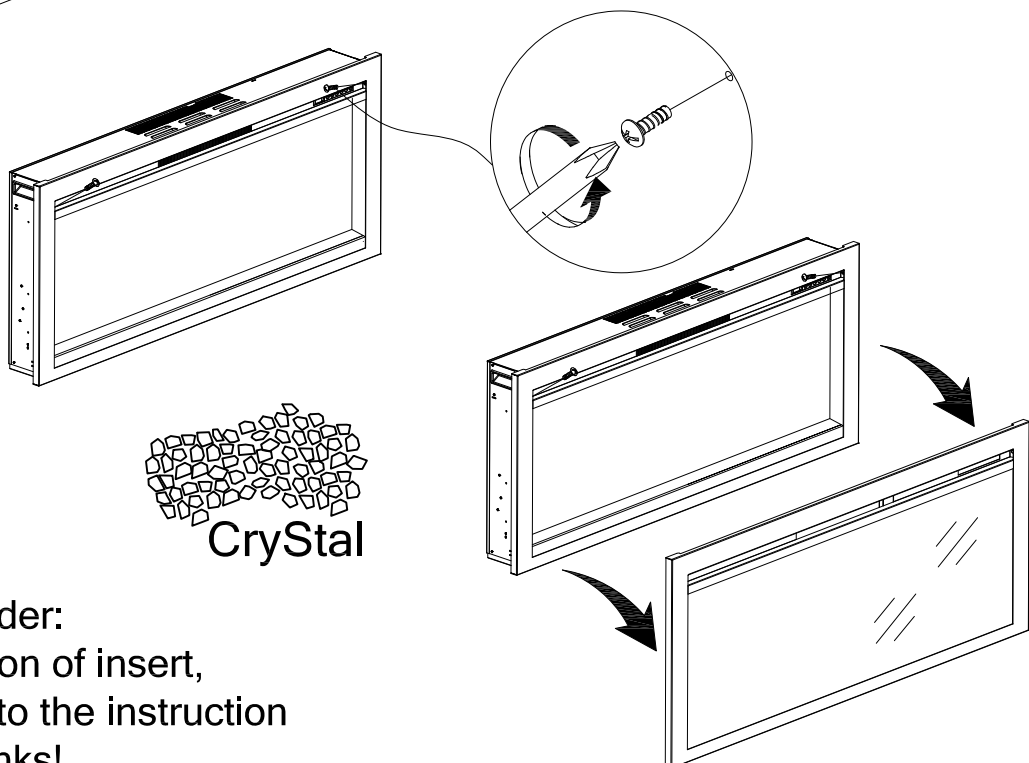



Kindy Reminder:
The installation of insert,
Please refer to the instruction
of insert, thanks!

  STEP 29

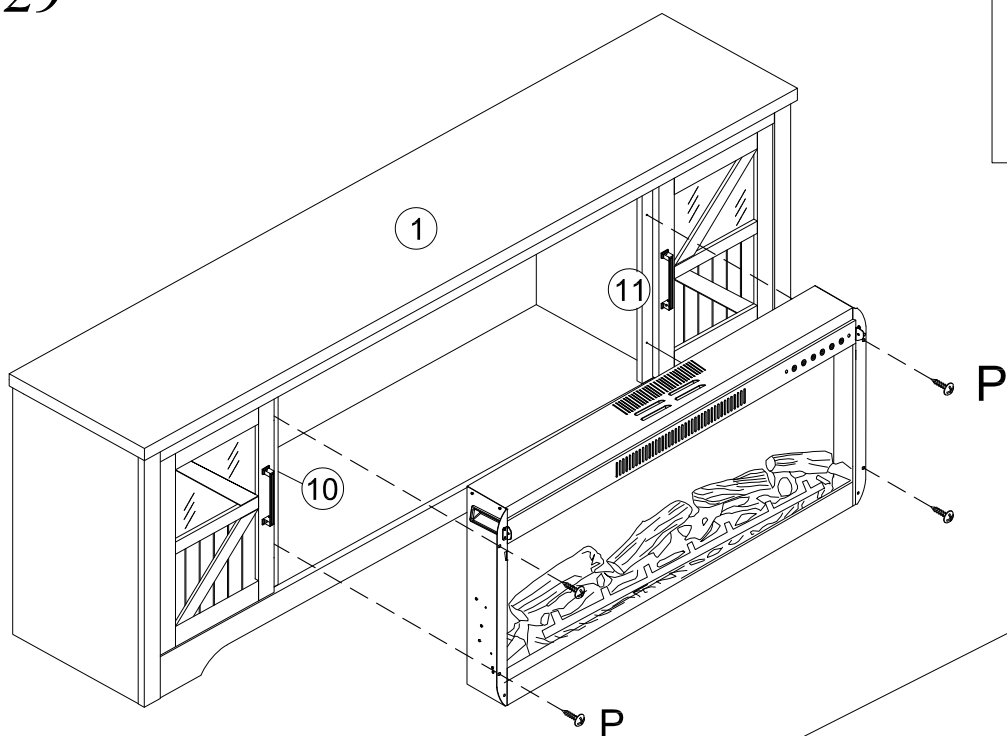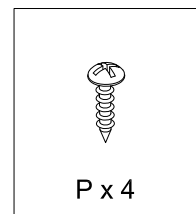


Wood Log Version

  CryStal Vension

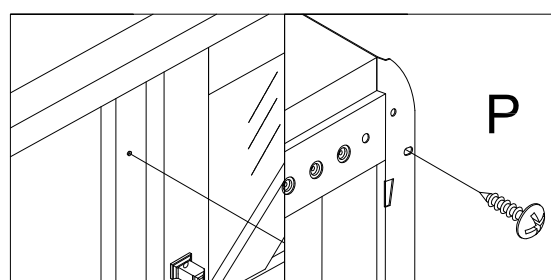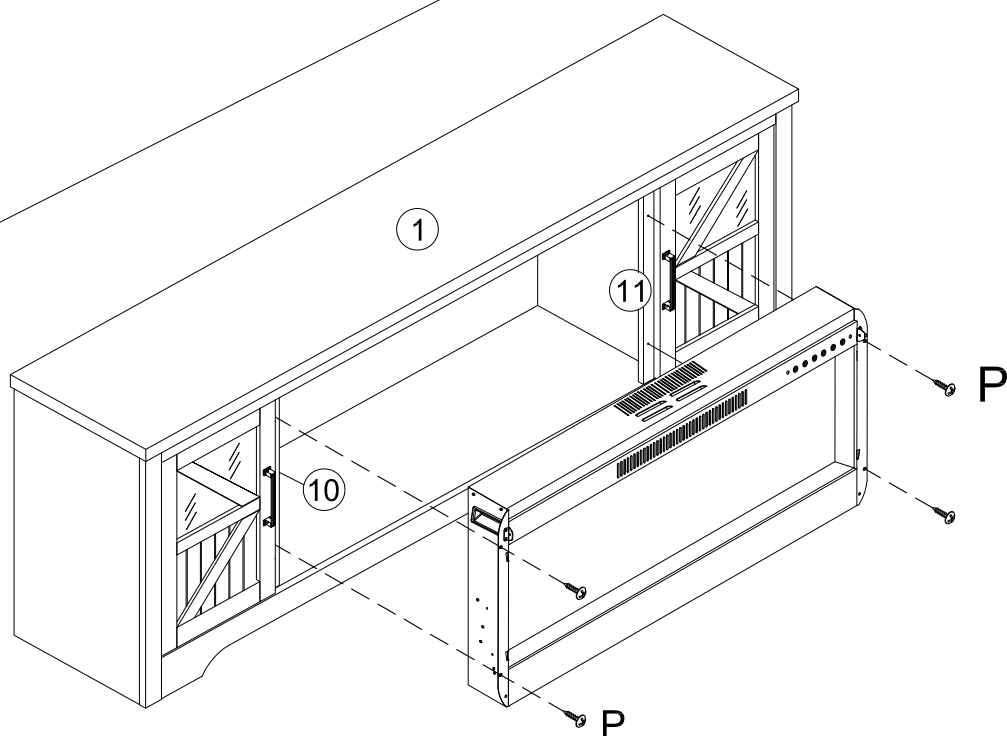


 STEP 30

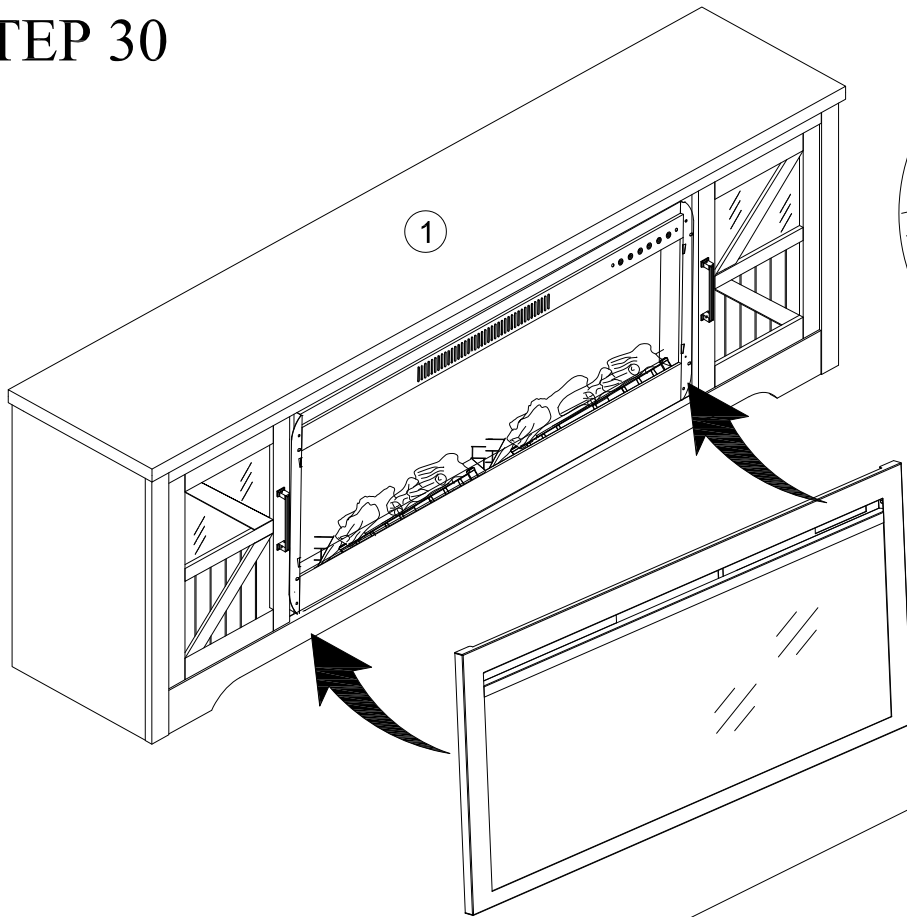


Wood Log Version



 
CryStal Vension

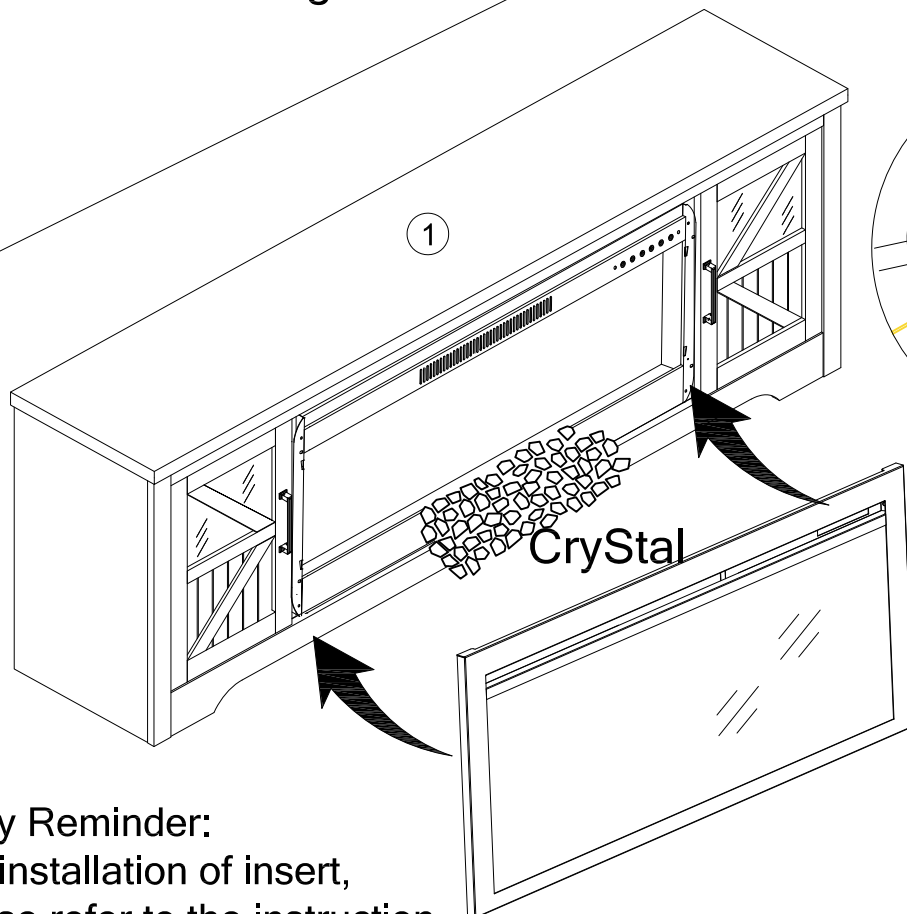



 
Kindy Reminder:
The installation of insert,
Please refer to the instruction
of insert, thanks!

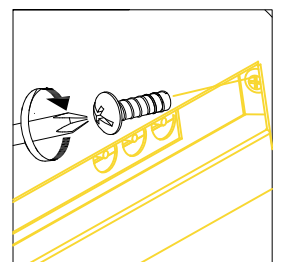

   STEP 31

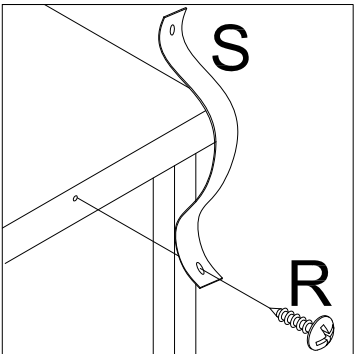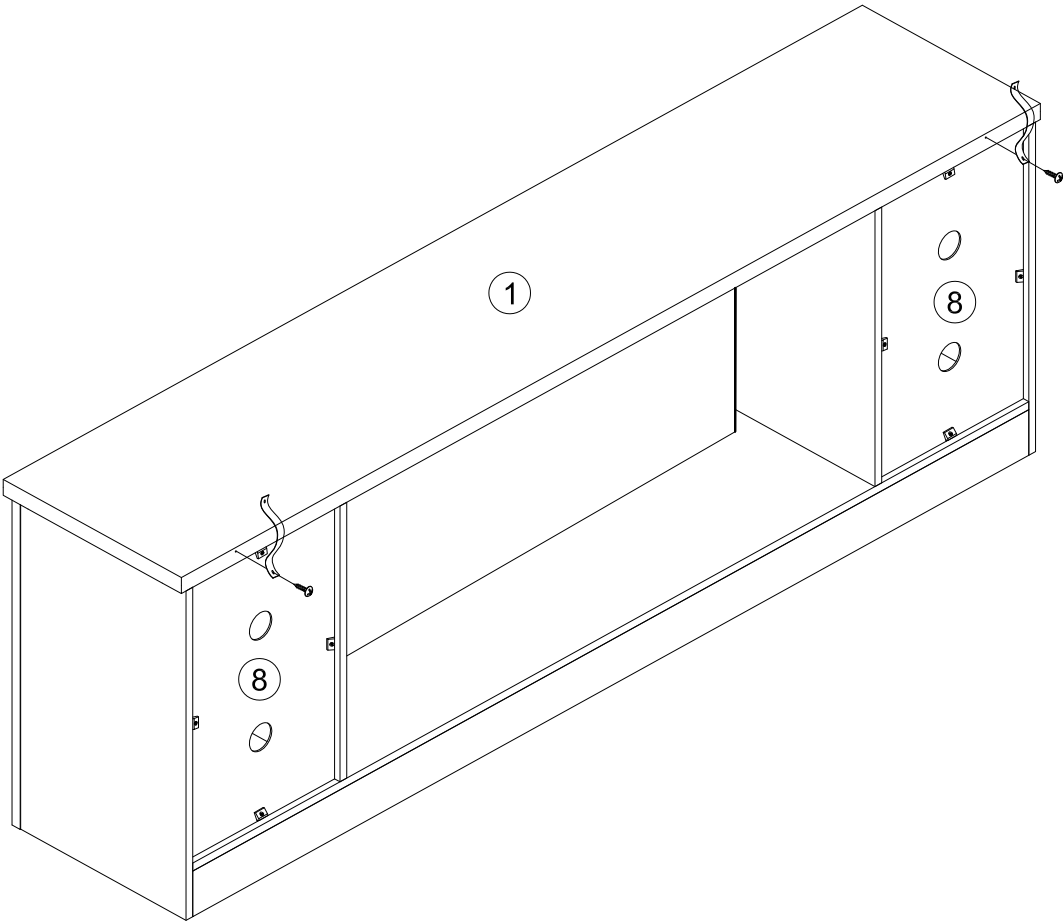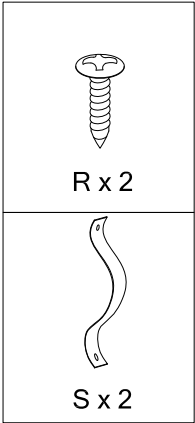

   STEP 32

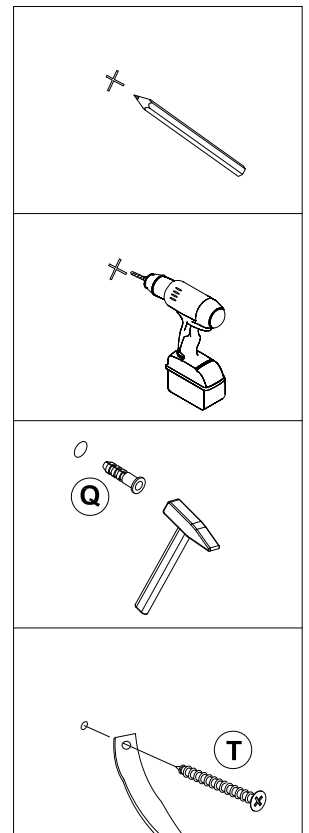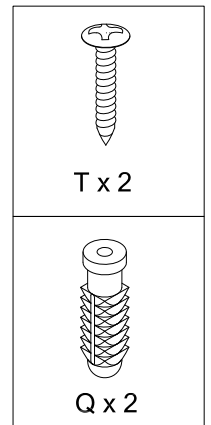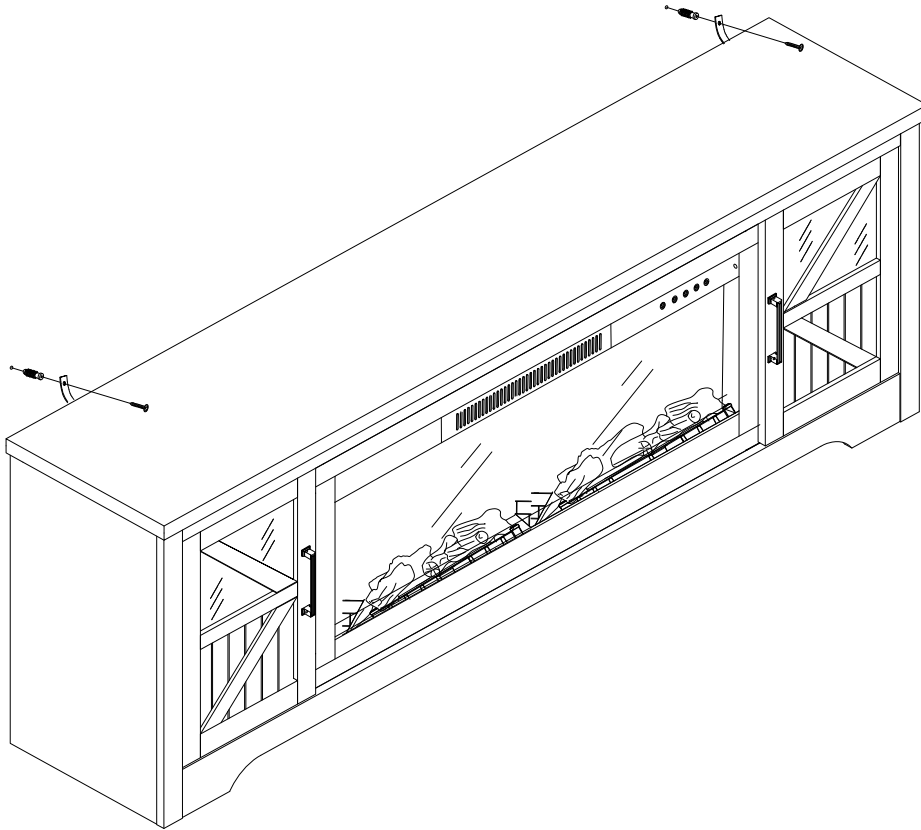

Furniture must permanently fixed to the wall stud with included anti-tipping device to prevent the furniture from tipping over.

- Mark the drill position on the wall with a pencil.
- Drill a small hole on the marked position.
- Insert a wall anchor into the drilled hole.
- Fixed the anti-tipping strap to the wall with provided screws.

Congratulations! You have completed the assembly.

