

ASSEMBLY INSTRUCTIONS

ITEM #: WF303668AAK

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small Hardware which may have come loose inside the carton during shipment. Identify and count all hardware and compare with the hardware list below

 
 
ASSEMBLY INSTRUCTION :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy.



WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
3. Two persons are required for assembly.
4. Approximate assembly time: 1/2 hours
5. Component parts and fittings contained in the box.
Please sort out all parts before you begin to assemble the item.
This is to make sure you always use the correct part
6. It is **STRONGLY RECOMMENDED** that you **ANCHOR** this product.
Toppling furniture can cause serious injuries and death.
This product has not been fitted with an anchor strap.
To prevent your furniture from tipping forward it is strongly recommended
that you securely attach this product to a wall or other solid surface, using the anchor straps
provided and appropriate fixings.

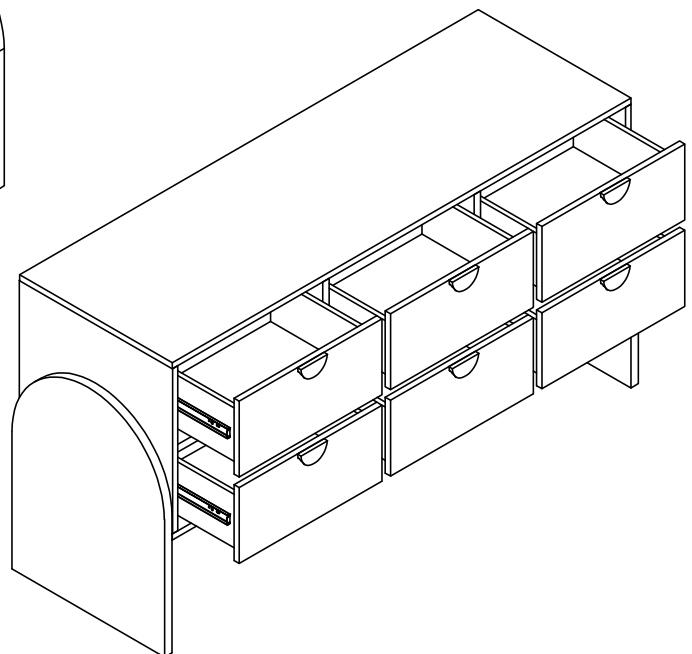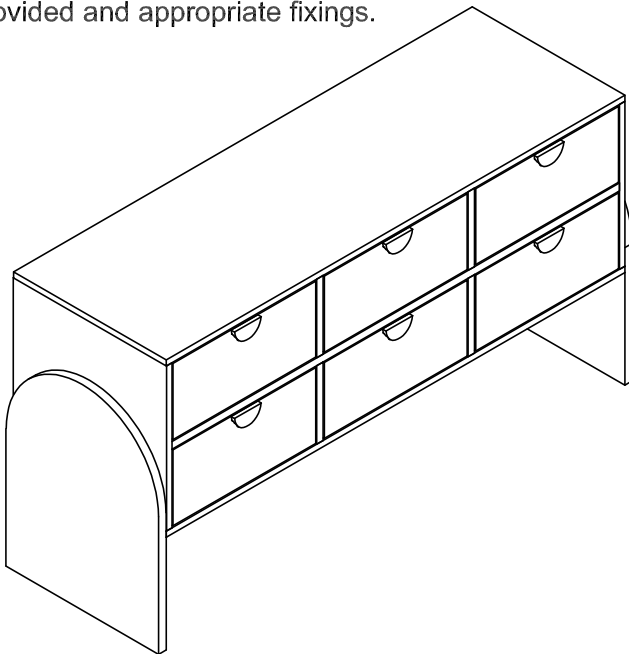


TOOLS NEEDED: Phillips Screwdriver



Wall Drill



 
Hammer




ASSEMBLY INSTRUCTIONS

WF303668AAK

 
PARTS LIST

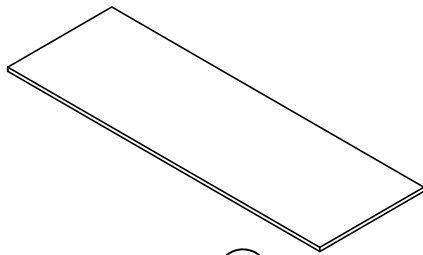


x1 (1)
Top panel

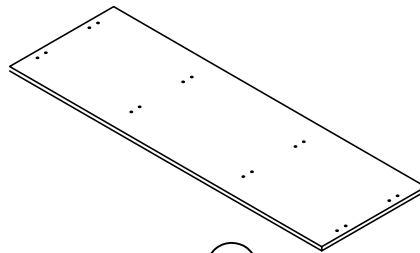 


x1 (2)
Top panel

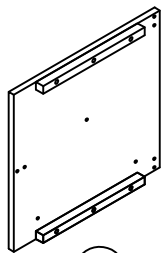 


x1 (3)
Left side panel

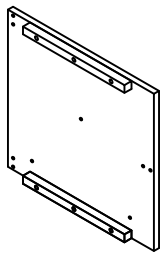 


x1 (4)
Right side panel

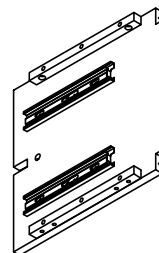 


x1 (5)
MiddleLeft side panel

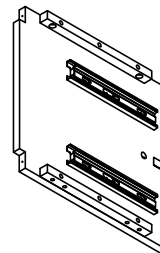 


x1 (6)
Middle Right side panel

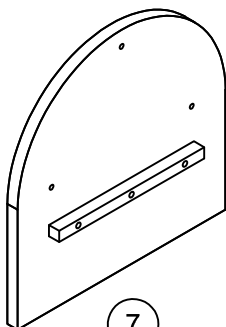 


x1 (7)
Left bottom panel

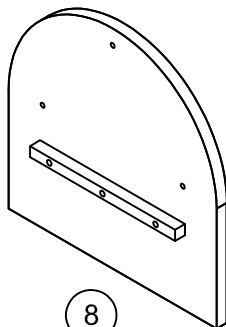 


x1 (8)
Right bottom panel

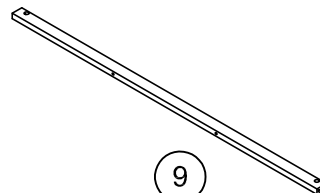 


x1 (9)
front panel

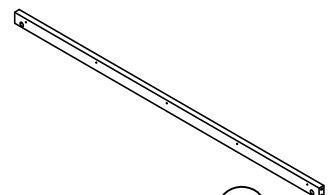 


x2 (10)
rear panel 1

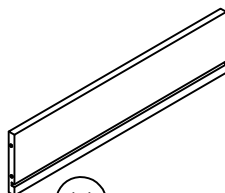 


x2 (11)
Drawer back panel

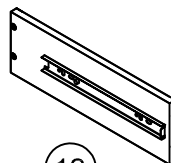 


x2 (12)
Drawer left side panel

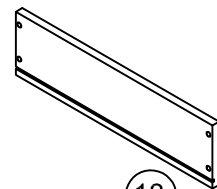 


x2 (13)
Drawer right side panel

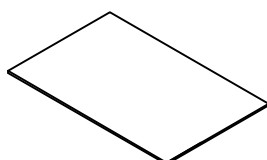 

x2 (14)
Drawer bottom panel

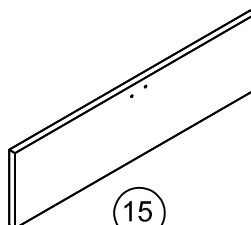 

x2 (15)
Drawer front panel

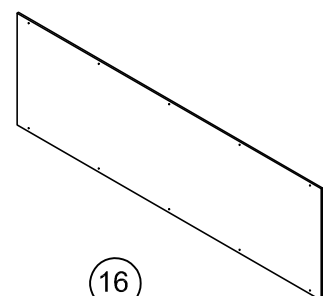 


x1 (16)
Drawer front panel

ASSEMBLY INSTRUCTIONS

WF303668AAK

 HARDWARE LIST



(A)

x32
Cam-bolts



(B)

x32
Cam-locks

Φ8*3/4"



(C)

x16
Dowels

Φ8* 1-1/8"



(D)

 
x6
Dowels

5/32"*7/8"



(E)


x12
handle bolts



(F)

x6
Handles

 1/4" Φ8* 3/4"



(G)

x22
Bolts

Φ13* 1mm



(H)

x22
Flat Washer

Φ10* 1mm



(I)

x22
Spring Washer

 
4mm



(J)

x1
Allen Key


Φ8*1"



(K)

x24
Screws

 Φ8*3/4"



(L)

x10
Screws



(M)

x4
Hook



(N)

 
x4
Anchor



(O)

x2
Plastic tie

Φ8*1-1/4"



(P)

x4
Screws

 
Φ8*3/4"



(Q)

x4
Screws

Φ8*1-1/4"






(R)

x4
Screws

WF303668AAK

 
 
 
STEP 1

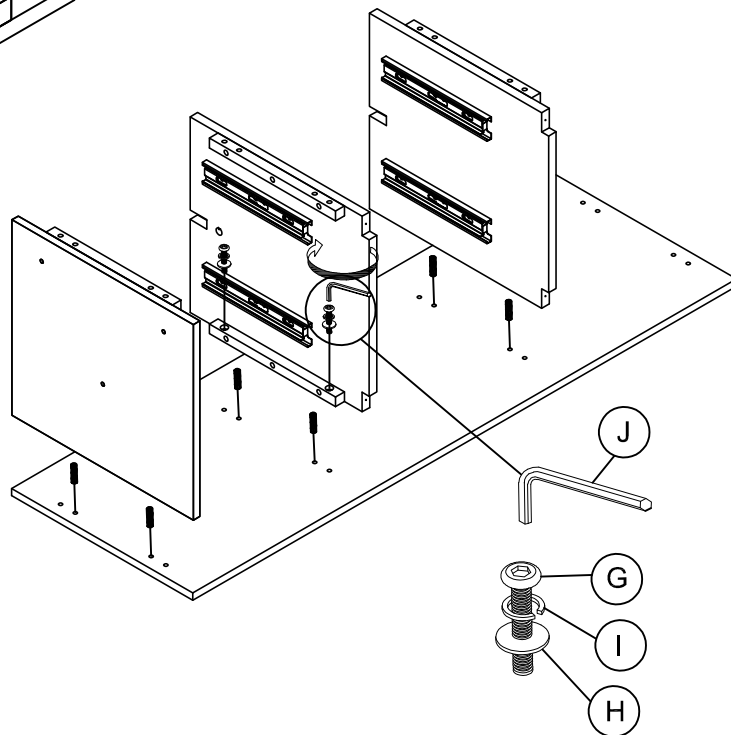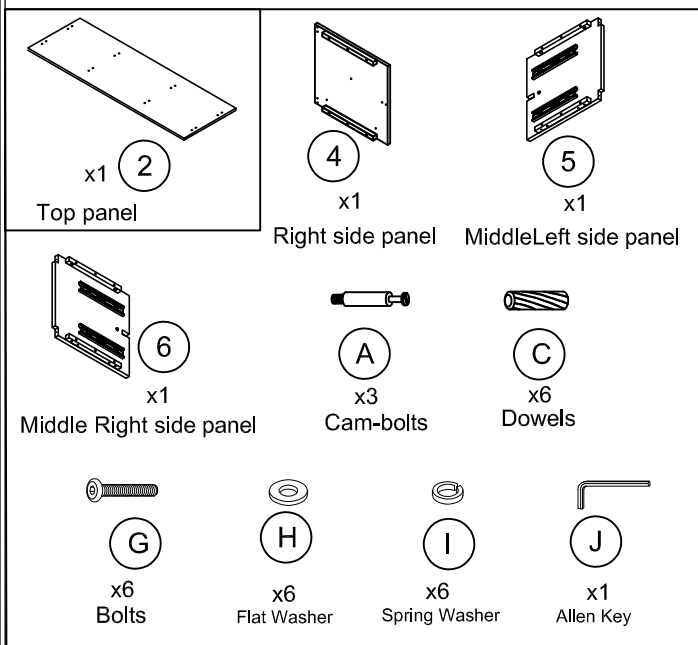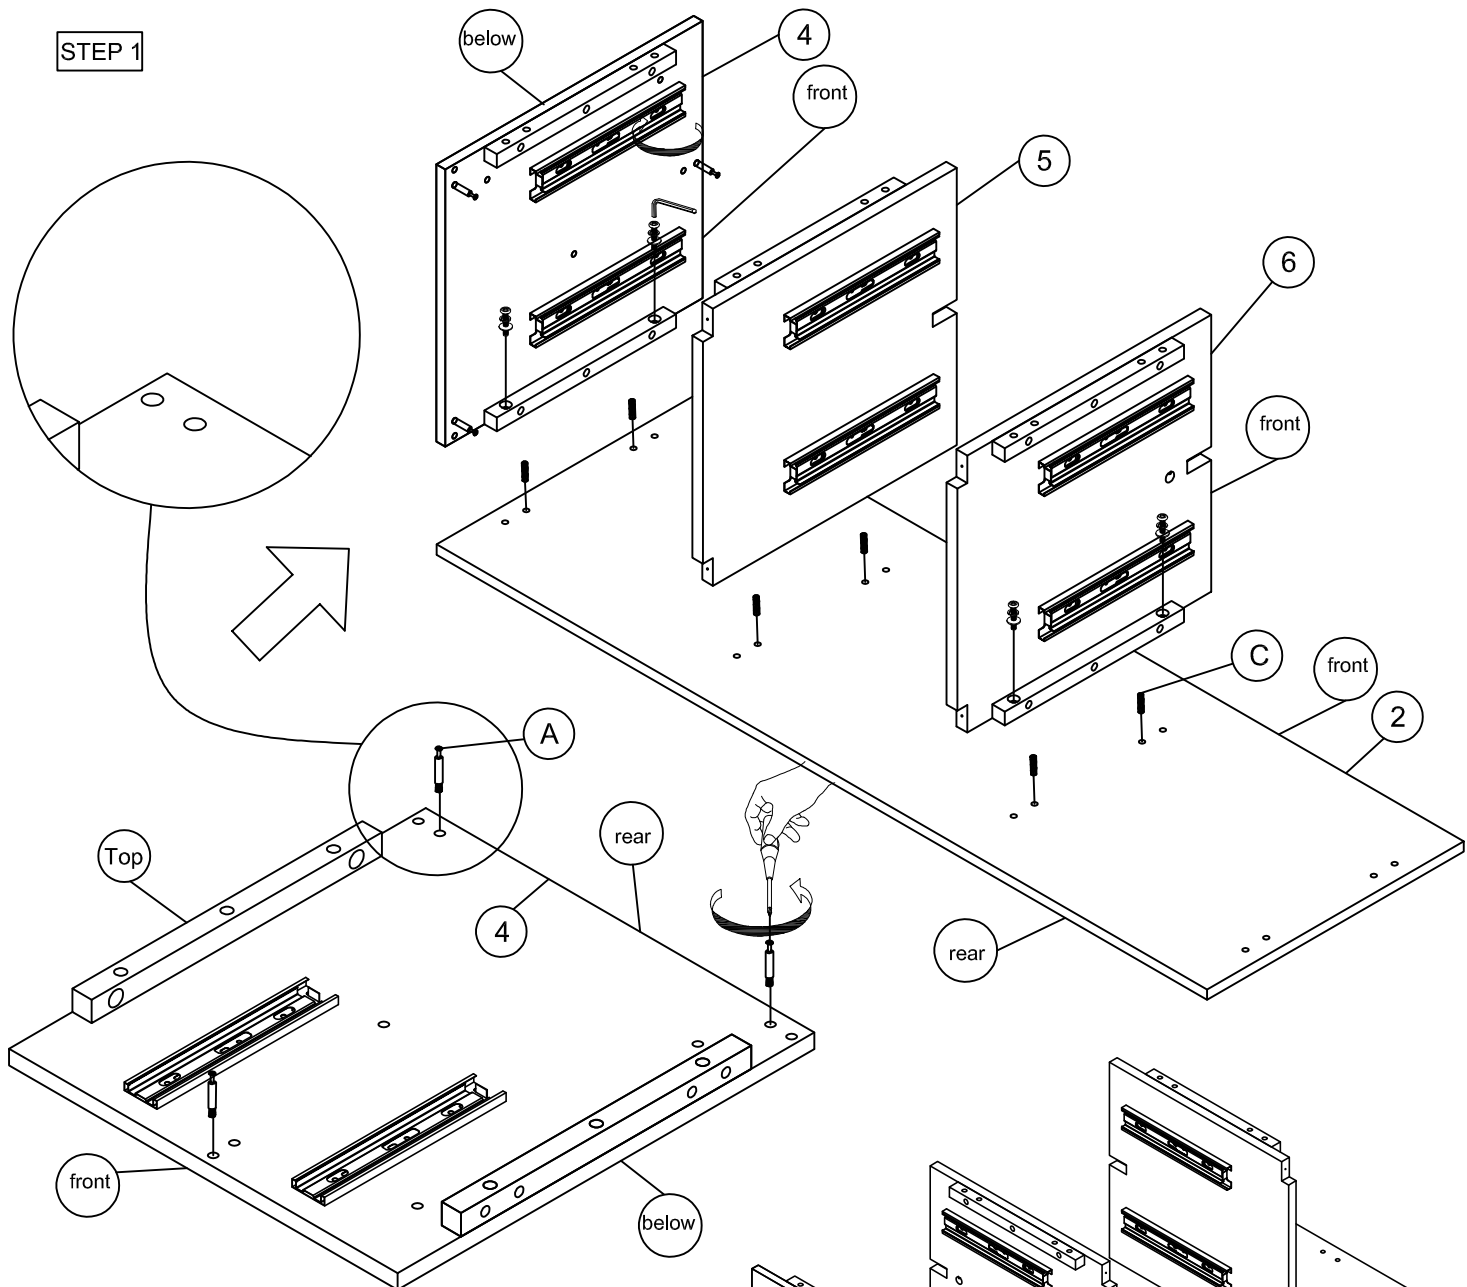

ASSEMBLY INSTRUCTIONS

WF303668AAK

   STEP 2

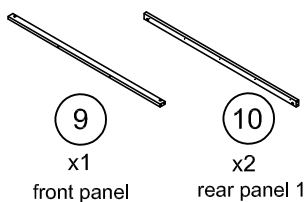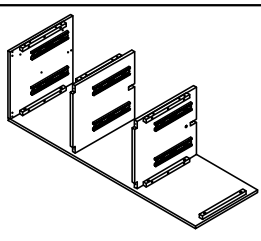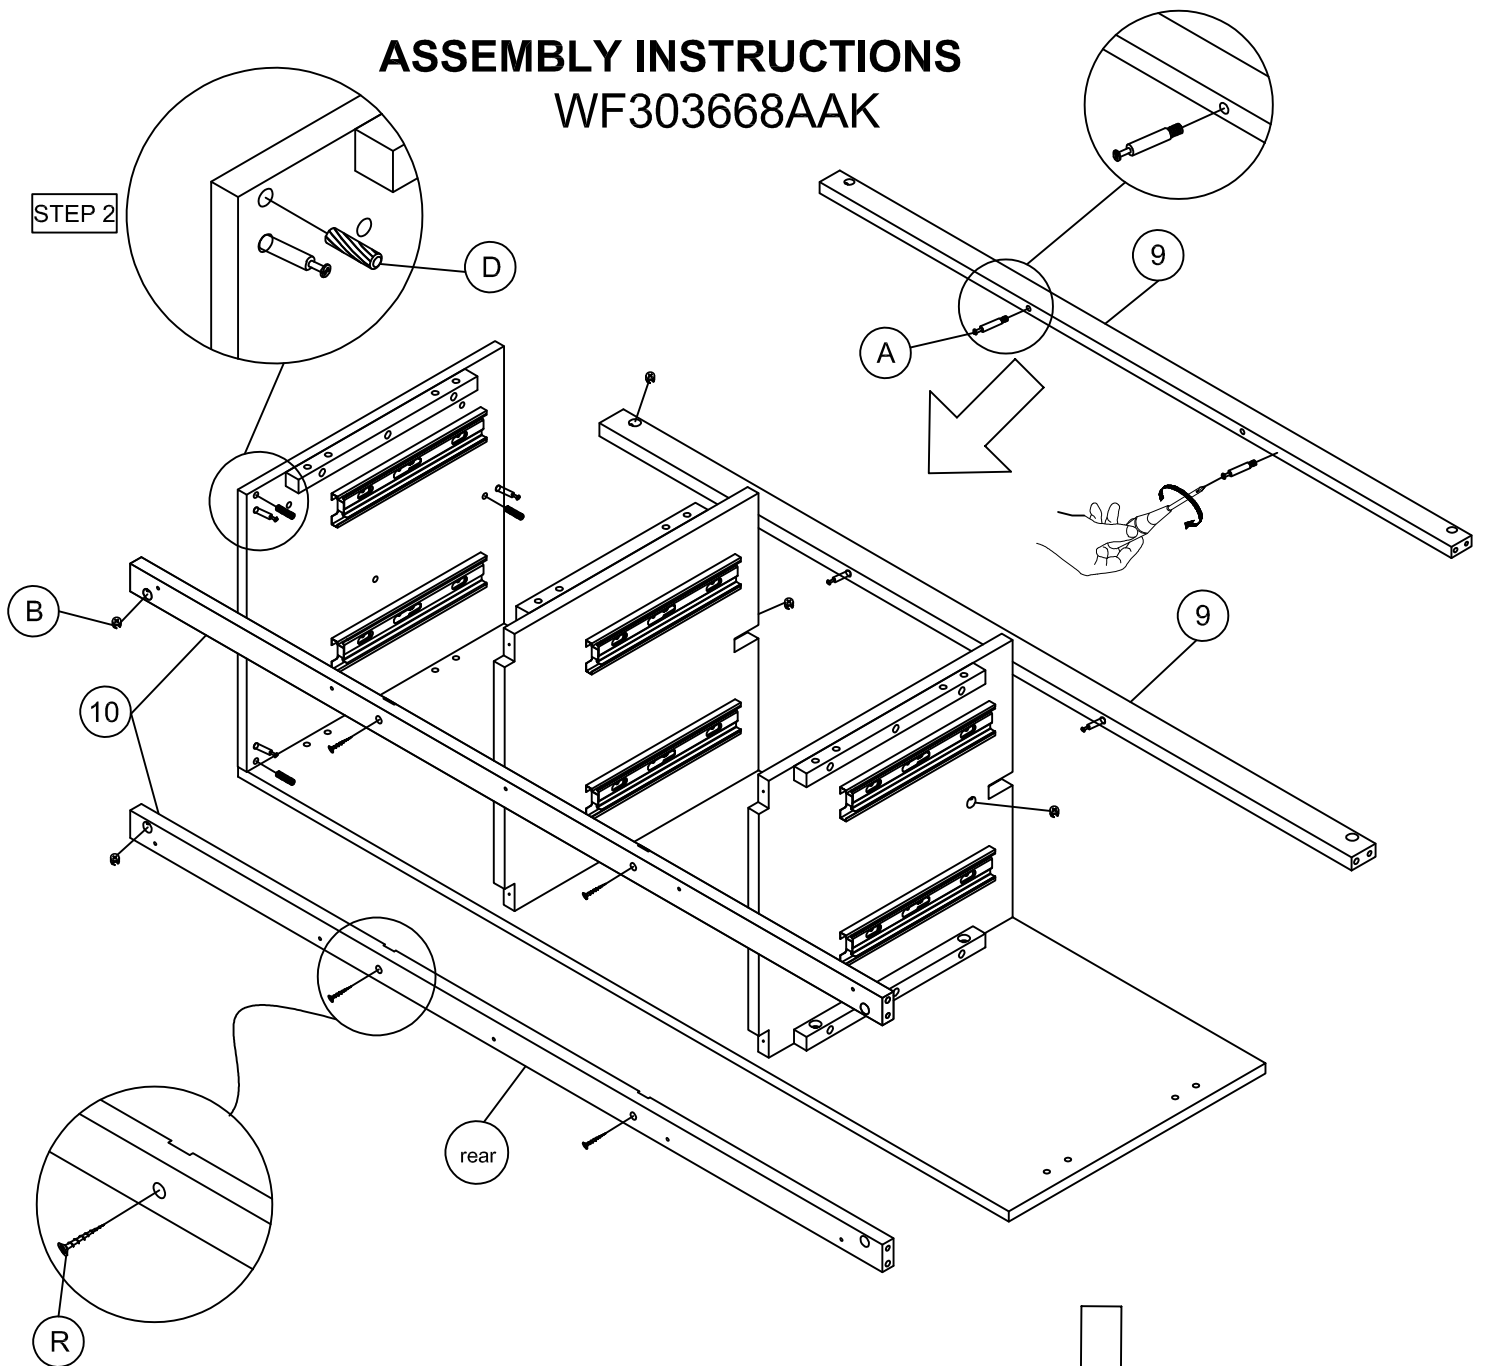


(A)
x2
Cam-bolts




(B)
x5
Cam-locks



 (D)
x3
Dowels





 
(R)
x4
Screws

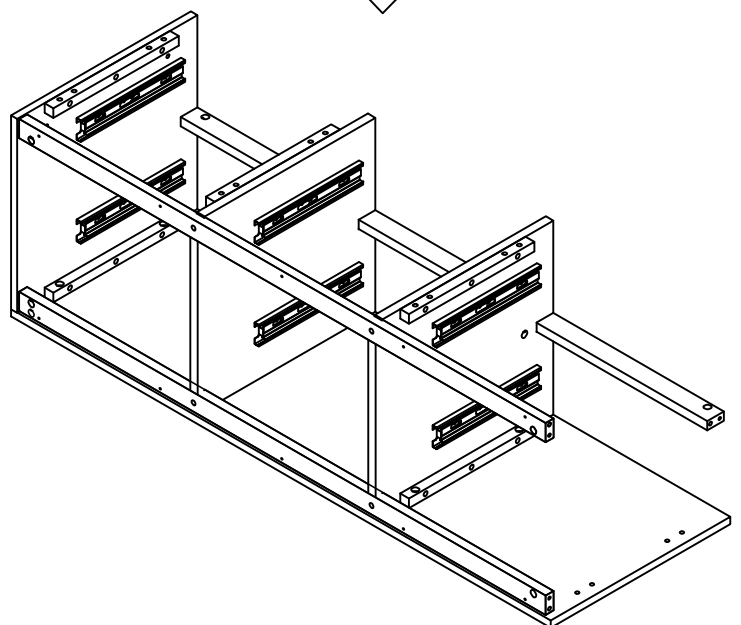

ASSEMBLY INSTRUCTIONS

WF303668AAK

   STEP 3

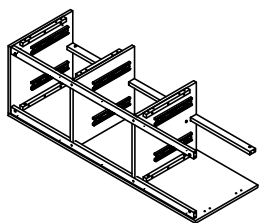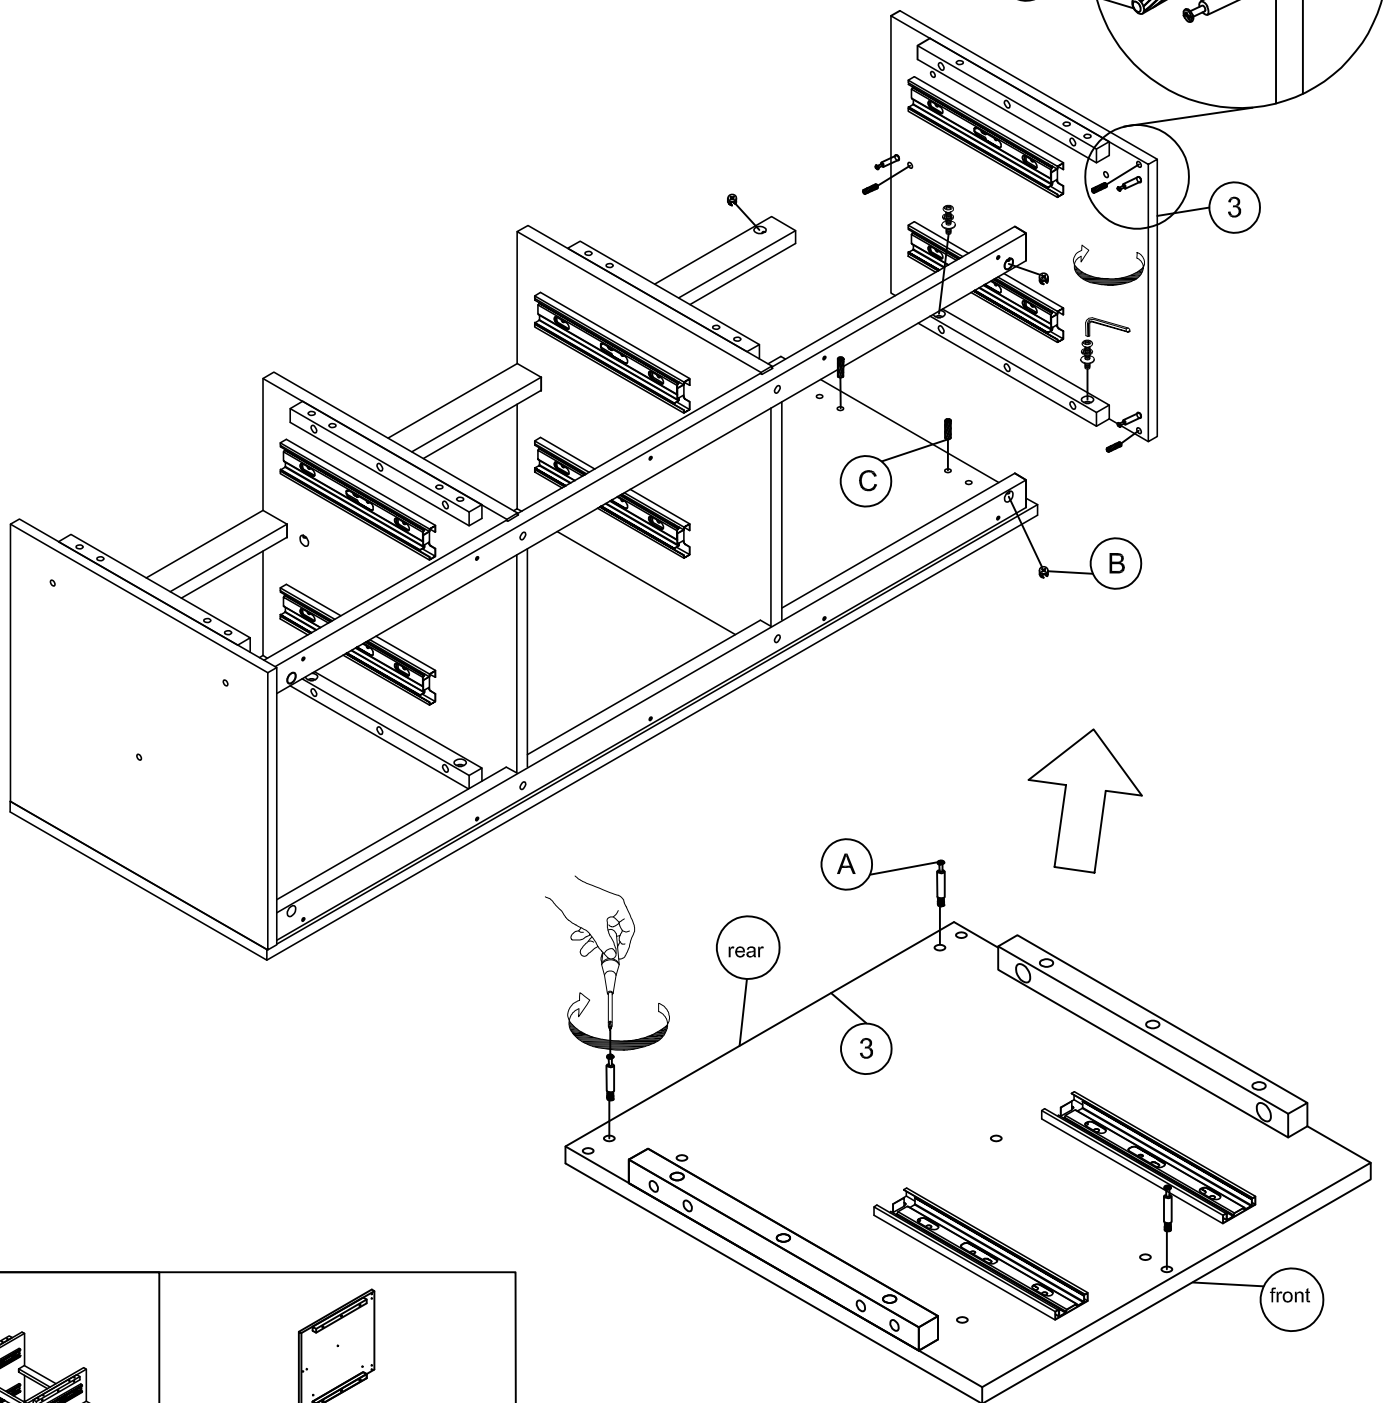

3

x1

Left side panel



A

x3

Cam-bolts



B

x3

Cam-locks



C

x2

Dowels



D

x3

Dowels



G

x2

Bolts



H

x2

Flat Washer



I

x2

 
Spring Washer



J

x1




Allen Key

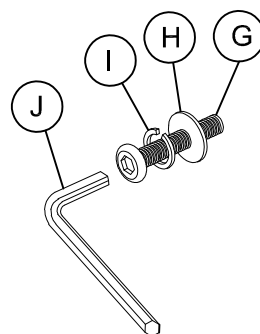

ASSEMBLY INSTRUCTIONS

WF303668AAK

   STEP 4

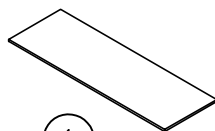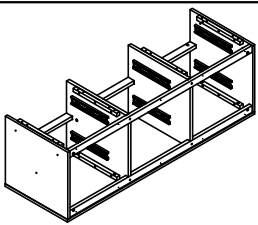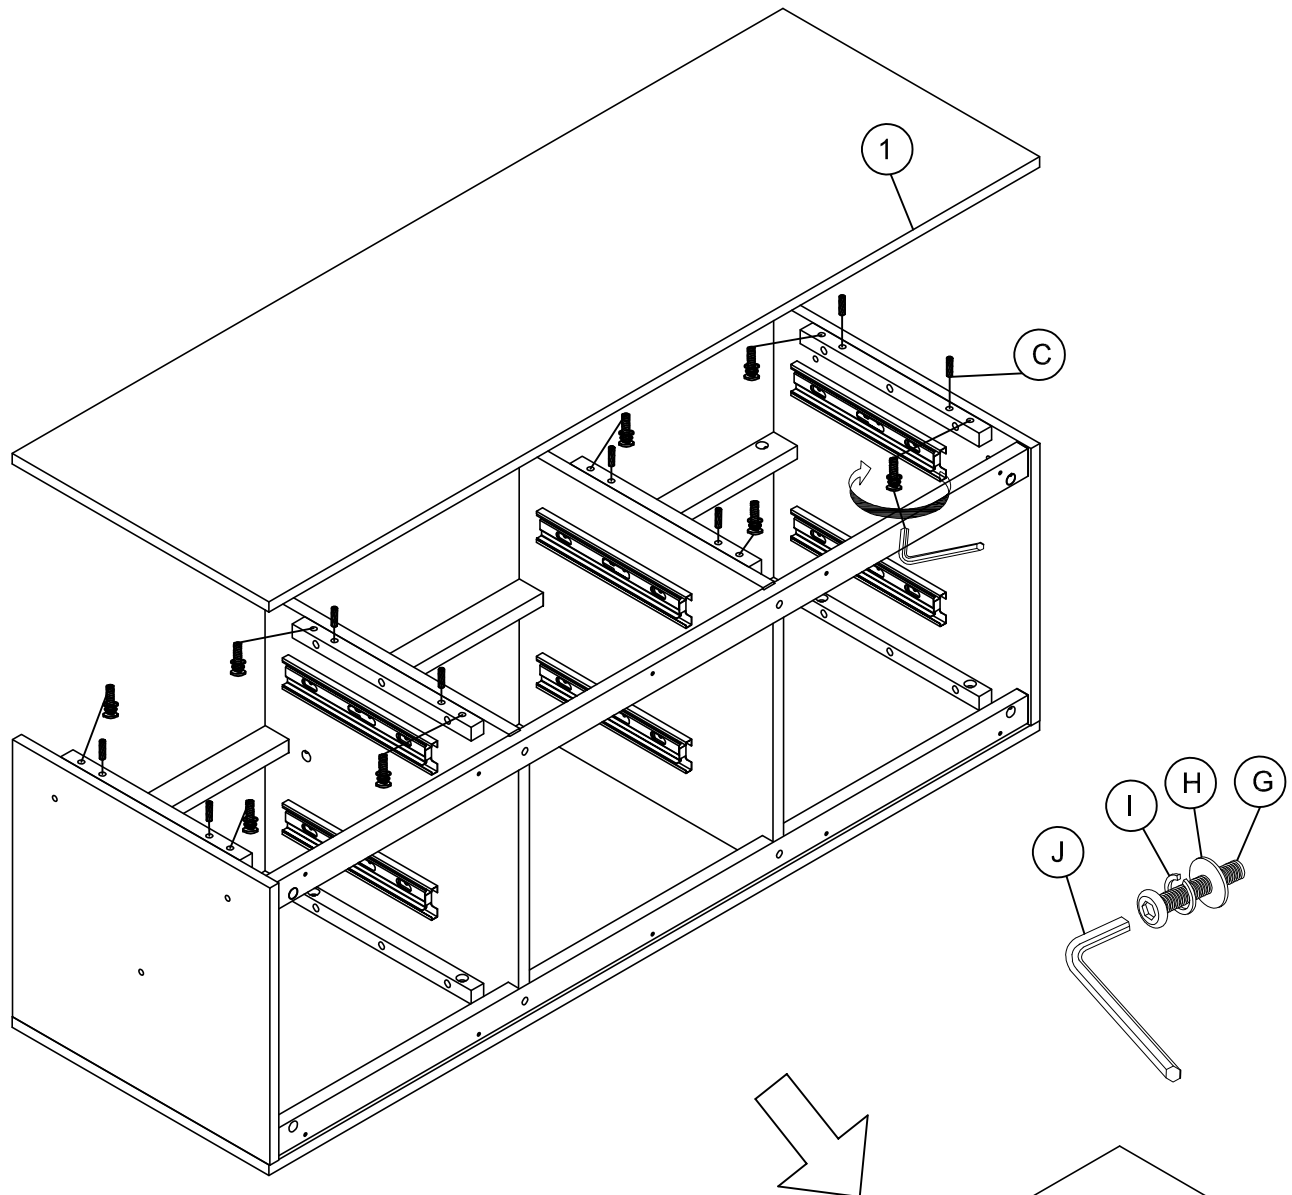

1
x1
Top panel



C
x8
Dowels



G
x8
Bolts



 
H
x8
Flat Washer



I
x8
Spring Washer






J
x1
Allen Key

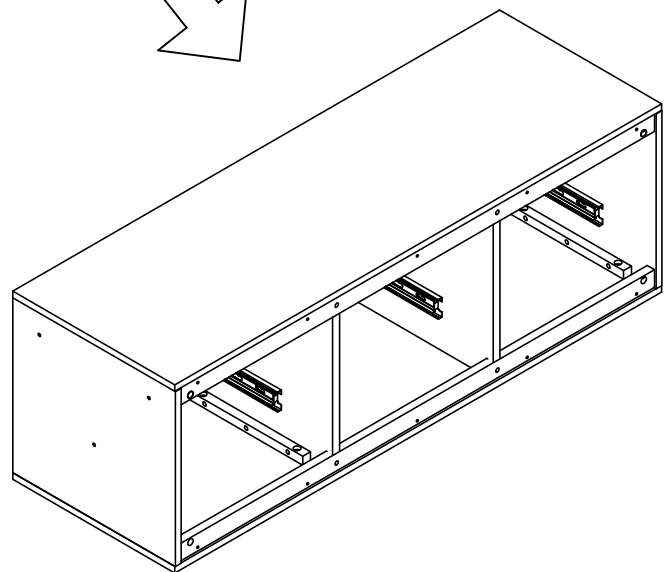

ASSEMBLY INSTRUCTIONS

WF303668AAK

  
 
STEP 5

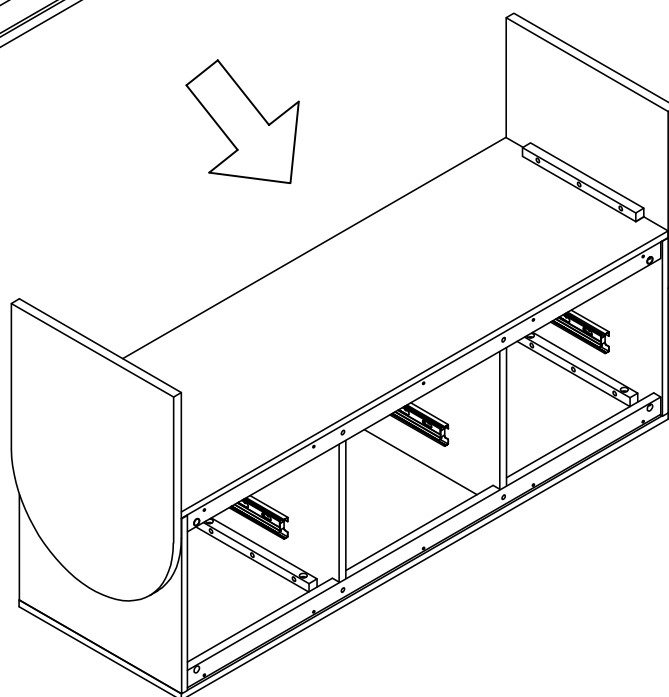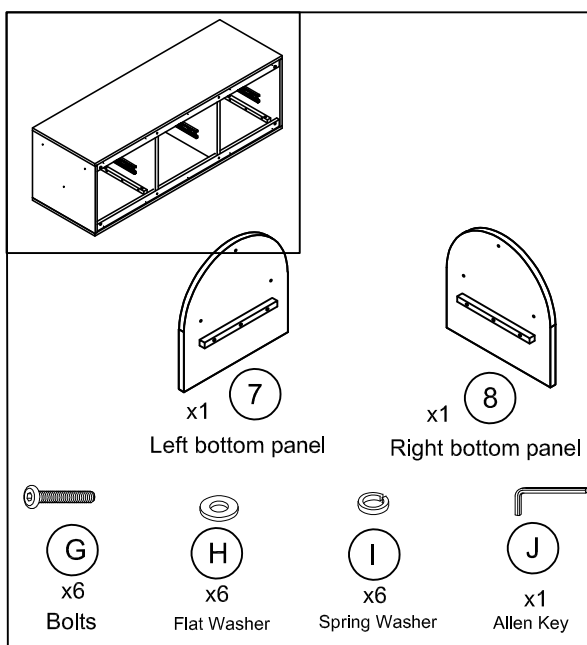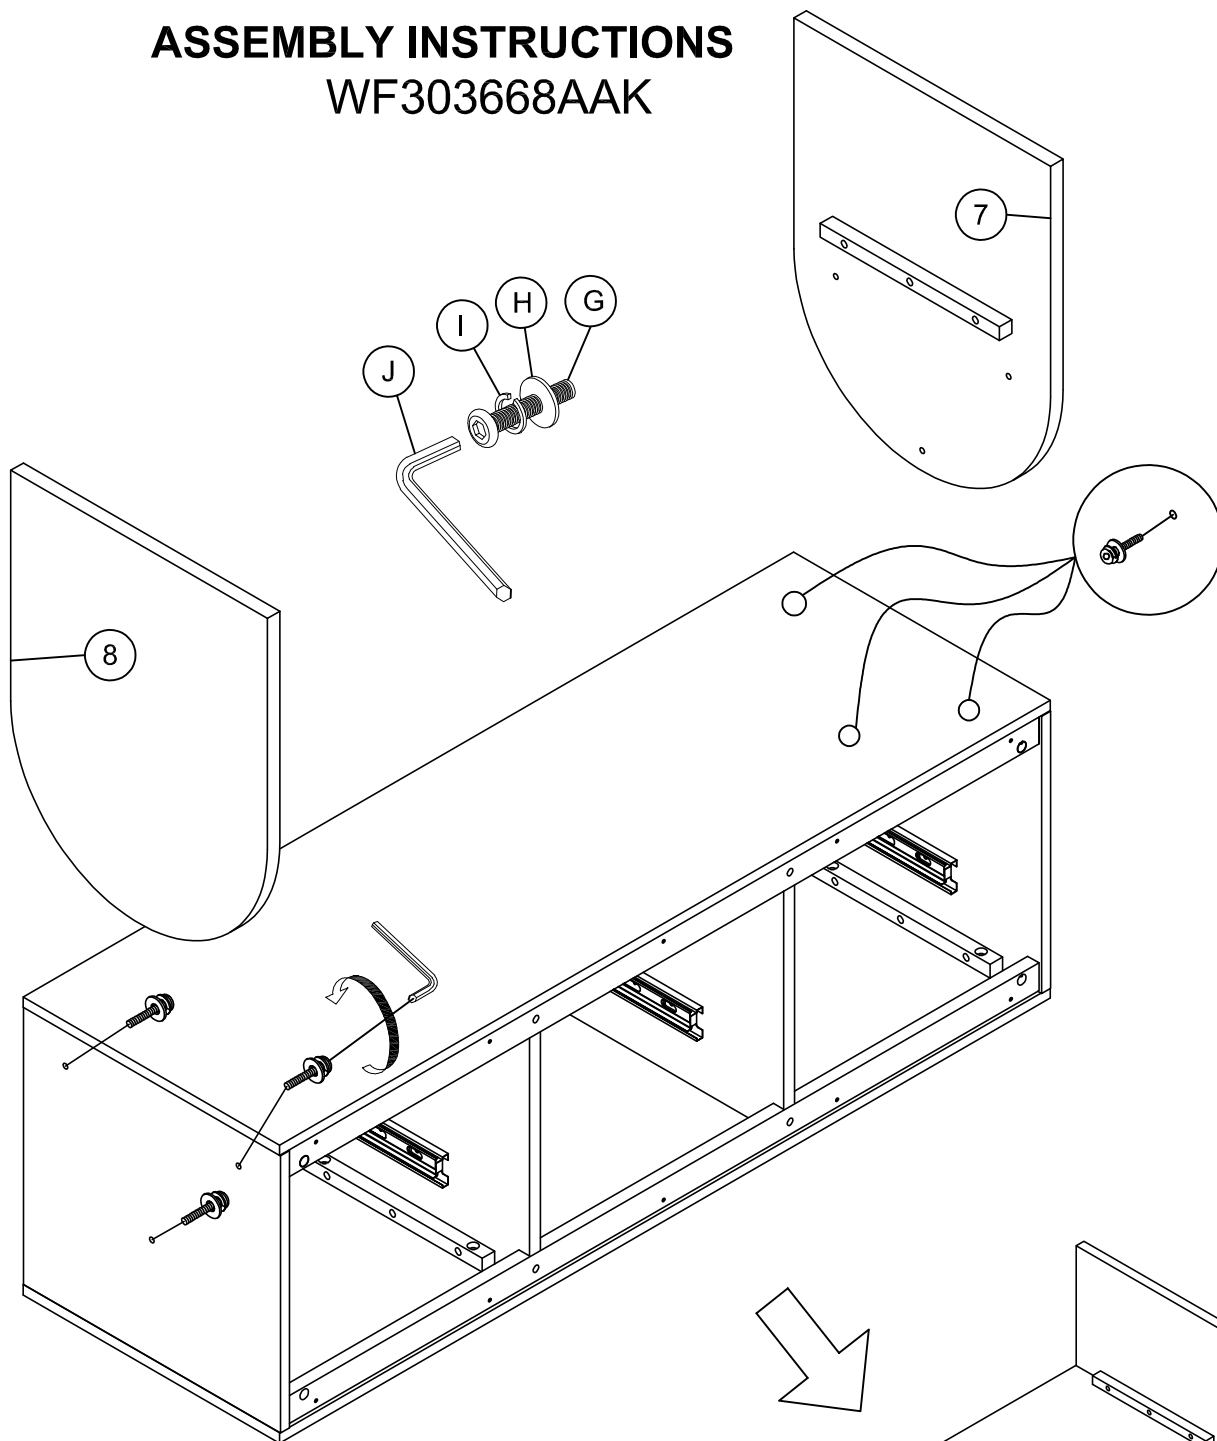

ASSEMBLY INSTRUCTIONS

WF303668AAK

 
 
STEP 6

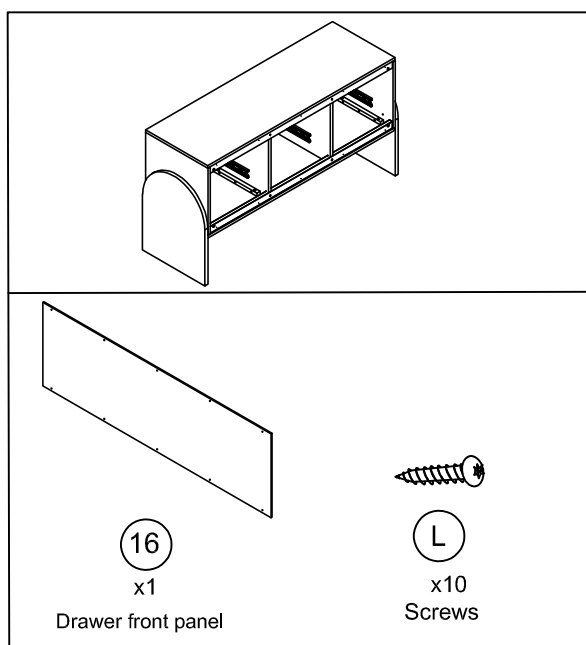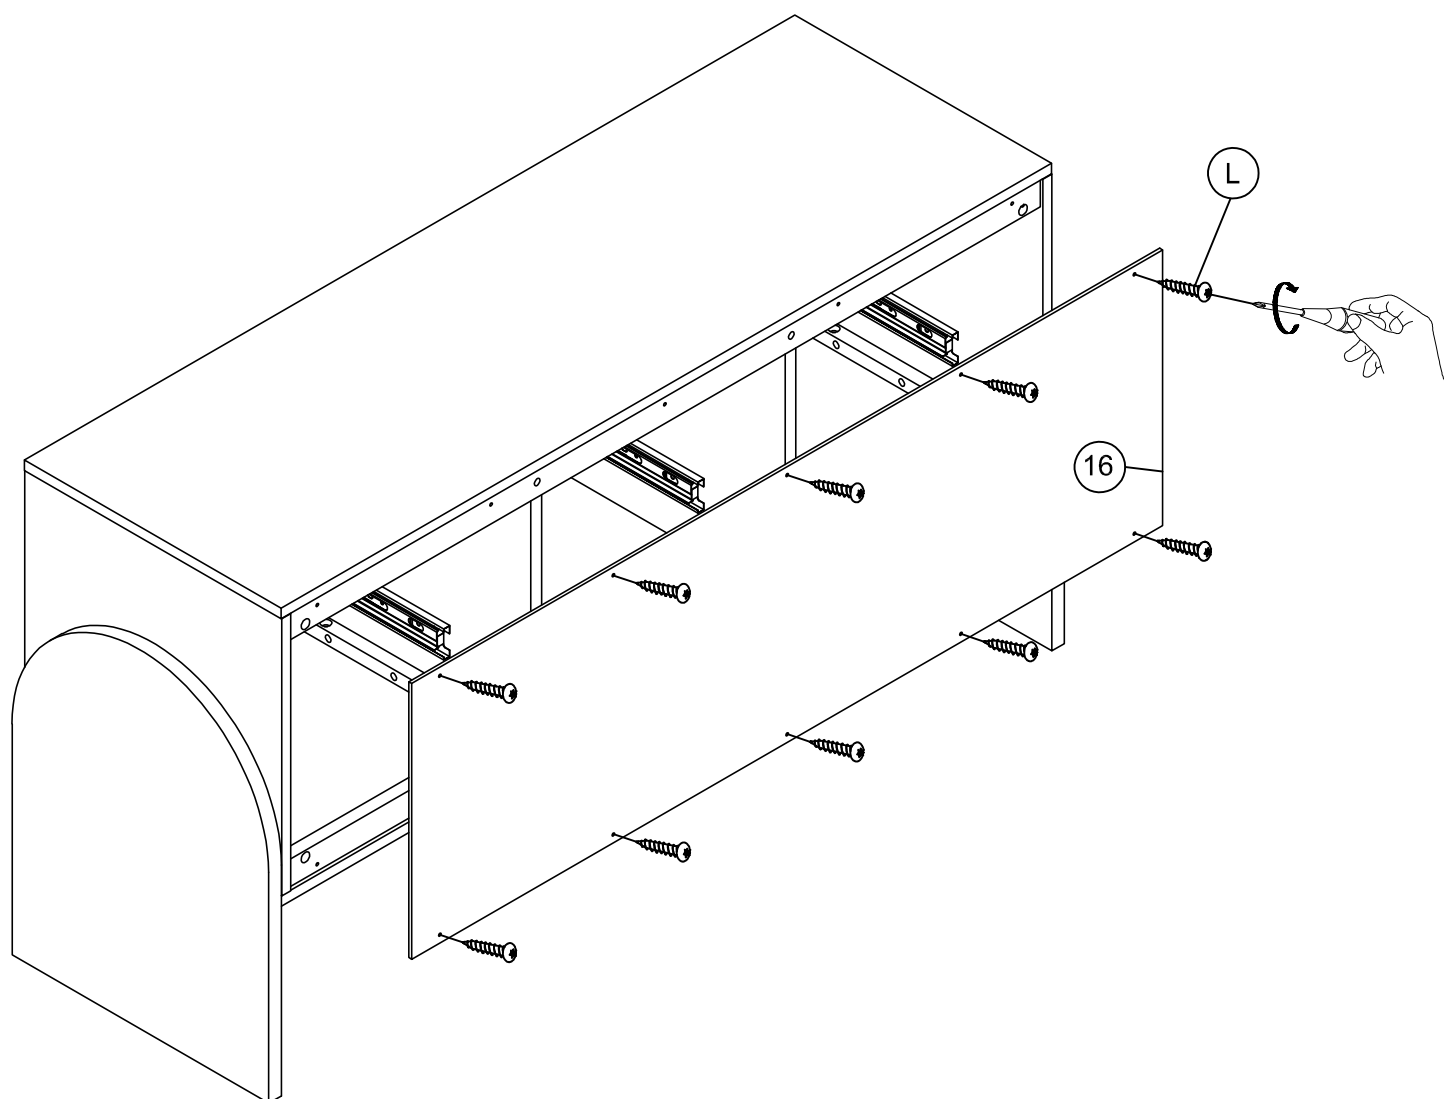

ASSEMBLY INSTRUCTIONS

WF303668AAK

  STEP 7

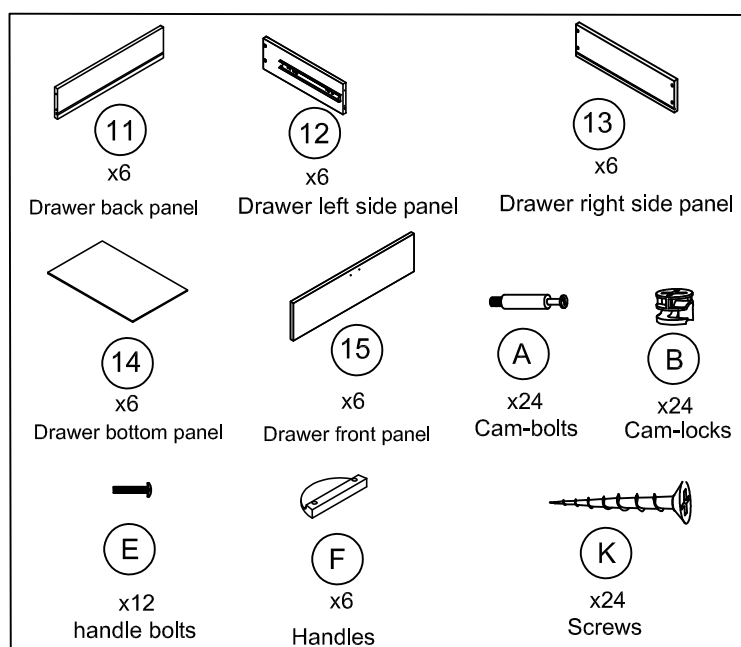
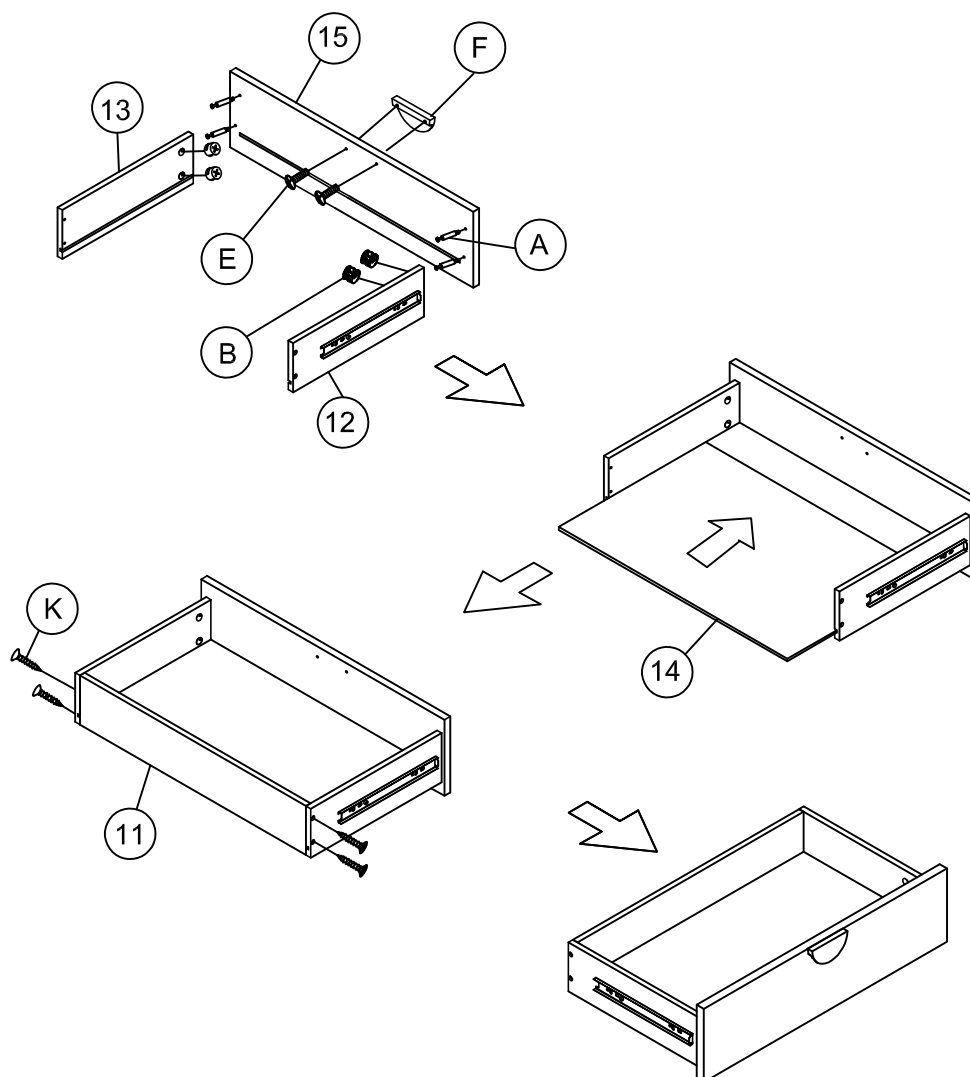


ASSEMBLY INSTRUCTIONS

WF303668AAK

STEP 8

  Place the Cabinet in the desired location against the wall. Mark the position of the attached Hooks on the wall and remove the Cabinet. Using one of the remaining Hooks (M) as a template, Place the Hook (M) under the marks on the wall and mark the two hole positions. Drill the holes for the Anchors (N) and insert the Anchors (N) into the wall. Attach the remaining Hooks (M) to the Anchors (M) with Screw (P). Fully tighten the screws. Return the Cabinet to the selected position and connect the Hooks (M) together with Plastic Tie (O). Assembly is now complete.

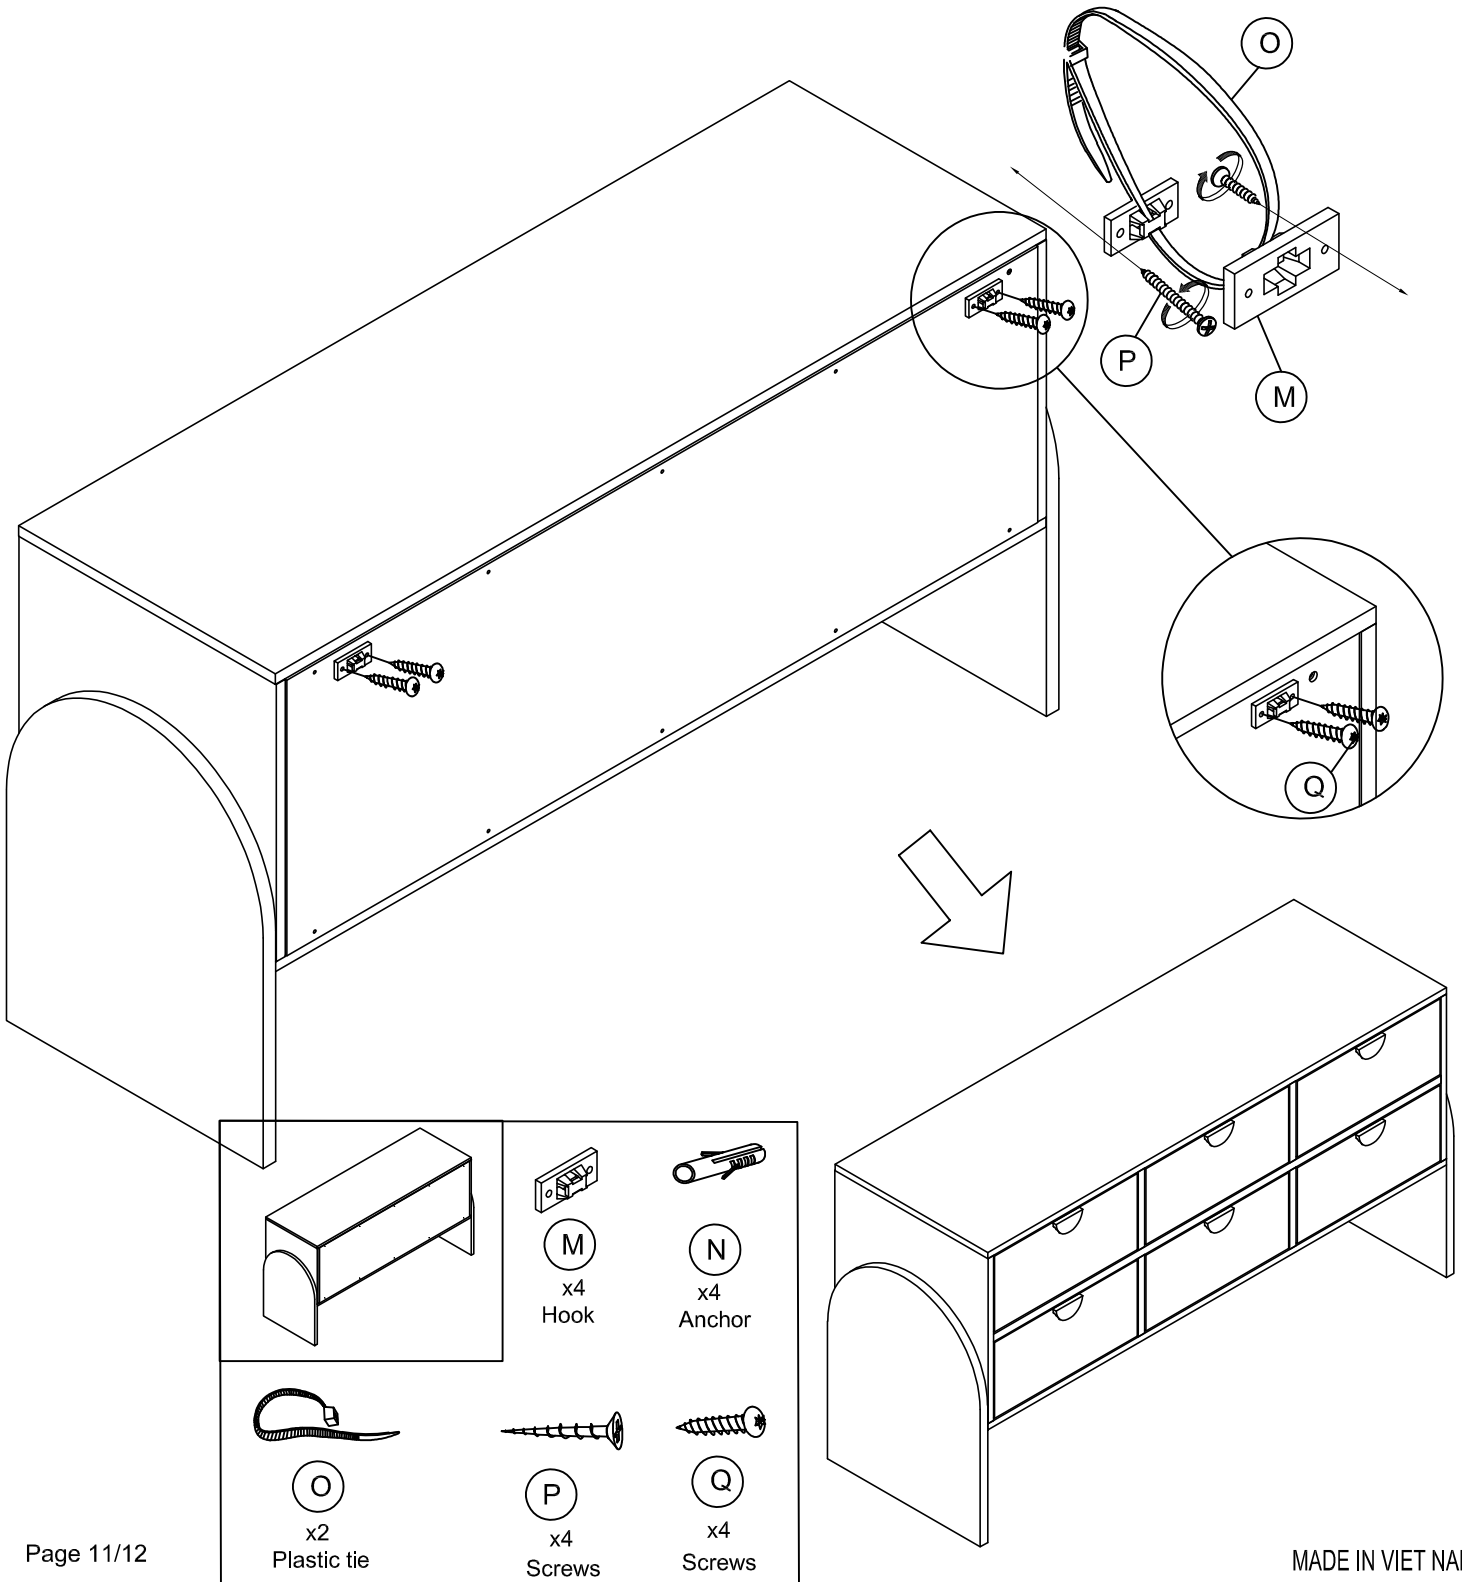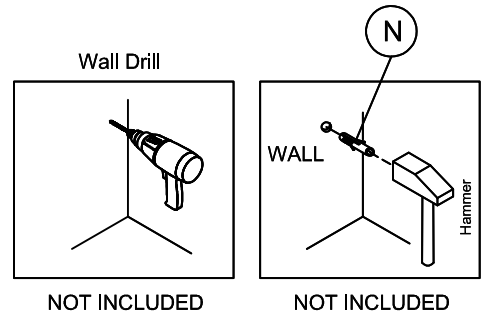

ASSEMBLY INSTRUCTIONS

WF303668AAK

STEP 9

