

2.4G photoelectric driver manual

Basic operation instructions:

1. Copy coding and grouping: the remote control needsto be operated with the driver to operate the code to use, the method is asfollows:
2. The drive and load lamp light source, a power supplyconnecting normal completion, select packet control lamp, the power supply is switched on, in turning on the power supply of the moment (see light sourcelight during three seconds) according to the selected a group key (ON), see the lights(light source) is "slow flash three times", the code and data packet.(If the lamps are too many, repeat the above steps until the lights of the codeare grouped and matched.
- A) Note: each drive can only be matched with a groupon the remote control at the same time; a remote control can match a myriad of drives, but a drive up to four remote controls at the same time.
3. Clear coding and regrouping: if changing the layoutof the room, or the user'sinterests change, want to change the previous packet (encoded), re grouping of and need to the remote control LED lamp address code,clear, the method is as follows:
4. (a) selected clearance codeof lamps and lanterns, cut off the power, power is switched on again, within 3seconds after the power supply is turned on and the lamp light, continuousaccording to the total open key ON or the corresponding key ON to open five times,that is, to see the lamp / light will flash 6 times, confirming the Qing code successfully
5. (b) after the success of the code, the operationprocess of re grouping and coding and the operation of the first "copycoding and grouping" are completely consistent.
6. Nightlight function: find night light button on theremote control, press after the lights whether in what state, light work in Nightlight mode
7. Remote control subsection switch function: pressthe remote control in the middle of the color key, can choose the color. Choosefast: is white, warm white, neutral light
8. Timing function: find the timing button on the remote control, pressing the first light flash indicates that the timing is 30 minutes; pressing the second light flashing twice indicates that the timing is 60 minutes; pressing other total key ON or the corresponding key to cancel the timing.
9. Scene mode function: to find the remote control onthe scene key, after pressing, the side of the light is open, or auxiliarylight open
10. The walls of the sectionalizing switches: the powersupply using advanced automatic synchronization technology, lights on after 3 seconds, the power will be automatically entered into the memory function, wallswitch electric broken, and then power on, now light is memory on a turn offthe lights before state, followed by wall switch to electric and broken, then the power into piecewise state, repeat switch can switch to distinguish: iswhite, warm white, neutral light.
11. Energy saving key: press the energy-saving key,light automatically enter the power saving mode, can save electricity 50%.

