 


CONNECTED MAX®

SMART HOME BY **CREE** LIGHTING

DOORBELL CHIME QUICK START GUIDE

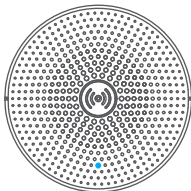 


IMPORTANT PRODUCT INFORMATION

SAFETY INFORMATION: FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS COULD RESULT IN FIRE, ELECTRIC SHOCK, OR OTHER INJURY OR DAMAGE.

This device is not intended for underwater use. To protect against electric shock, do not intentionally submerge or immerse your device, battery, or adapter in water or expose your device or adapter to other liquids. Do not spill any food or beverages on your device, battery or adapter. Do not attempt to clean or polish your device, battery, or adapter with or expose your device, battery, or adapter to oil, lotion, other abrasive substances. Don't expose your device, battery, or adapter to salt water or other conductive liquids. Do not expose your device, battery, or adapter to pressurized water, high velocity water or extremely humid conditions (such as a steam room). If your device, battery, or adapter gets wet, carefully unplug all cables without getting your hands wet and wait for it to dry completely before plugging it in again. Do not attempt to dry your device, battery, or adapter with an external heat source, such as a microwave oven or hair dryer. To avoid risk of electric shock do not touch your device, battery, or adapter to any wires connected to your device during a lightning storm while your device, battery, or adapter is plugged in. If your device, battery, or adapter appears to be damaged, discontinue use immediately.

Use only accessories supplied with your device or specifically marketed for use with your device, to power your device. Use of third-party accessories may impact your device's performance. Read all safety instructions for any accessories before using with your device.

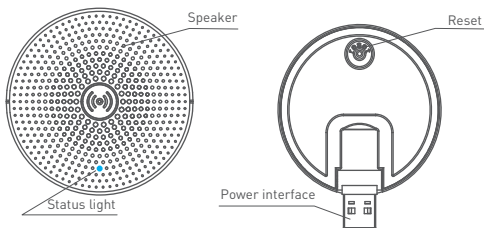

Description

Mini USB DC5V±10%, USB power supply

Reset Press the RESET for 5s to restore Factory Settings;
Click the RESET button to pair the doorbell chime

Status light Blinking blue light: Awaiting configuration;
Solid blue light: Configuration completed

Functions

Change Ringtone

You can choose your own ringtone from the four ringtone options

 
Ringtone volume

The volume of the chime can be adjusted by sliding the volume of your smartphone


Pair via pressing ringing button

Note: Doorbell and Chime have been configured before leaving the factory, if the chime isn't paired by default, please use the following instructions to pair it manually with the doorbell camera.


Step 1: Supply power to your Chime and Doorbell.

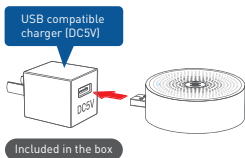

 
Step 2: A short press on the RESET button on the Chime, and you will see the indicator flashes blue, indicating device is in pairing mode.

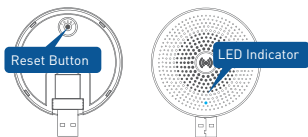

 Step 3: Press the doorbell button, and the Chime will sound to react. When pairing is successful, the Chime indicator will be solid blue.

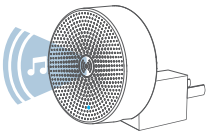

 - Step 1: Click the "RESET" button on chime, the blue light blinks, and enter the configuration mode.
- Step 2: Access "SETTINGS" in the Cree Lighting APP, and press "Basic Function".
- Step 3: Select the "Wireless Chime", and click "Chime Pairing", confirm that the blue light of the chime blinks.
- Step 4: Click "Pair" and your chime will automatically pair your doorbell.
- Step 5: Set the functions on your chime after receiving the prompt "The pairing command has been sent successfully!".

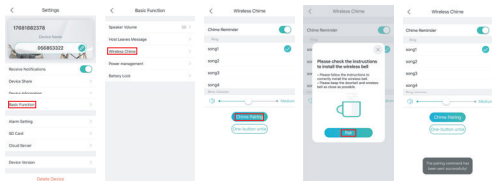

Note:

If the configuration fails, please press the "RESET" button for 5 seconds to reset your chime and click the "RESET" button, then add it again.