



LAUREL MOUNTAIN WHIRLPOOLS

COLONY COLLECTION OWNER'S MANUAL

For your installation, operation, and maintenance needs.

Whirlpools

Air Baths

Combo Baths

Soakers



***WATER TEST* PRIOR TO INSTALLATION**

Laurel Mountain Whirlpools Service Center: 1-800-930-0050

Contents	Page	Contents	Page
Specifications	1 & 2	Care & Cleaning	6
Rough In Instructions	2	Whirlpool Operation	7
Electrical / Wiring	3	Air Bath Operation	7
Plumbing Instructions	3	Extra Options / Features	8 & 9
Freestanding Installation	4 & 5	Warranty Information	10
Operating Instructions	6	Troubleshooting Guide	10

About this Owner's Manual

Laurel Mountain Whirlpools has gained popularity by the variety of bathtubs available and the extensive list of options for each type of tub. This manual covers the installation, operation, and maintenance needs for all of the Colony Laurel Mountain whirlpools, air baths, combo baths, and soaker tubs. If you have any questions or need additional information on your Laurel Mountain Whirlpools bath, you can contact our customer service department Mon-Fri at 1-800-930-0050 between 6:00 am and 6:00 pm EST.

INSTALLATION WARNING

***Your Laurel Mountain Whirlpools bathtub has been water tested prior to shipment. However, due to transportation and potential on-the-job conditions, you should NOT install this tub until making a final water test.**

***Building material & wiring should be routed away from the pump or other heat producing parts of this tub.**

Please follow these instructions to insure an easy and safe installation process. Any deviations, additions, or deletions to your Laurel Mountain Whirlpools tub or it's hardware will void the warranty of this product if written approval is not obtained from the manufacturer.

Specifications

Your Laurel Mountain Whirlpools tub was created to your order specifications. The tub was constructed from an acrylic shell cast. It was then reinforced with a mixture of chopped fiberglass in a polyester resin applied to the backside of the shell. The base of your unit was designed to give uniform support to the tub floor and has been pre-leveled. It meets or exceeds load-bearing and impact resistance requirements of the listed standard without evidence of crazing or cracking and with minimal deflection when installed in accordance to Laurel Mountain Whirlpools printed instructions.

PRIOR TO INSTALLATION

Immediately inspect your unit upon arrival. If any damage has occurred, make a notation on the freight carrier's proof of delivery. DO NOT remove the bath from its shipping container until you are ready to water-test and install. When you are prepared to remove the tub from its carton **DO NOT LIFT** the tub out by its plumbing. We also recommend cutting cardboard from the shipping container to place inside the tub to protect its floor. Even though your tub has been inspected and water tested prior to shipment, it is very important that you perform a water test of your own to ensure all of the fittings and connections were not damaged during transit. Take your tub to an area where you can fill it up, run electrical components, & drain

it. Fill your tub to the overflow and if you have a pump and/or blower, operate it for 15 minutes. Inspect the entire unit during and after for leaks. Any defects that are discovered **MUST** be reported at this time to qualify for warranty coverage. Qualified plumbers and electricians **MUST** be used for all tub connections to assure you follow local codes and acquire any permits required for the install. NEVER LIFT the unit by any portion of the plumbing or stand in the unit during installation as this may cause serious damage to the unit.

Framing-In Your Bath

*It is **VERY** important that your tub is supported by its base and not the rim.


*Take your installation measurements directly from your tub, as they may vary slightly from our literature.

When installing the drain fitting, you will notice it protrudes below the bottom of the tub. You will need to allow clearance in the sub-floor for this dimension. Now you are ready to place your tub in its desired location. Check the unit and sub-floor to ensure it is level. If it is not, insert wood shims between the sub-floor and support base. Mark stud wall underneath the tub's return lip. Remove the unit from position and install a 1x stop to stud wall for lip to rest on to prevent deflection. At this time, check to see if any wiring needs to be completed (see wiring instructions).

Since a great variety of installations are possible with this bath, special framing procedures may be needed. A ledge under the rim, or an apron without a ledge, may be constructed as required. Where installation is planned against a wall, install the tub against the studs as indicated, adding blocking below the rim to prevent deflection or movement of the tub, but ensuring that the weight of the tub is not supported in any way by the blocking. (Diagram A) When placing the unit in a platform floor or cut out installation, the opening should be 1" smaller than the specified rim dimensions.

A 1" integral up-flange is available on many rectangular and corner models. These units should be placed in a pre-measured studded pocket. Pre-drill holes through the flange to align with studs. Use screws to secure studs (Diagram B). **DO NOT** attempt to nail directly through the flange. **Always pre-drill the holes.**

In every "system" installation, an access panel must be placed near the pump/blower for servicing. This access may be through the wall or platform apron. In the case of a sunken installation, access may be through the ceiling below the bathtub. See **Diagram C** for instructions for the access panel provided on the skirted tub.

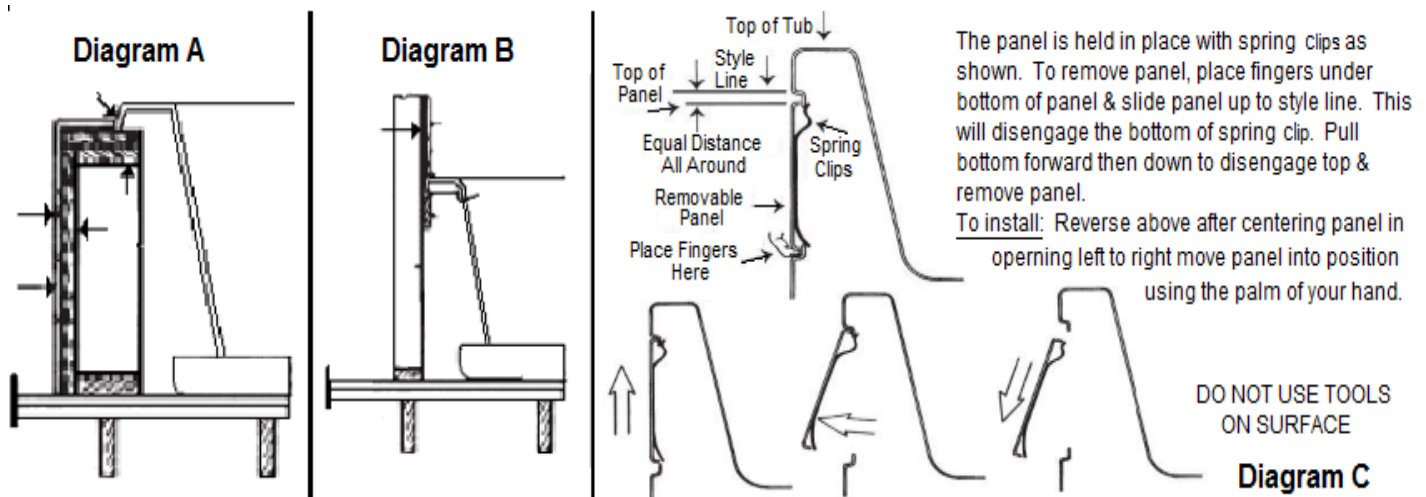

Electrical & Wiring Instructions

Rough in the wiring on a single 120VAC, 20 amp, GFCI protected dedicated circuit for each accessory installed on the tub.

WARNINGS:

- 1) All electrical connections must be made by a licensed certified electrician in accordance with the requirements of the National Electrical Code and applicable state and local codes and procedures.
- 2) All circuits connected to this unit must be equipped with Ground Fault Circuit Interrupter (GFCI) protection. It is the tub installer's responsibility to wire the circuit with GFCI.
- 3) All bathtubs equipped with an inline heater require two dedicated circuits. One for the whirlpool system and one for optional inline heater.
- 4) **DO NOT** splice a longer cord to the power supply cord and **DO NOT** connect to an extension cord.

All whirlpool, air systems, and heaters are equipped with a molded plug on the end of a power supply core. Install a separate, dedicated 120VAC, 20 Amp GFCI protected electrical wall plug outlet inside the access panel for each accessory equipped on the tub. For example, if the tub is equipped with a whirlpool system only, then one GFCI wall plug outlet is necessary. If the tub is equipped with both whirlpool system and a heater then two separate circuits with GFCI wall plug outlets are required. Be sure to count the number of accessories before installing the GFCI wall outlets. Also, the power supply cords equipped with each accessory are only 2.5' long so locate the GFCI wall outlet within 1.5' of the intended accessory.

Electrical Requirements

.75 hp Pump – 120V, 7.5 Amps	Whirlpool heater – 120V, 12.0 Amps
2 hp Pump – 120V, 9.5 Amps	Air / Soaker heater – 120V, 12.5 Amps
2.5 hp Pump – 120V, 13.5 Amps	Air / Soaker heater – 240V, 16.0 Amps
2 hp Blower/Heater – 120V, 12.0 Amps	Ozonator – 120V, 1.0 Amps

Please note, that when sizing the electrical circuits to power the unit, you should always check the rating labels on equipment because there could be changes.

Plumbing Installation

Install fill valves and spout in the desired locations. Note, due to various possible fill valve and spout locations, the holes are not drilled at the factory. Make certain that the spout is long enough to clear the interior rim of the tub. If installing fill valves on the deck of the tub, be sure that you have enough clearance for connections of valve to tub and water connections before drilling/cutting into tub. Seal the joints under the tub rim and against the wall with a water resistant seal. Then install a standard 1.5" trap to the drain and overflow.

Before proceeding, make a final operational check by filling the tub with water to the overflow and operate for at least 5 minutes. Leave the water in the bath for 30 minutes, check the connections for leaks during and after operation. Complete the installation with desired trim material on the back wall, side walls, and down exposed interior walls.

Installation – Freestanding Tubs

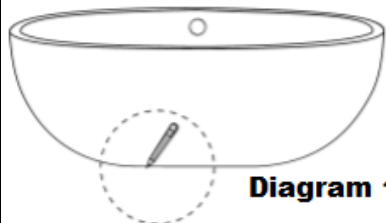


Diagram 1

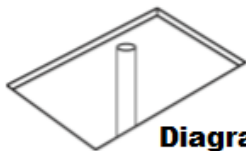


Diagram 2



Diagram 3

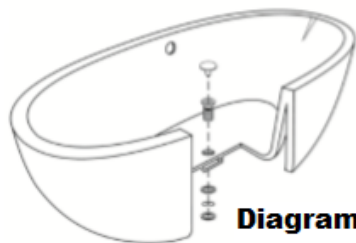


Diagram 4

PREPARATION

1. The floor should be clean and level.
2. The tub should be placed in the exact installed position on the floor and trace the outline of the bath with a pencil or any erasable marking (Diagram 1).
3. Determine the location of the drain pipe, and air line (on units with Airbath Systems) on the floor by taking measurements of the drain and waste location underneath the tub (Diagram 2). Drain and waste locations will vary by model.
4. Using a blanket, cardboard, or other clean protective surface, turn the unit on its side so that the unit is properly supported during drain installation.
5. The drain hold area should be cleaned in preparation of setting the drain. The area should be dry and free of any debris.

INSTALL DRAIN HARDWARE

Determine if the tub has a factory installed integral drain or if a field installed drain is required. Tubs with factory installed integral drains continue with instructions. Tubs with field installed drains go to step 10.

Tubs with factory installed integral drains (steps 6-9):

6. Apply a bead of clear silicone or plumbers putty around the Drain Body and pass it through the drain hole (Diagram 3).
7. Apply plumbers putty to the Washer and slide it over the bottom of the Drain Body (Diagram 3).
8. Slide the paper washer over the drain body.
9. Attach the Drain Body Nut on the Drain Body and tighten until the Nut and Washer have created a seal with the bottom of the bathtub. **DO NOT OVERTIGHTEN** (Diagram 4)

Go to step 12.

Tub with field installed drains (steps 10-11):

10. Install waste and overflow between cavity of bathtub.
11. Follow aftermarket manufacturers instructions and all local codes and regulations when installing.

PREPARE TAIL PIECE

All parts involved in tail piece installation are provided by the installer.

12. Drain waste vent must always be installed according to local standard. Verify the placement of the bathtub before drilling the hole for the drain waste vent.
13. Install 1 1/2" rubber slip gasket over the drain waste vent.
14. Cut tail piece to desired length (will vary for each installation).
15. Slide tail piece nut over tail piece towards flanged end.
16. Connect tail piece assembly to waste vent.
17. Place flange washer on top of tail piece.

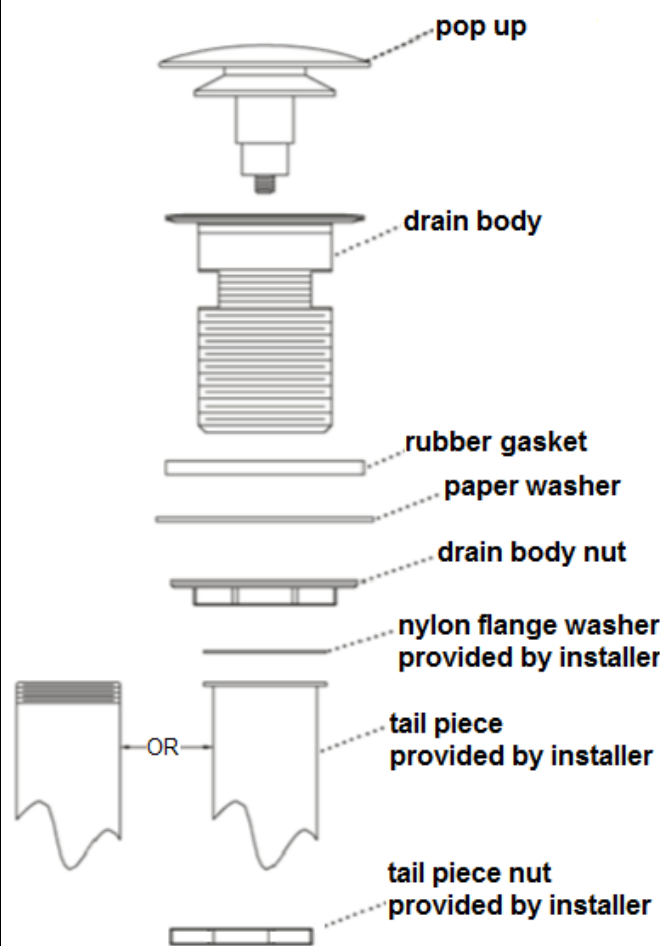


Diagram 5 (Integral Drain Unit Hardware Shown)

Diagram 6

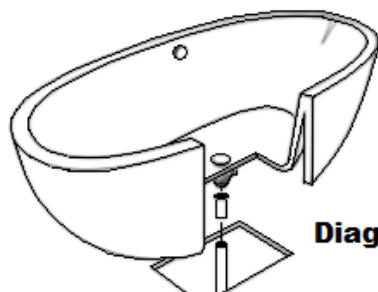
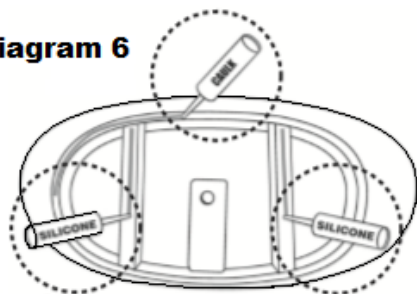


Diagram 7

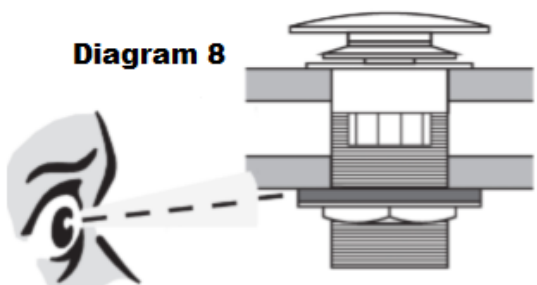


Diagram 8

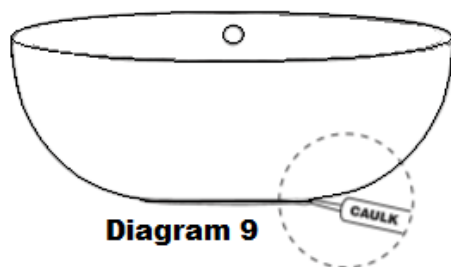


Diagram 9

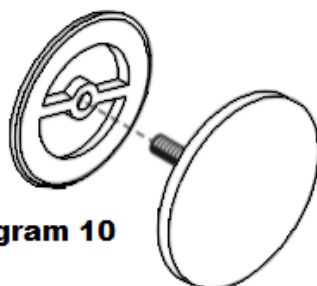


Diagram 10

INSTALL BATHTUB

18. Apply a generous bead of adhesive or silicone to the bottom of the tub supports (Diagram 6).
19. Then apply a bead of tub and tile caulk around the edge of the base (Diagram 6).
20. Carefully set tub into position (Diagram 7) and connect the drain hardware (previously installed). Finish the installation of the tailpiece installation.

COMPLETE BATHTUB INSTALLATION

21. Fill the tub with water to the overflow and then drain the tub while inspecting the waste connections below the floor for leaks. Access from below will be necessary for the step (Diagram 8).
22. With the bathtub now in place, wipe off any excess tub and tile caulk and adhesive where the tub meets the floor.
23. Run a bead of tub and tile caulk around the bottom edge of the bathtub where it meets the floor. Wipe off any excess caulk with a wet cloth (Diagram 9).

INSTALL OVERFLOW HARDWARE

(Integral Drains Only)

24. Place the Back Plate over the screw of the overflow cover (Diagram 10).
25. Then, align the Overflow Cover with the Bar (installed at the factory) in the overflow hole (Diagram 11).
26. Carefully hand tighten the Overflow Cover until it stops.
DO NOT OVER TIGHTEN

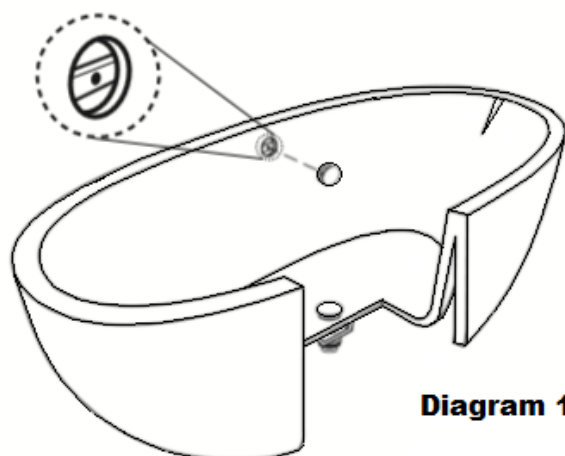


Diagram 11

Operation Instructions <save these important safety instructions>

Laurel Mountain Whirlpools will not be held responsible for water damage of any kind in connection with the installation and/or operation of one of our bathtubs. All whirlpool jets must be completely submerged below water before starting the pump. **Do not operate the pump without water as damage may occur.** Do not block the overflow drain and allow water to reach the controls as they are not waterproof and leaks to the floor may occur.

Important Safety Instructions

Do

Ensure your qualified electrician supplies a Ground Fault Circuit Interrupter (GFCI) during installation. This offers necessary protection to your unit and should be tested periodically. To test, simply push the <TEST BUTTON> and power should be interrupted. Then push the <RESET BUTTON> and power should be restored. If not, **DO NOT** use the unit as this indicates there is a ground current flowing and that a possibility of **ELECTRIC SHOCK** exists. Disconnect the unit at once and call a qualified electrician before further operation.

Use this tub for its intended purposes described in this manual. The manufacturer does not recommend using any attachments not specifically approved in this manual.

DO NOT

Allow any electrical appliances near the bathtub.

Use alcohol, drugs or medication. This will greatly increase your risk of hypothermia or drowning.

Use this tub if you think or know you are pregnant. Consult your physician first.

Allow children to use the bathtub without adult supervision.

Operate the whirlpool without the suction cover.

Insert any objects into any of the openings.

Use options NOT installed by the manufacturer.

Care & Cleaning Instructions

WHIRLPOOL

Prior to using the whirlpool, the tub and its system(s) should be thoroughly cleaned and disinfected. **DO NOT** use abrasive cleaners on the high-gloss acrylic finish. Use a non-abrasive cleaner and rinse thoroughly after cleaning. To remove the labels on the tub, we recommend using fingernail polish remover if they do not come off easily. Fill the tub up with water at least 2" above the highest jet, then add 2 tsp. of low sudsing automatic dishwashing detergent and no more than 8 oz. of household bleach. Operate your whirlpool for 5-10 minutes and then drain the tub. Refill the tub with water and run the system for another 5 minutes, then drain. Repeat every 30 days unless an ozonator was purchased.

ALL TUBS


Your bath has an acrylic finish and will retain its high luster for years with proper care. Never use an abrasive cleaner or pad to clean your bath tub. Always use a soft cloth or sponge along with a spray liquid non-abrasive bath cleaner/disinfectant. On the metallic finish, use only a soft cloth and warm soapy water.

Whirlpool Operation

If your bath has a whirlpool system, simply pushing the push-button located on the tub will turn the tub on or off. The button next to it will cycle through the various speeds of the pump (low, medium, and high). Individual jets may be adjusted by turning the jet ring/trim clockwise and the water flow will increase, while turning the jet trim counterclockwise will decrease the water flow. The jets can be closed if turned far enough counterclockwise. The 8 jet system has a 2 hp pump and requires a 20 amp dedicated circuit, 120V.

Air Bath Operation

The air bath is operated by touching the control pad pictured below.

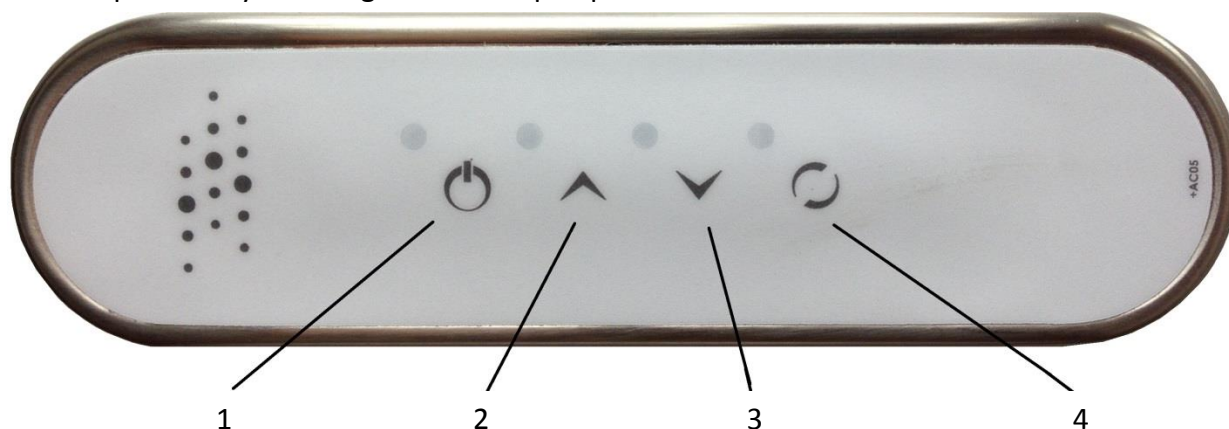

1. **ON/OFF** – Press to start, press again to stop
2. **INCREASE SPEED** – Press and hold to increase the speed of air flow. Release when desired speed is reached.
3. **DECREASE SPEED** – Press and hold to decrease the speed of air flow. Release when desired speed is reached.
4. **PULSE CYCLES** – Pressing this button once will turn on Wave Mode which fluctuates the blower from minimum to maximum power. Pressing the button again changes to Pulse Mode. In Pulse Mode, the blower will release air in short, intense bursts. Pressing the button again will return the blower to normal.

Standard Drying Cycle – An automatic drying cycle will start 20 minutes after the blower is turned off. The blower LED blinks while waiting for the purge cycle.

24 Hour Programmable Drying Cycle – The system must be stopped prior to activation or deactivation.

Activation – Determine at which time you wish the purge to activate. At that precise time press and hold Button 2 on the keypad for 5 seconds. All of the LED lights will flash twice to confirm the activation is complete. The purge cycle will now start at the programmed time every 24 hrs. In the event of a power failure the program will be automatically deactivated.

Deactivation – Press and hold Button 2 for 5 seconds. All of the buttons will flash once to confirm deactivation.

Functioning

- 1) 16 lateral turbo air injectors spaced around the lower side walls of the tub.
- 2) The system functions with a 2 hp blower / 600W air heater that is separate from any other systems.
- 3) This system requires a 20Amp dedicated circuit, 120V.
- 4) The air heater is designed to provide a warm air massage. It is not designed to heat the bath water.

Options & Features

Whirlpool Inline Heater

The inline heater is designed to MAINTAIN the temperature of the water between 101-104 degrees Fahrenheit. These limits cannot be increased or decreased. The Heater is operated by a pressure switch which is programmed into the heater. This switch allows the heater to operate only when there is sufficient water flowing through the system.

DO NOT BYPASS THE SWITCH. This option is equipped with a molded plug on the end of a supply cord. Check your local codes and install a 120VAC 20amp GFCI protected dedicated circuit wall outlet within 1.5' from the heater unit. Plug the cord into the outlet. Every time the whirlpool unit is activated, the heater will activate as well, and will MAINTAIN the water's temperature between 101-104 F.



Water Heater for Air Bath and Soaker Tubs

The on/off button on the bath tub activates/deactivates the heater. The heater has a built-in 20 minute timer and is a low flow/high efficiency pump, providing silent operation. The option is equipped with a molded plug on the end of a power supply cord. Check your local codes. For the LM305 install a 120 VAC 15amp GFCI, and for the LM306, install a 250 VAC 25amp GFCI. Both water heaters should have a GFCI protected dedicated circuit wall outlet located within 1.5' from the heater unit. Plug the cord into the outlet. This heater is designed to MAINTAIN the temperature in your bath water between 101-104 deg Fahrenheit. These temperatures are preset and cannot be adjusted.

Hydrotherapy Back Massage System & Neck Massage Pillow



Neck Massage Pillow Control



Back Massage Functioning - Includes 8 jets that function on an independent 3/4 hp (7.5Amps). 2 jets work at a time cycling up and down your back. This system requires a 20Amp dedicated circuit, 120V.

Back Massage Controls – DO NOT OPERATE the back massage system before you are in the tub and ready for use. Doing so will spray water out of your tub! (1) The push button located at the bottom left of the photo above turns the unit on and off. The dial (2) on the left is the Air Control for the back massage system. Adjusting this will increase and decrease the intensity of the jets. The large dial (3) on the right will adjust the cycling speed of the jets from completely stopped on 2 active jets, to quickly cycling up and down through the entire back massage system.

Neck Massage Controls – DO NOT OPERATE the neck massage before you are in the tub and ready for use. Doing so will spray water out of your tub! The middle button (4) is the On/Off button. Pushing the button on the left will adjust the speed of the neck massage jets and set them to pulse simultaneously. Press once for fast, twice for medium, and three times for low speed. The button on the right performs the same function, only with the jets alternating back and forth. Once activated, the neck massage will run on a 20 min timer.

Chromotherapy Mood Light

The ColorGlo LED Multi-Color bath light comes pre-programmed with 10 light modes. To change modes, switch the unit off and then back on within 5 seconds. To resume a lighting mode, leave the unit switched off to save the last lighting mode displayed in memory. That same lighting mode will display the next time the unit is switched on. DO NOT attempt to service the electronic components yourself. Any opening, altering or tampering with this product will void the manufacturer's warranty. DO NOT submerge the transformer in water or allow it to get wet. Keep the unit dry at all times. DO NOT allow this unit to freeze.

Ozonator

This factory installed option sanitizes your whirlpool. When your whirlpool system is operating your ozonator is generating ozone which is mixed with the re-circulating bath water. The ozone helps neutralize soaps, body oils and other organic and inorganic materials. This unit eliminates the need to run a sanitation solution through the tub's circulating system.

Aromatherapy

This option uses your favorite pure essential oils and their fragrances to treat your mind and body. A few drops added to a felt pad in the aromatherapy canister provides the scent to relax and achieve your desired mood. Place the cap on the canister and operate your air massage system. The scent is drawn into the air system and blown through the air injectors.


Solo Touch Control

The Solo Touch system is operated by the control pad shown below

Features:

Pulsating Mode- The pump speed varies automatically with a cycle period of approximately 10 seconds. Speed 10 is the default speed but the keypad will remember the last speed used after being shut down and will automatically revert to that speed.

*Wait 5 seconds after powering on the unit to adjust the speed settings.

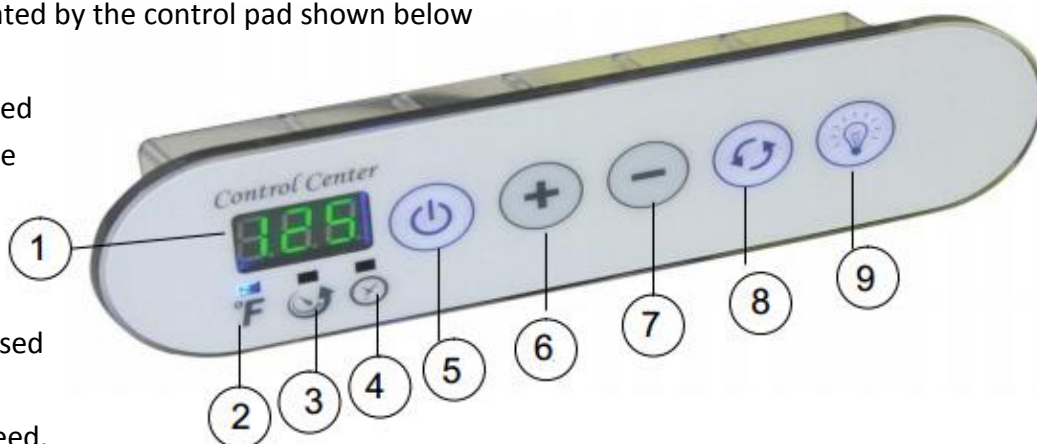

Understanding the Unit

1	Display	Screen off/on – Displays temperature, speed, time remaining, or error info.
2	Temperature in F	When on, displays temperature value in degrees Fahrenheit.
3	Speed level	When on, displays speed level from 1 to 10
4	Time remaining	When on, displays the time remaining in minutes
5	Power button	1 st press activates pump, light, and LED, 2 nd press deactivates pump light & LED.
6	Speed + button	Speed increases by 1 level, display will show current speed.
7	Speed - button	Speed decreases 1 level, display will show current speed.
8	Pulse mode button	1 st press activates pulse mode & LED, 2 nd press deactivates pulse mode & LED
9	Light button	1 st press activate Light mode & LED, 2 nd press deactivates light mode & LED

Laurel Mountain Whirlpools Warranty

This Laurel Mountain Whirlpools bath is warranted to the original purchaser to be free from defects in material and workmanship for the following periods. The bathtub shell carries a lifetime limited warranty. The pump, blower and heater have a limited 10 year warranty. All other parts have a limited 5 year warranty. Proof of purchase is required.

This warranty is issued to the original purchaser and shall be effective from the date of purchase as shown on purchaser's receipt. Laurel Mountain Whirlpools will repair or replace (at their choice) any unit which proves to be defective in material or workmanship under normal use and service, having been properly installed. This warranty is the only express warranty made by Laurel Mountain Whirlpools and is limited to the duration of this warranty. Any labor charges and/or damage incurred in installation, repair or replacement as well as incidental and consequential damages connected therewith are excluded and will not be paid by Laurel Mountain Whirlpools. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty is void for any damage to the bath due to abuse, misuse, neglect, accident, improper installation, any use violating instructions furnished by us, or repair not authorized in writing by Laurel Mountain.

WHIRLPOOL**AIR BATH**

PROBLEM	SOLUTION	PROBLEM	SOLUTION
ON/OFF BUTTON Won't depress	Remove trim ring and plunger. Clean interior, lubricate with small amount of vasoline.	BLOWER -Fails to operate	-Check electric power supply. Reset the circuit breaker or replace fuse if necessary. -Check ground fault circuit interrupter. Reset if tripped. -If the system has been functioning for an extended period of time, it is possible that the thermic protection has shut off the motor. Allow to cool off for at least 30 minutes before further use.
PUMP -Won't Start	-Check to see if on/off switch or pneumatic switch is ON. -Check electric power supply. Reset the circuit breaker or replace fuse if necessary. -Check ground fault circuit interrupter. Reset if tripped. -Check to see if both ends of plastic air switch tubes are connected.	MOTOR -Runs but no air blown through jets	Verify that the main air hose from the manifold to the blower is properly connected. If necessary, reconnect and tighten clamps.
-Motor hums	Check for binding of motor shaft or obstruction in pump. Manually rotate motor shaft to see that shaft turns freely. -Check to see if highest jet is clogged. Check to see that water is at a high enough level for pump to prime. -Check for air leak in suction line. Slightly loosen pump union & then retighten by hand. -Check for obstruction in piping system.	JET HEAD AIR OUTLETS -Are obstructed	If the air outlets of a jet head are obstructed by soap or other residues, fill the tub with warm water, then switch the system on and off several times. The air outlets should be cleared, if this is not sufficient, carefully tap on the jet heads with the handle of a screw driver or similar tool while the blower runs.
LEAKS -Pump Unions -Pump o-ring or seal -Pipe to Jet	Loosen pump unions and inspect o-ring for proper sealing. Retighten. Call Laurel Mountain Whirlpools customer service at 1-800-930-0050	AIR HEATER -Does not appear to be working	-Fill the tub to working level & operate blower on high for 5 minutes. Carefully feel the flexible connection hose where it connects to blower. The hose and its immediate area should feel warm to the touch, if not, call Laurel Mountain Whirlpools -If your tub is installed against 2 outside walls, adequate insulation is recommended to minimize heat loss.
JET Low/no water pressure	Turn the trim ring around the jet. This will open/close the jet.		