


Parts:

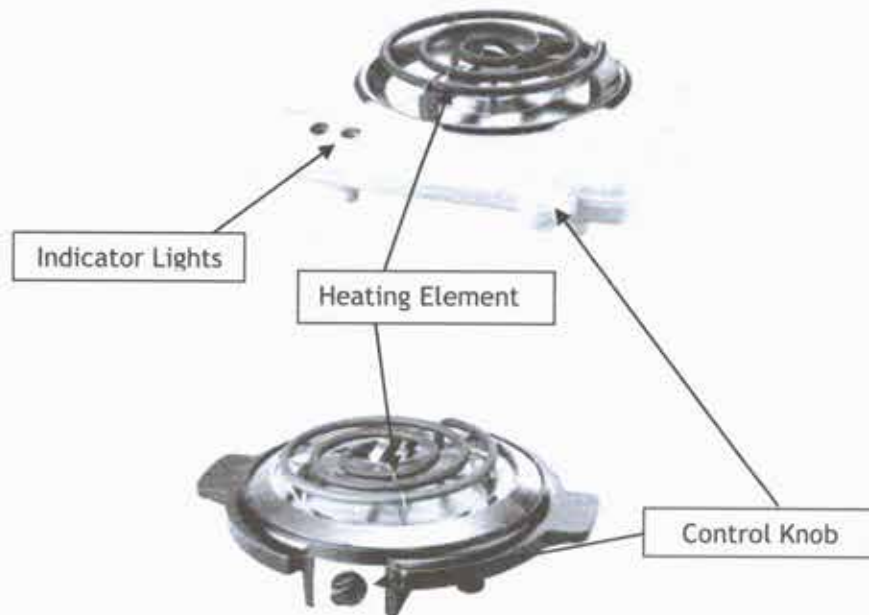

Before First Use

IMPORTANT: Please check all packaging material carefully before discarding as there may be accessory parts contained within the packaging material.

WARNING:

- Before plugging in, check to see that the electric circuit is not overloaded with other appliances. This unit should always be operated on a separate 120Volt AC outlet.
- Be certain that your unit is resting on a leveled flat countertop. Avoid using pans that are unstable and easily tipped.

Using Your Electric Burner or Hot Plate:

WARNING: Avoid contact with moving parts.

1. Place pan on heating element.
2. Turn control knob from the "OFF" position to the desired temperature position between "LOW" and "HIGH"
3. The heating element will energize and heating will begin immediately.
CAUTION: The whole burner, except the control knob, will become hot. Do not touch while in use.
4. When cooking is complete, turn control knob back to "OFF" position.

TIP: If the burner is not to be in use for a long period of time, it is highly recommended to unplug the unit from the outlet. This prevents any accidental burns or injury.

Cleaning Your Electric Burner or Hot Plate:

WARNING: Always unplug the product and allow it to cool before cleaning or storing it.

NOTICE: Never immerse burner, plug or cord in water or any other liquid.


- Use a damp towel or sponge to clean the surface of burner, the burner ring, the drip pan and the base.
- For easy cleaning of the drip pan, the heating element is designed so that one end can be lifted up. Wipe the drip pan a damp towel or sponge. Do not attempt to remove the entire heating element.
- Never use harsh abrasives or steel wool pads on any part of the unit.

NOTE: NEVER IMMERSE THE BURNER.



Electric Single Burners & Hot Plates

(TS-300, TS-320, TS-322, and TS-337)

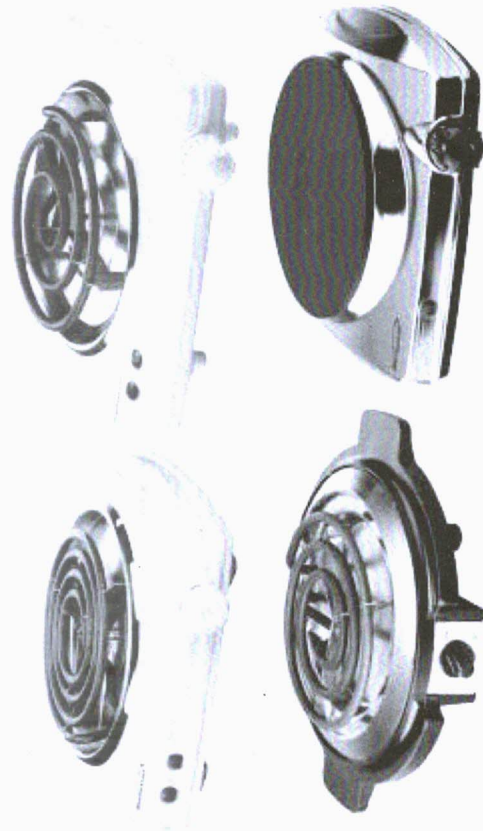

Operating and Safety Instructions

-FOR INDOOR HOUSEHOLD USE ONLY-

4. Lorsque la cuisson est terminée, tournez le bouton de commande à la position «OFF».
- CONSEIL:** Si le brûleur ne doit pas être utilisé pendant une longue période de temps, il est fortement recommandé de débrancher l'appareil de la prise. Cela empêche les brûlures accidentelles ou des blessures.

Nettoyage de Votre brûleur électrique ou une plaque chauffante:

AVERTISSEMENT:

avant de le nettoyer ou de le ranger.

AVIS: Ne jamais plonger brûleur, prise ou le cordon dans l'eau ou tout autre liquide.

1. Utilisez une serviette ou une éponge humide pour nettoyer la surface du brûleur, l'anneau du brûleur, la lèchefrite et la base.
2. Pour faciliter le nettoyage de la lèchefrite, l'élément de chauffage est conçu de telle sorte que l'une des extrémités peut être levée. Essuyez la lèchefrite une serviette ou une éponge humide. Ne pas tenter de retirer l'élément de chauffage.
3. Ne jamais utiliser de produits abrasifs ou de tampons de laine d'acier sur une partie quelconque de l'appareil.

REMARQUE: Ne plongez jamais le brûleur.