 
 


# User Manual

## PACKAGE COMPONENTS



Tent Body



Air Pump



12\*Stakes



8\*Guy Ropes

 


Awning poles\*2


- Please contact us if any accessories are missing.
- Please refer to the installation video on our product page to help you complete the installation process.
- If you have any questions, feel free to contact customer service.
- Amazon Contact: Log in to your Amazon account > select "Your Orders" > find the order ID > click "Contact Seller".


## INSTALLATION GUIDE

1. Spread out the tent completely, align the car connection section of the tent with the vehicle's rear, and secure the four corners with stakes.

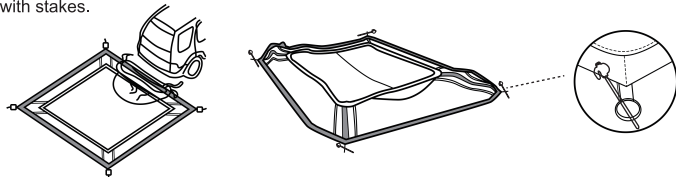


 2. Find the air inlet valve of the inflatable tent (located on the wall of the air columns). Unscrew the upper cap of the air inlet valve, connect the air pump hose to the inlet valve, and begin inflating the tent. Stop inflating when the pressure gauge on the air pump reads 7 psi. (Note: During the inflation process, if any air column is folded or twisted, make sure to straighten both the tent and the air columns to ensure proper inflation and support of the tent.)

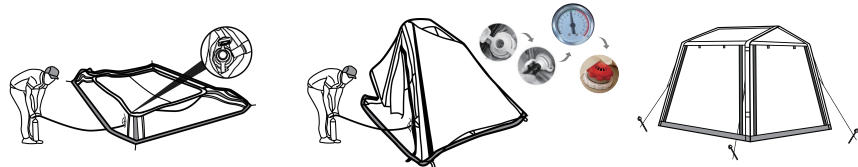


 **!! This Red pressure relief valve is designed to automatically release excess air to prevent over-inflation. Do not manually open this valve, as it may affect the proper function and safety of the tent.**

 3. Adjust the connection between the tent and the car's rear (it is recommended to open the trunk during installation), fix the webbing hooks onto the car in the order shown in the diagram, and then tighten the drawstrings.

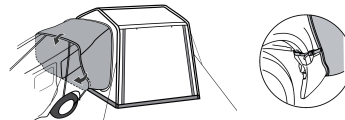

 4. Use the guy ropes and stakes to securely anchor the tent. With the additional Awning poles, the tent door can be easily opened, instantly transforming into a sunshade, providing more shade and ventilation, and enhancing your camping experience.

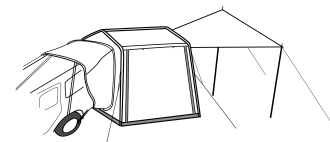

## HOW TO FOLD THE TENT

1. Open the doors and windows to allow air to escape. Unscrew the valve cap and release the air.
2. Fold the tent in half and roll it towards the valve, expelling the remaining air columns.
3. Roll up the folded tent, making sure its width is narrower than the length of the tent storage bag. Larger tents may not fit into the tent storage bag.
4. Securely roll the tent and fasten it with straps before placing it inside the tent storage bag.

## WARNING

Keep all flame and heat sources away from the tent fabric. To prevent carbon monoxide from entering the vehicle and tent area, do not run the engine, do not cook inside the tent, and do not use a gas heater in the tent. Carbon monoxide is dangerous to your health. Engine must be off and exhaust must be fully cooled before tent installation and use.

## CAUTION

- Never run the engine while the tent is installed.
- Do not refuel lanterns, stoves or heaters inside tent.
- Do not cook inside the tent.
- Do not store flammable liquids inside the tent.
- Never allow the vehicle engine to run while you are inside the tent.
- Do not install the tent when the outside temperature is less than 0°C/32°F as it may cause damage.
- Do not install the tent when your vehicle is wet as it may cause damage.
- Select a level site clear of rocks, branches, and other hard or sharp objects, to set up your tent.
- Position the vehicle in the desired campsite. Turn off the engine. Apply the parking brake.