


Holiday Decor Assembly Instructions

The model number of your item is printed on the side of your carton.

Always use this number to identify your item.

Thank you for your purchase of this quality holiday decor. With proper use and care, your holiday decor will provide you with years of enjoyment. Please follow the instructions on how to assemble and disassemble your item. If you should have any problems with your item, or you have any questions, DO NOT return it to the place of purchase. Please call our toll-free number: 1-855-591-7451 and a customer service representative will assist you. Enjoy your Holiday!

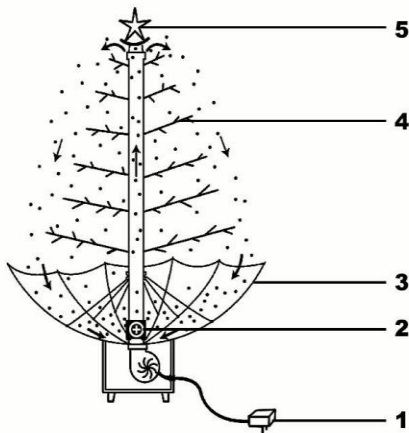

No.	Description	Quantity
1	Transformer	1
2	Fixing screw	1
3	Umbrella-shaped base	1 set
4	Christmas tree	1
5	Top star for the tree	1
6	Decorations	1 set
7	Christmas lamps	1 string
8	Snowflakes	1 bag

1) Installation

- Take out the umbrella-shaped base, and unfold it. Connect transformer plug with the socket on the bottom.
- Take out the Christmas tree and insert the tree pipe into the support of umbrella-shaped base, turn the pipe so that both holes are fully aligned, then fasten it with a screw.
- Unfold tree branches and arrange them to your desired shape.
- Take out the top star. Fit it on the pipe of the tree top and insert the plug into the No.1 socket in the base. Note: The top must be set square in the center, to avoid snowflakes spraying out.
- Decorate the Christmas tree with the lamp string and insert the plug into the No.2 socket in the base, and coil the string around the tree branches properly.
- Arrange the ornaments on the branches properly to avoid them falling into the container and blocking the flow of snowflakes.



2) Functionality test

- All the above instructions must be completed.
- Clean off all foreign matter in the umbrella-shaped container, to avoid the blocking the flow of snowflakes.
- Set the switch at OFF and connect the transformer with power source.
- Put a small amount of snowflakes at the bottom of the snow container, and turn on the switch to observe if flakes spout out from the top of the tree. Check that the music and lamps function properly. If there are any issues, check the wiring again.

3) Pour in the flakes


- Turn off the switch.
- Pour the snowflakes into the umbrella-shaped base and let it distribute evenly in it. It is suggested to keep an appropriate amount for use later.

4) Completion of assembly

- Turn on the switch, you will see snowflakes spouting from the top of the tree, the lamps flashing and music starting. Now all assembling has been completed.

5) Adjust and enjoy

- Adjust the wind switch to get appropriate wind for best snow flying effect, and to also avoid flakes flying out of the container.
- Music can be controlled by the switch and can be turned off when not needed:
 - I –Music turned off and other functions are normal
 - II–Music turned on and all functions are normal
- Lights can be controlled by pressing the button to 3 different settings, described below.
 - I –Steady
 - II–Twinkle
 - III–Off

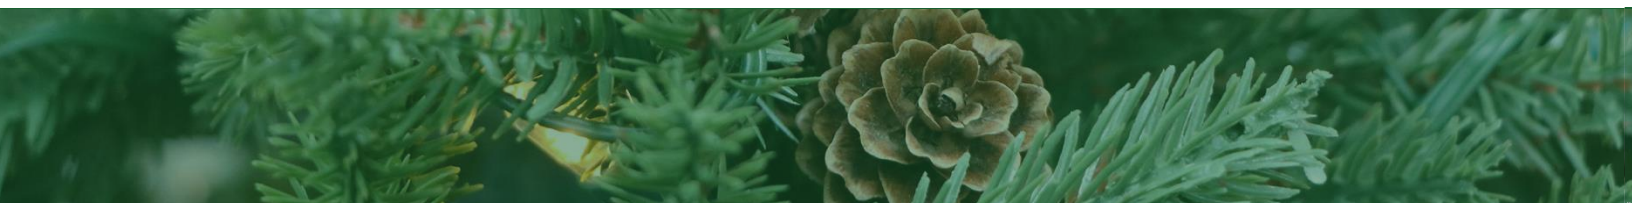

IMPORTANT SAFETY INSTRUCTIONS



Warnings

- 1) This product is for indoor use only. Do not place in direct sunlight.
- 2) This product is for decoration only and is not a toy. Please use caution with children under the age of 8.
- 3) Do not position the decoration near candles, sources of heat, or in direct sunlight.
- 4) The decoration cannot be connected to the power supply directly.
- 5) Do not break, cut, or alter the power cable.
- 6) Do not attempt to repair the wiring with staples or nails.
- 7) Do not place the cable under a carpet or rug as it may get damaged.
- 8) Ensure that the cable is in a secure location where it is not a hazard.
- 9) Do not connect the decoration to the power supply while it is still in the packaging.
- 10) Please switch off the transformer when not in use.
- 11) Do not leave electric decoration unattended while operating in the ON position.
- 12) Do not over load the transformer.
- 13) Decoration should be on a level, stable surface to prevent it from falling over
- 14) This product is fragile and should be assembled with care.
- 15) The product is for indoor use only and is not suitable for outdoor or any location with drafts.
- 16) Please follow the below steps and requirements specified in the instruction to ensure safety and reliability during the installation.
- 17) Use caution with children under the age of 8. Children should keep a safe distance to avoid inhaling snow particles and possible suffocation.

Storage tips: We suggest saving the carton for storing your figurine. Store in a cool, dry area where the temperature does not exceed 100°F.

Holiday Products

1-Year Limited Warranty

"Limited" Warranty Program

For a period of one (1) year after purchase, Fraser Hill Farm ("Manufacturer") will either repair or replace defective components in accordance with this Limited Warranty.

Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold "as is" or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items may be charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer's option.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER HANOVER, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

1-855-591-7451

Holiday@FraserHillFarm.com