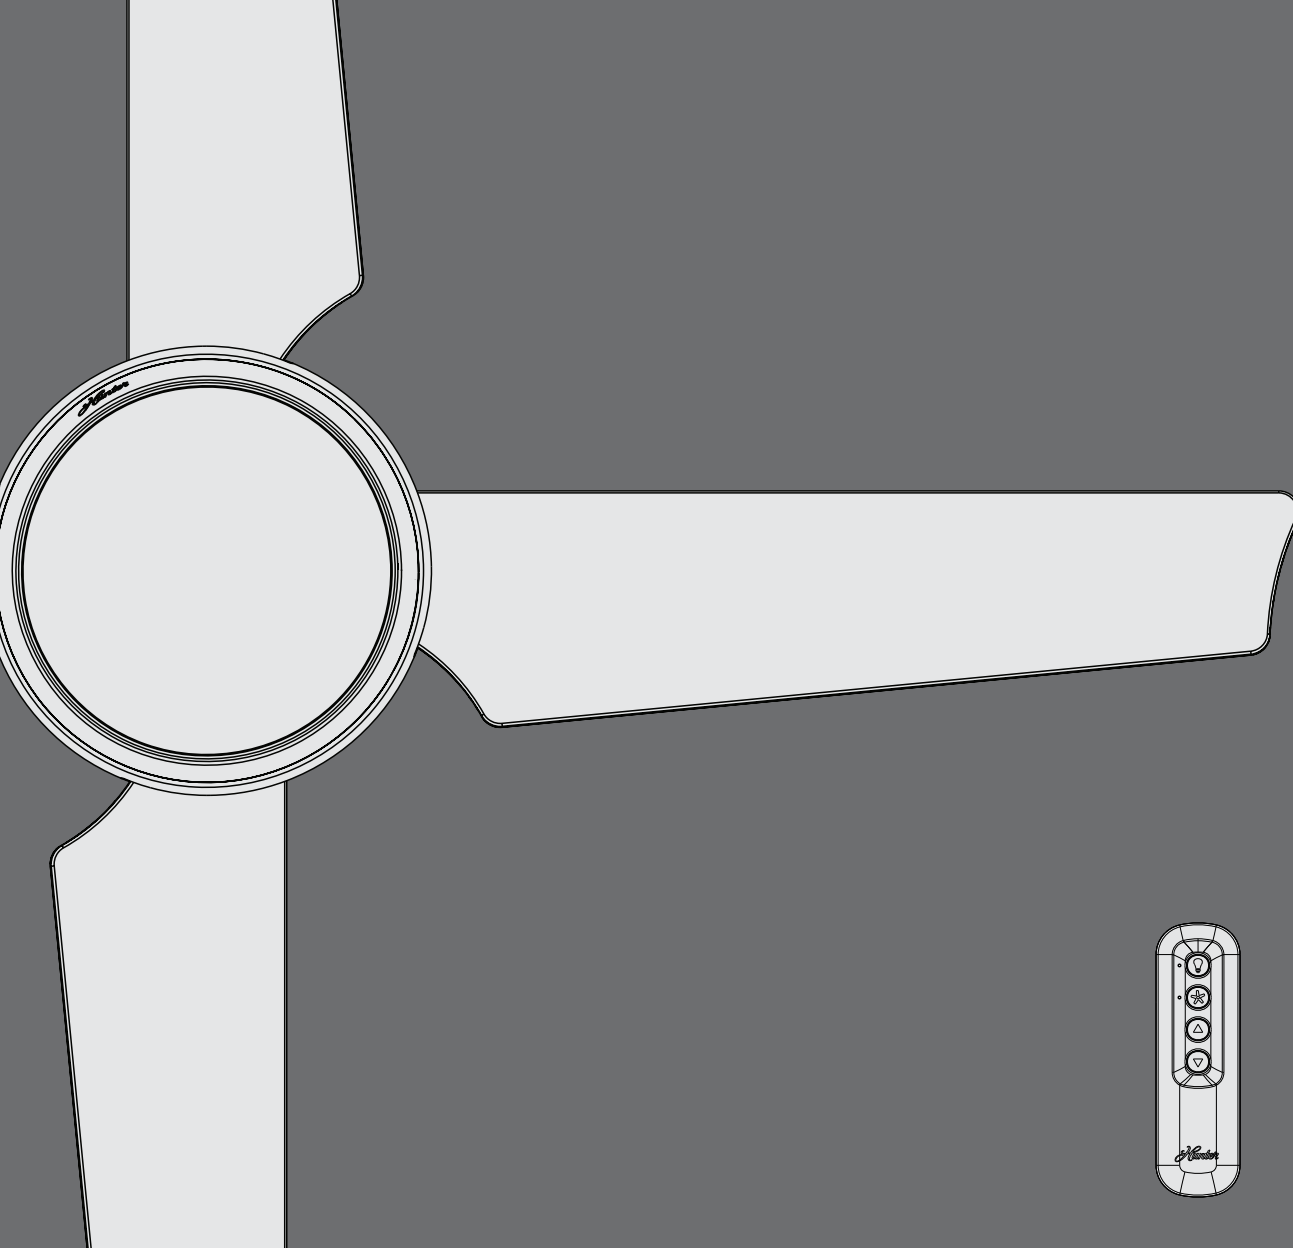














Hunter®


ENGLISH

Important Instructions: Keep Instructions for future use

Congratulations on purchasing your new Hunter® ceiling fan! It will provide comfort and performance in your home or office for many years. This installation and operation manual contains complete instructions for installing and operating your fan.


We are proud of our work and appreciate the opportunity to supply you with the best ceiling fan available anywhere in the world.

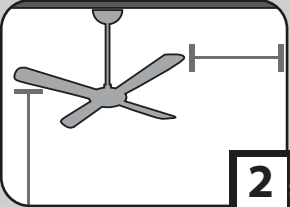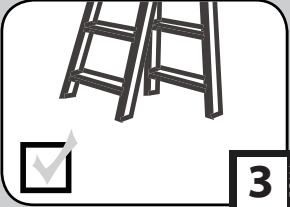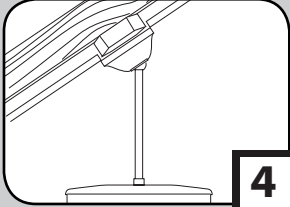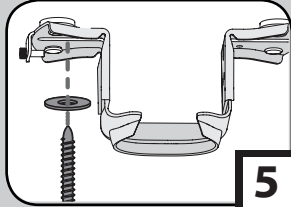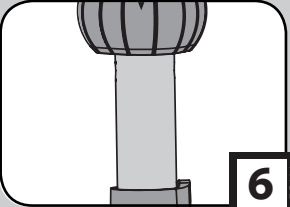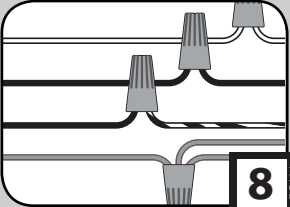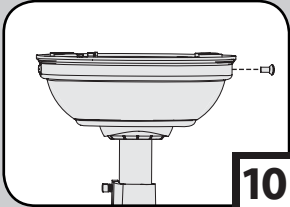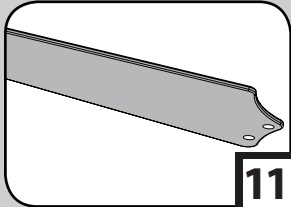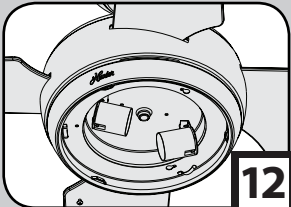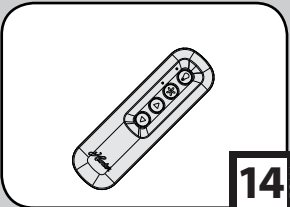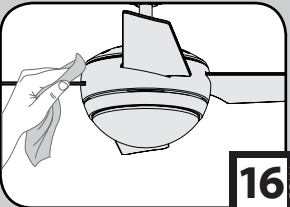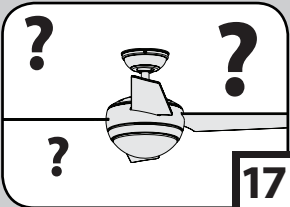What to Expect with Your Installation  2 PAGE	Tools Needed  3 PAGE	Mounting Options  4 PAGE	Ceiling Bracket  5 PAGE
Downrod  6 PAGE	Wiring  8 PAGE	Canopy  10 PAGE	Blades  11 PAGE
Light Kit  12 PAGE	Remote Control  14 PAGE	Operation, Maintenance, & Cleaning  16 PAGE	Troubleshooting  17 PAGE
			Warranty Statement  18 PAGE

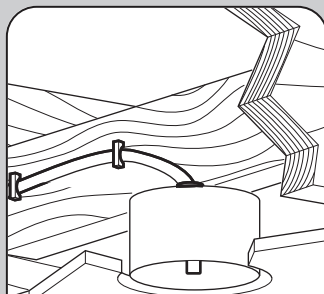


Must be able to secure the fan to building structure or fan-rated outlet box. **Do not** use a plastic outlet box.

If you are unfamiliar with wiring, use a qualified electrician.

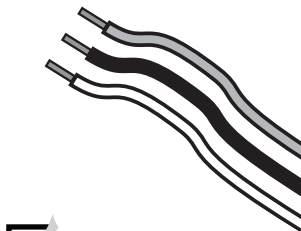

Know your wiring

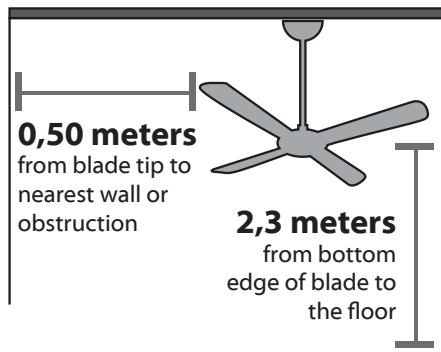

Assess location

You may need a friend to help you.



Check box to see fan weight

1 Standard Downrod
for ceilings 2,4 -3 meters high

2 Shorter Downrod
for fans installed close to ceiling

3 Longer Downrod
for ceilings 3 meters or higher

Select a downrod length



Use **ONLY** Hunter Ceiling Fan branded accessory light kits.

⚠ WARNINGS

w.1 - To reduce the risk of fire, electrical shock, or personal injury, mount fan directly from building structure and/or an outlet box marked acceptable for fan support of 31.8 kg and use the mounting screws provided with the outlet box.

w.2 - To avoid possible electrical shock, before installing or servicing your fan, disconnect the power by turning off the circuit breakers to the outlet box and associated wall switch location. If you cannot lock the circuit breakers in the off position, securely fasten a prominent warning device, such as a tag, to the service panel.

w.3 - To reduce the risk of fire, electrical shock, or motor damage, use only Hunter Solid State Speed Controls.

w.4 - To reduce the risk of personal injury, do not bend the blade brackets when installing the blade brackets, balancing the blades, or cleaning the fan. Do not insert foreign objects in between rotating fan blades.

w.5 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or people with a lack of experience and knowledge, unless they have received instructions regarding the use of the device or under the supervision of a person responsible for their safety.

w.6 - It is recommended that children be supervised to ensure that they are not using the appliance improperly

⚠ CAUTIONS

c.1 - All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, use a qualified electrician.

 
c.2 - Use only Hunter replacement parts.




Tools Needed




☒ Ladder




☒ Pliers

 

☒ Wire Strippers

 

☒ Screwdrivers

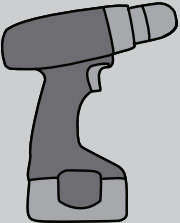


☐ Power Drill
(optional)



☐ 3.5 mm Drill Bit
(optional)



 
☐ 8 mm Drill Bit
(optional)



☐ Hammer
(optional)

If mounting to a support structure, you will also need these tools.


Mounting Options

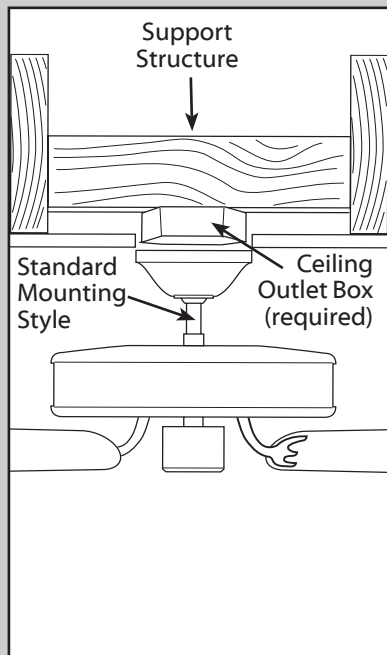

If you have a flat ceiling:

Hang your fan by a standard downrod (*included*) or use a shorter downrod (*sold separately*) for Low-Profile Mounting.

Carefully choose the installation location that allows for optimal air flow.

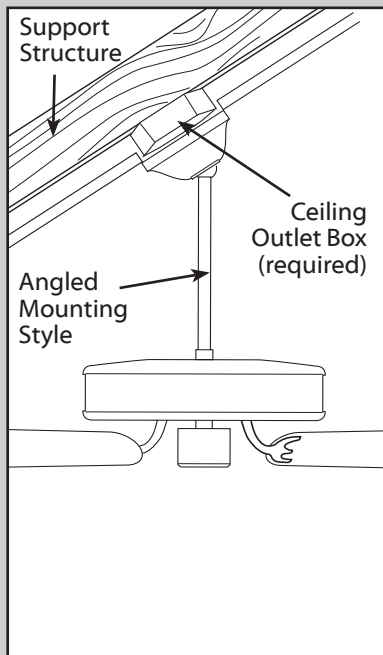



If you have an angled ceiling:

You will need a longer downrod (*sold separately*) to hang the fan from a vaulted or angled ceiling.

Note: Do not hang the fan from a ceiling that is angled greater than 34°


Ceiling Bracket

www.hunterfan.com.br

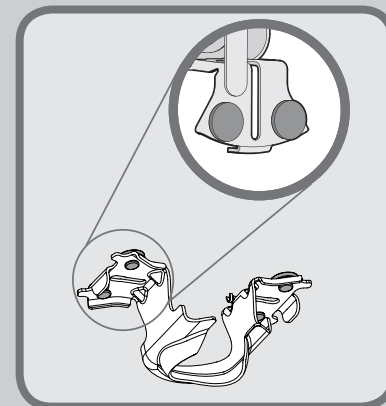
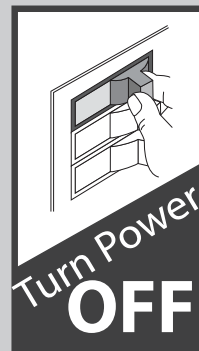


Make sure all four (4) bumpers are still attached.

For angled ceilings, point opening toward peak.

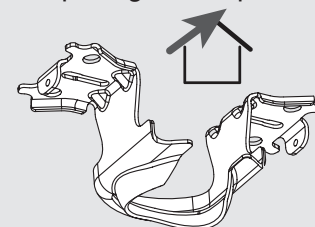

The support structure must be able to support 5 times the weight of the fan. The weight of the fan is located on the product packaging.

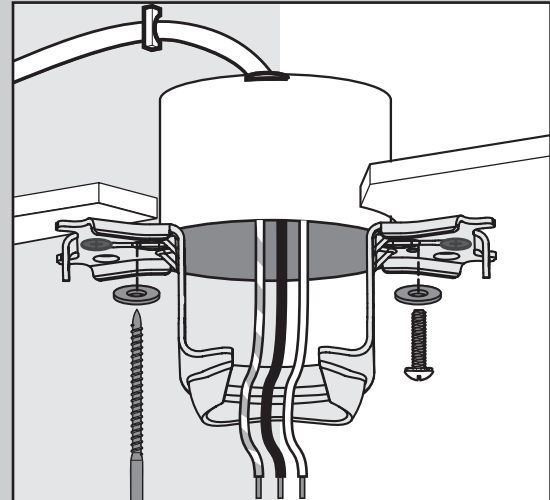
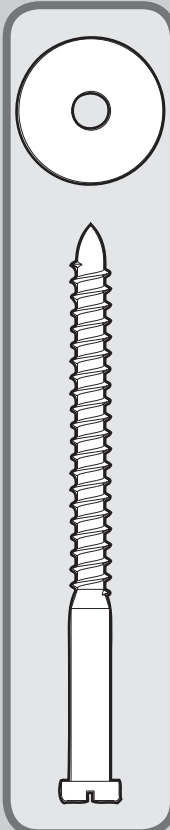


Use wood screws
(included) when securing to support structure with approved electrical outlet box. Drill 3.5 mm pilot holes in support structure to aid in securing ceiling bracket with hardware found in the ★ hardware bag.




Use machine screws
(provided with outlet box) when securing to existing ceiling fan-rated outlet box. Make sure it is securely installed and is acceptable for fan support of 31.8 kg or less.

Note: Do not mount ceiling fan to a plastic outlet box.

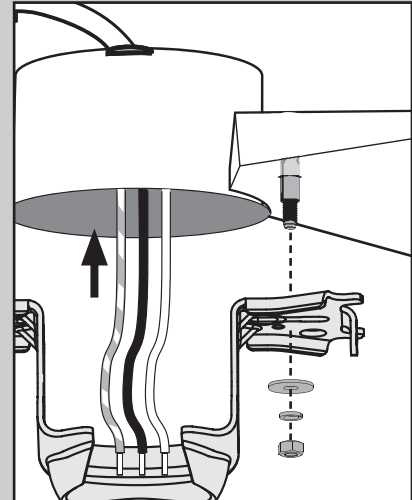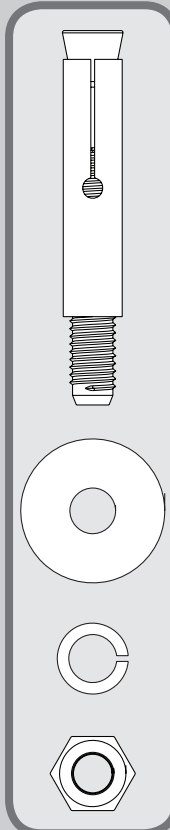

Use concrete anchors (included) when securing to support structure with approved outlet box in a concrete ceiling. Drill 8 mm pilot holes in support structure. Hammer the M6 expansion anchors into the holes until the ends are flush with the ceiling. Install the washer, isolator, and nut found in the ★ hardware bag to the expansion anchors.

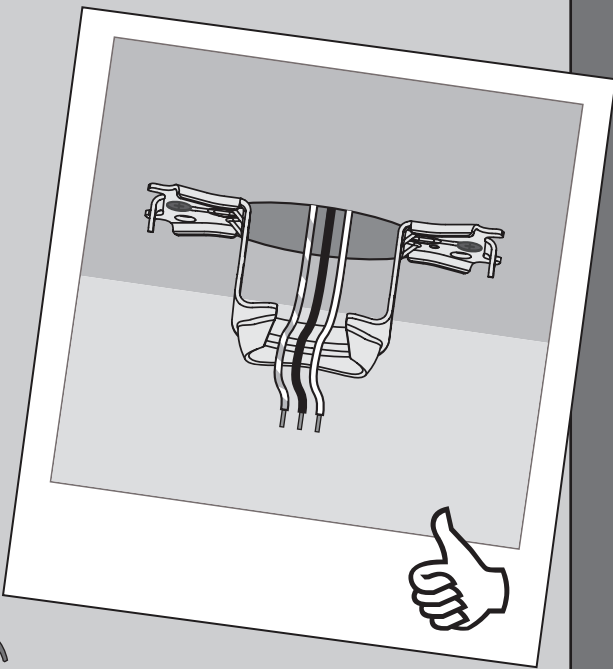


To avoid possible electrical shock, before installing your fan, disconnect the power by turning off the circuit breakers to the outlet box associated with the wall switch location.


Refer to warning w.1 on pg. 2

Option 1

Standard Downrod
for ceilings 2,4-3 m high

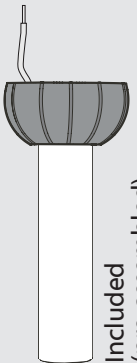

Included
(pre-assembled)

 


skip to next page

Option 2


Longer Downrod
for angled ceilings or ceilings 3 m or higher



 
Sold Separately




If you need a longer downrod, follow the steps in the “Instructions for Installing a Longer Downrod” manual included with your fan.

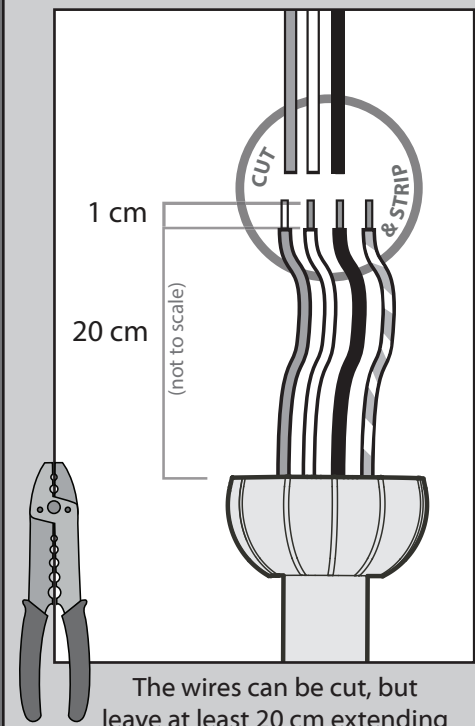



The wires can be cut, but leave at least 20 cm extending from the top of the downrod.

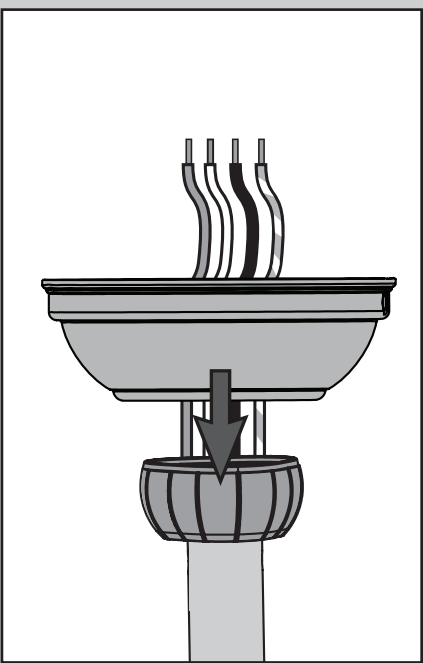

Put the wires and downrod through the canopy. Let the canopy sit loosely on top of the fan.

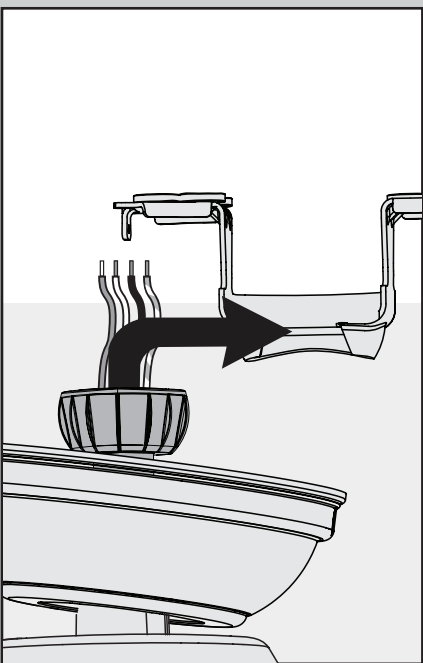


 DO NOT PICK THE FAN UP BY THE CANOPY OR WIRES. Place the downrod ball into the slot in the ceiling bracket.

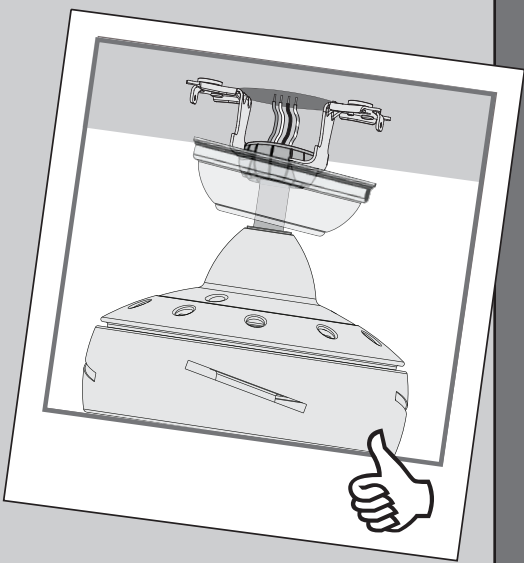





Note: To connect the wires, hold the bare metal leads together and place a wire connector over them, then twist clockwise until tight.

Refer to CAUTION c.1 on pg. 2

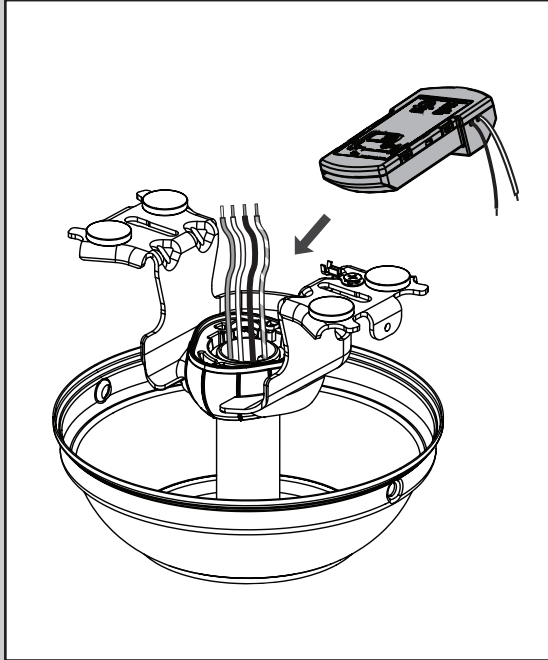

Place the receiver on top of the downrod assembly as shown.


Using an orange wire connector from the ★ hardware bag, connect the 4 grounding wires (green, green/yellow stripe, or bare copper) coming from the ceiling (A), downrod (B), fan (C), and hanging bracket (D).

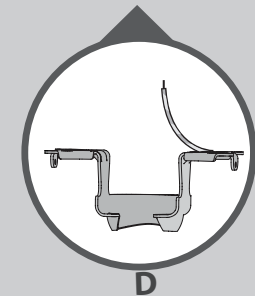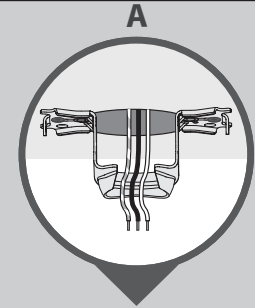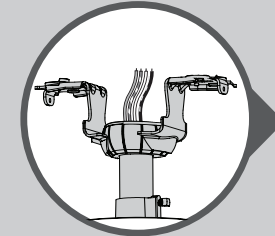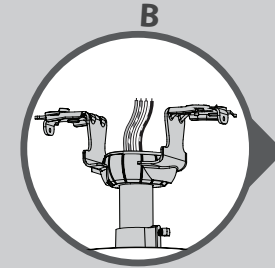



Turn the splices upward and push them carefully back through the hanger bracket into the outlet box. Spread the wires apart, with the grounded wires on one side of the outlet box and the ungrounded wires on the other side of the outlet box.




Note: To connect the wires, hold the bare metal leads together and place a wire connector over them, then twist clockwise until tight.

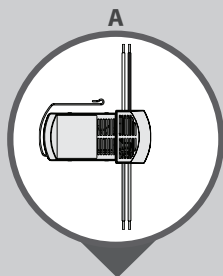




Using the orange wire connectors from the remote control hardware bag, connect the black with white stripe wire (1) from the receiver (A) to the black with white stripe wire (2) from the fan (B). Connect the yellow wire (3) from the receiver (A) to the brown wire (4) from the fan (B).

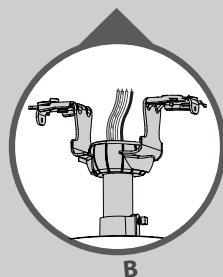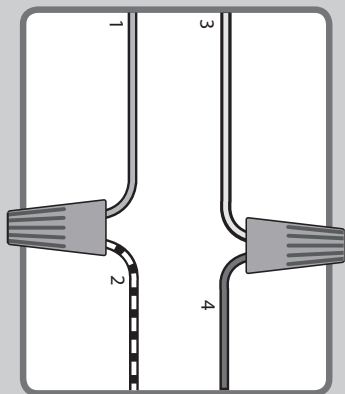

Turn the splices upward and push them carefully back through the hanger bracket into the outlet box. Spread the wires apart, with the grounded wires on one side of the outlet box and the ungrounded wires on the other side of the outlet box.

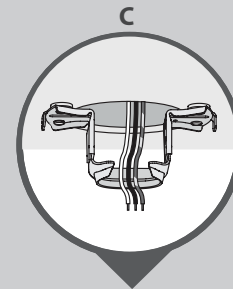


Using the orange wire connectors from the ★ hardware bag, connect the brown wire (5) (ungrounded) from the ceiling (C) to the brown wire (6) from the receiver (A). Connect the blue wire (7) from the ceiling (C) to both the blue wire (8) from the receiver (A) and the blue wire (9) from the fan (B).

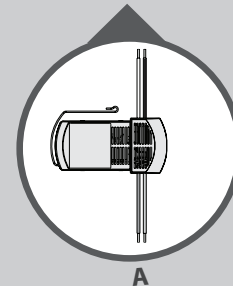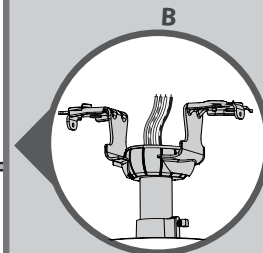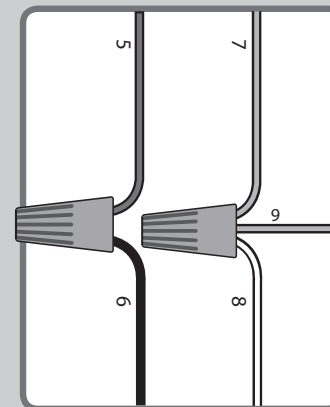


Refer to CAUTION c.1 on pg. 2




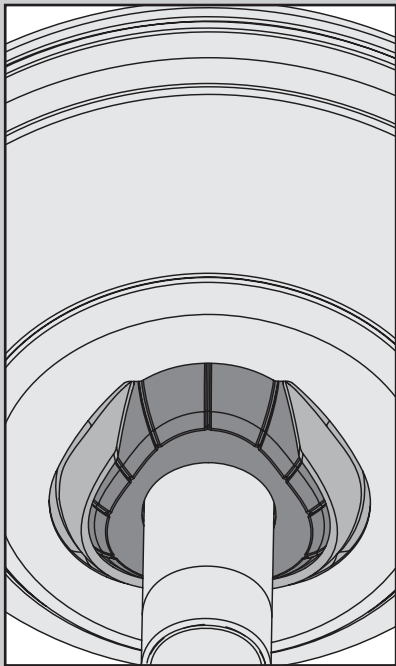


Position the canopy so that, when lifted into place, the canopy fits into the hanging bracket as shown.

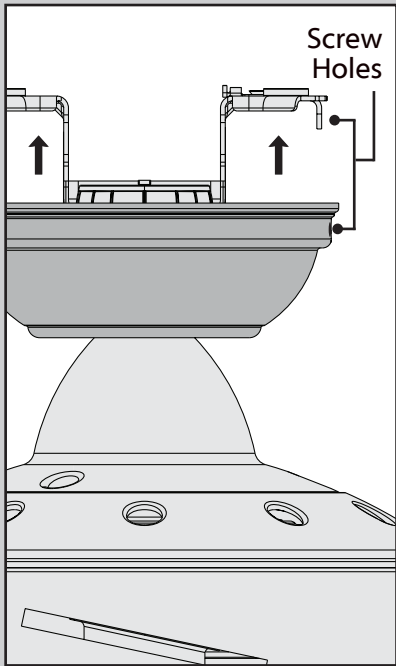


Lift the canopy into place so that the screw holes are aligned.

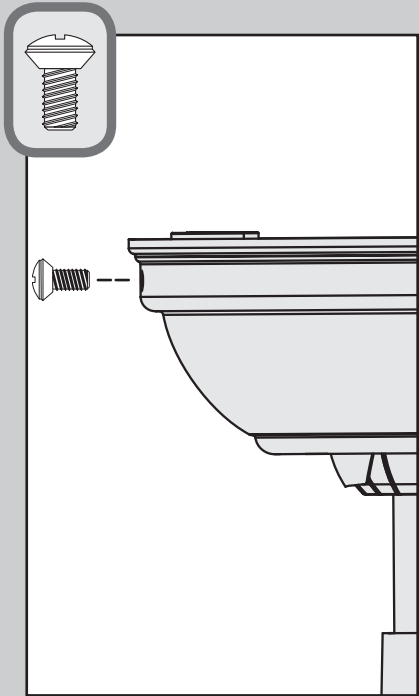


Insert the two canopy screws found in the ● hardware bag.

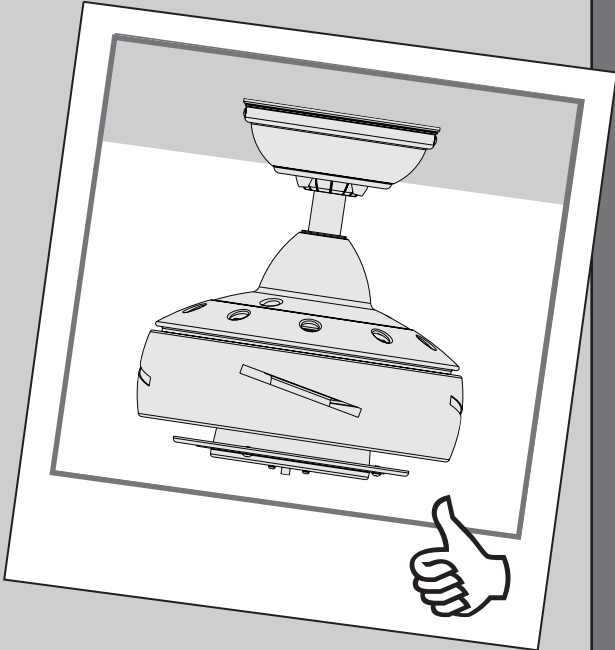


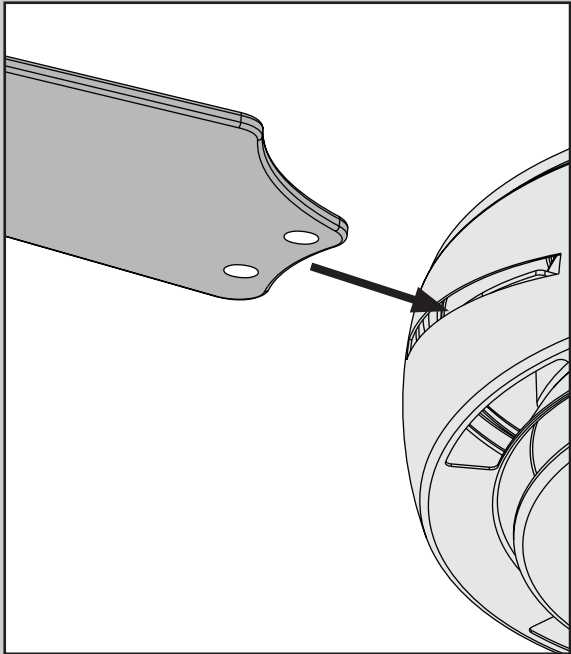


Insert a blade into the motor housing.

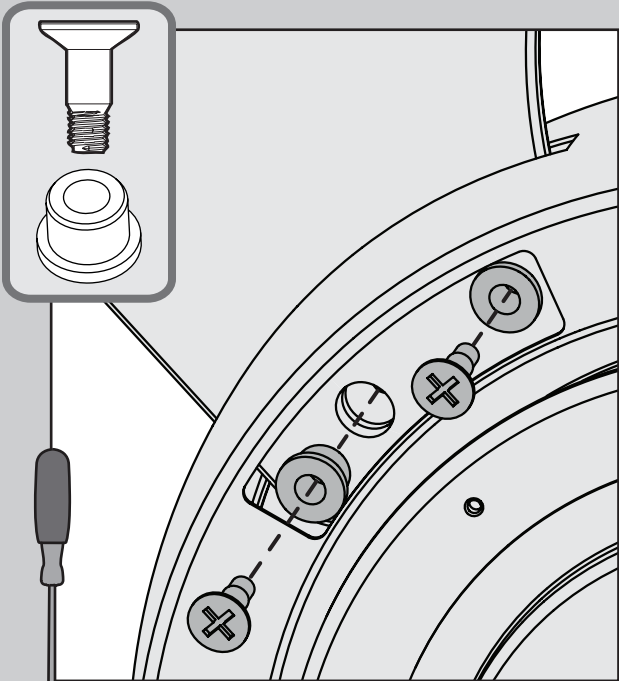


⊗ Attach each blade to the fan using two blade grommets, found in the ■ hardware bag, and two blade assembly screws, found in the ▲ hardware bag.

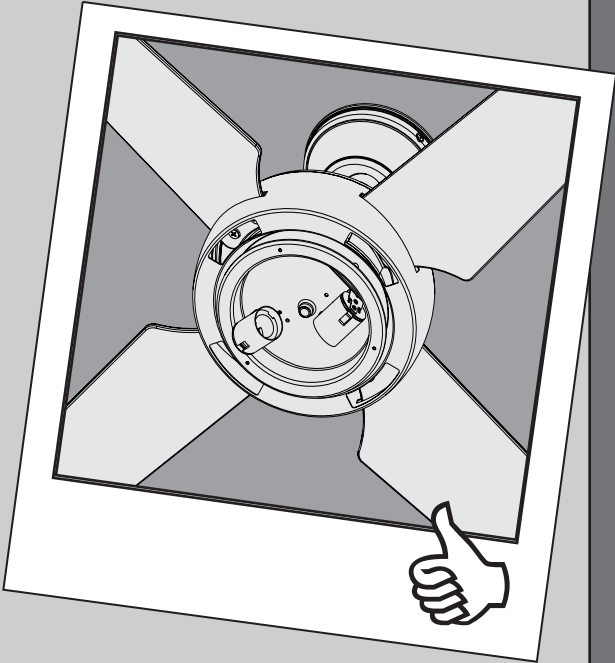


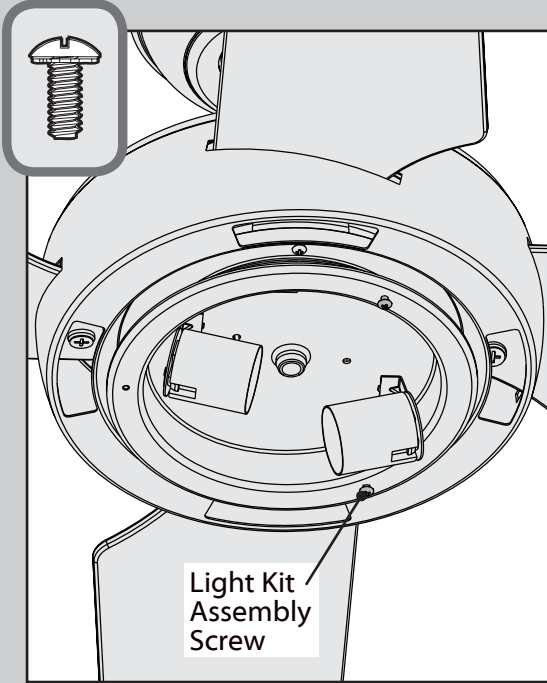

Partially install two of the light kit assembly screws, found in the  hardware bag.

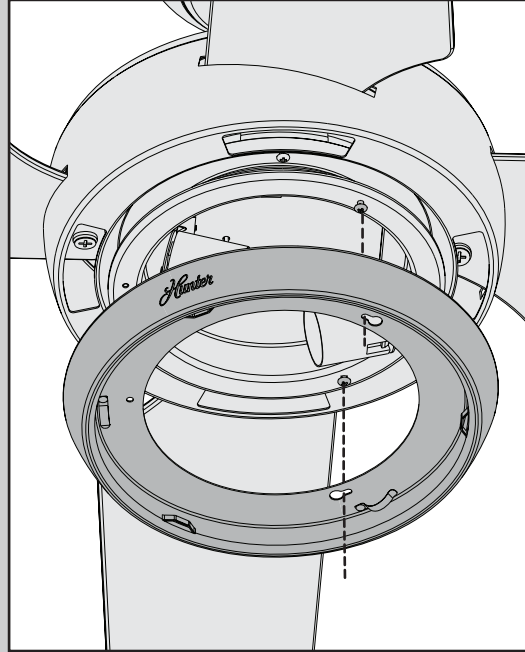


Align the keyholes in the light kit ring with the partially installed screws. Lift the light kit ring in place and rotate clockwise to situate the screws in the narrow ends of the keyholes.

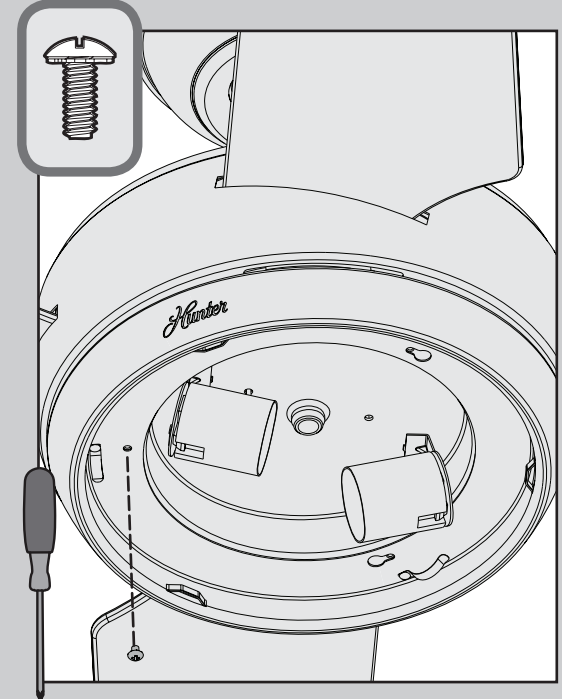


Install the third switch housing screw. Tighten all three screws securely.

Make sure the light kit ring is securely attached. Failure to properly secure all three assembly screws could result in the light fixture falling.



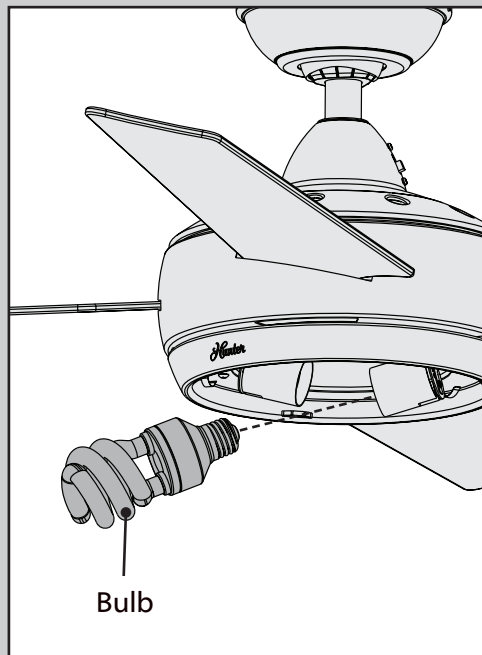


Install a 20W CFL bulb (sold separately) into each of the E27 sockets. When necessary, replace with bulbs of same wattage.


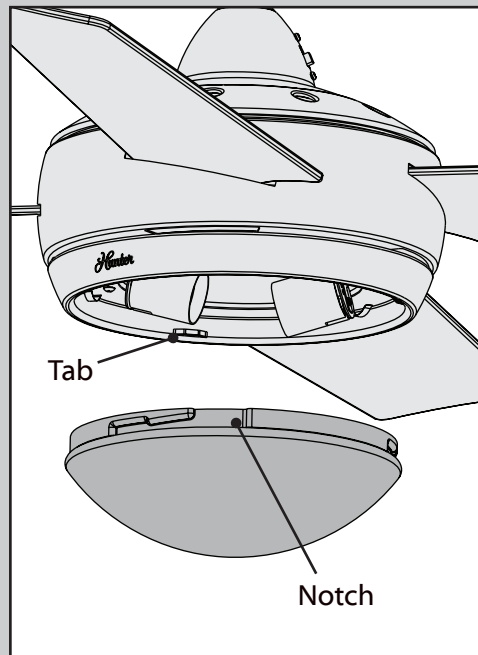


Align the notches in the glass bowl with the tabs in the light kit. Attach the glass bowl to the light kit by twisting it clockwise until it snaps into place.



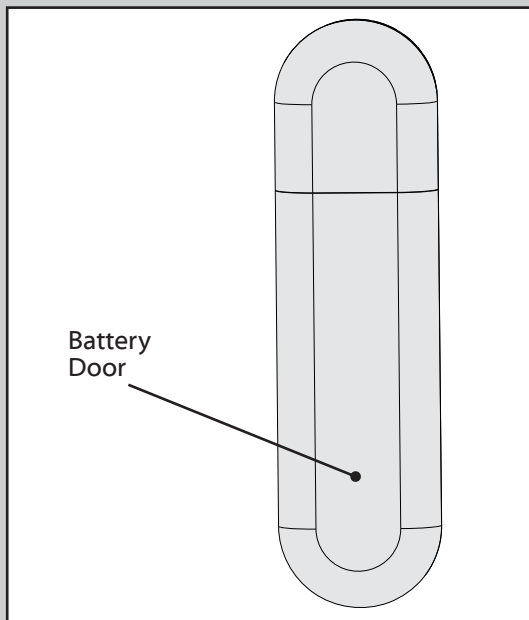

To access the battery compartment, remove the battery door from the transmitter assembly. The battery should be installed with the positive (+) side up. Replace with a CR2032 battery when necessary.

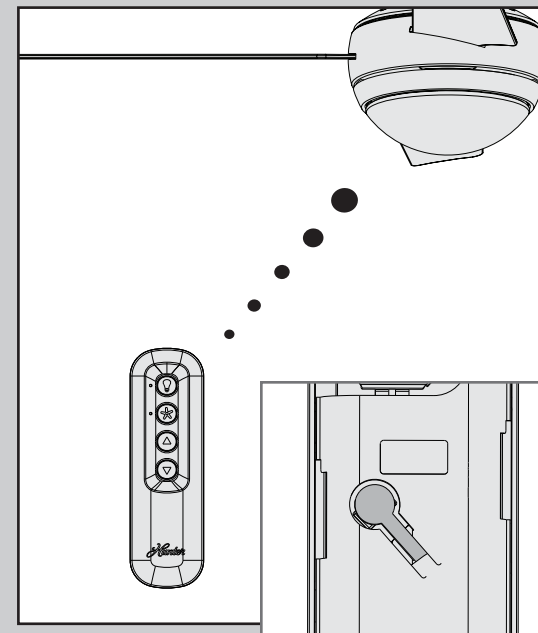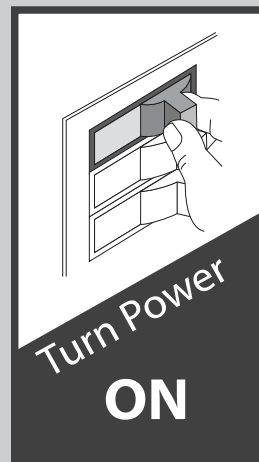


The remote transmitter is already paired to the receiver and ready to use.

Note: If your need to pair your remote, remove the battery door. Cycle power to the fan by turning power off and back on at the wall switch (or circuit breaker if necessary). Within three minutes, press the pair button on the remote. If pairing was successful, a single beep will sound. If three beeps sound, the remote was unpaired. Re-pair using the steps above.


To prevent faulty operation, please disconnect power from all other ceiling fans within range while pairing.

You have two options to install the included remote control cradle to the wall. Choose which path works best for you.

Option 1: Using Screws

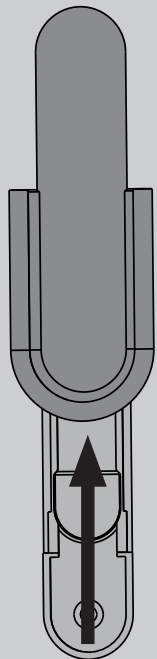

Remove the cradle from the cradle bracket.

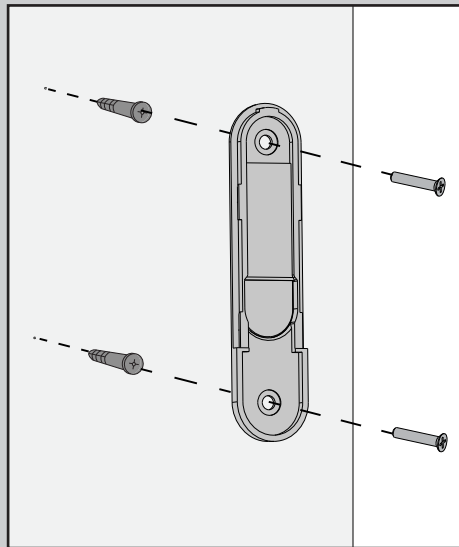

Choose your cradle installation location.


If you are installing into drywall, drill two 9/64 width holes using the cradle bracket as a guide. Gently hammer the included drywall anchors into the pre-drilled holes.

Install the cradle bracket to the wall with the included screws.


Option 2: Using Adhesive Strip




Apply the adhesive sticker to the back of cradle bracket per the instructions on the adhesive sticker.

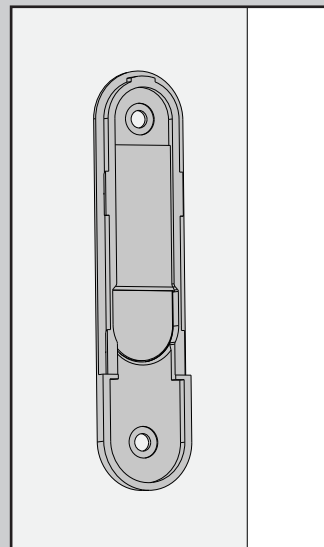

Press the cradle bracket against the wall and hold firmly for 30 seconds.

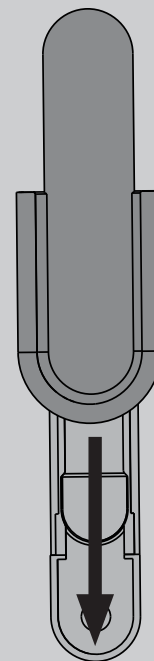

Slide the cradle onto the mounted bracket.

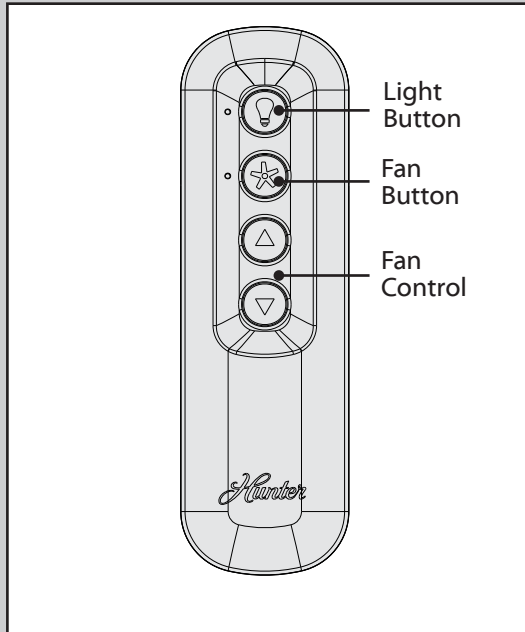


Fan Operation:


Press and quickly release the fan button on the remote control to turn the fan OFF or ON. Use the fan control directional pad to raise or lower the fan to the desired speed. Press and hold the fan button to reverse the fan direction.

Light Operation (for fans with a light kit):


Press and quickly release the light button on the remote control to turn the light OFF or ON. Press and hold the light button for continuous dim.

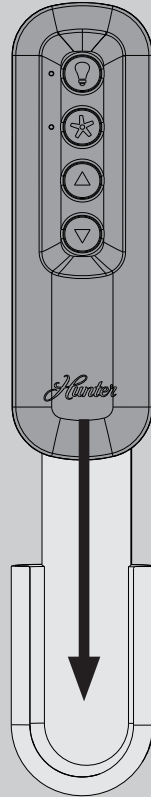

Slide the remote into the cradle when not in use.

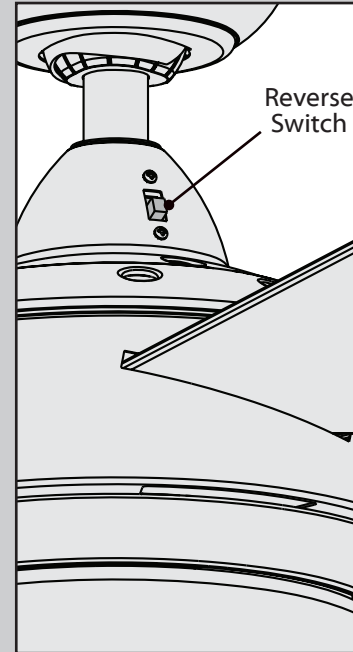

To switch the direction of air flow, move the reverse switch to the opposite position.

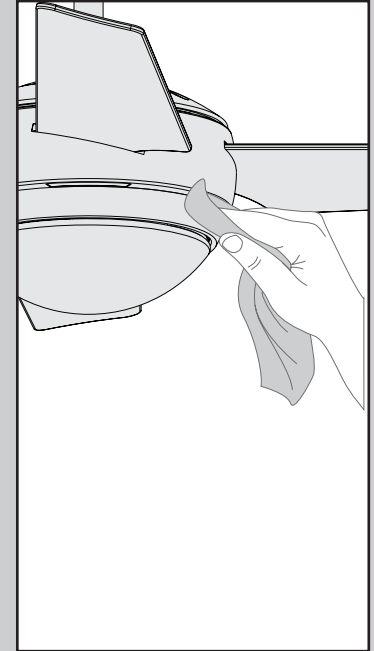

For cleaning the fan, use soft brushes or cloths to prevent scratching. Cleaning products may damage the finishes.

Fan doesn't work

- Make sure power switch is on.
- Push the motor reversing switch firmly left or right to ensure that it is engaged.
- Check the circuit breaker to ensure the power is turned on.
- Make sure the blades spin freely.
- Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram.
- Check the plug connection in the switch housing.

Excessive wobbling

- Tighten all of the blade and blade iron screws until they are snug.
- Turn the power off, support the fan carefully, and check that the hanger ball is properly seated.

Noisy Operation

- Tighten the blade and blade iron screws until they are snug.
- Check to see if any of the blades are cracked. If so, replace all of the blades.

Lights dim when turned on or do not turn on at all.

- Make sure the wattage of the light bulbs installed matches the specifications on the light sockets.

Remote control of fan is erratic

- Make sure the battery is installed correctly.
- Install a fresh battery.

Transmitter only works when held at close range

- Install a fresh battery.

WARRANTY STATEMENT

I - TERM AND PROOF OF WARRANTY

- Hunter Ceiling Fans are warranted by Hunter Fan do Brasil for a period of **1 (one) year** from the date of purchase by the first consumer, this being:
 - 3 (three) months of statutory warranty; and
 - 9 (nine) months of contractual warranty provided by Hunter Fan do Brasil.
- In order to demonstrate proof of the warranty period, the consumer must present this Warranty Statement, duly completed, together with the 1st. (first) copy of the bill of sale (or equivalent fiscal document identifying the product), in the manner and at the location described in Section V below.

It is therefore necessary to ensure that the retailer completes the bill of sale correctly.

II - EXTENDED WARRANTY

- As evidence of the high quality of Hunter Ceiling Fans, Hunter Fan do Brasil offers an Extended Warranty free of charge for:

- Three (3) years on the product**, counted from the date of purchase by the first consumer, this being:
 - 3 (three) months of statutory warranty; and
 - 33 (thirty three) months of contractual warranty provided by Hunter Fan do Brasil.
 - 10 (ten) years limited warranty on possible defects with the product motor**, counted from the date of purchase by the first consumer, this being:
 - 3 (three) months of statutory warranty; and
 - 117 (one hundred and seventeen) months of contractual warranty provided by Hunter Fan do Brasil.
- The Extended Warranty shall only be offered if the consumer registers the installation of the product on the Hunter Fan do Brasil internet site (www.hunterfan.com.br) and correctly complete all required fields, including the date of issue of the 1st (first) copy of the bill of sale (or equivalent tax document) and details of the "Certified Hunter Installer Certification Code" (*).
 - The Extended Warranty **DOES NOT COVER** the following parts:
 - Capacitors;
 - Fan blades and blade irons;
 - Glass fixtures and parts thereof;
 - Controls and remote controls;
 - Ceiling fan mounting system.

*The "Certified Hunter Installer Certification Code" will be provided by the "Certified Hunter Installer" at the time that the product is installed.

- You can locate a "Certified Installer Hunter" near your residence at the Hunter Fan do Brasil internet site (www.hunterfan.com.br) or at Hunter Ceiling Fan retail outlets.**
- Installation costs charged by a Certified Installer Hunter are not included in the price of the product.**

III - SCOPE OF THE WARRANTY

- This contractual warranty is provided for a Hunter Ceiling Fan acquired in Brazilian territory and is offered exclusively against any defects arising from the design and manufacture, or any other defects in quality, that render the product unfit or unsuitable for normal use.
- The Contractual Warranty and the Extended Warranty do not cover product accessories, including controls, remote controls, fan blades, blade holders, glass lamps and bulbs.
- Any extended warranty that may be contracted by the consumer does not place any obligation on Hunter Fan do Brasil, since such a contract is executed between the consumer and the insurer.

IV - WARRANTY EXCLUSIONS

- The warranty **does not cover** the following items, which are therefore the consumer's responsibility:
 - damage to the product or its accessories due to accident, abuse, or improper and incorrect handling;
 - damage to the product as a result of its use for purposes other than those specified by Hunter Fan do Brasil, or that are incompatible with the purpose of the product;
 - improper installation, or installation on a structure that is not suitable to support the product, or that exposes an electrical product to adverse conditions;
 - defects in the electrical parts of the product caused by deficiencies in external wiring or caused by the local electrical supply company.
 - damages resulting from accidents during transportation and storage or due to mishandling.

V - PROCEDURE FOR WARRANTY CLAIMS

- Warranty repairs shall only be performed by an Authorized Service Center appointed by Hunter Fan do Brasil, which provides specialized technicians and original parts, guaranteeing the service provided.
- A list of Authorized Service Centers can be found at the Hunter Fan do Brasil internet site: www.hunterfan.com.br.
- The cost of transporting the product to the Authorized Service Center, regardless of the reason, shall be borne by the consumer.

VI - RESCISSION OF THE WARRANTY

- Repair of a product by unauthorized persons or repair services that are not accredited by Hunter Fan do Brasil shall immediately rescind the warranty.
- Hunter Ceiling Fans are solely and exclusively designed for domestic use. Their use in non-domestic, industrial or commercial applications shall signify immediate rescission of the warranty.

VII - EXCLUSIONS FROM THE WARRANTY

- This warranty **DOES NOT COVER**:

- light bulbs;
 - the cost of installing the product;
 - calls related to information that is contained in the Owner's Manual, or is shown on the product itself. These service calls shall be charged if they occur;
 - damage to plastic parts;
 - implicit warranties - This warranty replaces all other warranties, implicit or implied, and no representative or third party is authorized to assume any other obligation relating to the sale of Hunter ventilators on behalf of Hunter Fan do Brasil.
- Hunter Fan do Brasil shall not be liable for any direct, indirect or consequential damages resulting from the use or performance of the product, nor other losses relating to material damage or pecuniary losses due to non-compliance with the instructions in the Owner's Manual.

VIII - SPECIAL RECOMMENDATIONS

- Before operating the product, **carefully read the operating instructions and/or installation instructions shown on the product, the packaging, or contained in the respective manual. Follow them closely. They are provided for your safety.**
- Make sure that the voltage to be used is the same as that shown on the appliance (127 V or 220 V). Ensure that the electrical installation at the location is correct and in perfect order, and also that the electrical frequency is correct for the country in which the product is being used.
- In order to avoid damage, keep the product clean and properly stored in an environment protected from the weather (rain, wind, humidity, solar radiation, etc.).
- Do not insert any foreign objects into the product, especially when it is in operation, in order to avoid accidents.

IX - MANUFACTURER, IMPORTER AND PRODUCT INFORMATION

Manufacturer: Hunter Fan Company
 Importer: Hunter Fan do Brasil Ltda.
 011.2985.7454
 CNPJ: 20.089.903/0001-06
contatobrasil@hunterfan.com
 Product Model:
 Lot:
 Certified Installer Installation Code:
 Consumer:
 Personal Tax Number ("CPF"):
 Place of purchase:
 Date of Purchase:
 Bill of Sale or Tax Invoice Number: