

Assembly Instructions

Caution : You must read this before you proceed


Care & Maintenance

- ⊘  ● Not for commercial use. For residential use only.
- ✓  ● Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  ● Do not put hot items directly on furniture surface.
- ⊘  ● Do not clean furniture with harsh cleansers or polish.
- ⊘  ● Do not place furniture under direct sunlight.
- ⊘  ● Do not place furniture near heating or cooling vents.
- ⊘  ● Do not write on furniture without a padded barrier to protect the surface.
- ⊘  ● Do not place furniture outside . For indoor use only.
- ⊘  ● Stains may be removed with mild soap solution and damp cloth.
- ⊘  ● Children should not climb or jump on the furniture.




- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

DINING BENCH

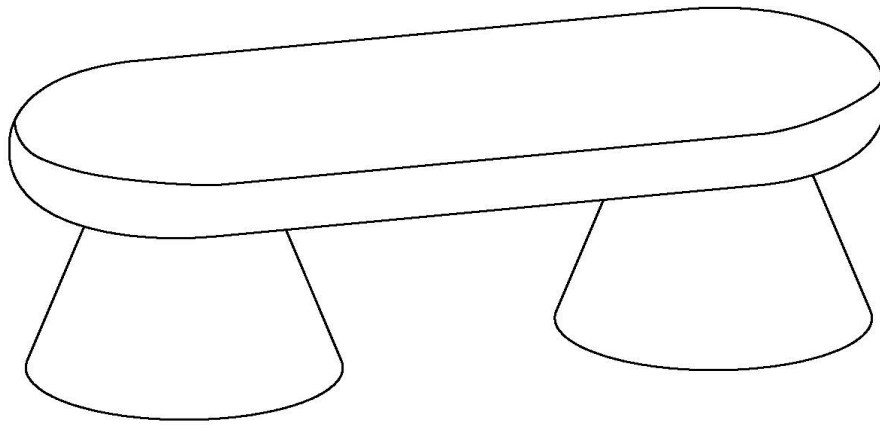

Parts List

 
Label	Picture	Description	QTY
A		Top	1
B		Leg	2

Hardware



Label	Picture	Description	QTY
①		Bolt (M6*19mm)	9
②		Spring Washer(M6)	9
③		Washing Ring	9
④		Allen Wrench	1

Assembly Preparation


Before
Beginning
Assembly:

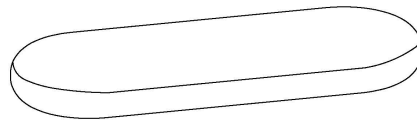

A

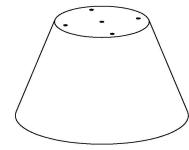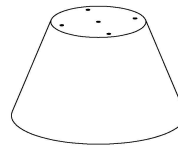

B

 

x9

①



x9

②



x9

③



x1

④



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps


Overview

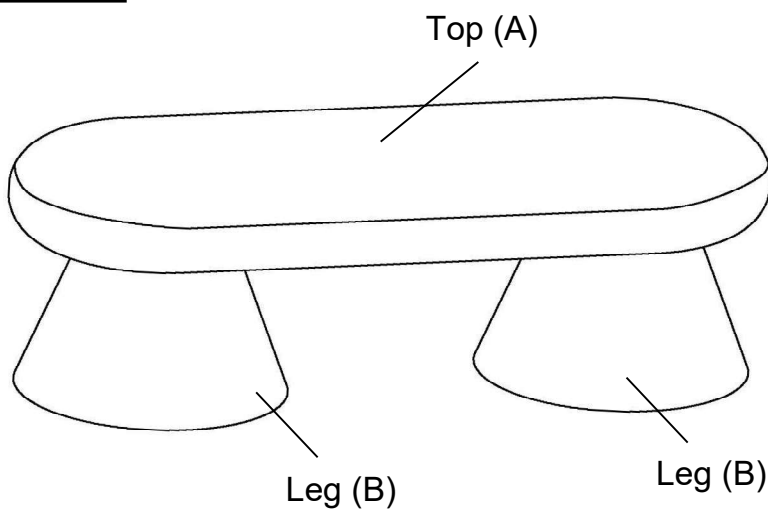

FRONT FACING


This Dining Bench has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Bench parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

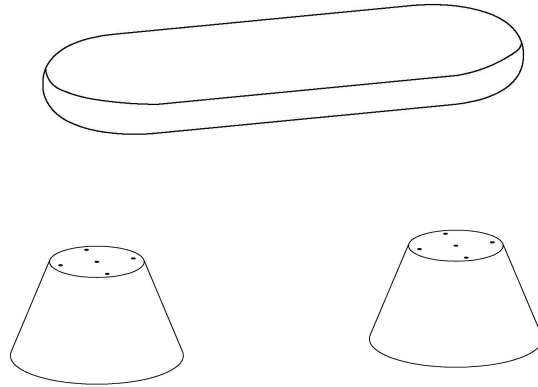

Unpack and place all parts on a clean, non-marring surface.


Step 2

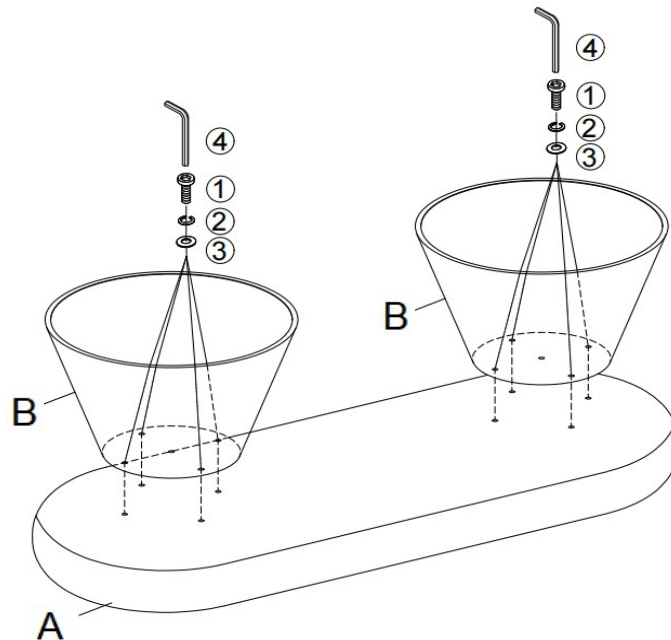

Attach Leg(B) to the base of Top (A) using Bolt(①), Spring Washer(②), Washing Ring(③) with Allen Wrench(④).

Note: Tighten the Bolts in this step.

Step 2

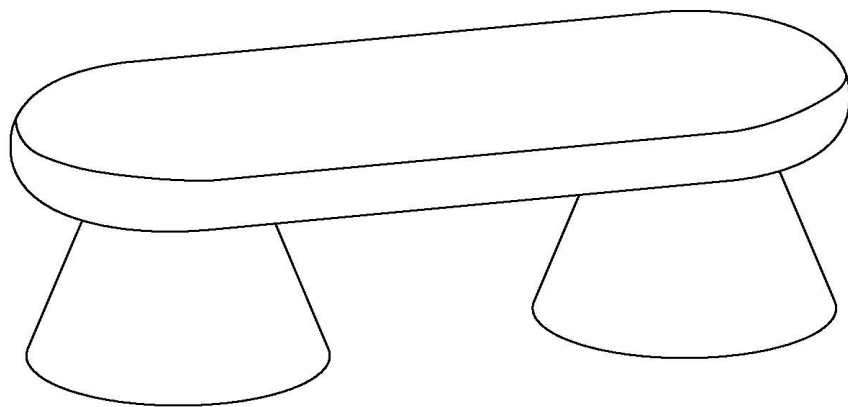

Your Dining Bench is ready for use.
This Dining Bench can only be used on a flat, level surface.