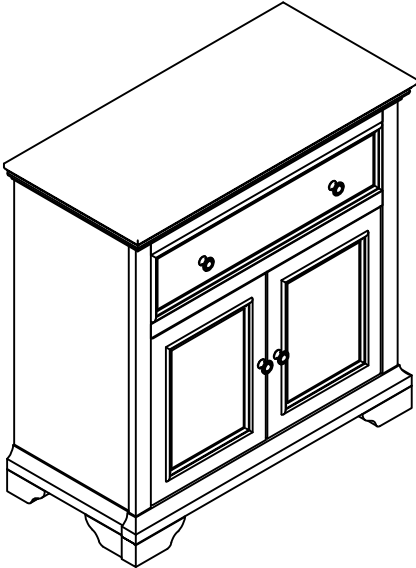 
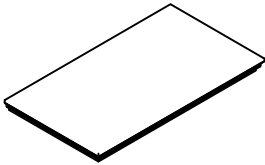 
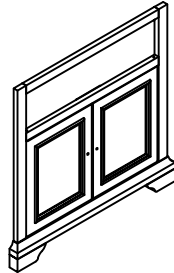 
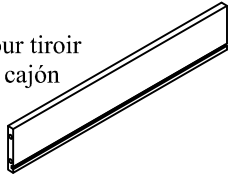 
 
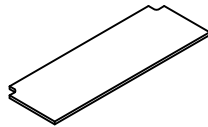 
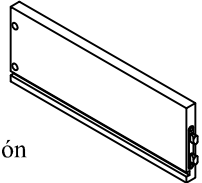 
 
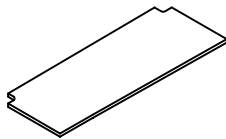 
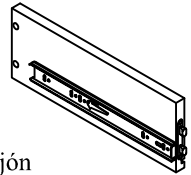 
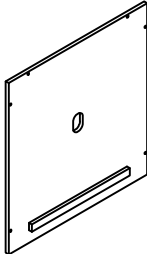 
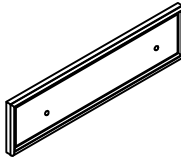 
 


# PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS

ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D419-002

 
DESCRIPTION / DESCRIPCIÓN/Description : ANT. BLACK KD TWO DOOR ONE DRAWER CONSOLE / KD CONSOLE DE TIROIR À DEUX PORTES / CONSOLA DE DOS PUERTAS Y UN CAJÓN

|                                                                                    |                                                                                                                                                                                            |                                                                                                                                                                                     |                                                                                                                                                                                                            |
|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>(A)</b></p> <p>X1 Top panel<br/>X1 Techo<br/>X1 Le toit</p>                                        | <p><b>(E)</b></p> <p>X1 Front frame<br/>X1 Placa inferior<br/>X1 Plaque de fond</p>              | <p><b>(I)</b></p> <p>X1 Drawer back<br/>X1 Panneau arrière pour tiroir<br/>X1 Parte posterior del cajón</p>             |
|                                                                                    | <p><b>(B)</b></p> <p>X1 Left side panel<br/>X1 Panel izquierdo<br/>X1 Panneau gauche</p>                 | <p><b>(F)</b></p> <p>X1 Adjustable shelf<br/>X1 Étagères réglables<br/>X1 Estante ajustable</p>  | <p><b>(J)</b></p> <p>X1 Drawer right<br/>X1 Côté droit du tiroir<br/>X1 Lado derecho del cajón</p>                      |
|                                                                                    | <p><b>(C)</b></p> <p>X1 Right side panel<br/>X1 Panel lateral derecho<br/>X1 Panneau latéral droit</p>  | <p><b>(G)</b></p> <p>X1 Bottom panel<br/>X1 Panneau inférieur<br/>X1 Panel inferior</p>         | <p><b>(K)</b></p> <p>X1 Drawer left<br/>X1 Côté gauche du tiroir<br/>X1 Lado izquierdo del cajón</p>                   |
|                                                                                    | <p><b>(D)</b></p> <p>X1 Back panel<br/>X1 Placa posterior<br/>X1 Fond de panier</p>                    | <p><b>(H)</b></p> <p>X1 Drawer front<br/>X1 Pour tiroir droit<br/>X1 Anterior de cajón</p>     | <p><b>(L)</b></p> <p>X1 Drawer bottom panel<br/>X1 Dibuja la placa inferior<br/>X1 Dessiner la plaque inférieure</p>  |
|                                                                                    |                                                                                                                                                                                            |                                                                                                                                                                                     |                                                                                                                                                                                                            |

# PARTS LIST / LISTE DES PIÉCES / LISTA DE PIEZAS


ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D419-002

DESCRIPTION / DESCRIPCIÓN/Description : ANT. BLACK KD TWO DOOR ONE DRAWER CONSOLE / KD CONSOLE DE TIROIR À DEUX PORTES / CONSOLA DE DOS PUERTAS Y UN CAJÓN

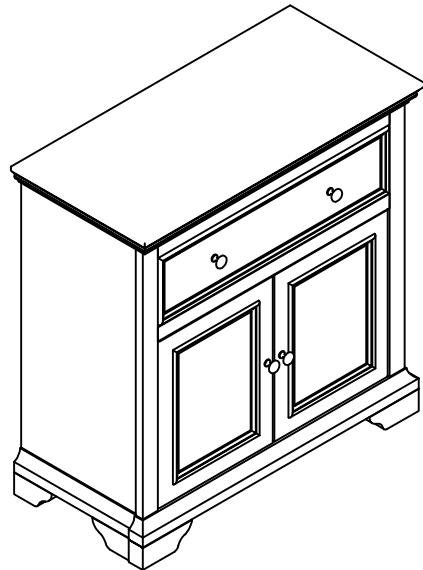

①

 X10 Bolt Ø1/4"\*23mm  
X10 Perno Ø1/4"\*23mm  
X10 Boulon Ø1/4"\*23mm



⑤

X4 Knob  
X4 Manéjar  
X4 Poignée



②

X4 Wood dowel (8x30mm)  
X4 Goujons de bois (8x30mm)  
X4 Tarugo de madera (8x30mm)



③

X4 Shelf Support Ø6.5mm  
X4 Soporte laminado Ø6.5mm  
X4 Support en stratifié Ø6.5mm



④


X4 Handle screw Ø5/32"\*19mm  
X4 Tornillo de la manija Ø5/32"\*19mm  
X4 Vis de poignée Ø5/32"\*19mm



## PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS


 
ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D419-002

DESCRIPTION / DESCRIPCIÓN/Description : ANT. BLACK KD TWO DOOR ONE DRAWER CONSOLE / KD CONSOLE DE TIROIR À DEUX PORTES / CONSOLA DE DOS PUERTAS Y UN CAJÓN

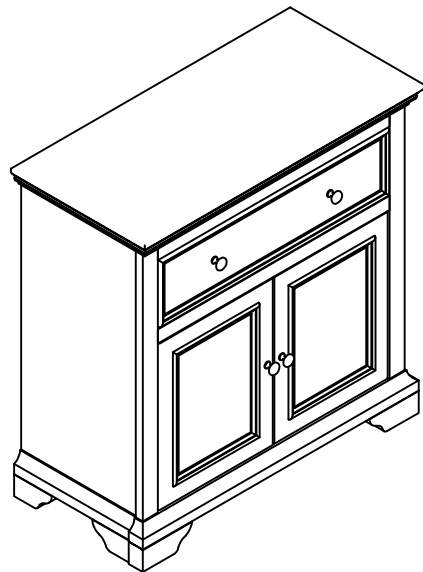

### Step 1.

  Attach the Left/ Right Side Panel (Part B&C) into the Front Frame (Part E) and press down to secure into place. Make sure that the top of the side panels and front frame are flush.

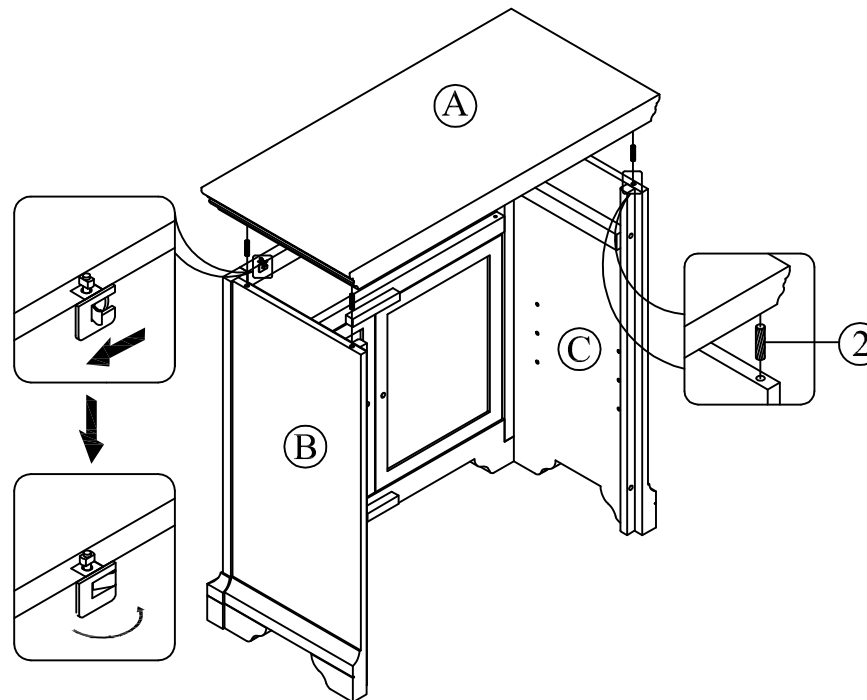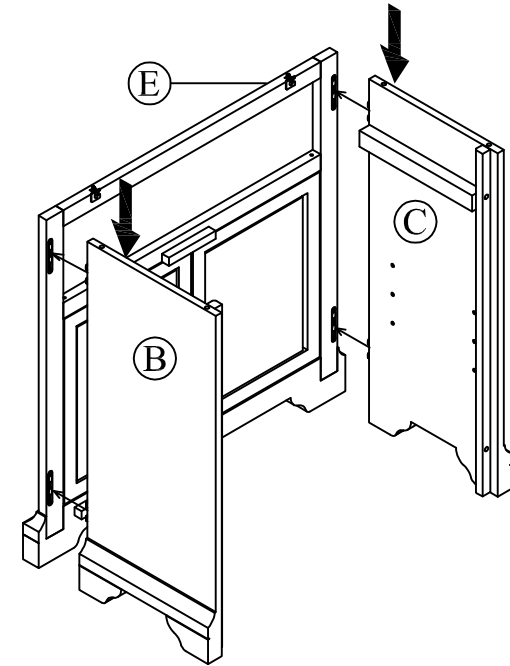

### Step 2.

 
Insert Wood Dowels (Part 2) on the top of frame. Make sure that all of the switch locking hardware in the panels are in the open

position as indicated by the straight arrow in the diagram. Align the hardware in the Top Panel (Part A) with the hardware on the top of frame and press down so make sure the top panel is flush with the panels. Lock the top panel into place by turning the switches indicated the by the curved arrow in the diagram below.

## PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS



ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D419-002

DESCRIPTION / DESCRIPCIÓN/Description : ANT. BLACK KD TWO DOOR ONE DRAWER CONSOLE / KD CONSOLE DE TIROIR À DEUX PORTES / CONSOLA DE DOS PUERTAS Y UN CAJÓN

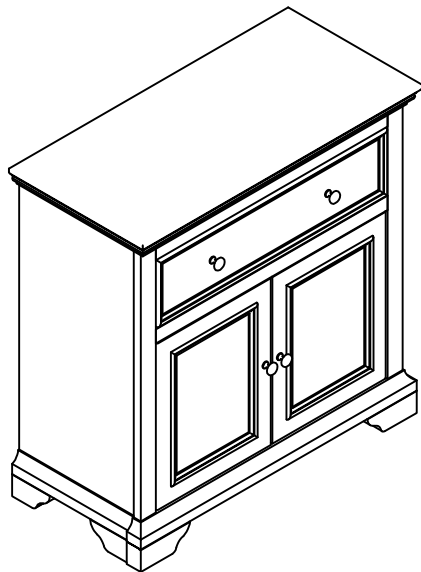

### Step 3.

  Screw the Bolts (Part 1) into pre-buried holes on the Back Panel (Part D) in the clockwise direction to attach the Back panel with the frame.

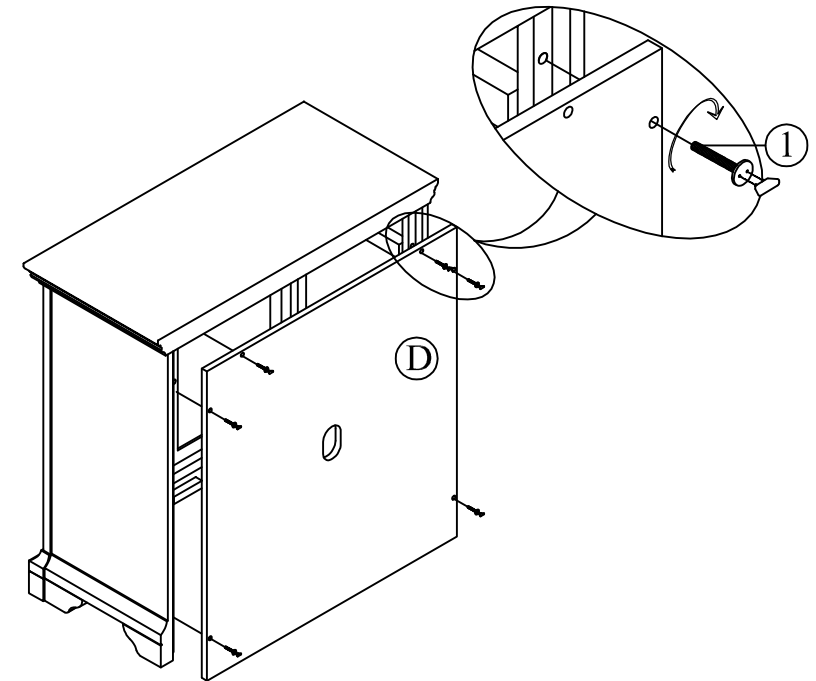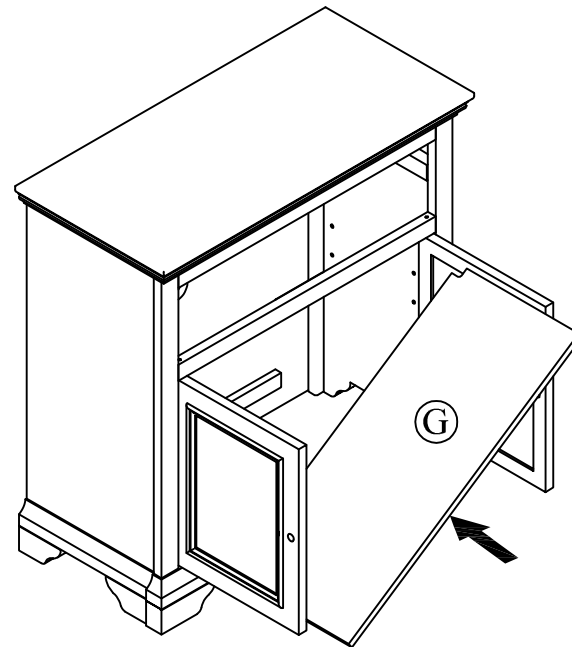


### Step 4.

Open the doors and insert Bottom Panel (Part G) inside the cabinet to the position where there is the bottom of cabinet. Note that the side of the back panel with notched corners should be inserted first facing the back of the cabinet.

## PARTS LIST / LISTE DES PIÉCES / LISTA DE PIEZAS


ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D419-002

 DESCRIPTION / DESCRIPCIÓN/Description : ANT. BLACK KD TWO DOOR ONE DRAWER CONSOLE / KD CONSOLE DE TIROIR À DEUX PORTES / CONSOLA DE DOS PUERTAS Y UN CAJÓN

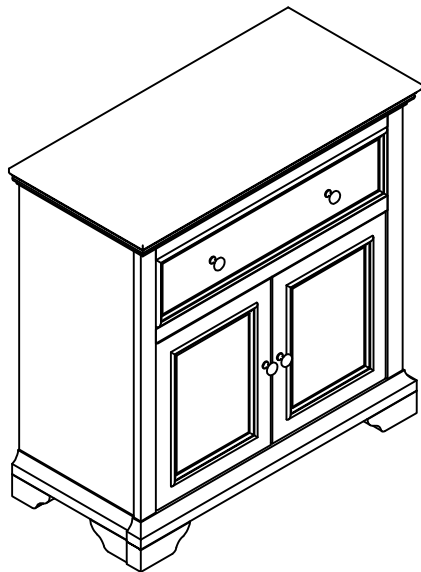


### Step 5.

 Insert Shelf Supports (Part 3) into the holes as shown. Then, insert the Adjustable Shelf (Part F) into the cabinet to the position where there are shelf supports.

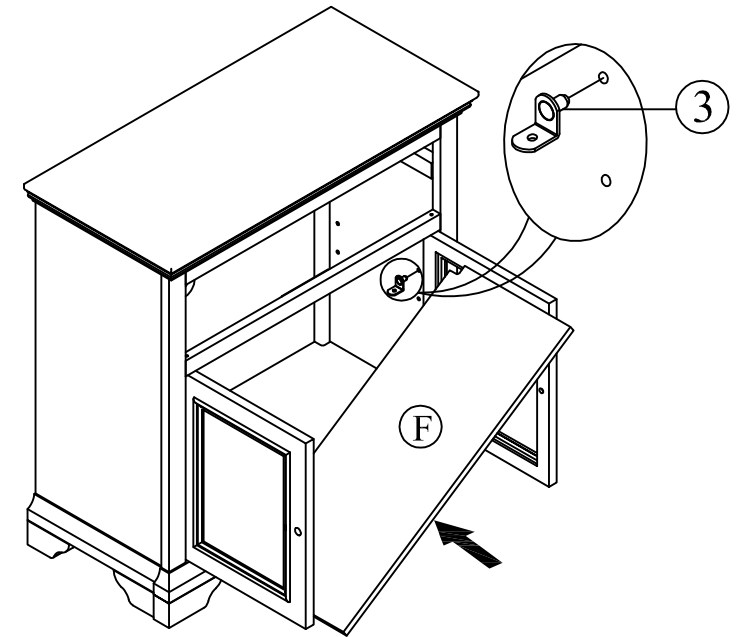

### Step 6.

 
Insert the Handle Screws for the Knob (Part 4) into the holes from the back side of the doors. Add the Knobs (Part 5) and turn the handle screw clockwise to tighten. You will need a phillips head screw driver to tighten completely.

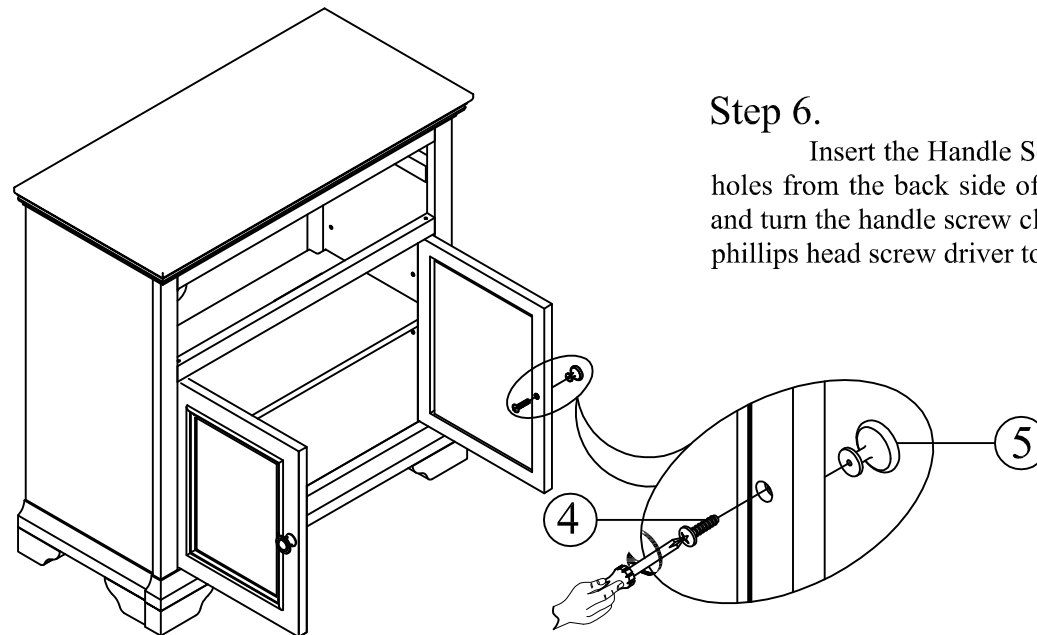

## PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS



ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D419-002

 DESCRIPTION / DESCRIPCIÓN/Description : ANT. BLACK KD TWO DOOR ONE DRAWER CONSOLE / KD CONSOLE DE TIROIR À DEUX PORTES / CONSOLA DE DOS PUERTAS Y UN CAJÓN

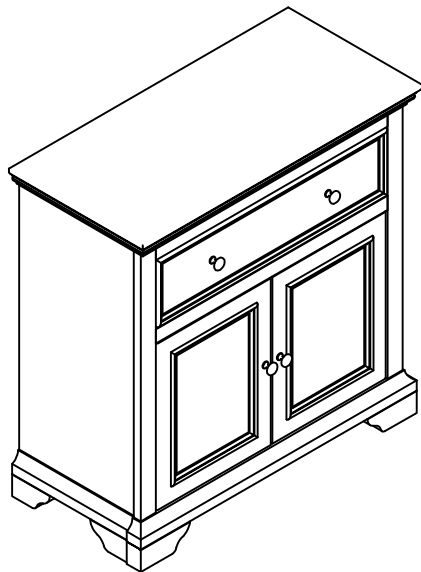

### Step 7.

  Align the hardware on the L/R Drawer Sides (Part K & J) with the hardware on the Drawer Front (Part H) making sure that the grooves on the drawer sides are facing in and at the bottom of the drawer. Apply downward pressure to secure the drawer sides in place. Note that the grooves in the side panels and drawer front should be aligned to allow for the drawer bottom to be fully inserted. Also ensure the drawer glides are facing out.

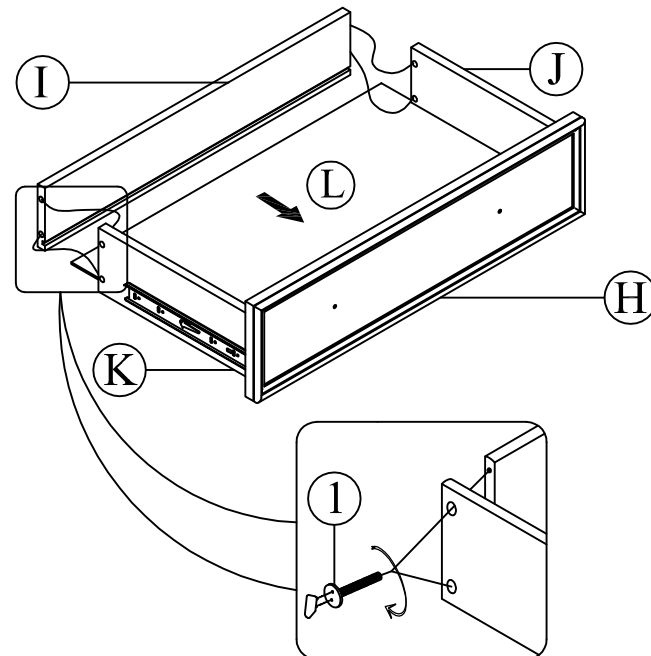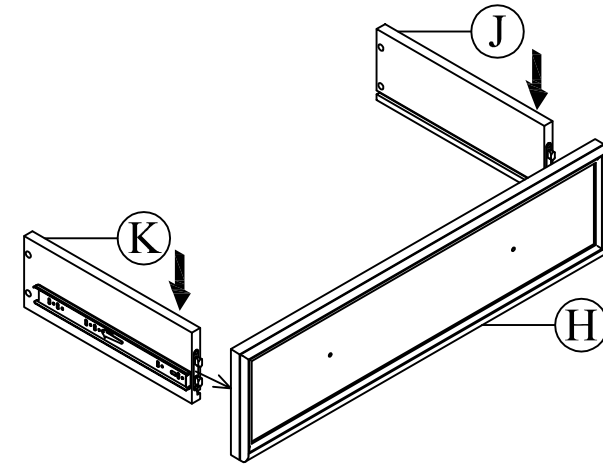

### Step 8.

Insert the Drawer Bottom (Part L) into the grooves in the side panels and press forward until the front edge goes completely into the groove in the drawer front. Add the Drawer back (Part I) making sure the bottom panel insert completely into the groove. Insert Bolts (Part 1) and turn clockwise to tighten completely.

 
 
## PARTS LIST / LISTE DES PIÉCES / LISTA DE PIEZAS

 
ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D419-002

DESCRIPTION / DESCRIPCIÓN/Description : ANT. BLACK KD TWO DOOR ONE DRAWER CONSOLE / KD CONSOLE DE TIROIR À DEUX PORTES / CONSOLA DE DOS PUERTAS Y UN CAJÓN

### Step 9.

insert the drawer into the frame. insert the handle screws for the knobs (part 4) into the holes inside the back side of the drawer. add the knobs (part 5) and turn the handle screws clockwise to tighten. you will need a phillips head screws driver to tighten completely. do not turn the handle itself to tighten. you will scratch the drawer front if you do. align the drawer glides with those in the cabinet and press forward. open and close the drawer to get a smooth glide.

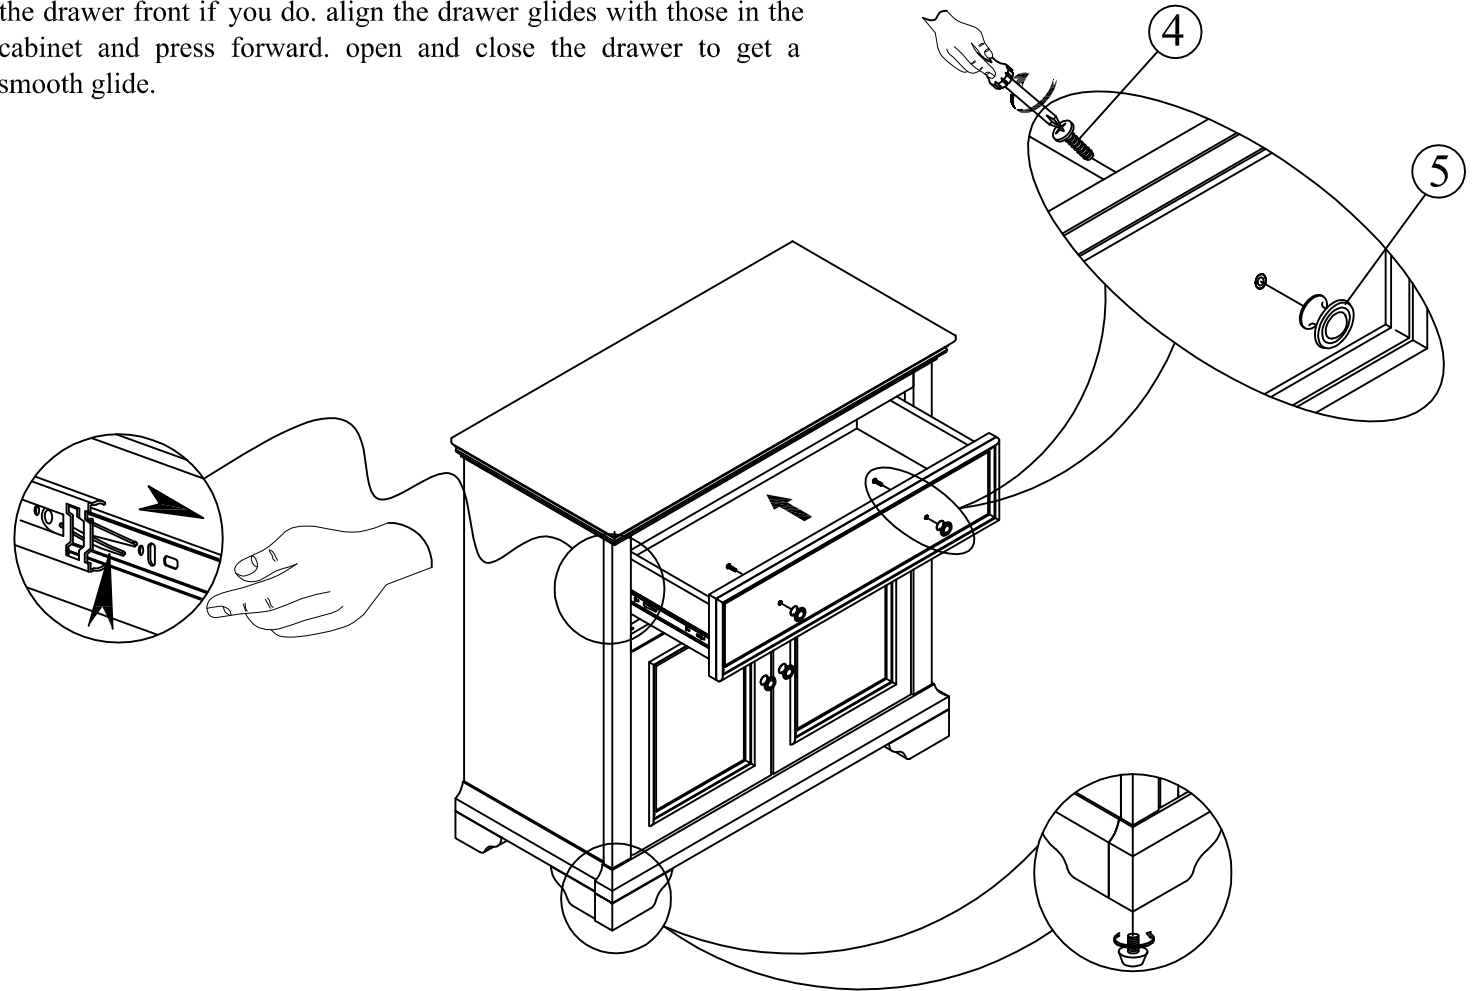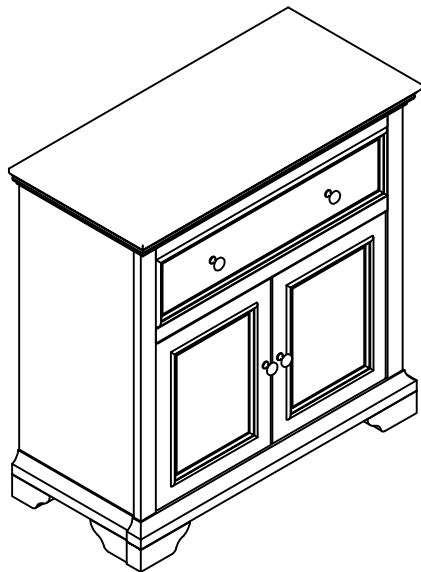

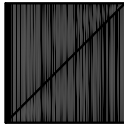


# Furniture Safety Bracket Tip Resistant

- Designed to help prevent furniture tipover.
- Detachable strap allows for easy moving of furniture for cleaning .
- Also helps prevent furniture tipover during minor tremor.


## Installation:

1. Locate a wall stud behind your furniture. Position a bracket on the stud approximately 1" below the top of the furniture. Mark and drill pilot hole into the center of the stud with a 3/32" drill bit. Attach a bracket to the stud with the long screws provided.

 2. On the back of the furniture, a bracket will need to be attached to the furniture frame at the top. To do this, temporarily move the furniture into its final position and mark the location of the wall bracket on the furniture frame. Move the furniture away from the wall and place a bracket on the mark. Mark and drill holes for screws with a 3/32" drill bit. Attach the bracket to the furniture with the short screws provided.

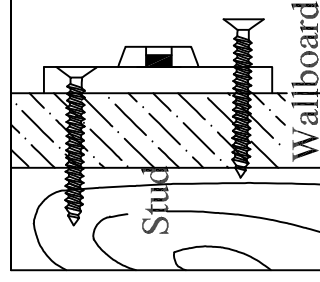

 3. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug. Do not over tighten.

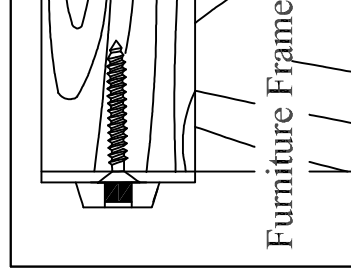

## Important:

Check to be sure the wall bracket is firmly screwed into wall stud, the furniture bracket is firmly attached to the frame, and the strap is snug.

## Caution:

This product is not to be a substitute for proper parental supervision. Manufacturer assumes no liability for improper installation or excessive loads placed on screws brackets or straps.

