


allen + roth®

welcoming • sophisticated • inspiring

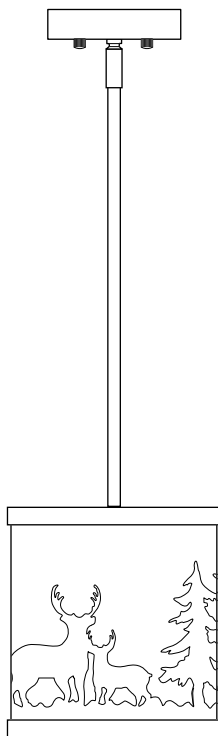

800192

APPROVED FOR USE
IN DAMP LOCATIONS

ALLEN+ROTH and logo design are
trademarks or registered trademarks
of LF, LLC. All rights reserved.

ITEM #5055245

PENDANT

MODEL #PL20-1BRZ

Español p. 11

Purchase Date _____

**ATTACH YOUR RECEIPT HERE
ADJUNTE SU RECIBO AQUÍ**




Questions, problems, missing parts? Before returning to your retailer, call our customer service department at **866-439-9800**, 8 a.m. - 8 p.m., EST, Monday - Sunday. You could also contact us at partsplus@lowes.com.

TABLE OF CONTENTS

Package Contents	2
Hardware Contents	3
Safety Information	3
Preparation	4
Assembly Instructions	5
Care and Maintenance	10
Troubleshooting	10
Warranty	10


PACKAGE CONTENTS

PART	DESCRIPTION	QUANTITY
A	Fixture	1
B	3-inch Rod (preassembled to fixture (A))	1
C	6-inch Rod (preassembled to fixture (A))	1
D	9-inch Rod (preassembled to fixture (A))	5
E	Mounting Strap (preassembled to canopy (F))	1
F	Canopy	1
G	Screw (preassembled to mounting strap (E))	2
H	Decorative nut (preassembled to screw (G))	2
I	Nut (preassembled to screw (G))	2
J	Socket Screw (preassembled to fixture (A))	2
K	Shade (preassembled to fixture (A))	1

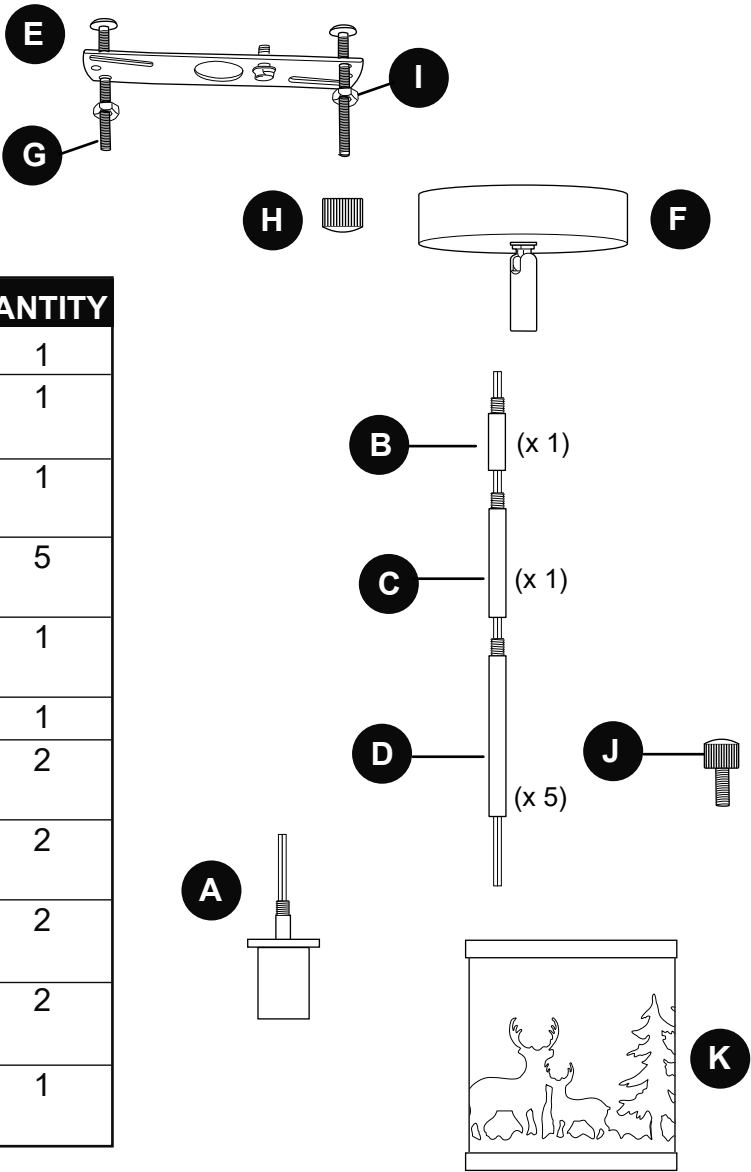

HARDWARE CONTENTS (shown actual size)

 
AA



Wire
Connector

Qty. 3

 BB



Machine
Screw

Qty. 2



SAFETY INFORMATION

READ AND SAVE THESE INSTRUCTIONS.



DANGER

- For your protection and safety, carefully read and understand the information provided in this manual completely before attempting to assemble, install or operate this product. Failure to do so could lead to electrical shock, fire or other injuries that could be hazardous or even fatal.
- DO NOT connect this fixture to an electrical system that does not provide a means for equipment grounding. Never use a fixture in a two-wire system that is not grounded. Installing a fixture into an electrical system not having a proper grounding means could cause metal parts of the fixture to carry electrical currents if any of the fixture wires, wire connections or splices were to become broken, cut or loose during the mounting or normal operation of the fixture. Under this condition, anyone coming in contact with the fixture would be subject to electrical shock, which could cause serious injury or death.
- DO NOT connect the bare or green insulation fixture ground wire to the black (HOT) current-carrying wire or the white (NEUTRAL) house wire. Connection of the bare or green fixture ground wire to the black or white house wires may cause metal parts of the fixture to carry electrical currents. Under this condition anyone coming in contact with the fixture will receive electrical shock, which could cause serious injury or death.
- DO NOT damage or cut the wire insulation (covering) during installation of fixture. DO NOT permit wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electrical shock.



WARNING

- All electrical connections must be in agreement with local codes and ordinances, the National Electric Code (NEC) and ANSI/NFPA 70-1999. Contact your municipal building department to learn about your local codes, permits and/or inspections. Risk of fire - most dwellings built before 1985 have supply wire rated for 140 °F. Consult a qualified electrician before installation.
- To avoid personal injury, the use of gloves may be necessary while handling fixture parts with sharp edges.

SAFETY INFORMATION

WARNING

- DO NOT suspend any fixture by the house wires. A fixture must always be mounted directly to an outlet box or to a mounting strap which is first attached to the outlet box. Wire connectors will not support the weight of a fixture. Suspending a fixture by the house wires and wire connectors will result in the fixture falling, with the possibility of personal injury and the danger of electrical shock or fire.
- To reduce the risk of fire, electrical shock or personal injury, wire connectors provided with this light fixture are designed to accept only one 12-gauge house wire and two lead wires from the light fixture. If your house wire is larger than 12-gauge or there is more than one house wire to connect to the corresponding fixture lead wires, consult an electrician for the proper size wire connectors to use.
- To reduce the risk of damage to the fixture, DO NOT use power tools to assemble any part of the fixture.

Distributed by: Lowe's Home Centers LLC, 1000 Lowe's Blvd., Mooresville, NC 28117; 866-439-9800

CAUTION

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing the fuse (or switching the circuit breaker off).
- If you are not sure the lighting system has a grounding means, DO NOT attempt to install this fixture. Contact a qualified, licensed electrician for information regarding the proper grounding methods as required by the local electrical code in your area.
- All fixtures must be mounted to an outlet box that is supported by the building structure.
- If a dimmer control switch is used with this fixture, obtain professional advice to determine the correct type to use as well as the electrical rating required.
- DO NOT use bulbs having a wattage greater than the maximum value stated on the fixture. The use of bulbs with higher wattage than specified will increase temperatures and risk of fire.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes


Tools Required for Assembly (not included): Flathead Screwdriver, Phillips Screwdriver, Wire Strippers, Pliers, Wire Cutters, Safety Glasses, Stepladder, Electrical Tape

Helpful Tools (not included): A/C Tester Light, Do-It-Yourself Guide, Soft Cloth


ASSEMBLY INSTRUCTIONS

1. Turn off circuit breakers and wall switch to the fixture supply line leads.

⚠ DANGER: Failure to disconnect power supply prior to installation may result in serious injury or death.

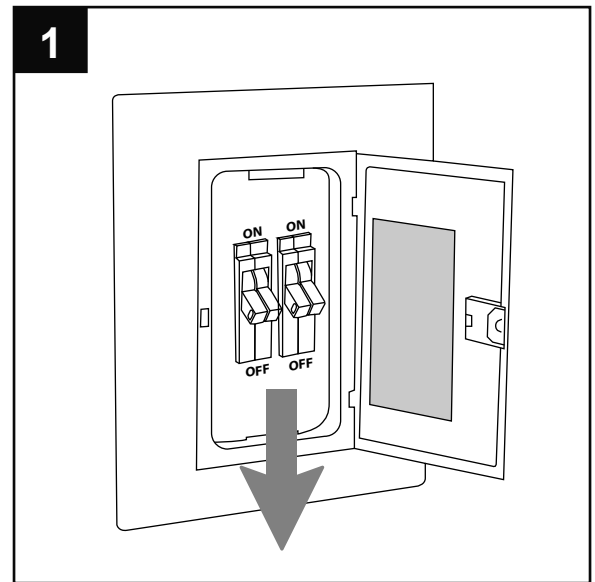


2. Remove existing fixture and disconnect all electrical wiring.

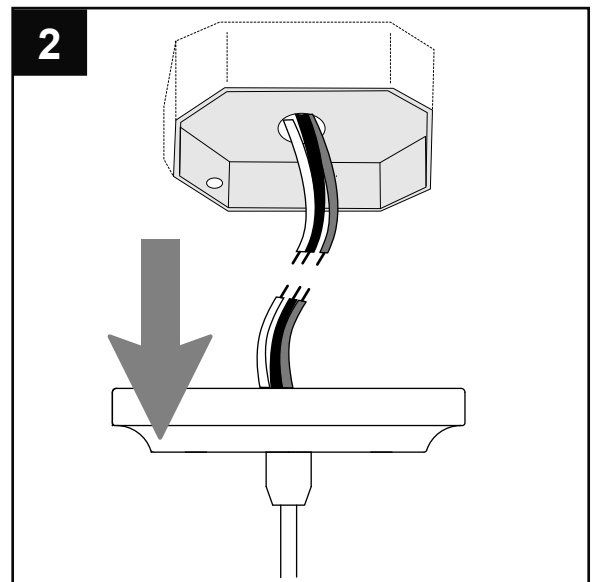

3. Remove mounting strap (E) from canopy (F) by removing decorative nuts (H) from screws (G).


Save decorative nuts (H) for later use.

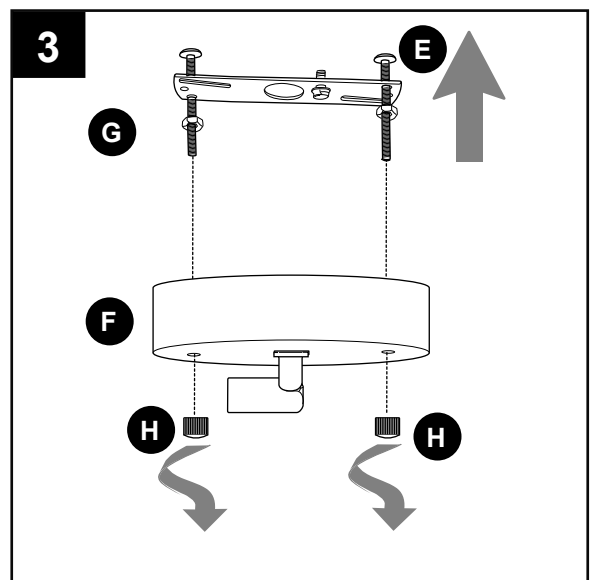

ASSEMBLY INSTRUCTIONS

4. Temporarily place canopy (F) over mounting strap (E) to determine amount of adjustment necessary for screws (G) -- screws (G) should come through holes in canopy (F) just enough so decorative nuts (H) will fit flush against canopy (F) when mounted.


Once screws (G) are adjusted, use pliers (not included) to tighten nuts (I) on screws (G) until nuts (I) touch mounting strap (E).

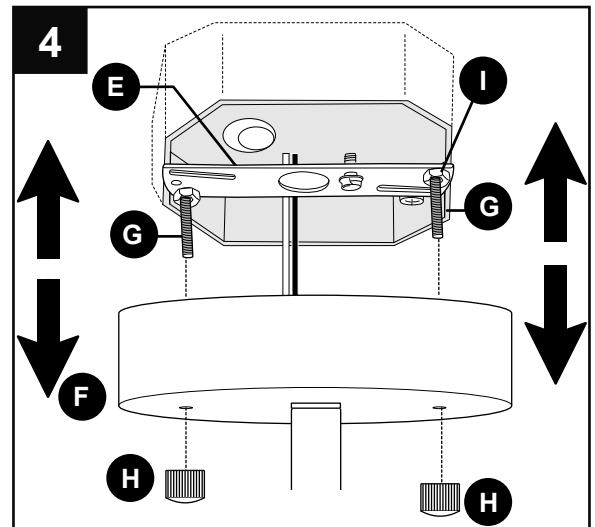

5. Attach mounting strap (E) to outlet box (not included) using existing washers and outlet box screws or the machine screws (BB). **NOTE:** If the outlet box screws required for your outlet box are of a different size than the machine screws (BB), consult a licensed electrician before proceeding.

Tighten machine screws (BB) to secure mounting strap (E) to outlet box.

⚠ CAUTION: Make sure the outlet box can support 35 lbs. hanging weight. Use *metal* outlet box; plastic outlet boxes are not recommended.

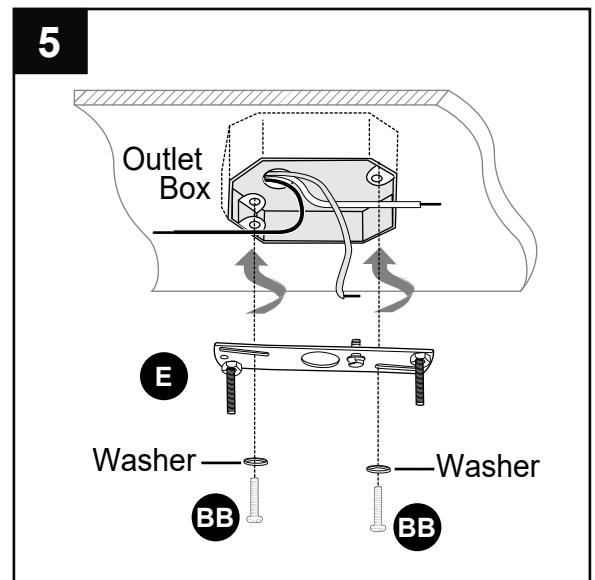

Hardware Used


BB Machine Screw x 2



6. There are several different ways to use the fixture (A) depending on the number and combination of rods (B,C and D) you decide to use:



Locate swivel connector piece under canopy (F). Rotate swivel connector piece until it aligns with canopy (F) base. **[NOTE:** This may require some force.]

Whatever the number and combination of rods (B, C and D) you choose to use, the lowermost rod (B,C or D) must be screwed into the top of the fixture (A) first. Be sure lowermost rod (B,C or D) is completely secure before proceeding.

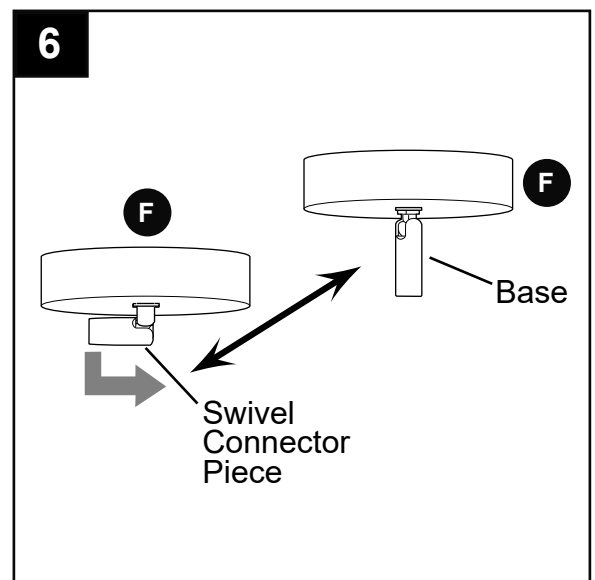

ASSEMBLY INSTRUCTIONS


- 7a. **If you wish to use the fixture (A) with all SEVEN rods--B, C and D**, be sure rods are completely connected by screwing ends of the rods together before continuing to step 8.
- 7b. **If you wish to use the fixture (A) with any other combination of rods (B/C/D)**, remove plastic piece preassembled on cord. Save for later use. Gently slide the rods (B/C/D) that will **not** be used up over the wiring until rods that will **not** be used are free of the wiring. Attach the rods (B/C/D) remaining on the fixture by screwing the ends of the rods together -- make sure all rods are completely connected before continuing to step 7.
- 7c. **If you wish to use the fixture (A) with only ONE rod B, C or D**, remove plastic piece preassembled on cord. Save for later use. Gently slide the rods that will **not** be used up over the wiring until rods that will **not** be used are free of the wiring.

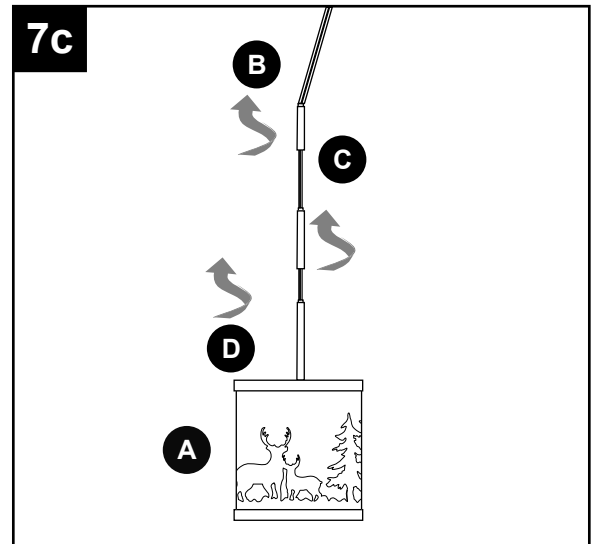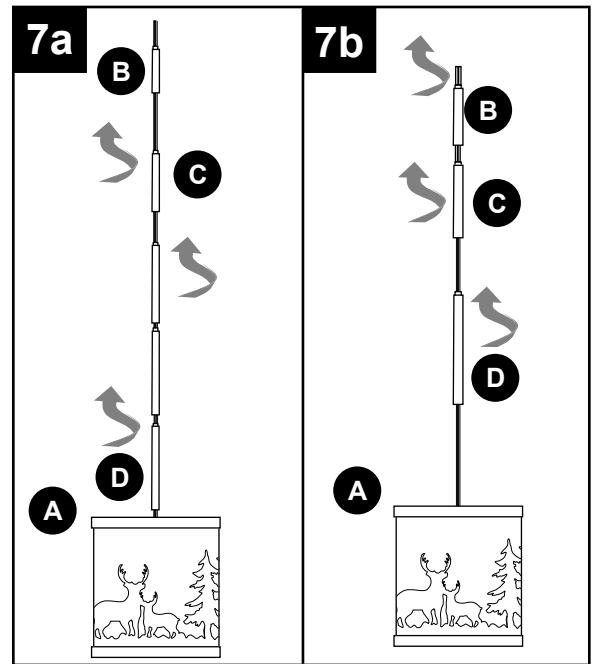

8. Carefully thread the wires through the swivel connector piece on the underside of the canopy (F). Pull wires completely through top of canopy (F) and then secure last rod (B, C or D) to underside of canopy (F).

If applicable, replace plastic piece on cord. Move plastic piece back over opening on inside of canopy (F).

Be sure that the uppermost rod is secured to the swivel connector piece before proceeding to Step 9.

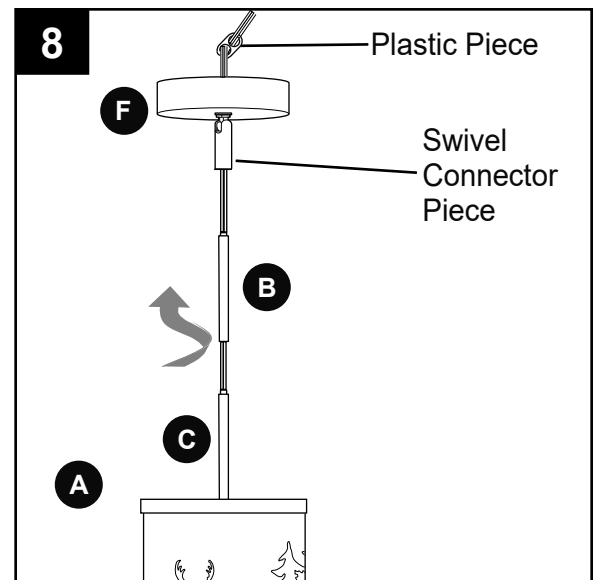

ASSEMBLY INSTRUCTIONS

- 9a. Depending on the number of rods used, you may need to cut the excess length on the RIBBED and SMOOTH wires. You will need at least 10 inches of wire to work with.

Prepare wires by stripping 3/4 in. of insulation from wire ends using wire strippers (not included).

 
- 9b. Connect BARE wire from canopy (F) to BARE/GREEN ground wire from outlet box using wire connector (AA). Connect RIBBED wire from fixture (A) to WHITE wire from outlet box using existing wire connector or wire connector (AA). Connect SMOOTH wire from fixture (A) to BLACK wire from outlet box using existing wire connector or wire connector (AA).

NOTE: Screw wire connectors (AA) on in a clockwise direction.

⚠ WARNING: Never connect BARE/GREEN ground wire to WHITE or BLACK power supply wires.

⚠ WARNING: To reduce the risk of fire, electrical shock, or personal injury, wire connectors provided with this light fixture are designed to accept only one 12-gauge house wire and two lead wires from the light fixture. If your house wire is larger than 12-gauge or there is more than one house wire to connect to the corresponding fixture lead wires, consult an electrician for the proper size wire connectors to use.




Hardware Used



10. Wrap electrical tape (not included) around each individual wire connector (AA) down to the wire.


⚠ WARNING: Make sure no bare wire or wire strands are visible after making connections.

Gently push wire connectors (AA) and excess wiring back into outlet box.

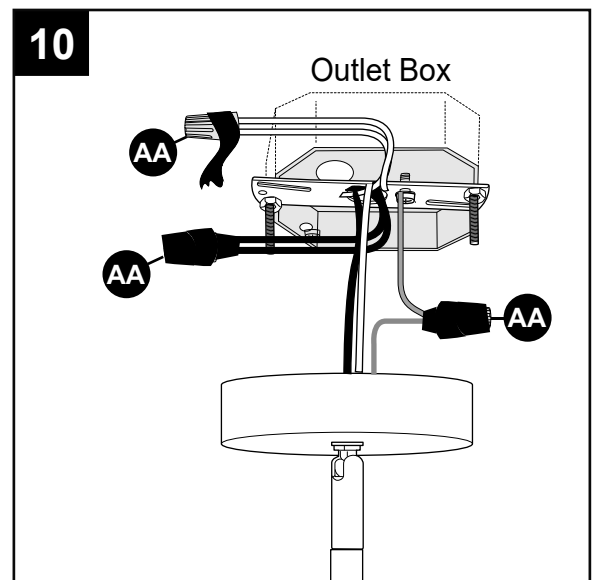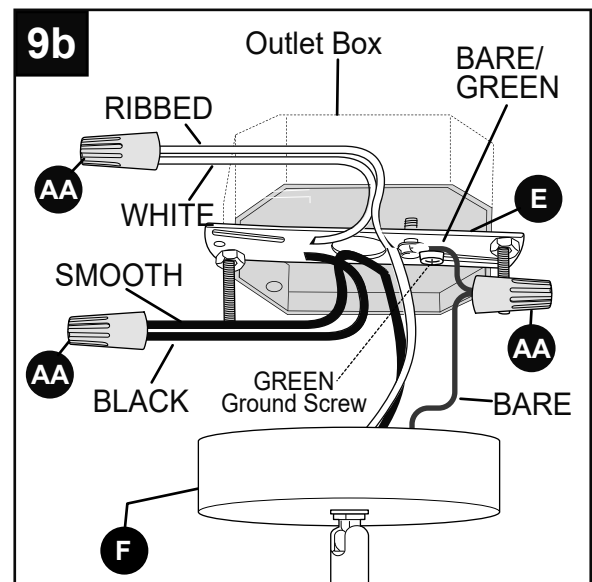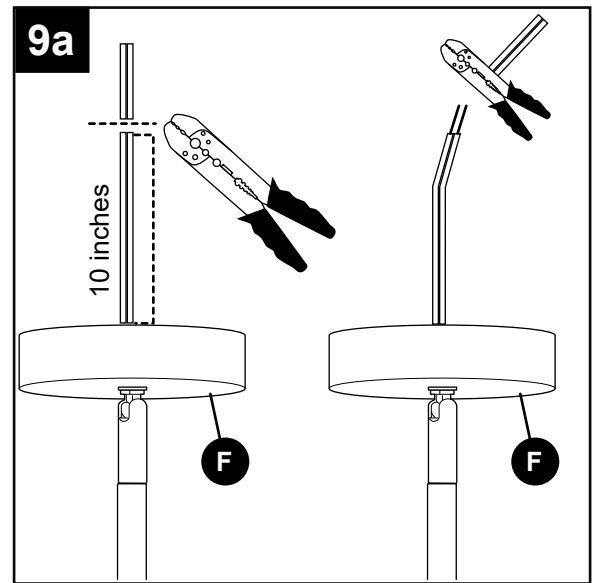

ASSEMBLY INSTRUCTIONS


11. Align holes in canopy (F) with screws (G) in mounting strap (E) and push canopy (F) up. Attach canopy (F) to mounting strap (E) using the decorative nuts (H) previously removed (Step 3, page 5).

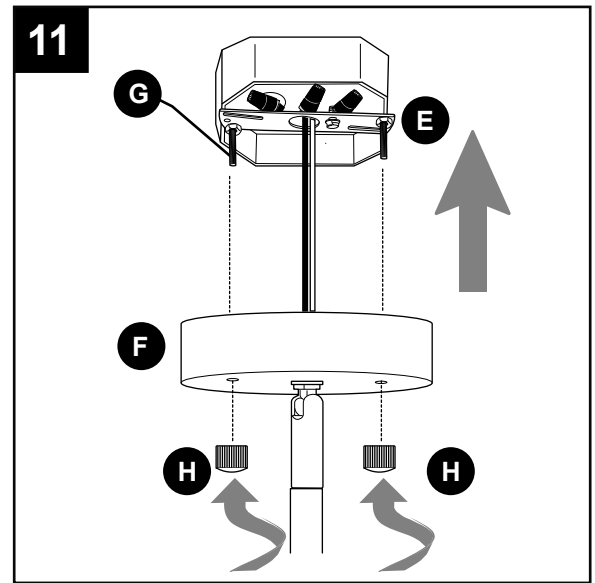

12. Loosen both socket screws (J) on keyslot holes topside of fixture (A) and twist to remove shade (K). Install one 60-watt max. standard-base incandescent bulb (not included) or CFL/LED equivalent.


Replace shade (K) by aligning keyslot holes on shade (K) with socket screws (H). Twist fixture (A) and tighten socket screws (J) to completely secure shade (K).

⚠ WARNING: When replacing bulbs, allow bulbs and fixture (A) to cool down before touching.

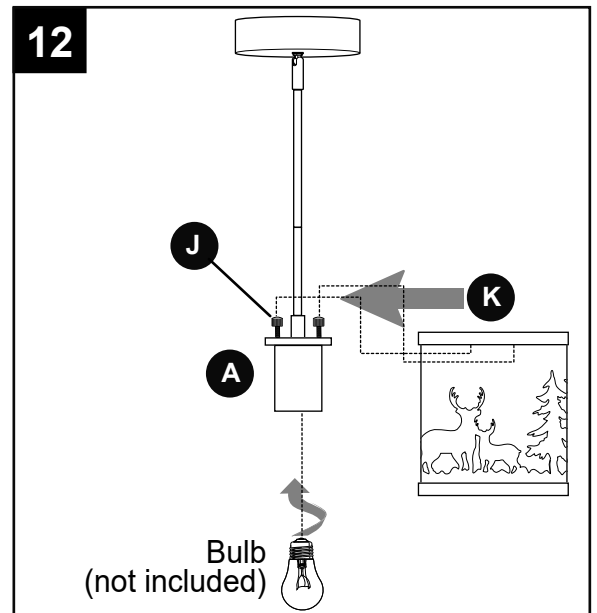

13. Restore power and test fixture (A).

If light does not function, please refer to TROUBLESHOOTING on the following page.

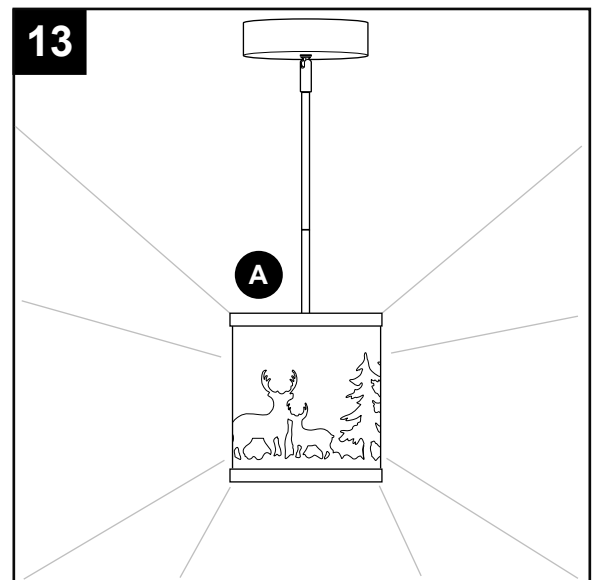

CARE AND MAINTENANCE

- Shut off main power supply. Wipe fixture with soft, damp cloth. Do not use an abrasive cleaner on fixture.

TROUBLESHOOTING

⚠ WARNING: Before beginning work, shut off the power supply to avoid electrical shock.

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb(s) will not light.	1. Bulb(s) is/are burned out. 2. Power is OFF. 3. Faulty connection.	1. Replace light bulb(s). 2. Make sure power supply is ON. 3. Check wiring and all connections.
Fuse blows out or circuit breaker trips.	1. Crossed wires. 2. Power wire is grounding out.	1. Check wiring. 2. Check all connections.

WARRANTY

The distributor warrants all of its lighting fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective, take a copy of the bill of sale as a proof of purchase and the product in its original carton to the place of purchase. The distributor will, at its option, repair, replace or refund the purchase price to the consumer. All costs of installation and removal of the fixture is the responsibility of the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage or improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions of limitations on an implied warranty, the above exclusion and limitation may not apply. This warranty gives you specific rights and you may also have other rights which may vary from state to state.