 


For your baby to drive safely, you must pay attention to the following warnings:

1. This product may contain sharp edges or sharp tips before assembly, so it is for adult assembly only.
2. Children must use it under the guidance of an adult, and the caregiver must not leave during use!
3. Battery charging must be done by an adult. Please charge before using this product!
4. In order to avoid harm to children, please keep plastic bags and other packaging materials away from children!
5. Please check the product and the charger used regularly to see if the wires, plugs, housings and other parts are damaged. If damaged, stop using it until it is repaired.
6. Battery is not replaceable, non-professional personnel do not replace the battery.
7. Unconnected wires on the vehicle cannot be plugged into the output socket.
8. When charging, it must be away from flammable materials to prevent fire.
9. Do not use protectors that do not conform to the specifications of this product.
10. In order to avoid damage from small parts, it is only used by children aged 37-96 months.
11. The illustrations used in this manual are to illustrate the operation method and product structure of the product. If there is a small difference between the actual object and the illustration, the actual object prevails.
12. In order to improve the quality of the product, we may change some of the structure and appearance of the product without informing you.

### Installation Steps

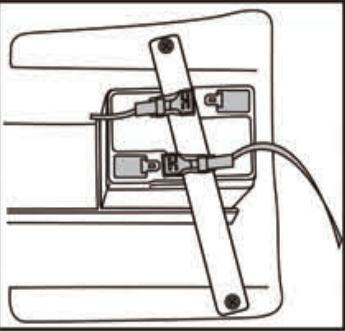

Connect the battery cable.

### Troubleshooting Guide

Failure type	Reason analysis	Elimination methods
The car is not moving.	1. Low battery voltage. 2. Electrical protection. 3. The switch is not pressed in the correct position. 4. The battery connector is off 5. The battery is broken 6. The motor is broken	1. Charge the battery fully Stop for a few minutes before using 2. Follow the function instructions and plug it back in. 3. Replace with new batteries.
The battery cannot be charged.	1. The battery connector is removed. 2. The charger is broken.	1. Plug it back in. 2. Replace the charger.
Short range	1. The battery is not fully. 2. The battery is aging	1. Fully charge the battery. 2. Replace with batteries.
Slight noise, heat when charging	A chemical reaction	Normal.
slow speed	1. The battery is old. 2. The battery has run out. 3. Overload. 4. Uneven road surface.	1. Replace the battery. 2. Recharge the battery. 3. Reduce the load to less than 30kg and drive on flat ground.
gearbox is noisy.	The gear is broken.	shop maintenance.
The car shook as it moved.	plant maintenance	rewire. shop maintenance.
The car is silently.	Steering wheel not connected	According to specification
car won't stop	Electrical parts is damaged	shop maintenance.

If the above troubleshooting methods are not available, contact the dealer.

### assembly description:

Product specification	1pc	charger	1pc
Car body	1pc	steering wheel	1pc
wheel	4pcs	remote control	1pc
empennage	1pc	sleeve	1pc
Rear axle	1pc	screw kit	1pc
front bumper	1pc	Wheel core cover	4pc
tail bumper	1pc	Side fence	1pc
Front axle assembly	1pc	cushion	2pcs
10cm screwdriver with teeth	1pc	white gloves	1set
hex wrench	1pc	spanner	1pc
microphone (optional)	1pc		

### Thank you for choosing Tong Chi Toys!

Please read the instructions before using this product, it will tell you the correct operation method and installation steps: to avoid incorrect operation and cleaning and damage to the product or your baby. This manual should be kept in a safe and accessible place. The packaging contains important information. Please keep it.

### specification

ITEM	T118		
Battery	12V7AH/24V7AH		
Motor	40W/100W		
Age	37-96 months		
Max load	30kg		
Car size	47.6*32.7*25.2 inches		
Carton size	42.5*29.2*13.4 inches		
N W	66pounds	G W	68.2pounds
Speed	6-10km/h (specific speed depends on the configuration)		
Charger	Input 110-220VAC, 50/60Hz, output DC 12V/24V 1000mA		

### Charging precautions

1. When using the electric vehicle for the first time, the battery must be charged for 14 hours! Otherwise, the battery will be permanently damaged and cannot be repaired. Each charge should not exceed 16 hours.
2. Each continuous use of 1 hour, it must be charged in time, the normal charging time is 10-12 hours.
3. It is normal for the charger or battery to heat up during the charging process (below 60 °C).
4. When the electric vehicle is not used for a long time, it must be charged at least once every month.
5. The electric vehicle must use the special charger and battery equipped with the car to avoid damage. Chargers and batteries or electrical wiring.

### Precautions for use

1. Do not drive on public roads.
2. Please drive on a smooth surface. Do not use it on a smooth surface (such as marble or tile).
3. This product is limited to one person, not overload, the maximum load 30KG.
4. Children must ride under adult guidance and the caregiver must not leave the ride.
5. Do not alter the line of the car or attach any live devices.
6. Do not use in water, do not pour water and other liquids in the car.
7. The car should not be blocked while it is moving, so as not to damage the device, such as blocking. Please release the pedal switch immediately and remove obstacles before riding.
8. The car should be charged in time when the riding speed is slow, and too long riding time will cause storage shortened battery life.
9. When not in use, please turn off the power switch. When not in use for a long time, please unplug the battery Plug-in.
10. Should not be a rainy day ride.
11. This car mainly uses PP material, non-toxic, non-radiation, safe use period of three years.

## Operation and installation instructions

### Item T118 Baby electric car



Read this manual carefully before use  
The manual contains important information, please keep it safe for future reference

### Maintenance

- The body of this car is made of polypropylene injection molding, and it is strictly forbidden to be exposed to the hot sun. Vehicles should be kept away from hotter objects, such as furnaces and heaters, where plastic parts may melt.
- Do not drive in rain or snow; Do not hose the vehicle; Not available wash the vehicle with soap and water. Water can damage motors, vehicle electrical systems and electricity pool.
- Avoid driving on sand, uneven ditches, gravel and sludge. Sand or gravel dirt can cause blockage of the motor or switch, damaging the motor and switch.
- Wipe the car with a dry, soft cloth. Non-waxy furniture polish can also be used instead of soft cloth to wipe plastic parts to achieve surface finish. Do not wipe the plastic part of the toy with chemical solvents.
- Do not change the structure and wiring system of this product without authorization, do not disassemble the electrical part if it fails, and the maintenance work must be carried out by professionals or under the guidance of technical personnel. Failure to do so may cause fire and explosion and cause permanent damage to the product.
- It is necessary to check whether the wheel rotates flexibly for about half a month, and often lubricate the rotation part of the vehicle with a small amount of lubricating oil to prevent wear and rust.

**Warning:** Non-transport vehicles must be used under the supervision of a guardian. Safety education for children before use!




Diagram of the part

Open the package,remove the parts and assemble them by the adult according to the instructions in the manual




One. Bodywork

1.Take out the body and flip it over

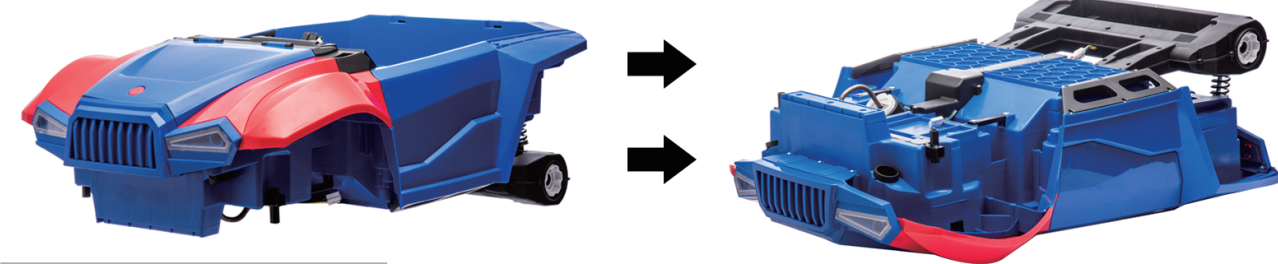


Two. Rear suspension

1.Remove and rotate the upper screw of the shock absorber to the specified position, and use a wrench to tighten and fix

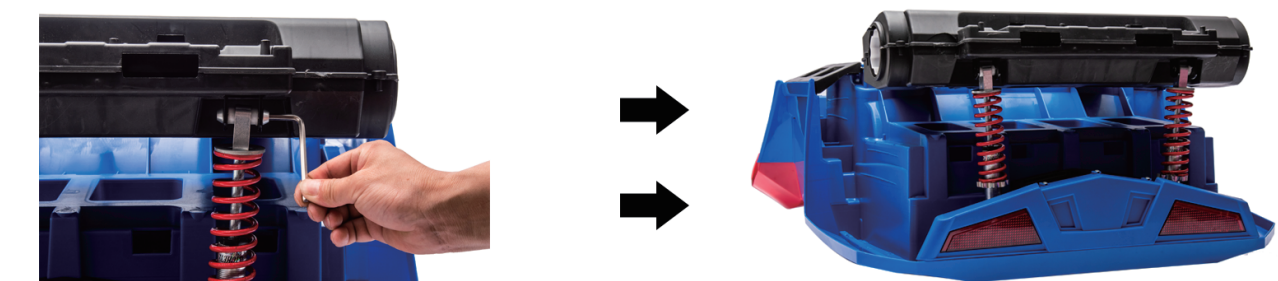


Three. Rear bumper

1.Take out the parts, align the screw holes, and fix them with screws (4x10 white)

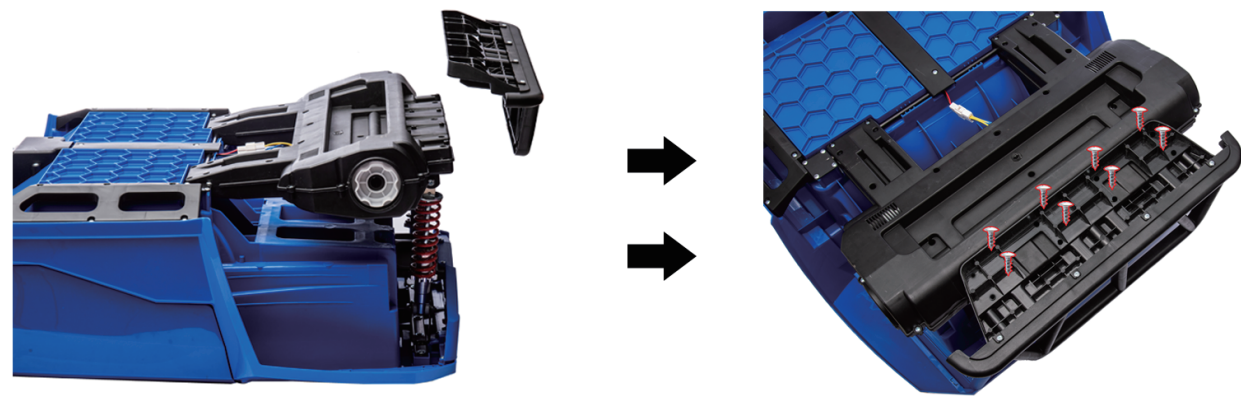

Four. Bogie

1. Take out the parts, remove the cable ties, remove the shaft nuts and washers at both ends and rotate outwards.  
2. Rotate the steering rod 180° as shown.  
3. Align the alignment hole downward, insert the left axle into the hole first, and then put the steering rod in, The right axis is then inserted into the hole.  
4. After placing it in the correct position, place the washer and nut at both ends for fixation.  
5. Fix the steering rod, put the gasket in first, and fix the circlip.

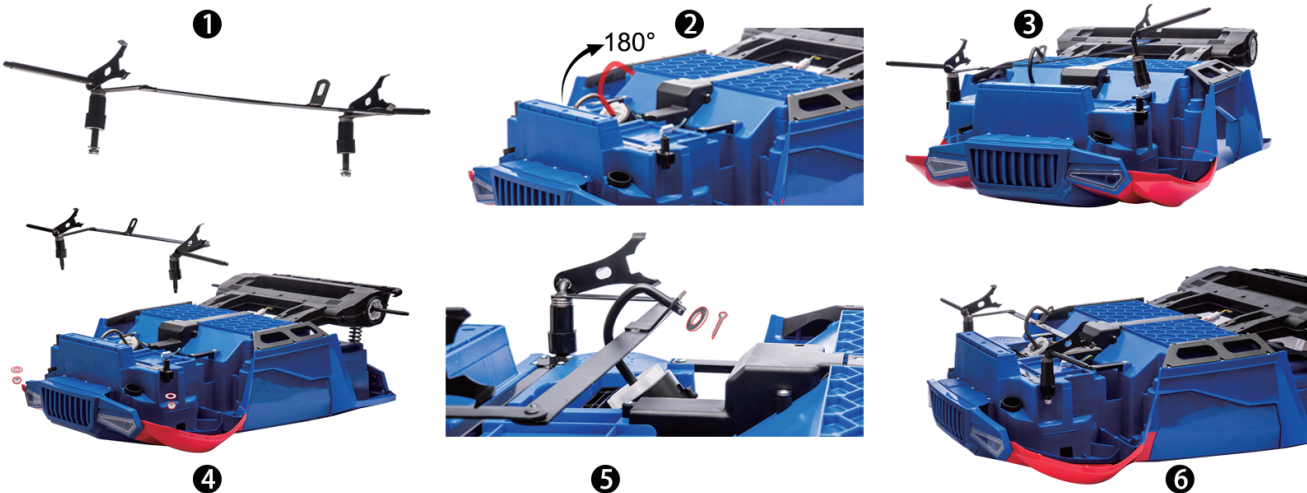


Five. Front bumper

1.Take out the parts, insert the shock absorber as indicated(Distinguish left and right), take out the screws(4x10 black), and fix them as indicated




2.Place the component downward towards the hole and fix it with screws(4x14 white)

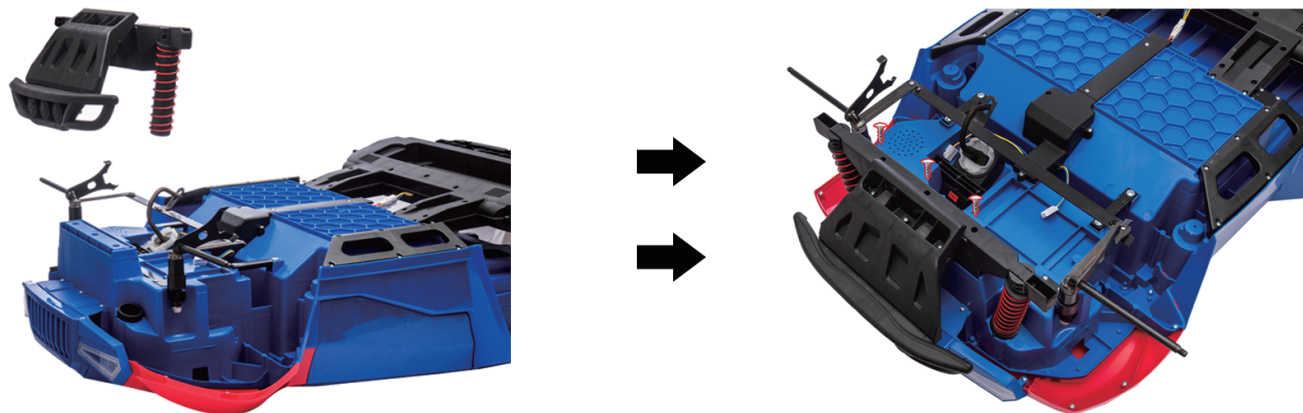

Six. Motor (optional)

2WD

1.Put the wheels, gaskets, nuts in turn, and fasten the wheel cover

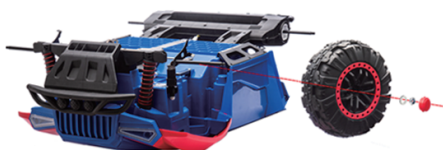

4WD

1.Put the motor in according to the diagram and connect the terminal line  
2.Take out the torx and fix it to the wheel using screws(4x14 white) as shown  
3.Put the wheels, gaskets, nuts in turn, and fasten the wheel cover




Seven. Wheel

Take out the parts, insert the long shaft into the motor, put the wheels in turn (aligned with the plum blossom), fix the gasket and nut, and buckle the wheel cover



Eight. Steering wheel

Take out the parts, connect the terminal wires, and insert them in the direction rod

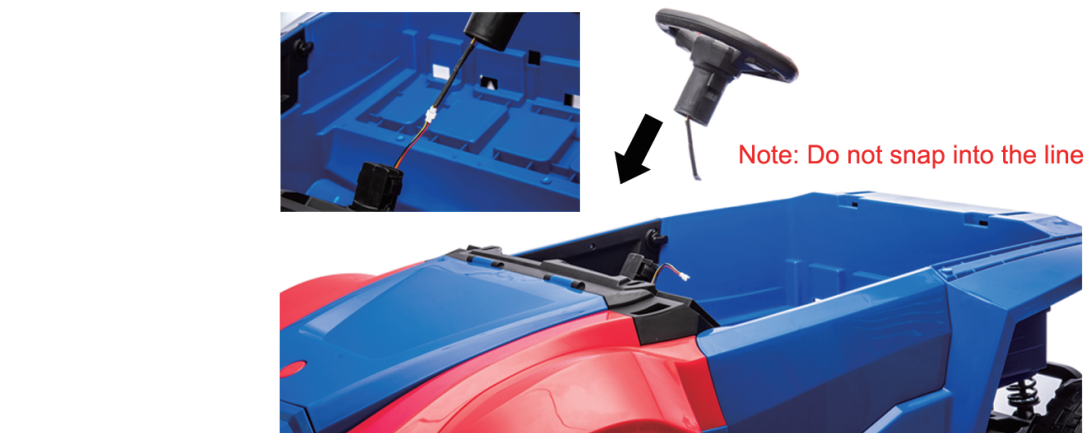

Nine. Wind deflector(optional)

Style 1

Take out the part, align it with the card slot, and press down



Style 2

Take out the part, connect the terminal wire, align it with the card slot and press down




Ten. Seat

1.Insert the backrest in line with the card slot downward,;  
2.Insert the seat cushion from front to back:  
3.Fix with screws (4x12 black)



Eleven. Empennage

Take out the parts, assemble the rear wing as shown (4x10 white), and press down on the components by aligning them with the card slots

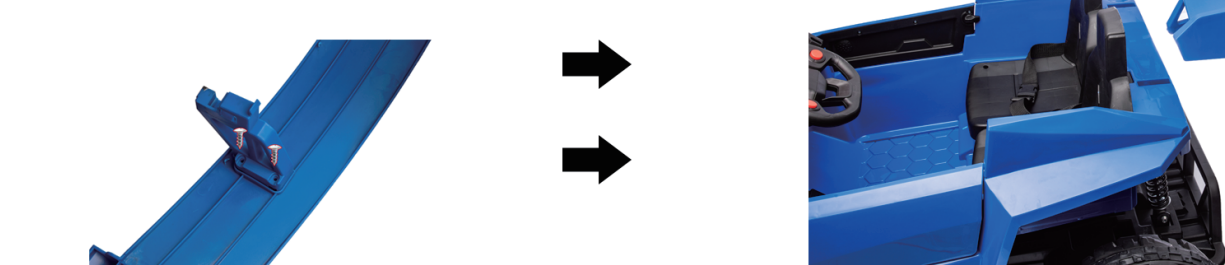

Twelve. Fencing

Remove the part and press down on the card slot



Thirteen.Battery

1. Press the switch to unlock and open the hood  
2. Connect the battery terminals  
3. Close the hood



Size one

Size two

Fourteen.Functional Indications

Charging protection function  
During charging, the car cannot be started, and the charger must be unplugged before use

