

Valve cartridge replacement

Step 1 Remove handle

Carefully pry loose *button plug* and remove Phillips head *screw*.

Step 2 Remove collar

Remove *collar* by turning counter clockwise.

Note: Ensure not to use any tool that could scratch finish without taking protective measures.

Step 3 Remove cartridge

Using a wrench, turn hex nut on *cartridge* counter clockwise.

Note: Ensure valve assembly under sink doesn't rotate while turning nut.

Step 4 Insert cartridge

Insert replacement *cartridge* and tighten hex nut using a wrench.

Step 5 Attach collar

Screw *collar* onto *fastener* and tighten using your hand.

Step 6 Attach faucet handle

- Ensure cartridge spindle is rotated to the OFF position.
- Attach handle to top of spindle in OFF location as shown.
- Fasten with screw and replace button plug.

